

**Aircraft Flight Manual***Doc. No. 2010/100**Ed.2 Rev.4**2018, June 11****TECNAM P2010***MANUFACTURER: *COSTRUZIONI AERONAUTICHE* **TECNAM** S.r.l.AIRCRAFT MODEL: **P2010**EASA TYPE CERTIFICATE No: **EASA.A.576** (DATED 2014, SEPTEMBER 26<sup>TH</sup>)

SERIAL NUMBER: .....

BUILD YEAR: .....

REGISTRATION MARKINGS: .....

*This manual is approved in accordance with 14 CFR 21.29 for US registered aircraft, and is approved by the Federal Aviation Administration.*

*This Manual must be carried in the airplane at all times.  
The airplane has to be operated in compliance with procedures and limitations contained herein.*

---

Costruzioni Aeronautiche **TECNAM** srl

Via Maiorise

CAPUA (CE) – Italy

Tel. +39 0823 99.75.38

WEB: [www.tecnam.com](http://www.tecnam.com)

---

## INDEX

|           |                                     |          |
|-----------|-------------------------------------|----------|
| <b>1.</b> | <b>RECORD OF REVISIONS .....</b>    | <b>3</b> |
| <b>2.</b> | <b>LIST OF EFFECTIVE PAGES.....</b> | <b>7</b> |
| <b>3.</b> | <b>FOREWORD.....</b>                | <b>8</b> |
| <b>4.</b> | <b>SECTIONS LIST .....</b>          | <b>9</b> |

## **1. RECORD OF REVISIONS**

Any revision to the present Manual, except actual weighing data, is recorded: a Record of Revisions is provided at the front of this manual and the operator is advised to make sure that the record is kept up-to-date.

The Manual issue is identified by Edition and Revision codes reported on each page, lower right side.

The revision code is numerical and consists of the number "0"; subsequent revisions are identified by the change of the code from "0" to "1" for the first revision to the basic publication, "2" for the second one, etc.

Should be necessary to completely reissue a publication for contents and format changes, the Edition code will change to the next number ("2" for the second edition, "3" for the third edition etc).

Additions, deletions and revisions to existing text will be identified by a revision bar (black line) in the left-hand margin of the page, adjacent to the change.

When technical changes cause expansion or deletion of text which results in unchanged text appearing on a different page, a revision bar will be placed in the right-hand margin adjacent to the page number of all affected pages providing no other revision bar appears on the page.

These pages will be updated to the current regular revision date.

**NOTE:** It is the responsibility of the owner to maintain this handbook in a current status when it is being used for operational purposes.

| Rev | Revised page  | Description of Revision                                                                                           | Tecnam Approval |           |          | EASA Approval Or Under DOA Privileges                                      |
|-----|---------------|-------------------------------------------------------------------------------------------------------------------|-----------------|-----------|----------|----------------------------------------------------------------------------|
|     |               |                                                                                                                   | DO              | OoA       | HDO      |                                                                            |
| 0   | —             | New Edition                                                                                                       | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/067.151030) |
| 1   | 2-5 thru 16   | Amended to add the wording “Approved” in order to better identify the pages approved according to EASA regulation | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/070.160118) |
|     | 9-3           | Supplement List Index amended                                                                                     | D. Ronca        | C. Caruso | M. Oliva | EASA approval N°10055692                                                   |
|     |               | Add Supplement D04                                                                                                |                 |           |          |                                                                            |
| 2   | 5-13 thru 14  | Amended cruise performance to add fuel consumption for different power setting                                    | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/103.161026) |
|     | 6-12 thru 13  | Amended Equipment list                                                                                            |                 |           |          |                                                                            |
|     | 9-3           | Supplement List Index amended                                                                                     |                 |           |          |                                                                            |
|     |               | Add Supplement D08                                                                                                |                 |           |          |                                                                            |
| 3   | 0-1, 4, 7     | Cover, RoR and LOEP updated.                                                                                      | A. Sabino       | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/131.180403) |
|     | 3-4           | Reference airspeeds table added.                                                                                  |                 |           |          |                                                                            |
|     | 4-7           | Airspeeds table revised.                                                                                          |                 |           |          |                                                                            |
|     | 4-23          | Glide Speed revised                                                                                               |                 |           |          |                                                                            |
|     | 9-3           | Supplements list updated.                                                                                         |                 |           |          |                                                                            |
| 4   | 0-1, 0-4, 0-7 | Cover, RoR and LOEP updated.                                                                                      | A. Sabino       | D. Ronca  | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/140.180611) |
|     | 6-12, 6-13    | Amended equipment list                                                                                            |                 |           |          |                                                                            |
|     | 9-3           | Supplements D12 to D15 added.                                                                                     |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |
|     |               |                                                                                                                   |                 |           |          |                                                                            |



---

2<sup>nd</sup> Edition, Rev. 0

INTENTIONALLY LEFT BLANK

## 2. LIST OF EFFECTIVE PAGES

The List of Effective Pages (LOEP), applicable to manuals of every operator, lists all the basic AFM pages: each manual could contain either basic pages or one variant of these pages when the pages of some Supplements are embodied.

Pages affected by the current revision are indicated by an asterisk (\*) following the revision code.

Should supplements be embodied in accordance with approved instructions, make reference to the LOEP addressed on Supplements themselves.

|                                     |                    |
|-------------------------------------|--------------------|
| 1st Edition, Rev 0 .....            | September 26, 2014 |
| 1st Edition, Rev 1 .....            | April 8, 2015      |
| 2 <sup>nd</sup> Edition, Rev0 ..... | October 30, 2015   |
| 2 <sup>nd</sup> Edition, Rev1 ..... | January 18, 2016   |
| 2 <sup>nd</sup> Edition, Rev2 ..... | November 25, 2016  |
| 2 <sup>nd</sup> Edition, Rev3 ..... | April 3, 2018      |
| 2 <sup>nd</sup> Edition, Rev4 ..... | June 11, 2018      |

| Section                                                         | Pages                                        | Revision |
|-----------------------------------------------------------------|----------------------------------------------|----------|
| Section 0                                                       | 2, 3, 5, 6, 8, 9, 10                         | Rev 0    |
|                                                                 | 1, 4, 7                                      | Rev 4    |
| Section 1                                                       | 1 thru 16                                    | Rev 0    |
| Section 2                                                       | 1 thru 4                                     | Rev 0    |
|                                                                 | 5 thru 16                                    | Rev 1    |
| Section 3                                                       | 3, 5 thru 12, 14, 18, 20 thru 24, 26, 28, 30 | Rev 0    |
|                                                                 | 1, 2, ,4, 13, 15, 16, 17, 19, 25, 27, 29     | Rev 3    |
| Section 4                                                       | 1 thru 5, 8 thru 26                          | Rev 0    |
|                                                                 | 7, 23                                        | Rev 3    |
| Section 5                                                       | 1 thru 12                                    | Rev 0    |
| Section 5                                                       | 13 thru 14                                   | Rev 2    |
| Section 5                                                       | 15 thru 17                                   | Rev 0    |
| Section 6                                                       | 1 thru 11, 14                                | Rev 0    |
|                                                                 | 12 thru 13                                   | Rev 4    |
| Section 7                                                       | 1 thru 38                                    | Rev 0    |
| Section 8                                                       | 1 thru 16                                    | Rev 0    |
| Supplement List                                                 |                                              |          |
| Section 9                                                       | 1, 2, 4                                      | Rev 0    |
|                                                                 | 3                                            | Rev 4    |
| Supplements LOEP: make reference to the Supplements Cover Pages |                                              |          |

### **3. FOREWORD**

Section 1 supplies general information and it contains definitions, symbols explanations, acronyms and terminology used.

Before using the airplane, you are recommended to read carefully this manual: a deep knowledge of airplane features and limitations will allow you for operating the airplane safely.

For further information, please contact:

*COSTRUZIONI AERONAUTICHE **TECNAM** s.r.l.*

Via MAIORISE

CAPUA (CE) - ITALY

☎ +39 0823.99.75.38

✉ [airworthiness@tecnam.com](mailto:airworthiness@tecnam.com)

 [www.tecnam.com](http://www.tecnam.com)

## **4. SECTIONS LIST**

|                                             |           |
|---------------------------------------------|-----------|
| <b>General (*)</b>                          | Section 1 |
| <b>Limitations (**)</b>                     | Section 2 |
| <b>Emergency Procedures (*)</b>             | Section 3 |
| <b>Normal Procedures (*)</b>                | Section 4 |
| <b>Performances (*)</b>                     | Section 5 |
| <b>Weight and Balance (*)</b>               | Section 6 |
| <b>Airframe and Systems description (*)</b> | Section 7 |
| <b>Airplane Care and Maintenance (*)</b>    | Section 8 |
| <b>Supplements (***)</b>                    | Section 9 |

(\*) non-approved Section

(\*\*) approved Section

(\*\*\*) partially approved Section - approved parts, if any, are reported in the supplements.

INTENTIONALLY LEFT BLANK

**SECTION 1 - GENERAL****INDEX**

|                                                       |           |
|-------------------------------------------------------|-----------|
| <b>1. INTRODUCTION .....</b>                          | <b>3</b>  |
| <b>2. CERTIFICATION BASIS.....</b>                    | <b>3</b>  |
| <b>3. WARNING – CAUTION – NOTE .....</b>              | <b>3</b>  |
| <b>4. THREE-VIEW AND DIMENSIONS .....</b>             | <b>4</b>  |
| <b>5. ENGINE .....</b>                                | <b>6</b>  |
| <b>6. PROPELLER.....</b>                              | <b>6</b>  |
| <b>7. FLIGHT CONTROL SURFACES TRAVEL .....</b>        | <b>7</b>  |
| <b>8. SPECIFIC LOADINGS .....</b>                     | <b>7</b>  |
| <b>9. ACRONYMS AND TERMINOLOGY.....</b>               | <b>9</b>  |
| <b>10. UNIT CONVERSION CHART.....</b>                 | <b>14</b> |
| <b>11. LITRES / US GALLONS CONVERSION CHART .....</b> | <b>15</b> |

INTENTIONALLY LEFT BLANK



## 1. INTRODUCTION

The Aircraft Flight Manual has been prepared to provide pilots and instructors with information for the safe and efficient operation of this aeroplane.

This manual also contains supplemental data supplied by the aeroplane manufacturer.

## 2. CERTIFICATION BASIS

This type of aircraft has been approved by the European Aviation Safety Agency in accordance with CS-23 including Amendment 2 and the Type Certificate No. EASA.A.576 has been issued on 26<sup>th</sup> September 2014.

Category of Airworthiness: Normal.

Noise Certification Basis: EASA CS 36 Amendment 2.

This type of aircraft has been validated also in the normal category of 14 CFR part 23 and part 36

## 3. WARNING – CAUTION – NOTE

Following definitions apply to warnings, cautions and notes used in the Aircraft Flight Manual.



**WARNING**

means that the non-observation of the corresponding procedure leads to an immediate or important degradation of the flight safety.



**CAUTION**

means that the non-observation of the corresponding procedure leads to a minor or to a more or less long term degradation of the flight safety

**NOTE**

Draws the attention to any special item not directly related to safety but which is important or unusual.

## 4. THREE-VIEW AND DIMENSIONS

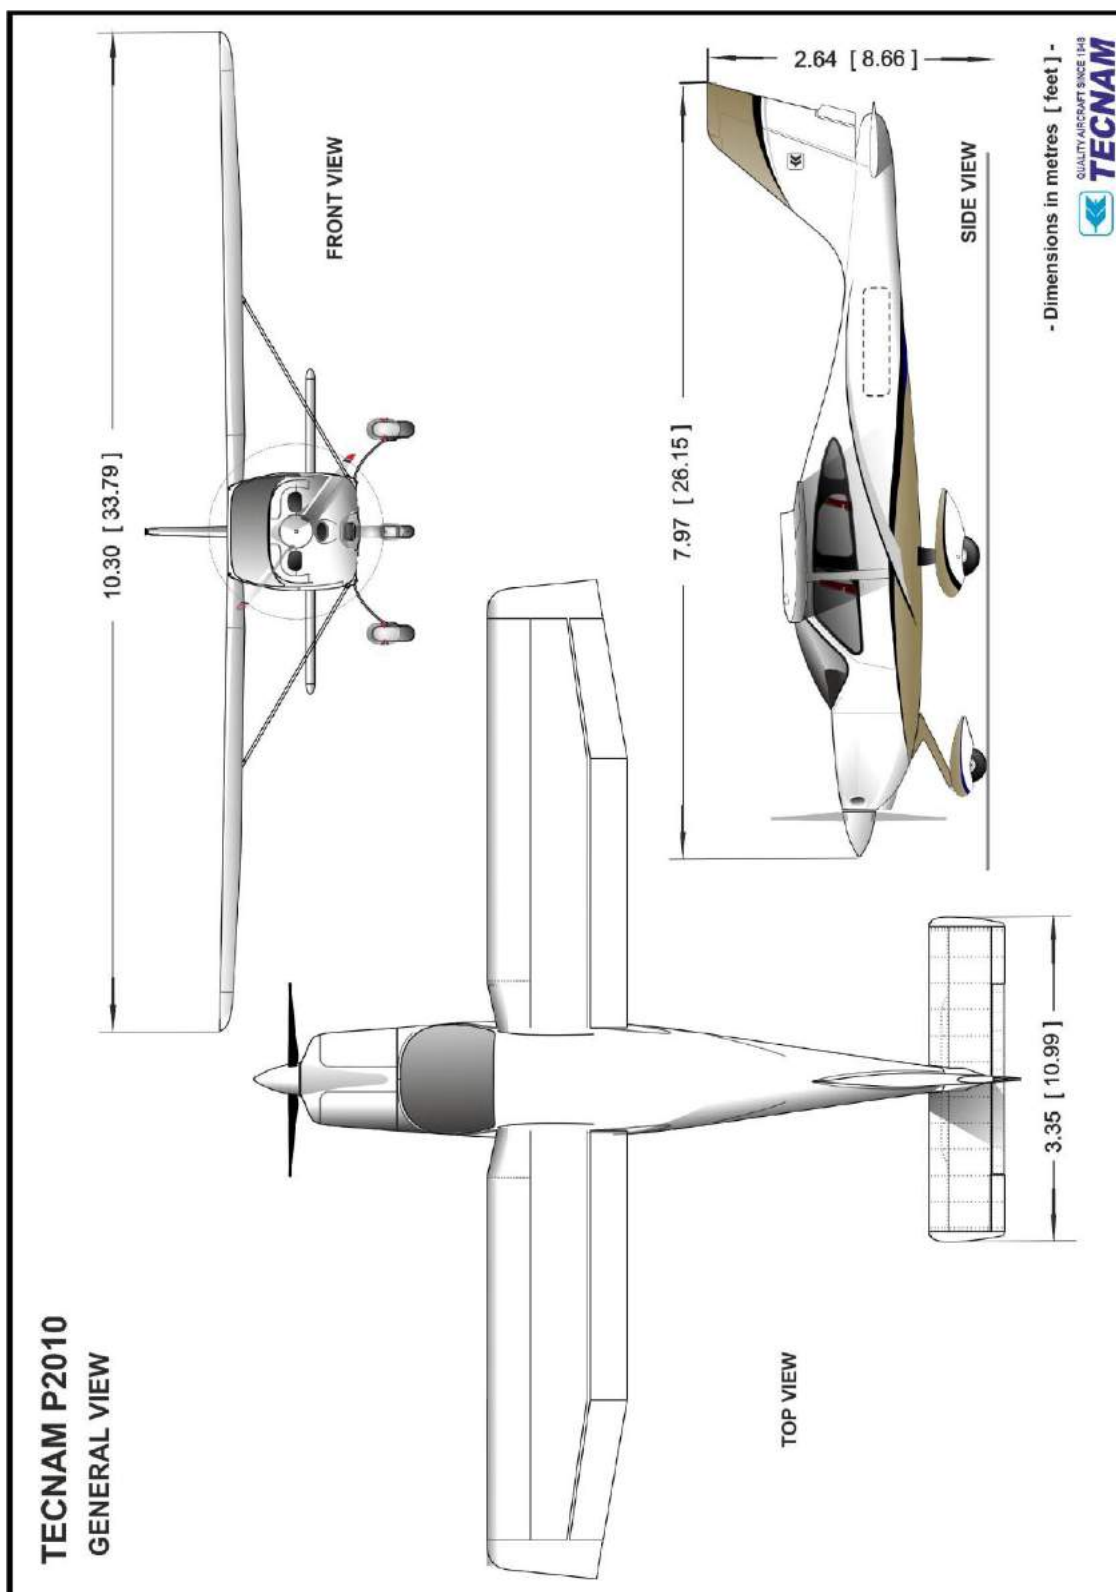


Figure 1 – General views

## **Dimensions**

### **Overall dimensions**

|                       |                    |
|-----------------------|--------------------|
| Wing Span .....       | 10.30 m / 33.79 ft |
| Overall Length .....  | 7.97 m / 26.15 ft  |
| Overall height .....  | 2.64 m / 8.66 ft   |
| Stabilator Span ..... | 3.35 m / 10.99 ft  |

### **Wing**

|                            |                                             |
|----------------------------|---------------------------------------------|
| Wing surface .....         | 13.9 m <sup>2</sup> / 149.6 ft <sup>2</sup> |
| Mean Geometric Chord ..... | 1.349 m / 4.427 ft                          |
| Dihedral .....             | 1°                                          |
| Aspect ratio .....         | 7.63                                        |

### **Fuselage**

|                   |                  |
|-------------------|------------------|
| Cabin width ..... | 1.14 m / 3.74 ft |
| Cabin length..... | 2.3 m / 7.54 ft  |

### **Landing Gear**

|                      |                  |
|----------------------|------------------|
| Wheels Track .....   | 2.1 m / 6.89 ft  |
| Wheels base .....    | 2.15 m / 7.05 ft |
| Main Gear Tire ..... | 6.00-6           |
| Nose Gear Tire ..... | 5.00-5           |

## **5. ENGINE**

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Manufacturer .....             | Lycoming Engines                                                                                            |
| Model .....                    | IO-360-M1A                                                                                                  |
| Type Certificate .....         | EASA TCDS no. IM.E.032                                                                                      |
| Engine type .....              | Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets. |
| Maximum power .....            | 134.0 kW (180 hp) @ 2700 rpm                                                                                |
| Maximum continuous power ..... | 134.0 kW (180 hp) @ 2700 rpm                                                                                |

## **6. PROPELLER**

|                        |                                         |
|------------------------|-----------------------------------------|
| Manufacturer .....     | MT Propeller                            |
| Model .....            | MT 188 R 145 – 4G                       |
| Type Certificate ..... | EASA TCDS no. P.006                     |
| Blades/hub .....       | 2 wood/composite blades – aluminium hub |
| Diameter .....         | 1880 mm (74 in) (no reduction allowed)  |
| Type .....             | Fixed pitch                             |

## **7. FLIGHT CONTROL SURFACES TRAVEL**

|                     |                          |
|---------------------|--------------------------|
| Ailerons            | Up 19°; Down 14 ° (± 2°) |
| Stabilator*         | Up 6°; Down 17° (± 2°)   |
| Stabilator trim tab | Up 3°; Down 15° (± 1°)   |
| Rudder              | RH 25°; LH 25° (± 2°)    |
| Rudder trim tab     | RH 20°; LH 20° (± 2°)    |
| Flaps               | 0°; 20°; 40° (± 1°)      |

\*degrees are measured from the Stabilator Leading Edge.

## **8. SPECIFIC LOADINGS**

|               |                                                     |
|---------------|-----------------------------------------------------|
|               | <b>MTOW 1160 kg (2557 lb)</b>                       |
| Wing Loading  | 83.45 kg/m <sup>2</sup> (17.09 lb/ft <sup>2</sup> ) |
| Power Loading | 6.44 kg/hp (14.21 lb/hp)                            |

INTENTIONALLY LEFT BLANK

## **9. ACRONYMS AND TERMINOLOGY**

|                  |                                                                                                                                                                          |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| KCAS             | <u>Calibrated Airspeed</u> is the indicated airspeed expressed in knots, corrected taking into account the errors related to the instrument itself and its installation. |
| KIAS             | <u>Indicated Airspeed</u> is the speed shown on the airspeed indicator and it is expressed in knots.                                                                     |
| KTAS             | <u>True Airspeed</u> is the KCAS airspeed corrected taking into account altitude and temperature.                                                                        |
| V <sub>A</sub>   | <u>Design Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement.                                                  |
| V <sub>FE</sub>  | <u>Maximum Flap Extended speed</u> is the highest speed permissible with flaps extended.                                                                                 |
| V <sub>NO</sub>  | <u>Maximum Structural Cruising Speed</u> is the speed that should not be exceeded, except in smooth air and only with caution.                                           |
| V <sub>NE</sub>  | <u>Never Exceed Speed</u> is the speed limit that may not be exceeded at any time.                                                                                       |
| V <sub>O</sub>   | <u>Operating Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement                                                |
| V <sub>S</sub>   | <u>Stall Speed.</u>                                                                                                                                                      |
| V <sub>S0</sub>  | <u>Stall Speed in landing configuration</u> (flaps and landing gear extended).                                                                                           |
| V <sub>S1</sub>  | <u>Stall speed in clean configuration</u> (flaps 0°).                                                                                                                    |
| V <sub>X</sub>   | <u>Best Angle-of-Climb Speed</u> is the speed which results in the greatest gain of altitude with respect to a given horizontal distance.                                |
| V <sub>Y</sub>   | <u>Best Rate-of-Climb Speed</u> is the speed which results in the greatest gain in altitude in a given time.                                                             |
| V <sub>R</sub>   | <u>Rotation speed:</u> is the speed at which the aircraft rotates about the pitch axis during takeoff                                                                    |
| V <sub>LOF</sub> | <u>Lift off speed:</u> is the speed at which the aircraft generally lifts off from the ground.                                                                           |
| V <sub>obs</sub> | <u>Obstacle speed:</u> is the speed at which the aircraft flies over a 15m obstacle during takeoff or landing.                                                           |

**Meteorological terminology**

|                |                                                                                                                                                                                                              |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ISA            | <u>International Standard Atmosphere</u> : is the air atmospheric standard condition at sea level, at 15 °C (59 °F) and at 1013.25 hPa (29.92 inHg).                                                         |
| QFE            | <u>Official atmospheric pressure at airport level</u> : it indicates the aircraft absolute altitude with respect to the official airport level.                                                              |
| QNH            | <u>Theoretical atmospheric pressure at sea level</u> : is the atmospheric pressure reported at the medium sea level, through the standard air pressure-altitude relationship, starting from the airport QFE. |
| OAT            | <u>Outside Air Temperature</u> is the air static temperature expressed in degrees Celsius (°C).                                                                                                              |
| T <sub>s</sub> | <u>Standard Temperature</u> is 15 °C at sea level pressure altitude and decreased by 2 °C for each 1000 ft of altitude.                                                                                      |
| H <sub>p</sub> | <u>Pressure Altitude</u> is the altitude read from an altimeter when the barometric subscale has been set to 1013 mb.                                                                                        |



**Aircraft performance and flight planning terminology**

|                           |                                                                                                                                                                      |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Crosswind Velocity</i> | is the velocity of the crosswind component for the which adequate control of the airplane during takeoff and landing is assured.                                     |
| <i>Usable fuel</i>        | is the fuel available for flight planning.                                                                                                                           |
| <i>Unusable fuel</i>      | is the quantity of fuel that cannot be safely used in flight.                                                                                                        |
| <i>G</i>                  | is the acceleration of gravity.                                                                                                                                      |
| <i>TOR</i>                | is the takeoff distance measured from actual start to MLG wheel liftoff point.                                                                                       |
| <i>TOD</i>                | is total takeoff distance measured from start to 15m obstacle clearing.                                                                                              |
| <i>GR</i>                 | is the distance measured during landing from actual touchdown to stop point.                                                                                         |
| <i>LD</i>                 | is the distance measured during landing, from 15m obstacle clearing to actual stop.                                                                                  |
| <i>S/R</i>                | is the specific range, that is the distance (in nautical miles) which can be expected at a specific power setting and/or flight configuration per kilo of fuel used. |

## Weight and balance terminology

|                               |                                                                                                                                                                                                                         |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Datum</i>                  | “Reference datum” is an imaginary vertical plane from which all horizontal distances are measured for balance purposes.                                                                                                 |
| <i>Arm</i>                    | is the horizontal distance of an item measured from the reference datum.                                                                                                                                                |
| <i>Moment</i>                 | is the product of the weight of an item multiplied by its arm.                                                                                                                                                          |
| <i>C.G.</i>                   | <u>Center of Gravity</u> is the point at which the airplane, or equipment, would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the aircraft. |
| <i>Standard Empty Weight</i>  | is the weight of the aircraft with engine fluids and oil at operating levels.                                                                                                                                           |
| <i>Basic Empty Weight</i>     | is the standard empty weight to which it is added the optional equipment weight.                                                                                                                                        |
| <i>Useful Load</i>            | is the difference between maximum takeoff weight and the basic empty weight.                                                                                                                                            |
| <i>Maximum Takeoff Weight</i> | is the maximum weight approved to perform the takeoff.                                                                                                                                                                  |
| <i>Maximum Landing Weight</i> | is the maximum weight approved for the landing touchdown (for <i>P2010</i> it is equivalent to the Maximum Takeoff Weight).                                                                                             |

INTENTIONALLY LEFT BLANK

## 10. UNIT CONVERSION CHART

| MULTIPLYING       |          | BY ➔                                    | YIELDS            |          |
|-------------------|----------|-----------------------------------------|-------------------|----------|
| TEMPERATURE       |          |                                         |                   |          |
| Fahrenheit        | [°F]     | $\frac{5}{9} \cdot (F - 32)$            | Celsius           | [°C]     |
| Celsius           | [°C]     | $\left(\frac{9}{5} \cdot C\right) + 32$ | Fahrenheit        | [°F]     |
| FORCES            |          |                                         |                   |          |
| Kilograms         | [kg]     | 2.205                                   | Pounds            | [lbs]    |
| Pounds            | [lbs]    | 0.4536                                  | Kilograms         | [kg]     |
| SPEED             |          |                                         |                   |          |
| Meters per second | [m/s]    | 196.86                                  | Feet per minute   | [ft/min] |
| Feet per minute   | [ft/min] | 0.00508                                 | Meters per sec-   | [m/s]    |
| Knots             | [kts]    | 1.853                                   | Kilometres / hour | [km/h]   |
| Kilometres / hour | [km/h]   | 0.5396                                  | Knots             | [kts]    |
| PRESSURE          |          |                                         |                   |          |
| Atmosphere        | [atm]    | 14.7                                    | Pounds / sq. in   | [psi]    |
| Pounds / sq. in   | [psi]    | 0.068                                   | Atmosphere        | [atm]    |
| LENGTH            |          |                                         |                   |          |
| Kilometres        | [km]     | 0.5396                                  | Nautical miles    | [nm]     |
| Nautical miles    | [nm]     | 1.853                                   | Kilometres        | [km]     |
| Meters            | [m]      | 3.281                                   | Feet              | [ft]     |
| Feet              | [ft]     | 0.3048                                  | Meters            | [m]      |
| Centimetres       | [cm]     | 0.3937                                  | Inches            | [in]     |
| Inches            | [in]     | 2.540                                   | Centimetres       | [cm]     |
| VOLUME            |          |                                         |                   |          |
| Litres            | [l]      | 0.2642                                  | U.S. Gallons      | [US Gal] |
| U.S. Gallons      | [US Gal] | 3.785                                   | Litres            | [l]      |
| AREA              |          |                                         |                   |          |
| Square meters     | [m²]     | 10.76                                   | Square feet       | [sq ft]  |
| Square feet       | [sq ft]  | 0.0929                                  | Square meters     | [m²]     |

## 11. LITRES / US GALLONS CONVERSION CHART

| Litres | US Gallons |
|--------|------------|
| 5      | 1.3        |
| 10     | 2.6        |
| 15     | 4.0        |
| 20     | 5.3        |
| 25     | 6.6        |
| 30     | 7.9        |
| 35     | 9.2        |
| 40     | 10.6       |
| 45     | 11.9       |
| 50     | 13.2       |
| 60     | 15.9       |
| 70     | 18.5       |
| 80     | 21.1       |
| 90     | 23.8       |
| 100    | 26.4       |
| 110    | 29.1       |
| 120    | 31.7       |
| 130    | 34.3       |
| 140    | 37.7       |
| 150    | 39.6       |
| 160    | 42.3       |
| 170    | 44.9       |
| 180    | 47.6       |
| 190    | 50.2       |
| 200    | 52.8       |
| 210    | 55.5       |
| 220    | 58.1       |
| 230    | 60.7       |
| 240    | 63.4       |

| US Gallons | Litres |
|------------|--------|
| 1          | 3.8    |
| 2          | 7.6    |
| 3          | 11.4   |
| 4          | 15.1   |
| 6          | 22.7   |
| 8          | 30.3   |
| 10         | 37.9   |
| 12         | 45.4   |
| 14         | 53.0   |
| 16         | 60.6   |
| 18         | 68.1   |
| 20         | 75.7   |
| 22         | 83.3   |
| 24         | 90.9   |
| 26         | 98.4   |
| 28         | 106.0  |
| 30         | 113.6  |
| 32         | 121.1  |
| 34         | 128.7  |
| 36         | 136.3  |
| 38         | 143.8  |
| 40         | 151.4  |
| 42         | 159    |
| 45         | 170.3  |
| 47         | 177.9  |
| 50         | 189.3  |
| 55         | 208.2  |
| 60         | 227.1  |
| 63         | 238.4  |

INTENTIONALLY LEFT BLANK

## **SECTION 2 – LIMITATIONS**

### **INDEX**

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>1. INTRODUCTION .....</b>                              | <b>3</b>  |
| <b>2. AIRSPEED LIMITATIONS .....</b>                      | <b>5</b>  |
| <b>3. AIRSPEED INDICATOR MARKINGS .....</b>               | <b>6</b>  |
| <b>4. POWERPLANT LIMITATIONS .....</b>                    | <b>7</b>  |
| <b>5. FUEL .....</b>                                      | <b>8</b>  |
| <b>6. LUBRICANT .....</b>                                 | <b>8</b>  |
| <b>7. PAINT .....</b>                                     | <b>9</b>  |
| <b>8. PROPELLER .....</b>                                 | <b>9</b>  |
| <b>9. MAXIMUM OPERATING ALTITUDE .....</b>                | <b>9</b>  |
| <b>10. AMBIENT TEMPERATURE .....</b>                      | <b>9</b>  |
| <b>11. POWERPLANT INSTRUMENT MARKINGS .....</b>           | <b>10</b> |
| <b>12. OTHER INSTRUMENT MARKINGS .....</b>                | <b>10</b> |
| <b>13. WEIGHTS .....</b>                                  | <b>11</b> |
| <b>14. CENTER OF GRAVITY RANGE .....</b>                  | <b>11</b> |
| <b>15. FLIGHT CREW .....</b>                              | <b>11</b> |
| <b>16. APPROVED MANEUVERS .....</b>                       | <b>12</b> |
| <b>16.1. Types of Surface .....</b>                       | <b>12</b> |
| <b>17. MANEUVERS LOAD FACTOR LIMITS .....</b>             | <b>12</b> |
| <b>18. KINDS OF OPERATION EQUIPMENT LIST (KOEL) .....</b> | <b>13</b> |
| <b>19. LIMITATIONS PLACARDS .....</b>                     | <b>15</b> |
| <b>19.1. Speed limitations .....</b>                      | <b>15</b> |
| <b>19.2. Operating limitations .....</b>                  | <b>15</b> |
| <b>19.3. No Smoking placard .....</b>                     | <b>15</b> |
| <b>19.4. Baggage Compartment placard .....</b>            | <b>16</b> |

INTENTIONALLY LEFT BLANK



## **1. INTRODUCTION**

Section 2 includes operating limitations, instrument markings and basic placards necessary for safe operation of the aeroplane, its engine and standard systems and equipment.

INTENTIONALLY LEFT BLANK

## 2. AIRSPEED LIMITATIONS

The following table addresses the airspeed limitations and their operational significance:

| AIRSPEED |                                   | KIAS | KCAS | REMARKS                                                                                                                                                   |
|----------|-----------------------------------|------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| $V_{NE}$ | Never exceed speed                | 166  | 164  | Do not exceed this speed in any operation.                                                                                                                |
| $V_{NO}$ | Maximum Structural Cruising Speed | 132  | 130  | Do not exceed this speed except in smooth air, and only with caution.                                                                                     |
| $V_A$    | Design Manoeuvring speed          | 120  | 119  | Do not make full or abrupt control movement above this speed, because under certain conditions the aircraft may be overstressed by full control movement. |
| $V_O$    | Operating Manoeuvring speed       |      |      |                                                                                                                                                           |
| $V_{FE}$ | Maximum flaps extended speed      | 91   | 92   | Do not exceed this speed for indicated flaps setting.                                                                                                     |

### 3. AIRSPEED INDICATOR MARKINGS

Airspeed indicator markings and their colour code are explained in the following table.

| MARKING    | KIAS             | EXPLANATION                                                                                                                                                                    |
|------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| White arc  | <b>50 – 91</b>   | Positive Flap Operating Range (lower limit is $V_{SO}$ , at specified maximum weight and upper limit is the maximum speed permissible with landing flaps extension).           |
| Green arc  | <b>59– 132</b>   | Normal Operating Range (lower limit is $V_{S1}$ at specified maximum weight and most forward c.g. with flaps retracted and upper limit is maximum structural speed $V_{NO}$ ). |
| Yellow arc | <b>132 – 166</b> | Manoeuvres must be conducted with caution and only in smooth air.                                                                                                              |
| Red line   | <b>166</b>       | Maximum speed for all operations.                                                                                                                                              |

## 4. POWERPLANT LIMITATIONS

Following table reports the operating limitations the installed engine:

**ENGINE MANUFACTURER:** Lycoming Engines

**ENGINE MODEL:** IO-360-M1A

**MAXIMUM POWER:**

|            | Max Power<br>(hp) | Max rpm.<br>Prop. rpm |
|------------|-------------------|-----------------------|
| Max. T.O.  | 180               | 2700                  |
| Max. Cont. | 180               | 2700                  |

**Temperatures:**

Max CHT ..... 500° F (260° C)

Max Oil ..... 245° F (118° C)

**Oil Pressure:**

Minimum Idling ..... 25 psi (1.7 Bar)

Minimum Normal ..... 55 psi (3.8 Bar)

Maximum Normal ..... 95 psi (6.5 Bar)

Starting, Warm-up, taxi and take-off (Max) ..... 115 psi (7.9 Bar)

**Fuel pressure:**

- At Inlet to fuel injector:

Minimum ..... 14 psi (0.96 Bar)

Maximum ..... 35 psi (2.41 Bar)

## 5. FUEL

|                             |                                         |
|-----------------------------|-----------------------------------------|
| <b>2 TANKS:</b>             | 120 litres each one (31.7 US gallons)   |
| <b>MAXIMUM CAPACITY:</b>    | 240 litres (63.4 US gallons)            |
| <b>MAXIMUM USABLE FUEL:</b> | 231 litres (61 US gallons)              |
| <b>APPROVED FUEL:</b>       | AVGAS Grade 91/96 or 100 LL (ASTM D910) |

For additional information, refer to Lycoming Service Instruction No. 1070, latest issue.

## 6. LUBRICANT

Recommended Grade Oil:

| <b>Average Ambient<br/>Temperature</b> | <b>MIL-L-6082B or<br/>SAEJ1966 Spec.<br/>Mineral Grades</b> | <b>MIL-L-22851 or<br/>SAEJ1899 Spec.<br/>Ashless Dispersant Grades</b> |
|----------------------------------------|-------------------------------------------------------------|------------------------------------------------------------------------|
| All Temperatures                       | ----                                                        | SAE15W50 or SAE20W-50                                                  |
| Above 80°F                             | SAE60                                                       | SAE60                                                                  |
| Above 60°F                             | SAE50                                                       | SAE40 or SAE50                                                         |
| 30°F to 90°F                           | SAE40                                                       | SAE40                                                                  |
| 0°F to 70°F                            | SAE30                                                       | SAE40, SAE30, SAE20W40                                                 |
| Below 10°F                             | SAE20                                                       | SAE30 or SAE20W30                                                      |

For additional info, refer to “(L)IO-360-M1A Operation and Installation Manual”, latest issue, “Operating instruction” Section.

## **7. PAINT**

To ensure that the temperature of the composite structure does not exceed limits, the outer surface of the aeroplane must be painted with white paint, except for areas of registration marks, placards, and ornament.

Refer to Aircraft Maintenance Manual (AMM), ATA Chapter 4 and 51, for specific paint requirements.

## **8. PROPELLER**

**MANUFACTURER:** ..... MT Propeller

**MODEL:** ..... MT 188 R 145 – 4G

**TYPE:** ..... wood/composite 2-blade, fixed pitch

**DIAMETER:** ..... 1880 mm (74 in) (no reduction is permitted)

## **9. MAXIMUM OPERATING ALTITUDE**

Maximum operating altitude is 12000 ft (3658 m) MSL.



**CAUTION**

*At altitudes above 10000 ft (3048 m) up to and including 12000 ft (3658 m), flight crew is recommended to use supplemental oxygen.*

## **10. AMBIENT TEMPERATURE**

Ambient temperature: from -25 °C (-13 °F) to +50 °C (122 °F).



**WARNING**

*Flight in expected and/or known icing conditions is forbidden.*

## 11. POWERPLANT INSTRUMENT MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

| INSTRUMENT |        | RED ARC<br>Minimum<br>limit | WHITE ARC<br>Advisory | GREEN ARC<br>Safe<br>operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum<br>limit |
|------------|--------|-----------------------------|-----------------------|--------------------------------|-----------------------|-----------------------------|
| PROPELLER  | RPM    | /                           | /                     | 950-2700                       | 0-950                 | 2700-2800                   |
| OIL TEMP.  | °F     | /                           | /                     | 140-245                        | 0 - 140               | 245 - 255                   |
| CHT        | °F     | /                           | 435 (line)            | 150-475                        | 0 – 150<br>475-500    | 500-510                     |
| EGT        | °F     | /                           | 1000-1500             | /                              | 1375 (line)           | 1500-1550                   |
| OIL PRESS  | psi    | 0-25                        | /                     | 55-95                          | 25 - 55<br>95-115     | 115 - 125                   |
| FUEL PRESS | psi    | 0-14                        | /                     | 14-35                          | /                     | 35 - 40                     |
| FUEL QTY   | litres | 0                           | /                     | 0-115                          | /                     | /                           |
|            | gal    | 0                           |                       | 0-30,4                         |                       |                             |
| FUEL FLOW  | l/hr   | /                           | 0-75                  | /                              | /                     | /                           |
|            | gal/hr |                             | 0-20                  |                                |                       |                             |

## 12. OTHER INSTRUMENT MARKINGS

| INSTRUMENT | RED ARC<br>Minimum limit | GREEN ARC<br>Safe operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum limit |
|------------|--------------------------|-----------------------------|-----------------------|--------------------------|
| Voltmeter  | 20-21 Volt               | 24–30 Volt                  | 21–24 Volt            | 30-31 Volt               |



## 13. WEIGHTS

| Condition              | Weight  |         |
|------------------------|---------|---------|
| Maximum takeoff weight | 1160 kg | 2557 lb |
| Maximum landing weight | 1160 kg | 2557 lb |
| Maximum baggage weight | 40 kg   | 88 lb   |

| Baggage Compartment       | Weight                  |                         |
|---------------------------|-------------------------|-------------------------|
| Maximum weight            | 40 kg                   | 88 lb                   |
| Maximum specific pressure | 0.72 kg/dm <sup>2</sup> | 14.9 lb/ft <sup>2</sup> |

**NOTE**

Refer to Section 6 for proper aircraft and baggage loading.

## 14. CENTER OF GRAVITY RANGE

|               |                                                                                                           |
|---------------|-----------------------------------------------------------------------------------------------------------|
| Datum         | Vertical plane tangent to the wing leading edge (the aircraft must be levelled in the longitudinal plane) |
| Levelling     | Refer to the seat track supporting beams (see procedure in Section 6)                                     |
| Forward limit | <b>0.262 m (10.3 in) (19% MAC)</b> aft of datum for all weights                                           |
| Aft limit     | <b>0.440 m (17.3 in) (32% MAC)</b> aft of datum for all weights                                           |



*The pilot is responsible for ensuring that the airplane is properly loaded. Refer to Section 6 for appropriate instructions.*

## 15. FLIGHT CREW

|                                |                                |
|--------------------------------|--------------------------------|
| Minimum crew:                  | 1 pilot                        |
| Maximum seating configuration: | 4 people (including the pilot) |

## 16. APPROVED MANEUVERS

The aircraft is certified in Normal Category in accordance with EASA CS-23 and FAA 14 CFR part 23 regulations.

Non aerobatic operations include:

- Any manoeuvre pertaining to “normal” flight
- Stalls (except whip stalls)
- Lazy eights
- Turns in which the angle of bank is not more than 60°
- Chandelle



*Acrobatic manoeuvres, including spins and turns with angle of bank of more than 60°, are not approved for such a category.*

*In addition Intentional shutdown of engine in flight is forbidden.*



*Limit load factor could be exceeded by moving flight controls to maximum deflection at a speed above  $V_A = V_O$  (120 KIAS, Manoeuvring Speed).*



*Flight in expected and/or known icing conditions, in proximity of storms or in severe turbulence is forbidden.*

### 16.1. TYPES OF SURFACE

This aircraft may operate on both paved and grass surfaces, refer to Section 5 for impacts on performances.

## 17. MANEUVERS LOAD FACTOR LIMITS

Maneuver load factors limits are as follows:

| Positive | Negative |
|----------|----------|
| + 3.8 g  | - 1.52 g |

Maneuver load factors limits with flaps extended are as follows:

| Positive | Negative |
|----------|----------|
| + 2 g    | 0 g      |

## 18. KINDS OF OPERATION EQUIPMENT LIST (KOEL)

This paragraph reports the KOEL table, concerning the equipment list required on board under CS-23 and Far-23 regulations to allow flight operations in VFR Day/Night and IFR Day/Night.

Flight in VFR Day/Night and IFR is permitted only if the prescribed equipment is installed and operational.

Additional equipment, or a different equipment list, for the intended operation may be required by national operational requirements and also depends on the airspace classification and route to be flown.

The owner is responsible for fulfilling these requirements.

| Equipment                                | VFR Day        | VFR Night        | IFR Day        | IFR Night        | Note                                                                                                                                                              |
|------------------------------------------|----------------|------------------|----------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>External Power</b>                    |                |                  |                |                  |                                                                                                                                                                   |
| Circuit Breakers                         | •              | •                | •              | •                | As Required                                                                                                                                                       |
| Battery                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| <b>Safety Equipment &amp; Furnishing</b> |                |                  |                |                  |                                                                                                                                                                   |
| First Aid kit                            | •              | •                | •              | •                |                                                                                                                                                                   |
| Fire extinguisher                        | •              | •                | •              | •                |                                                                                                                                                                   |
| ELT                                      | •              | •                | •              | •                |                                                                                                                                                                   |
| Torch (with spare batteries)             |                | •                |                | •                |                                                                                                                                                                   |
| <b>Ice Protection</b>                    |                |                  |                |                  |                                                                                                                                                                   |
| Pitot heating system                     |                | •                | •              | •                |                                                                                                                                                                   |
| <b>Landing Gear</b>                      |                |                  |                |                  |                                                                                                                                                                   |
| Wheel pants                              |                |                  |                |                  | Removable                                                                                                                                                         |
| <b>Lights</b>                            |                |                  |                |                  |                                                                                                                                                                   |
| Landing/taxi lights                      | •              | •                | •              | •                |                                                                                                                                                                   |
| Strobe lights                            | •              | •                | •              | •                |                                                                                                                                                                   |
| NAV lights                               | •              | •                | •              | •                |                                                                                                                                                                   |
| Cabin lights                             |                | •                |                | •                |                                                                                                                                                                   |
| Instrument lights                        |                | •                |                | •                |                                                                                                                                                                   |
| Emergency light                          |                | •                |                | •                |                                                                                                                                                                   |
| Dimming Devices                          |                | •                |                | •                |                                                                                                                                                                   |
| Day/Night switch                         |                | •                |                | •                |                                                                                                                                                                   |
| <b>COM/Navigation/Engine parameters</b>  |                |                  |                |                  |                                                                                                                                                                   |
| Magnetic compass                         | •              | •                | •              | •                |                                                                                                                                                                   |
| GARMIN G1000 Suite                       | •              | •                | •              | •                |                                                                                                                                                                   |
| MD 302 suite                             |                | •                | •              | •                |                                                                                                                                                                   |
| Pitot system                             | •              | •                | •              | •                |                                                                                                                                                                   |
| Clock                                    | •              | •                | •              | •                |                                                                                                                                                                   |
| <b>Flight Controls</b>                   |                |                  |                |                  |                                                                                                                                                                   |
| Pitch trim indicator                     | •              | •                | •              | •                |                                                                                                                                                                   |
| Flap System                              | •              | •                | •              | •                |                                                                                                                                                                   |
| Flaps position lights                    | •              | •                | •              | •                |                                                                                                                                                                   |
| Rudder trim system                       | •              | •                | •              | •                | only for VFR operations, rudder trim system may be inoperative provided the trim tab is fixed in the streamlined position and the system is electrically disabled |
| Stall warning system                     | •              | •                | •              | •                |                                                                                                                                                                   |
|                                          | <b>VFR Day</b> | <b>VFR Night</b> | <b>IFR Day</b> | <b>IFR Night</b> |                                                                                                                                                                   |

INTENTIONALLY LEFT BLANK

## **19. LIMITATIONS PLACARDS**

Hereinafter limitation placards, related to the operating limitations, are placed in plain view on the pilot.

### **19.1. SPEED LIMITATIONS**

On the left side instrument panel, above on the left, it is placed the following placard reporting the speed limitations:



Operating Manoeuvring speed  
 **$V_o = 120$  KIAS**

### **19.2. OPERATING LIMITATIONS**

On the central side of the instrument panel, the following placard is placed reminding the observance of aircraft operating limitations according to installed equipment configuration, see KOEL paragraph 18.



THIS A/C CAN BE OPERATED ONLY IN NORMAL CATEGORY  
DAY-NIGHT-VFR-IFR (WITH REQUIRED EQUIPMENT) IN NON-ICING CONDITIONS.  
NO AEROBATICS MANOEUVRES, INCLUDING SPINNING, APPROVED.  
FOR OPERATIONAL LIMITATIONS REFER TO FLIGHT MANUAL

### **19.3. No SMOKING PLACARD**

On the right hand side of the instrument panel the following placard is placed reminding the observance for “no smoking”:



**NO SMOKING**

#### **19.4. BAGGAGE COMPARTMENT PLACARD**

Behind the baggage compartment door the following placard is placed:



## **SECTION 3 – EMERGENCY PROCEDURES**

### **INDEX**

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>1. Introduction .....</b>                                   | <b>3</b>  |
| <b>1.1. Reference Airspeeds for Emergency Procedures .....</b> | <b>4</b>  |
| <b>2. Failures indicated on the annunciation window .....</b>  | <b>5</b>  |
| <b>2.1. Alternator failure .....</b>                           | <b>5</b>  |
| <b>2.2. Pitot heating system failure .....</b>                 | <b>6</b>  |
| <b>3. G1000 System Failures .....</b>                          | <b>7</b>  |
| <b>3.1. Loss of information displayed .....</b>                | <b>7</b>  |
| <b>3.2. Loss of airspeed information .....</b>                 | <b>7</b>  |
| <b>3.3. Loss of attitude information .....</b>                 | <b>8</b>  |
| <b>3.4. Loss of altitude information .....</b>                 | <b>8</b>  |
| <b>3.5. Loss of vertical speed information .....</b>           | <b>9</b>  |
| <b>3.6. Loss of heading information .....</b>                  | <b>9</b>  |
| <b>3.7. Display failure .....</b>                              | <b>10</b> |
| <b>4. Engine securing .....</b>                                | <b>11</b> |
| <b>5. Aircraft evacuation .....</b>                            | <b>11</b> |
| <b>6. Engine failures .....</b>                                | <b>13</b> |
| <b>6.1. Engine failure during takeoff run .....</b>            | <b>13</b> |
| <b>6.2. Engine failure after Take-off .....</b>                | <b>13</b> |
| <b>6.3. Propeller overspeed .....</b>                          | <b>14</b> |
| <b>6.4. Irregular rpm .....</b>                                | <b>14</b> |
| <b>6.5. CHT limit exceedance .....</b>                         | <b>15</b> |
| <b>6.6. Oil temperature limit exceedance .....</b>             | <b>15</b> |
| <b>6.7. Oil pressure limits exceedance .....</b>               | <b>16</b> |
| <b>6.8. Low fuel pressure .....</b>                            | <b>17</b> |
| <b>6.9. High fuel pressure .....</b>                           | <b>17</b> |
| <b>6.10. Defective engine controls .....</b>                   | <b>18</b> |
| <b>7. Inflight engine restart .....</b>                        | <b>19</b> |
| <b>7.1. Propeller windmilling .....</b>                        | <b>19</b> |
| <b>8. Smoke and fire .....</b>                                 | <b>21</b> |

|                                                                   |           |
|-------------------------------------------------------------------|-----------|
| <b>8.1. Engine fire on the ground .....</b>                       | <b>21</b> |
| <b>8.2. Engine fire during takeoff .....</b>                      | <b>21</b> |
| <b>8.3. Engine fire in flight .....</b>                           | <b>21</b> |
| <b>8.4. Electrical smoke in cabin on the ground .....</b>         | <b>22</b> |
| <b>8.5. Electrical smoke in cabin during flight .....</b>         | <b>22</b> |
| <b>9. Recovery from unintentional spin.....</b>                   | <b>23</b> |
| <b>10. Other emergencies .....</b>                                | <b>25</b> |
| <b>10.1. Loss of Essential Bus .....</b>                          | <b>25</b> |
| <b>10.2. Loss of Main Bus .....</b>                               | <b>25</b> |
| <b>10.3. Electrical system overall failure.....</b>               | <b>26</b> |
| <b>10.4. Static port failure .....</b>                            | <b>26</b> |
| <b>10.5. Unintentional flight into icing conditions.....</b>      | <b>27</b> |
| <b>10.6. Flaps control failure .....</b>                          | <b>27</b> |
| <b>10.7. Electrical Rudder Trim control failure.....</b>          | <b>28</b> |
| <b>11. Landing emergencies .....</b>                              | <b>29</b> |
| <b>11.1. Forced landing without engine power.....</b>             | <b>29</b> |
| <b>11.2. Power-on forced landing .....</b>                        | <b>29</b> |
| <b>11.3. Landing with nose landing gear tire deflated .....</b>   | <b>30</b> |
| <b>11.4. Landing with a main landing gear tire deflated .....</b> | <b>30</b> |



## 1. INTRODUCTION

Section 3 includes checklists and detailed procedures for coping with various types of emergency conditions that could arise.

Before operating the aircraft, the pilot should become thoroughly familiar with the present manual and, in particular, with the present Section. Further, a continued and appropriate training should be provided.

Two types of emergency procedures are hereby given:

- a. “Bold faces” which must be known by heart and executed in the correct and complete sequence, as soon as possible as the failure is detected and recognized;

These procedures characters are boxed and highlighted, as shown below:

| <b><u>BEFORE ROTATION: ABORT TAKE OFF</u></b> |                                    |
|-----------------------------------------------|------------------------------------|
| 1. <b>Throttle</b>                            | <b><i>IDLE</i></b>                 |
| 2. <b>Rudder</b>                              | <b><i>Keep heading control</i></b> |
| 3. - -                                        |                                    |
| 4. - -                                        |                                    |

- b. Other procedures which should be well theoretically know and mastered, but that are not time critical and can be executed entering and following step by step the AFM appropriate checklist.

***In case of emergency the pilot should acts as follows:***

1. *Maintain aircraft control*
2. *Analyse the situation*
3. *Apply the pertinent procedure*
4. *Inform the Air Traffic Control if time and conditions permit*

The following definitions apply:

|             |
|-------------|
| <b>NOTE</b> |
|-------------|

***Land as soon as possible:*** land without delay at the nearest suitable area at which a safe approach and landing is assured.

***Land as soon as practical:*** land at the nearest approved landing area where suitable repairs can be made.

**1.1. REFERENCE AIRSPEEDS FOR EMERGENCY PROCEDURES**

|                                  |                |
|----------------------------------|----------------|
| Best glide speed ( $V_{GLIDE}$ ) | <b>85 KIAS</b> |
| No-flaps Approach Speed          | <b>80 KIAS</b> |

## 2. FAILURES INDICATED ON THE ANNUNCIATION WINDOW

The annunciator window is integrated in the GARMIN G1000. The colours are as follows:

- GREEN:** to indicate that pertinent device is turned ON  
**AMBER:** to indicate no-hazard situations which have to be considered and which require a proper crew action  
**RED:** to indicate emergency conditions

### 2.1. ALTERNATOR FAILURE

| Annunciation window | Alert window       |
|---------------------|--------------------|
| <b>ALT FAIL</b>     | Alternator failure |

If **ALT FAIL** caution is **ON**:

1. Circuit breaker(s)..... *Check*
2. Generator SWITCH..... *OFF*
3. Generator SWITCH..... *ON*

If **ALT FAIL CAUTION REMAINS** on:

4. Generator SWITCH..... *OFF*

#### NOTE

*A fully charged battery shall supply electrical power for at least 30 minutes.*

## 2.2. PITOT HEATING SYSTEM FAILURE

| Annunciation window  | Alert window  |
|----------------------|---------------|
| <b>PITOT HEAT ON</b> | Pitot heat on |
| <b>PITOT HEAT</b>    | Pitot heat    |

When the Pitot Heating system is activated, the green **PITOT HEAT ON** advisory light turns on and the amber **PITOT HEAT** caution light turns **OFF**, indicating that the Pitot Heating system is functioning properly.

If the amber **PITOT HEAT** caution light is **ON** when the green **PITOT HEAT ON** light is on, then the Pitot Heating system is not functioning properly.

In this case apply following procedure:

1. Pitot heat switch ..... *OFF*
2. Pitot heat circuit breaker ..... *CHECK IN*
3. Pitot heat switch ..... *ON*
4. **PITOT HEAT** caution light ..... *CHECK*

**NOTE**

*if the amber light stays ON, avoid visible moisture and OATs below 10° C.*

### 3. G1000 SYSTEM FAILURES

#### 3.1. LOSS OF INFORMATION DISPLAYED

When a LRU or a LRU function fails, a large red 'X' is typically displayed on the display field associated with the failed data.

#### NOTE

*In most of cases, the red "X" annunciation is accompanied by a message advisory alert issuing a flashing ADVISORY Softkey annunciation which, once selected, acknowledges the presence of the message advisory alert and displays the alert text message in the Alerts Window.*

#### 3.2. LOSS OF AIRSPEED INFORMATION

|                                                                                    |                                                                               |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
|  | <p><b>AIRSPEED FAIL</b><br/>(RED X ON DISPLAY FIELD)</p>                      |
|                                                                                    | <p>Display system is not receiving airspeed input from Air Data Computer.</p> |

**INSTRUCTION:** revert to standby instrument

### 3.3. LOSS OF ATTITUDE INFORMATION

|                                                                                   |                                                                        |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------|
|  | <p><b>ATTITUDE FAIL</b><br/>(RED X ON DISPLAY FIELD)</p>               |
|                                                                                   | <p>Display system is not receiving attitude information from AHRS.</p> |

**INSTRUCTION:** revert to standby instrument

### 3.4. LOSS OF ALTITUDE INFORMATION

|                                                                                     |                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
|  | <p><b>ALTITUDE FAIL</b><br/>(RED X ON DISPLAY FIELD)</p>                      |
|                                                                                     | <p>Display system is not receiving altitude input from Air Data Computer.</p> |

**INSTRUCTION:** revert to standby instrument

### 3.5. LOSS OF VERTICAL SPEED INFORMATION

|                                                                                   |                                                                                     |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  | <p><b>VERT SPEED FAIL</b><br/>(RED X ON DISPLAY FIELD)</p>                          |
|                                                                                   | <p>Display system is not receiving vertical speed input from Air Data Computer.</p> |

**INSTRUCTION:** determine vertical speed on the basis of altitude information

### 3.6. LOSS OF HEADING INFORMATION

|                                                                                     |                                                                       |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
|  | <p><b>HDG</b><br/>(RED X ON DISPLAY FIELD)</p>                        |
|                                                                                     | <p>Display system is not receiving valid heading input from AHRS.</p> |

**INSTRUCTION:** revert to magnetic compass

### **3.7. DISPLAY FAILURE**

In the event of a display failure, the G1000 System automatically switches to reversionary (backup) mode. In reversionary mode, all important flight information is presented on the remaining display in the same format as in normal operating mode. The change to backup path is completely automated for all LRUs and no pilot action is required.

#### **if the system fails to detect a display problem**

1. REVERSIONARY MODE button *PUSH*

 **NOTE**

*REVERSIONARY MODE button is red and located on the bottom of the audio panel .*

**CAUTION**

*If a display fails, the related Integrated Avionics Unit (IAU) is cut off and can no longer communicate with the remaining display: subsequently the NAV and COM functions provided to the failed display by the associated Integrated Avionics Unit are flagged as invalid on the remaining display.*



## **4. ENGINE SECURING**

Following procedure is applicable to shut-down the engine in flight:

- |    |                             |             |
|----|-----------------------------|-------------|
| 1. | <b>Throttle Lever</b>       | <b>IDLE</b> |
| 2. | <b>Ignition key</b>         | <b>OFF</b>  |
| 3. | <b>Fuel Selector</b>        | <b>OFF</b>  |
| 4. | <b>Electrical fuel pump</b> | <b>OFF</b>  |
| 5. | <b>Generator switch</b>     | <b>OFF</b>  |

## **5. AIRCRAFT EVACUATION**

With the engine secured and propeller stopped (if practical):

- |    |                                                                                      |                |
|----|--------------------------------------------------------------------------------------|----------------|
| 1. | <b>Parking brake</b>                                                                 | <b>ON</b>      |
| 2. | <b>Seat belts</b>                                                                    | <b>UNSTRAP</b> |
| 3. | <b>Headphones</b>                                                                    | <b>REMOVE</b>  |
| 4. | <b>Door</b>                                                                          | <b>OPEN</b>    |
| 5. | <b>MASTER SWITCH</b>                                                                 | <b>OFF</b>     |
| 6. | <i>Escape away from flames/hot engine compartment/spilling fuel tanks/hot brakes</i> |                |

INTENTIONALLY LEFT BLANK

## 6. ENGINE FAILURES

### 6.1. ENGINE FAILURE DURING TAKEOFF RUN

#### If engine fails before rotation: ABORT TAKE OFF

- |                         |                                  |
|-------------------------|----------------------------------|
| 1. Throttle Lever ..... | <b>IDLE (fully out and hold)</b> |
| 2. Mixture .....        | <b>CUT OFF</b>                   |
| 3. Brake .....          | <b>AS REQUIRED</b>               |

#### **With aircraft stopped**

- |                                     |                             |
|-------------------------------------|-----------------------------|
| 4. Ignition key.....                | <b>OFF</b>                  |
| 5. Fuel Selector.....               | <b>OFF</b>                  |
| 6. Electrical fuel pump.....        | <b>OFF</b>                  |
| 7. Generator & Master Switches..... | <b>OFF</b>                  |
| 8. Parking Brake.....               | <b>ENGAGED</b>              |
| 9. Aircraft Evacuation.....         | <b>PERFORM if necessary</b> |

### 6.2. ENGINE FAILURE AFTER TAKE-OFF

#### If engine fails immediately after becoming airborne:

- *Abort on the runway if possible.*

#### In case low altitude precludes a runway stop and / or engine restart:

1. establish a glide attitude (  $V_{GLIDE}$  )
- *Find a suitable place on the ground to land safely.*



**CAUTION**

*The landing should be planned straight ahead with only small changes in directions not exceeding 45° to the left and 45° to the right.*

*Any turn would reduce the glide performance.*

- |                        |                                  |
|------------------------|----------------------------------|
| 2. Throttle Lever..... | <b>IDLE (fully out and hold)</b> |
| 3. Mixture.....        | <b>CUT OFF</b>                   |
| 4. Brakes.....         | <b>As required</b>               |

#### **With aircraft stopped**

- |                                   |                             |
|-----------------------------------|-----------------------------|
| 5. Fuel Selector.....             | <b>OFF</b>                  |
| 6. Electrical fuel pump.....      | <b>OFF</b>                  |
| 7. Ignition key.....              | <b>OFF</b>                  |
| 8. Generator&Master Switches..... | <b>OFF</b>                  |
| 9. Parking Brake.....             | <b>ENGAGED</b>              |
| 10. Aircraft Evacuation.....      | <b>PERFORM if necessary</b> |

### **6.3. PROPELLER OVERSPEED**

In case of propeller overspeeding in flight, apply following procedure:

- |                         |              |
|-------------------------|--------------|
| 1. Throttle Lever ..... | REDUCE power |
| 2. Mixture Lever .....  | AS REQUIRED  |
| 3. RPM indicator .....  | CHECK        |

If it is not possible to decrease propeller RPM, **land as soon as possible** applying *Forced landing* procedure. (See Para 0)



**CAUTION**

*Maximum propeller RPM exceedance may cause engine components damage.*

*Apply caution while accelerating with power lever close to max and monitor engine RPM; RPM overspeed shall be prevented by retarding power lever.*

### **6.4. IRREGULAR RPM**

1. Fuel pump: .....ON
2. Fuel quantity and pressure indicators: .....CHECK
3. If necessary: ..... SWITCH TANK

#### **If engine continues to run irregularly**

- **Land as soon as possible.**

## 6.5. CHT LIMIT EXCEEDANCE

If CHT exceeds maximum limit:

- |                         |                           |
|-------------------------|---------------------------|
| 1. Throttle Lever ..... | REDUCE power as practical |
| 2. Mixture Lever .....  | Rich as required          |
| 3. CHT .....            | Verify decreasing         |

If CHT stabilizes in the green arc:

4. Continue flight

If CHT continue to rise and engine shows roughness:

**Land as soon as possible** applying forced landing procedures (See Para 0)

## 6.6. OIL TEMPERATURE LIMIT EXCEEDANCE

If oil temperature exceeds maximum limit:

### NOTE

*Maximum oil temperature limit exceedance can be the final effect of different causes: excessive friction between moving engine components, oil leakage from the circuit (with related pressure reduction) etc.*

- |                   |                     |
|-------------------|---------------------|
| 1. Throttle Lever | REDUCE engine power |
| 2. Mixture lever  | Enrich as required  |
| 3. OIL TEMP       | CHECK               |

### if oil temperature does not decrease:

- |             |          |
|-------------|----------|
| 4. Airspeed | INCREASE |
| 5. OIL TEMP | CHECK    |

### If oil temperature does not come back within limits:

6. **Land as soon as practical** with engine set to the minimum necessary power

If engine roughness, vibrations, erratic behaviour or high CHT is detected:

**Land as soon as possible** applying forced landing procedure (See Para 0)

## **6.7. OIL PRESSURE LIMITS EXCEEDANCE**

### **LOW OIL PRESSURE**

#### **If oil pressure is under the lower limit**

1. Throttle Lever ..... *REDUCE to minimum practical*
2. Mixture Lever ..... *as required*
3. OIL TEMP ..... *CHECK within limits*
4. OIL PRESS ..... *CHECK*

#### **If oil pressure does not increase and temperature remains within limits**

Monitor oil and cylinder head temperatures.  
Land as soon as practicable.

#### **If oil pressure does not increase and temperature exceeds limits**

Reduce engine power to minimum required.  
Land as soon as possible applying Forced landing procedure. (See Para 0)  
Be prepared for engine failure and emergency landing.

#### **If oil pressure tends to zero (combined with vibration, loss of oil, unusual metallic smoke and noise)**

Apply Forced landing procedure. (See Para 0)

### **HIGH OIL PRESSURE**

#### **If oil pressure exceeds upper limit**

1. Throttle Lever ..... *first REDUCE engine power by 10%*
2. Mixture Lever ..... *as required*
3. OIL PRESS ..... *CHECK*

#### **If oil pressure does not decrease**

4. **Land as soon as possible** applying *Forced landing procedure*. (See Para 0)

|             |
|-------------|
| <b>NOTE</b> |
|-------------|

*An excessive oil pressure value can be counteracted by decreasing propeller RPM.*

## **6.8. LOW FUEL PRESSURE**

### **If fuel pressure decreases below the lower limit**

1. Electric fuel pump..... ON
2. Fuel selector valve..... Select opposite fuel tank if NOT empty
3. Fuel quantity ..... *CHECK*

If fuel pressure doesn't build up:

1. **Land as soon as practical.** Prepare for potential engine failure and prepare to apply *Forced landing procedure*. (See Para 0)

## **6.9. HIGH FUEL PRESSURE**

### **If fuel pressure increases above the upper limit**

1. **Land as soon as possible.** Prepare for potential engine shut down and apply *Forced landing procedure*. (See Para 0)

Possible injector failure or obstruction.

## **6.10. DEFECTIVE ENGINE CONTROLS**

### **Defective Mixture Control Cable**

1. Maintain altitude to the nearest airfield
2. During descent, check engine behaviour to a higher power setting. A lean mixture can lead to engine roughness and loss of power. Landing approach must be planned accordingly.



Go-around may then be impossible.

#### **WARNING**

### **Defective Throttle Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield
2. Perform landing with shut-down engine applying *Forced landing procedure*. (See Para 0)

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*. (See Para 0)



## 7. INFIGHT ENGINE RESTART

### 7.1. PROPELLER WINDMILLING



#### WARNING

*In case of engine shutdown, propeller will keep windmilling and will not stop, preventing the use of ignition key. Engine inflight restart must be performed without using ignition key until propeller is windmilling in order to avoid possible engine damages.*

*Typical indication of a potential engine shutdown, with windmilling propeller, will be low RPM values incompatible with power lever demand, to be confirmed by other engine instruments (OIL Pressure, CHT, EGT running down abnormally).*

*Flight test results suggest a windmilling propeller speed as low as 600-500 RPM at low speeds in case of flameout.*

*Inflight engine restart may be performed during 1g flight anywhere within the normal operating envelope of the airplane.*

- |                                  |                                |
|----------------------------------|--------------------------------|
| 1. Master switch .....           | Check ON                       |
| 2. Fuel pump .....               | ON                             |
| 3. Fuel quantity indicator ..... | CHECK                          |
| 4. Fuel Selector .....           | SWITCH TANK                    |
| 5. Throttle Lever .....          | Minimum 1cm(0,39in) above IDLE |
| 6. Mixture .....                 | FULL rich                      |
| 7. Throttle lever .....          | SET as required                |

#### In case of unsuccessful engine restart:

- **Land as soon as possible** applying *Forced landing procedure*. (See Para 0)

#### In case of successful engine restart:

- **Land as soon as possible**



#### CAUTION

*After engine restart, if practical, moderate propeller RPM to allow the temperatures for stabilizing in the green arcs.*

INTENTIONALLY LEFT BLANK

## 8. SMOKE AND FIRE

### 8.1. ENGINE FIRE ON THE GROUND

|                                 |                         |
|---------------------------------|-------------------------|
| 1. Mixture .....                | <b>CUT OFF</b>          |
| 2. Cabin heat and defrost ..... | <b>OFF</b>              |
| 3. Fuel Selector .....          | <b>OFF</b>              |
| 4. Ignition key .....           | <b>OFF</b>              |
| 5. Fuel pump.....               | <b>OFF</b>              |
| 6. MASTER SWITCH .....          | <b>OFF</b>              |
| 7. Parking Brake .....          | <b>ENGAGED</b>          |
| 8. Aircraft evacuation.....     | <b>PERFORM (Para 4)</b> |

### 8.2. ENGINE FIRE DURING TAKEOFF

#### If engine fails before rotation: ABORT TAKE OFF

|                        |                    |
|------------------------|--------------------|
| 1. Throttle Lever..... | <b>IDLE</b>        |
| 2. Mixture.....        | <b>CUT OFF</b>     |
| 3. Brakes.....         | <b>AS REQUIRED</b> |

#### With aircraft under control

|                                 |                         |
|---------------------------------|-------------------------|
| 4. Fuel Selector.....           | <b>OFF</b>              |
| 5. Electrical fuel pump.....    | <b>OFF</b>              |
| 6. Ignition key.....            | <b>OFF</b>              |
| 7. Cabin Heat.....              | <b>OFF</b>              |
| 8. Field & Master Switches..... | <b>OFF</b>              |
| 9. Parking Brake.....           | <b>ENGAGED</b>          |
| 10. Aircraft Evacuation.....    | <b>PERFORM (Para 4)</b> |

### 8.3. ENGINE FIRE IN FLIGHT

|                                                                             |                     |
|-----------------------------------------------------------------------------|---------------------|
| 1. Cabin heat and defrost .....                                             | <b>BOTH OFF</b>     |
| 2. Mixture .....                                                            | <b>CUTOFF</b>       |
| 3. Fuel Selector .....                                                      | <b>OFF</b>          |
| 4. Throttle Lever .....                                                     | <b>FULL FORWARD</b> |
| 5. Ignition key .....                                                       | <b>OFF</b>          |
| 6. Electrical fuel pump .....                                               | <b>OFF</b>          |
| 7. Master Switches .....                                                    | <b>OFF</b>          |
| 8. Cabin ventilation .....                                                  | <b>OPEN</b>         |
| 9. Land as soon as possible applying Forced landing procedure. (See Para 0) |                     |

## **8.4. ELECTRICAL SMOKE IN CABIN ON THE GROUND**

- |                                 |             |
|---------------------------------|-------------|
| 1. MASTER SWITCH .....          | <b>OFF</b>  |
| 2. Generator Switch .....       | <b>OFF</b>  |
| 3. Cabin heat and defrost ..... | <b>OFF</b>  |
| 4. Throttle Lever .....         | <b>IDLE</b> |
| 5. Ignition key .....           | <b>OFF</b>  |
| 6. Fuel Selector .....          | <b>OFF</b>  |

**With propeller stopped, evacuate the aircraft**

## **8.5. ELECTRICAL SMOKE IN CABIN DURING FLIGHT**

- |                                                                                  |             |
|----------------------------------------------------------------------------------|-------------|
| 1. Cabin heat .....                                                              | <b>OFF</b>  |
| 2. Cabin ventilation.....                                                        | <b>OPEN</b> |
| 3. <i>In case of fire, direct the fire extinguisher toward the base of flame</i> |             |

### **If smoke persists:**

- |                          |            |
|--------------------------|------------|
| 4. Generator switch..... | <b>OFF</b> |
|--------------------------|------------|

### **If smoke persists:**

- |                               |            |
|-------------------------------|------------|
| 5. Generator switch.....      | <b>ON</b>  |
| 6. <i>Keep RPM above 1000</i> |            |
| 7. Master switch.....         | <b>OFF</b> |

### **If smoke persists:**

- |                          |            |
|--------------------------|------------|
| 8. Generator switch..... | <b>OFF</b> |
|--------------------------|------------|



**CAUTION**

*If the Generator SWITCH is set to OFF, consider that flaps are supplied by battery.*

## 9. RECOVERY FROM UNINTENTIONAL SPIN

If unintentional spin occurs:

1. **Throttle** ..... **IDLE**
2. **Rudder** ..... **Fully opposite to the direction of spin**
3. **Control Yoke** ..... **Centralize and hold neutral**

*When rotation stops:*

4. **Rudder** ..... **NEUTRAL**
5. **Attitude** ..... **RECOVERY promptly but smoothly,  
averting speed close to/in excess of  
VNE**
6. **Throttle** ..... **AS REQUIRED**



**WARNING**

*Keep full rudder against rotation until spin has stopped.*

*One complete turn and recovery will take about 800 to 1000 feet altitude loss.*

INTENTIONALLY LEFT BLANK

## 10. OTHER EMERGENCIES

### 10.1. LOSS OF ESSENTIAL BUS

In case of loss of essential bus, the following will be lost (related breakers are listed):

|               |               |
|---------------|---------------|
| PFD           | FLAP ACTUATOR |
| COM1          | PITOT HEAT    |
| GPS1/NAV1     | STROBE LIGHT  |
| EIS           | LANDING LIGHT |
| FUEL PUMP     | AHRS          |
| FIELD         | ADC           |
| STALL WARNING | ANN. PANEL    |

Electrical power from Alternator is lost, battery will automatically provide energy (duration at least 30 min.).

Pilot will need to make reference to standby instrument for primary flight information and parameters.

Pilot will be able to use the audio panel and COM2/NAV2 via MFD.

Engine parameters and related warnings/cautions are lost.

Flaps extension and retraction will be lost, apply Flaps control failure procedure (See Para 10.6).

Strobe and landing lights will be lost, NAV and taxi lights are still available; taxi light will be the only visual aid for landing in night conditions.

### 10.2. LOSS OF MAIN BUS

In case of loss of main bus, the main bus voltage will drop to zero.

The following will be lost (related breakers are listed):

|                                            |                           |           |
|--------------------------------------------|---------------------------|-----------|
| AUDIO PANEL                                | START                     | AVIONIC   |
| RUDDER TRIM ACTUATOR                       | INSTR. LIGHT              | MFD       |
| A.D.I. (running on internal battery power) | NAV LIGHT                 | COM2      |
| 28/12 VDC CONVERTER (if installed)         | TAXI LIGHT                | GPS2/NAV2 |
| 12VDC SOCKET (if installed)                | CABIN LIGHT               | ADF       |
| INSTRUMENT (clock, pitch trim indic.)      | FAN (G1000)               | XPDR      |
| COPILOT SEAT (if installed)                | PILOT SEAT (if installed) | DME       |

Fail safe operation of Garmin G1000 allows pilot to transmit and use COM1 using headphones only; speakers will not be available.

For night flights, all instrument lights will be lost, but emergency light will still be available.

### 10.3. ELECTRICAL SYSTEM OVERALL FAILURE

In case of electrical system overall failure, apply following procedure:

1. MASTER SWITCH ..... OFF
2. Generator Switch ..... OFF
3. MASTER SWITCH ..... ON
4. Generator Switch ..... ON

**If failure persists**

**Land as soon as possible**

#### **NOTE**

*Standby instrument is still available, providing the internal battery is in good charge status (>80%) it will provide at least 1 hr of runtime.*



**WARNING**

*An electrical system overall failure prevents flaps operation: landing distance without flaps increases of about 25% (See also Para 10.6).*

### 10.4. STATIC PORT FAILURE

In case failure, the alternate static port in the cabin must be activated.

In this case apply following procedure:

1. Cabin ventilation ..... OFF (*hot and cold air*)
2. ALTERNATE STATIC PORT VALVE .... OPEN
3. Continue the mission



## **10.5. UNINTENTIONAL FLIGHT INTO ICING CONDITIONS**

1. Pitot heat ..... ON
2. *Fly immediately away from icing conditions (changing altitude and direction of flight, out and below of clouds, visible moisture, precipitations).*
3. Control surfaces ..... MOVE continuously to avoid locking
4. Throttle..... INCREASE to prevent ice build-up on propeller blades

**WARNING**

*In event of ice build-up in correspondence of wing leading edges, stall speed increases and stall may become asymmetric. In case of stabilator ice accretion, it may lose its efficiency, leading to lack of aircraft pitch control and loss of control.*

## **10.6. FLAPS CONTROL FAILURE**

### **DURING TAKEOFF**

**CAUTION**

*In case of unintentional flaps retraction, or if the flaps control fails, and if the takeoff cannot be aborted, consider that the distances, without flaps, increase by about 20%.*

1. Flap position..... CHECK and confirm
2. Airspeed ..... KEEP below  $V_{FE}$
3. **Land as soon as practical**

### **DURING APPROACH/LANDING**

**CAUTION**

*In case of unintentional flaps retraction or if the flaps control fails, consider that the landing distance without flaps increases by about 25%.*

1. Flap position..... CHECK and confirm
2. Airspeed ..... ESTABLISH *no-flaps approach speed*
3. **Land as soon as practical**

## **10.7. ELECTRICAL RUDDER TRIM CONTROL FAILURE**

### **Trim Runaway**

In event of trim runaway:

1. Speed: *ADJUST to control aircraft without excessive pedal force*
2. Rudder: *AS REQUIRED*
3. **Land aircraft as soon as practical.**

### **Trim Jamming**

Should trim control be jammed / inoperative:

1. Breaker: *CHECK IN*
2. Speed: *ADJUST to control aircraft without excessive pedal force*
3. Rudder: *AS REQUIRED*
4. **Land aircraft as soon as practical.**

## 11. LANDING EMERGENCIES

### 11.1. FORCED LANDING WITHOUT ENGINE POWER

#### Preparation:

1. Flaps..... *UP*
2. Airspeed ..... *ESTABLISH  $V_{GLIDE}$*
3. Radio ..... *Transmit MAYDAY giving location and intentions*
4. Transponder ..... *7700*
5. If off airport, ELT ..... *ON*
6. Find a suitable place to land safely, plan to approach it upwind
7. Throttle Lever ..... *IDLE*
8. Mixture ..... *CUTOFF*
9. Fuel Selector ..... *OFF*
10. Ignition key ..... *OFF*
11. Fuel pump ..... *OFF*
12. Seat belts ..... *Tightly FASTENED*

#### When landing is assured:

13. Flaps ..... *AS REQUIRED*
14. Generator and Master switches ..... *OFF*

#### NOTE

*Be prepared for aircraft evacuation (Para 4).*

### 11.2. POWER-ON FORCED LANDING

1. Flaps..... *UP*
2. Airspeed ..... *ESTABLISH  $V_{GLIDE}$*
3. Locate the most suitable terrain for emergency landing, plan to approach upwind
4. Safety belts..... *Tightly FASTENED*

#### When landing is assured:

5. Flaps ..... *AS NECESSARY*
6. Fuel selector valve..... *OFF*
7. Electric Fuel Pump..... *OFF*
8. Ignition Key..... *OFF*
9. Generator and Master switches..... *OFF*

### **11.3. LANDING WITH NOSE LANDING GEAR TIRE DEFLATED**

1. Pre-landing checklist: *COMPLETE*
2. Flaps: *LAND*
3. Land and maintain aircraft *NOSE HIGH* attitude as long as possible.

*As aircraft stops*

4. Engine securing: *PERFORM (see Para. 5)*
5. Airplane evacuation: *PERFORM (see Para 4)*

### **11.4. LANDING WITH A MAIN LANDING GEAR TIRE DEFLATED**

1. Pre-landing checklist: *COMPLETE*
2. Flaps: *LAND*
3. Land the aeroplane on the side of runway opposite to the defective tire to compensate the change in direction which is to be expected during final rolling (put the drag in the middle)
4. Touchdown with the GOOD TIRE FIRST and hold aircraft with the flat tire off the ground as long as possible by mean of aileron and rudder control.

*As aircraft stops*

5. Engine securing: *PERFORM (see Para. 5)*
6. Airplane evacuation: *PERFORM (see Para. 4)*

## **SECTION 4 – NORMAL PROCEDURES**

### **INDEX**

|              |                                                                                            |           |
|--------------|--------------------------------------------------------------------------------------------|-----------|
| <b>1.</b>    | <b>INTRODUCTION .....</b>                                                                  | <b>3</b>  |
| <b>2.</b>    | <b>IFR flight: training pre-requisites and incremental exposition to G1000 suite .....</b> | <b>4</b>  |
| <b>3.</b>    | <b>AIRSPEEDS FOR NORMAL OPERATIONS .....</b>                                               | <b>7</b>  |
| <b>4.</b>    | <b>PRE-FLIGHT INSPECTION .....</b>                                                         | <b>9</b>  |
| <b>4.1.</b>  | <b>Cabin Inspection .....</b>                                                              | <b>9</b>  |
| <b>4.2.</b>  | <b>Aircraft Walk-around .....</b>                                                          | <b>10</b> |
| <b>5.</b>    | <b>CHECKLISTS .....</b>                                                                    | <b>15</b> |
| <b>5.1.</b>  | <b>Before Starting engine (After Preflight Inspection).....</b>                            | <b>15</b> |
| <b>5.2.</b>  | <b>Engine Starting .....</b>                                                               | <b>16</b> |
| <b>5.3.</b>  | <b>Before taxiing .....</b>                                                                | <b>17</b> |
| <b>5.4.</b>  | <b>Taxiing .....</b>                                                                       | <b>18</b> |
| <b>5.5.</b>  | <b>Before takeoff .....</b>                                                                | <b>19</b> |
| <b>5.6.</b>  | <b>Takeoff .....</b>                                                                       | <b>20</b> |
| <b>5.7.</b>  | <b>Climb .....</b>                                                                         | <b>21</b> |
| <b>5.8.</b>  | <b>Cruise .....</b>                                                                        | <b>22</b> |
| <b>5.9.</b>  | <b>Mixture adjustment recommendation .....</b>                                             | <b>22</b> |
| <b>5.10.</b> | <b>Descent .....</b>                                                                       | <b>23</b> |
| <b>5.11.</b> | <b>Before landing .....</b>                                                                | <b>24</b> |
| <b>5.12.</b> | <b>Balked landing/missed approach .....</b>                                                | <b>24</b> |
| <b>5.13.</b> | <b>Go-around .....</b>                                                                     | <b>24</b> |
| <b>5.14.</b> | <b>After landing .....</b>                                                                 | <b>24</b> |
| <b>5.15.</b> | <b>Engine shut down.....</b>                                                               | <b>25</b> |
| <b>5.16.</b> | <b>Postflight checks .....</b>                                                             | <b>25</b> |
| <b>5.17.</b> | <b>FLIGHT IN RAIN .....</b>                                                                | <b>26</b> |
| <b>5.18.</b> | <b>REFUELLING .....</b>                                                                    | <b>26</b> |
| <b>5.19.</b> | <b>FLIGHT AT HIGH ALTITUDE.....</b>                                                        | <b>26</b> |

INTENTIONALLY LEFT BLANK

## **1. INTRODUCTION**

Section 4 describes checklists and recommended procedures for the conduct of normal operations for **P2010** aircraft.

## **2. IFR FLIGHT: TRAINING PRE-REQUISITES AND INCREMENTAL EXPOSITION TO G1000 SUITE**

The aircraft is fully equipped with a Garmin G1000 avionic suite that integrates radio aids navigation with GPS navigation, providing an outstanding capability to support IFR flight, from basic instrument training to complex IFR scenario.

### **NOTE**

*Depending on national regulations, in some countries flying IFR with a single engine aircraft without autopilot installation and/or single pilot may or may not be allowed, any customer must pay careful attention to check limitations that may apply.*

The use of G1000 software requires full system knowledge (G1000 manual which will also specify peculiar limitations), careful preparation, ground training on the computer-assisted software and pre-flight training before flight.

Furthermore, as a minimum during training, it's strongly recommended using the avionic suite in IFR with incremental steps after initial basic IFR instruction:

1. Initial use of a single radio-aids (No GPS);
2. Use of two radio-aids (No GPS);
3. Use of GPS for point to point navigation (No approaches);
4. Use of VNAV feature;
5. Full use of avionic suite.

The flight training syllabus for IFR instruction will need to address this incremental approach in order to give pilots awareness of full avionic potential, and to highlight the complexity of single pilot usage of G1000 Garmin suite while en-route or high density airspace structure.



### **CAUTION**

*Due to precision required on IFR flight, the workload that may develop using full avionic suite, may get excessive in single pilot without the aid of an autopilot.*

Considering the complexity of the G1000 suite, sound judgment will be required (weather, airspace complexity, pilot skills) to assess the best option of IFR steer guidance.



**NOTE**

*The necessity to correct or modify flight plans in the Garmin G1000 under these conditions may distract pilots from basic handling causing deviations from assigned parameters, so careful attention must be exercised to avoid deviations on flying parameters.*

*It's highly recommended to continue cross-checking flight parameters when entering flight data into the G1000, especially when trying to create / insert arrival and departure procedures and / or VNAV profiles as the quantity of actions needed is high and may distract pilots from basic and precise handling.*

The following prescriptions, other than those already present in the G1000 manual, shall be observed:

- Use of GPS for precision approach navigation mode is not allowed.
- Use of GPS is prohibited as primary means for navigation. GPS is approved as supplemental means for navigation;
- Use of GPS is prohibited for IFR in terminal area or in non-precision approach operations;

If Receiver Autonomous Integrity Monitoring (RAIM) function becomes unavailable in en route phase of flight, position must be verified every 15 minutes using other IFR approved navigation system.

**Turbulence and / or crosswind:**

Presence of moderate to heavy turbulence and / or strong crosswind conditions (above 20 kts crosswind) will require high drift angle to correct for wind (above 15° drift) and highly reduce spare capabilities to do other concurrent tasks inside the cockpit other than precise flying.

INTENTIONALLY LEFT BLANK

### 3. AIRSPEEDS FOR NORMAL OPERATIONS

The following airspeeds are those which are significant for normal operations.

|                                     | <b>FLAPS</b> | <b>1160 kg<br/>(2557 lb)</b> |
|-------------------------------------|--------------|------------------------------|
| Rotation Speed ( $V_R$ )            | T/O          | <b>60 KIAS</b>               |
| Best Angle-of-Climb Speed ( $V_X$ ) | T/O          | <b>65 KIAS</b>               |
| Best Angle-of-Climb Speed ( $V_X$ ) | 0°           | <b>76 KIAS</b>               |
| Best Rate-of-Climb speed ( $V_Y$ )  | 0°           | <b>82 KIAS</b>               |
| Flaps ( $V_{FE}$ )                  | T/O & LAND   | <b>91 KIAS</b>               |
| No flaps approach                   | 0°           | <b>80 KIAS</b>               |
| Approach speed                      | T/O          | <b>75 KIAS</b>               |
| Final Approach Speed                | FULL         | <b>70 KIAS</b>               |
| Optimal Touch Down Speed            | FULL         | <b>60 KIAS</b>               |
| Manoeuvring speed ( $V_A$ )         | 0°           | <b>120 KIAS</b>              |
| Glide Speed ( $V_{GLIDE}$ )         | 0°           | <b>85 KIAS</b>               |
| Never Exceed Speed ( $V_{NE}$ )     | 0°           | <b>166 KIAS</b>              |

INTENTIONALLY LEFT BLANK

## **4. PRE-FLIGHT INSPECTION**

Before each flight, it is necessary to carry out a complete aircraft check including a cabin inspection followed by an external inspection, as below detailed.

### **4.1. CABIN INSPECTION**

1. Aircraft documents (ARC, Certificate of Airworthiness, Noise certificate, Radio COM certificate, AFM): *check current and on board*
2. Weight and balance: *calculate (ref. to Section 6) and check within limits*
3. Breaker: *all IN*
4. Safety belts: *connected to hard points, check condition*
5. Ignition key: *OFF, key extracted*
6. Master switch: *ON*
7. Voltmeter: *check within the limits*
8. Lights: *all ON, check for operation*
9. Acoustic stall warning: *check for operation*
10. Master switch: *OFF*
11. Baggage: *check first aid kit, ELT, fire extinguisher, luggage secured with restraint net.*

## **4.2. AIRCRAFT WALK-AROUND**

To perform the aircraft walk-around, carry out the checklists according to the pattern shown in Figure 4-1.



*Visual inspection is defined as follows: check for defects, cracks, detachments, excessive play, unsafe or improper installation as well as for general condition. For control surfaces, visual inspection also involves additional check for freedom of movement and security. Red lubber lines on bolts and nuts shall be intact.*



*Fuel level indicated by the fuel quantity indicators must be verified by visual check of actual fuel quantity embarked in the tanks: graduated dipstick must be used.*



*If ignitions key is in L/R/BOTH position, a propeller movement can cause the engine starting with consequent hazard for people nearby.*



*Fuel drainage operation must be carried out with the aircraft parked on a level surface. Set Cockpit Fuel Selector Valve to OFF prior to drain fuel.*

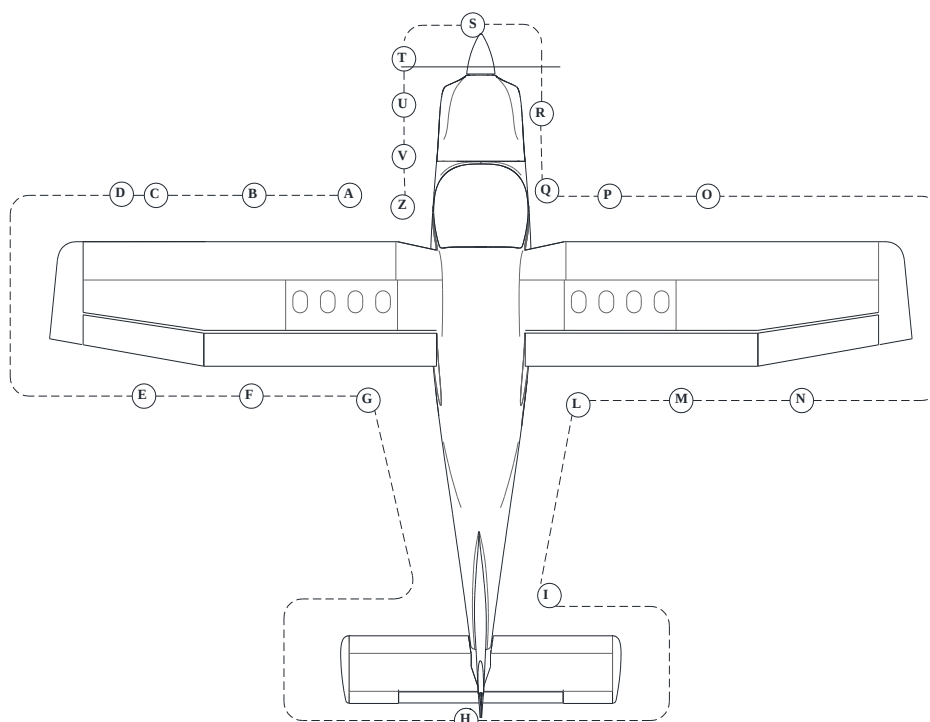


**Figure 4.1**

- |          |                                            |                                                                                                                                                                                                                                                                                                   |
|----------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> | Left fuel filler cap                       | <i>CHECK</i> desired fuel level (use graduated dipstick). Drain the left fuel tank sump by quick drain valve using a cup to collect fuel (drainage operation must be carried with the aircraft parked on a level surface). Check for water or other contaminants. Make sure filler cap is closed. |
| <b>B</b> | Pitot tube                                 | <i>REMOVE</i> pitot plug and check the pitot for obstructions. Do not blow inside pitot tube.                                                                                                                                                                                                     |
| <b>C</b> | Left side leading edge and wing skin       | <i>Visual inspection, check stall strips (if present)</i>                                                                                                                                                                                                                                         |
| <b>D</b> | Left strobe light                          | <i>Visual inspection, CHECK for integrity and fixing</i>                                                                                                                                                                                                                                          |
| <b>E</b> | Left aileron, hinges and LH tank vent line | <i>CHECK aileron and hinges for damage, and freedom from plays;<br/>Copper bonding strips: CHECK for proper connection;<br/>Left tank vent: CHECK for obstructions.</i>                                                                                                                           |
| <b>F</b> | Left flap and hinges                       | <i>Visual inspection;<br/>Copper bonding strips: CHECK for proper connection.</i>                                                                                                                                                                                                                 |

## **Section 4 – Normal procedures**

### **Pre-flight Inspection**

|          |                                                |                                                                                                                                                                                                                                                                                                    |
|----------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>G</b> | Left main landing gear                         | <i>CHECK inflation, tire condition, alignment, fuselage skin condition. Check fuselage skin status, tire status (cuts, bruises, cracks and excessive wear), slippage markers integrity, gear structure and brakes hoses: there should be no sign of hydraulic fluid leakage.</i>                   |
| <b>H</b> | Stabilator, tab and rear light                 | <i>CHECK stabilator leading edge. Check the actuating mechanism of stabilator and the connection with related tab: CHECK free of play, friction. CHECK fuselage bottom and top skin. CHECK antennas for integrity. Check light for integrity.</i>                                                  |
| <b>I</b> | Vertical tail and rudder                       | <i>Visual inspection, check free of play, friction.</i>                                                                                                                                                                                                                                            |
| <b>L</b> | Right main landing gear                        | <i>CHECK inflation, tire condition, alignment, fuselage skin condition. Check fuselage skin status, tire status (cuts, bruises, cracks and excessive wear), slippage markers integrity, gear structure and brakes hoses: there should be no sign of hydraulic fluid leakage.</i>                   |
| <b>M</b> | Right flap and hinges                          | <i>Visual inspection; Copper bonding strips: CHECK for proper connection;</i>                                                                                                                                                                                                                      |
| <b>N</b> | Right aileron, hinges and RH tank vent line    | <i>Visual inspection, check free of play, friction; Copper bonding strips: CHECK for proper connection; Right side tank vent: check for obstructions.</i>                                                                                                                                          |
| <b>O</b> | Right strobe light, leading edge and wing skin | <i>Visual inspection, CHECK stall strips (if present), CHECK strobe light for integrity and fixing</i>                                                                                                                                                                                             |
| <b>P</b> | Stall indicator switch                         | <i>CHECK for integrity and free of play,</i>                                                                                                                                                                                                                                                       |
| <b>Q</b> | Right fuel filler cap                          | <i>CHECK desired fuel level (use graduated dipstick). Drain the right fuel tank sump by quick drain valve using a cup to collect fuel (drainage operation must be carried with the aircraft parked on a level surface). Check for water or other contaminants. Make sure filler cap is closed.</i> |
| <b>R</b> | Nose wheel strut and tire/<br>RH static port   | <i>CHECK inflation, tire condition and condition of shock absorber: there should be no sign of hydraulic fluid leakage. Check the right static port for obstructions.</i>                                                                                                                          |



- S** Propeller and spinner condition *CHECK for nicks, cracks, dents and other defects, propeller should rotate freely. Check fixing and lack of play between blades and hub.*
- T** Check the engine cowling surface conditions, then open engine inspection doors and perform the following checks:
- a) *Nacelle inlets and exhausts openings must be free of obstructions. Check connection and integrity of air intake system, visually inspect that ram air intake is unobstructed. If inlet and outlet plugs are installed, they must be removed.*
  - b) *Check radiator. There should be no indication of leakage of fluid and they have to be free of obstructions.*
  - c) *Check for foreign objects*
  - d) *Only before the first flight of a day:*
    - (1) *Brake Hydraulic fluid tank: check for correct level and replenish as required*
    - (2) *Check V belt for general condition*
    - (3) *Exhaust: inspect for damages, leakage and general condition.*
    - (4) *Check engine mount and silent-blocks for condition.*
  - e) *At cold engine, Check engine oil level and replenish as required. Prior to long flights oil should be added so that the oil level reaches the “max” mark.*
  - f) *Drain off Gascolator for water and sediment (drain until no water comes off). Then make sure drain valve is closed.*
  - g) *Check drainage hoses free of obstructions*
  - h) *Verify all parts are fixed or locked: inspect fuel circuit for leakages.*
- U** Engine cowling doors *CLOSE, check for proper alignment of cam-locks*
- V** Landing/taxi light and LH static port *CHECK, Visual inspection for integrity.  
Right side tank vent: check for obstructions.*
- Z** Tow bar and chocks *REMOVE, stow on board pitot, static ports and stall warning protective plugs.*

**NOTE**

*Avoid blowing inside Pitot tube and inside airspeed indicator system's static ports as this may damage instruments.*

INTENTIONALLY LEFT BLANK

## 5. CHECKLISTS

### 5.1. BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*
2. Flight controls: operate full stroke checking for movement smoothness, free of play and friction.
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Throttle: *IDLE*
6. Mixture control Lever: *LEAN*
7. Circuit Breakers: *check all IN*
8. Master switch: *ON, wait PFD turn on, Check ALT OUT caution ON, Check LOW FP and LOW OP warning ON*
9. Only before the first flight of the day:
  - Standby Instrument: Check no red crosses displayed.
    - a. Press and hold the control knob (approx. 2 sec)
    - b. Rotate the knob selecting “INFO>” page then press it
    - c. Select “BATTERY INFO” page then press the knob
    - d. Check “CHARGE (%)” to be more than 80%, then exit menu
10. Avionic Master switch: *ON, wait MFD turn on, check instruments, check Voltage on Main and Essential Buses.*
11. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection, and update the Garmin fuel content in the totalizer accordingly*

*The totalizer function available on Garmin Engine page allows input only up to 230lbs (maximum usable fuel). Fuel calculations on totalizer do not use the aircraft fuel quantity indicators and are calculated from the last time the fuel was re-set. Fuel consumption on totalizer is very precise as it take instantaneous fuel flow for the computation.*
12. Electric fuel pump: *ON (check for audible pump noise and increase of fuel pressure)*
13. Warning “LOW FUEL PRESSURE”: *extinguished*
14. Electric fuel pump: *OFF*
15. Flap control: *cycle fully extended and then set to T/O*
16. Pitch Trim: *cycle fully up and down, then set to NEUTRAL*
17. Rudder trim: *cycle full right and left, then set to NEUTRAL*

**NOTE****WARNING**

*Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct  $V_R$ .*

18. Nav & Strobe lights: *ON*

**NOTE**

*In absence of RH seat occupant: fasten seat belts around the seat so as to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency.*

19. Doors: *Closed and locked*

## 5.2. ENGINE STARTING

### (a) Cold engine

1. Engine throttle: *1cm (1/2 inch) above idle*
2. Fuel selector valve: *select the tank with less fuel*
3. Electric fuel pump: *ON*
4. Mixture: *full open for 3 – 5" (positive fuel flow indication) then CUT-OFF*
5. Propeller area: *check that area is clear of persons / objects*


**WARNING**

*Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.*


**CAUTION**

*Do not overheat the starter motor. Do not operate it for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.*

6. Ignition key: *BOTH*
7. Ignition key: *START*
8. Mixture: *rapidly move to FULL RICH*
9. Throttle: *set 1000 – 1200 RPM*
10. Check oil pressure rises within 10 sec.
11. Check "OIL PRESSURE LOW": *extinguished*
12. Electric fuel pump: *OFF*
13. Check fuel pressure: *within limits*
14. Generator switch: *ON*
15. Voltmeter: *increase and check within green arc*
16. ALT FAIL caution: *extinguished*
17. Nav. and taxi light: *ON*

**NOTE**

*Avoid idling operations on the ground for optimum engine operation, maintain 1000-1200 RPM, do not exceed 2200 RPM on the ground.*

18. Engine instruments: *Check within limits*
19. Check G1000 for warning / caution messages

**(b) Warm engine**

1. Engine throttle: *IDLE*
2. Fuel selector valve: *select the tank with less fuel*
3. Electric fuel pump: *ON*
4. Propeller area: *check for area clear of persons / objects*



*Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.*



*Do not overheat the starter motor. Do not operate it for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.*

5. Ignition key: *BOTH*
6. Ignition key: *START*
7. Mixture: *rapidly to FULL RICH*
8. Throttle: *set 1000 – 1200 RPM*
9. Check oil pressure rises within 10 sec.
10. Electric fuel pump: *OFF*
11. Check fuel pressure *within limits*
12. Generator switch: *ON*
13. Voltmeter: *increase and check within green arc*
14. ALT FAIL caution: *extinguished*
15. Engine instruments: *check within green arc*
16. Check G1000 for warning / caution messages

**NOTE**

*Avoid idling operations on the ground for optimum engine operation, maintain 1000-1200 RPM, do not exceed 2200 RPM on the ground.*

**5.3. BEFORE TAXIING**

1. Flight instruments and avionics: *set, TEST functions*
2. Altimeter: *set*
3. Pitot Heat: *ON, test for ammeter indication, then OFF*
4. Parking brake: *OFF*



*When taxiing at close range to other aircraft, or during night flight in clouds, fog or haze, the strobe lights should be switched OFF. The NAV lights must always be switched ON during night procedures.*

#### 5.4. TAXIING

1. Parking brake: *Release*
2. Brakes: *check*
3. Flight instruments: *check altimeter.*

#### NOTE

*Avoid prolonged idling during taxi.*



#### CAUTION

*Alternator lights may appear when reducing engine RPM below 950 RPM (yellow arc). The light will stay ON until RPM is increased above.*

*During taxi, it is recommended to maintain propeller speed at 1000RPM or above in order to preserve a full loaded battery, minimise annunciator nuisance and assure minimum battery performance during flight.*

*Following extended operation on the ground, or at high ambient temperatures, the following indications of fuel vapor lock may appear:*

- *Arbitrary changes in idle RPM and fuel flow;*
- *Slow reaction of the engine to operation of throttle;*
- *Engine will not run with throttle in IDLE position.*



#### CAUTION

#### **Solution:**

1. *For about 1 to 2 minutes, or until the engine settles, run at a speed of 1800 to 2000 RPM. Oil and cylinder head temperatures must stay within limits.*
2. *Pull throttle back to IDLE to confirm smooth running.*
3. *Set throttle to 1200 RPM and mixture for taxiing, i.e., use mixture control lever to set the maximum RPM attainable.*
4. *Immediately before the take-off run set the mixture for take-off, apply full throttle and hold this position for 10 seconds.*

#### NOTE

*Vapor lock can be avoided if the engine is run at speeds of 1800 RPM or more.*

**5.5. BEFORE TAKEOFF**

1. Parking brake: *brake pedal press, ON*
2. Engine instruments: *Check within limits*
3. ALT OUT caution: *OFF (check)*
4. Electric Fuel pump: *ON*
5. Fuel selector valve: *select the fullest tank*
6. Fuel pressure: *check*
7. Mixture: *FULL RICH*

**NOTE**

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operations.*

8. Throttle: *set 1500 RPM*
  - a. Alternate Air check:
    - Alternate Air: *PULL (Check drop 50-100 RPM)*
  - b. Mixture check:
    - Mixture: *reduce*
    - EGT: *check increase*
    - FF: *check decrease*
    - Mixture: *FULL RICH*
9. Throttle: *2100 RPM*
10. Magneto Check: *L – BOTH – R – BOTH*
  - Max RPM drop: *175 RPM*
  - Max. difference: *50 RPM*
11. Throttle: *Idle*
12. Flaps: *check T/O*
13. Pitch and Rudder trim: *check neutral*
14. Flight controls: *check free*
15. Seat belts: *check fastened*
16. Doors: *check closed and locked*
17. Parking brake: *Release*
18. Landing light: *ON as required*
19. XPDR: *ON*

## **5.6. TAKEOFF**

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixt may cause rough running of the engine or a loss of performance. The mixture may be justed to obtain smooth engine operations.*

### **NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft den altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Pitot HEAT: *ON if required*
2. Fuel pump: *ON*
3. Brakes: *apply*
4. Throttle: *FULL and check approximately 2100 ± 100 RPM*



### **WARNING**

*Engine proper performance at full throttle shall be checked early in the ground roll in order to abandon take-off if necessary.*

*A rough engine, sluggish RPM increase or failure to reach take-off RPM are reasons for abandoning the take-off. If the engine oil is cold, an oil pressure in the yellow sector is permissible.*

5. Engine instruments: *check parameters within the limits*
6. Brakes: *Release*
7. Rotation speed  $V_R$ : *60 KIAS*

*At safe height:*

8. Flaps: *retract (minimum speed 73 KIAS)*

### **NOTE**

*Expect to adjust pitch trim (pitch up) when retracting flaps after take-off.*

9. Establish Climb rate  $V_Y$ : *82 KIAS*
10. Electrical fuel pump: *OFF*
11. Fuel pressure: *check within limits*



**5.7. CLIMB****NOTE**

*Due to position of fuel sensors, during climb fuel gauges in cockpit will indicate a fuel quantity slightly lower than the real amount. Regaining level flight will immediately restore correct indications.*

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance.*

*The mixture may be adjusted to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft density altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until an increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Flaps: *UP* (minimum speed 73KIAS)

**NOTE**

*Expect to adjust pitch trim (pitch up) when retracting flaps after take-off*

2. Establish climb Vy: 82KIAS
3. Electrical fuel pump: *OFF*
4. Fuel pressure: *check within limits*
5. Throttle: *FULL*
6. MIXTURE: *RICH*, above 5000ft keep EGT constant
7. Engine instruments: *in the GREEN*

**NOTE**

*If the fuel pressure warning light illuminates, or the fuel pressure indication is below green arc, the electrical fuel pump must be switched ON.*

## 5.8. CRUISE

1. Power: set performance as required, refer to table in section 5 of AFM
2. Fuel tank selector: as required to maintain symmetric balance
3. Mixture: set in accordance with following para 5.9

### NOTE

To optimize engine life, the cylinder head temperature (CHT) should lie between 150°F and 400°F in continuous operation, and not rise above 435°F in fast cruise.

### NOTE

Monitor and manually compensate asymmetrical fuel consumption by switching fuel selector valve. Switch ON the electric fuel pump prior to swap the fuel feeding from one tank to another.

## 5.9. MIXTURE ADJUSTMENT RECOMMENDATION



**CAUTION**

The maximum permissible cylinder head temperature (500 °F) must never be exceeded.

The mixture control lever should always be moved slowly.

Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH before throttle adjustment.

Care should always be taken that the cylinders do not cool down too quickly.

The cooling rate should not exceed 50 °F per minute.

### NOTE

For maximum service life cylinder head temperature should be kept below 475 °F (high performance cruise) and below 435 °F (for economy cruise).

### Best Cruise Economy Mixture

The best economy mixture setting may only be used up to a power setting of 75 %. In order to obtain the lowest specific fuel consumption at a particular power setting, proceed as follows:

- Slowly pull the mixture control lever back towards LEAN until the engine starts to run roughly.
- Then push the mixture control lever forward just far enough to restore smooth running. At the same time the exhaust gas temperature (EGT) should reach a maximum.

### Best Cruise Power Mixture

The mixture can be set for maximum performance at all power settings:

- The mixture should first be set as for best economy.
- The mixture should then be enriched until the exhaust gas temperature is approximately 100°F lower.

This mixture setting produces the maximum performance for a given manifold pressure and is mainly used for high power settings (approximately 75 %).

## **5.10. DESCENT**

**NOTE**

*Due to position of fuel sensors, during descent fuel gauges in cockpit will indicate a quantity slightly higher than the real amount. Regaining level flight will immediately store correct indications.*

1. Mixture control: *slowly full rich*
2. Throttle: *reduce as required*

*Shock cooling shortens engine life.*

*When reducing power, the change in cylinder head temperature should not exceed 50°F per minute. In order to ensure best practice and avoid potential illumination of ALT FAIL (due to low propeller speed), the following best practice should be observed:*

- *Reducing power to maintain a minimum descent speed of 85 KIAS (best glide) and / or a blade angle to maintain 850 RPM;*
- *Opening the ALTER AIR command to full open (to avoid ice accretion).*



*The maximum permissible cylinder head temperature (500 °F) must never be exceeded.*

*The mixture control lever should always be moved slowly.*

*Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH.*

**CAUTION**

*Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.*

**5.11. BEFORE LANDING**

1. Electric fuel pump: *ON*
2. Fuel valve: *select the fullest tank*
3. Landing Light: *ON*

*On downwind, leg abeam touch down point:*

4. Flaps: *set T/O (below 90KIAS)*

**NOTE**

*Expect to adjust pitch trim (pitch down) when extending flaps to T/O or LAND*

5. Approach speed: *set*

*On final leg, before landing:*

6. Mixture control lever: *RICH*
7. Flaps: *LAND*
8. Final Approach Speed: *set*
9. Optimal touchdown speed: *60 KIAS*

**NOTE**

*Upon flaring the aircraft has the tendency to float before touching wheels down. Taking into account local environmental constraints, consider the possibility to adjust aiming point for a better touchdown point control.*

**CAUTION**

*In conditions such as (e.g.) strong wind, danger of windshear or turbulence a higher approach speed shall be selected..*

**5.12. BALKED LANDING/MISSED APPROACH**

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

*Above a safe height:*

4. Landing lights: *OFF*

**5.13. GO-AROUND**

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

**5.14. AFTER LANDING**

1. Throttle: *Idle*
2. Brakes: *apply*
3. Pitot heat: *OFF (if ON)*
4. Flaps: *UP*
5. Electric Fuel Pump: *OFF*
6. XPDR: *OFF*
7. Landing light: *OFF*

**5.15. ENGINE SHUT DOWN**

1. Parking brake: *set*
2. Keep engine running at 1200 propeller rpm for about one minute in order to reduce latent heat.
3. Avionic equipment: *OFF*
4. Throttle: *idle*
5. Magnetos: *Check OFF – BOTH*
6. Mixture: *closed*
7. Ignition key: *OFF, key extracted*
8. Strobe light: *OFF*
9. Avionic Master: *OFF*
10. Master & Generator switches: *OFF*
11. Fuel selector valve: *OFF*

**WARNING**

*For safety, verify propeller is fully stopped before any other action.*

**CAUTION**

*Instruct passenger to fully open RH door and depart, avoiding contact with wheels and sharp wing control surfaces edges.*

**5.16. POSTFLIGHT CHECKS**

1. Flight controls: *lock by means of seat belts*
2. Wheel chocks and wing mooring lines: *Set*
3. Parking brake: *Release*
4. Doors: *Close and lock*
5. Protection plugs: *set over pitot tube, stall warning, static ports*

**5.17. FLIGHT IN RAIN**

Performance deteriorates in rain; this applies particularly to take-off distance and maximum Horizontal speed. The effect on flight characteristics is minimal.

**5.18. REFUELLING**

Before refuelling, the airplane must be connected to electrical ground.

**5.19. FLIGHT AT HIGH ALTITUDE**

At high altitudes the provision of oxygen for the occupant is necessary. Legal requirements for the provision of oxygen should be adhered to (see para 2.9)

## **SECTION 5 - PERFORMANCE**

### **INDEX**

|                                                       |           |
|-------------------------------------------------------|-----------|
| <b>1. Introduction .....</b>                          | <b>2</b>  |
| <b>2. Use of Performance Charts .....</b>             | <b>2</b>  |
| <b>3. Airspeed Indicator System Calibration .....</b> | <b>3</b>  |
| <b>4. ICAO Standard Atmosphere .....</b>              | <b>5</b>  |
| <b>5. Stall speed .....</b>                           | <b>6</b>  |
| <b>6. Crosswind .....</b>                             | <b>7</b>  |
| <b>7. Take-Off performances .....</b>                 | <b>8</b>  |
| <b>8. Take-off Rate of Climb .....</b>                | <b>11</b> |
| <b>9. En-Route Rate of Climb.....</b>                 | <b>12</b> |
| <b>10. Cruise Performance .....</b>                   | <b>13</b> |
| <b>11. Landing performances .....</b>                 | <b>15</b> |
| <b>12. Balked Landing Performance .....</b>           | <b>16</b> |
| <b>13. Noise Data .....</b>                           | <b>17</b> |

## **1. INTRODUCTION**

This section provides all necessary data for an accurate and comprehensive planning of flight activity from take-off to landing.

Data reported in graphs and/or in tables were determined using:

- ✓ “Flight Test Data” under conditions prescribed by EASA CS-23 regulation
- ✓ aircraft and engine in good condition
- ✓ average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performances were carried out by theoretical means for:

- ✓ Airspeed
- ✓ External temperature
- ✓ Altitude
- ✓ Weight
- ✓ Runway type and condition

## **2. USE OF PERFORMANCE CHARTS**

Performances data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.



### 3. AIRSPEED INDICATOR SYSTEM CALIBRATION

#### Normal Static Source

Graph shows calibrated airspeed  $V_{IAS}$  as a function of indicated airspeed  $V_{CAS}$ .

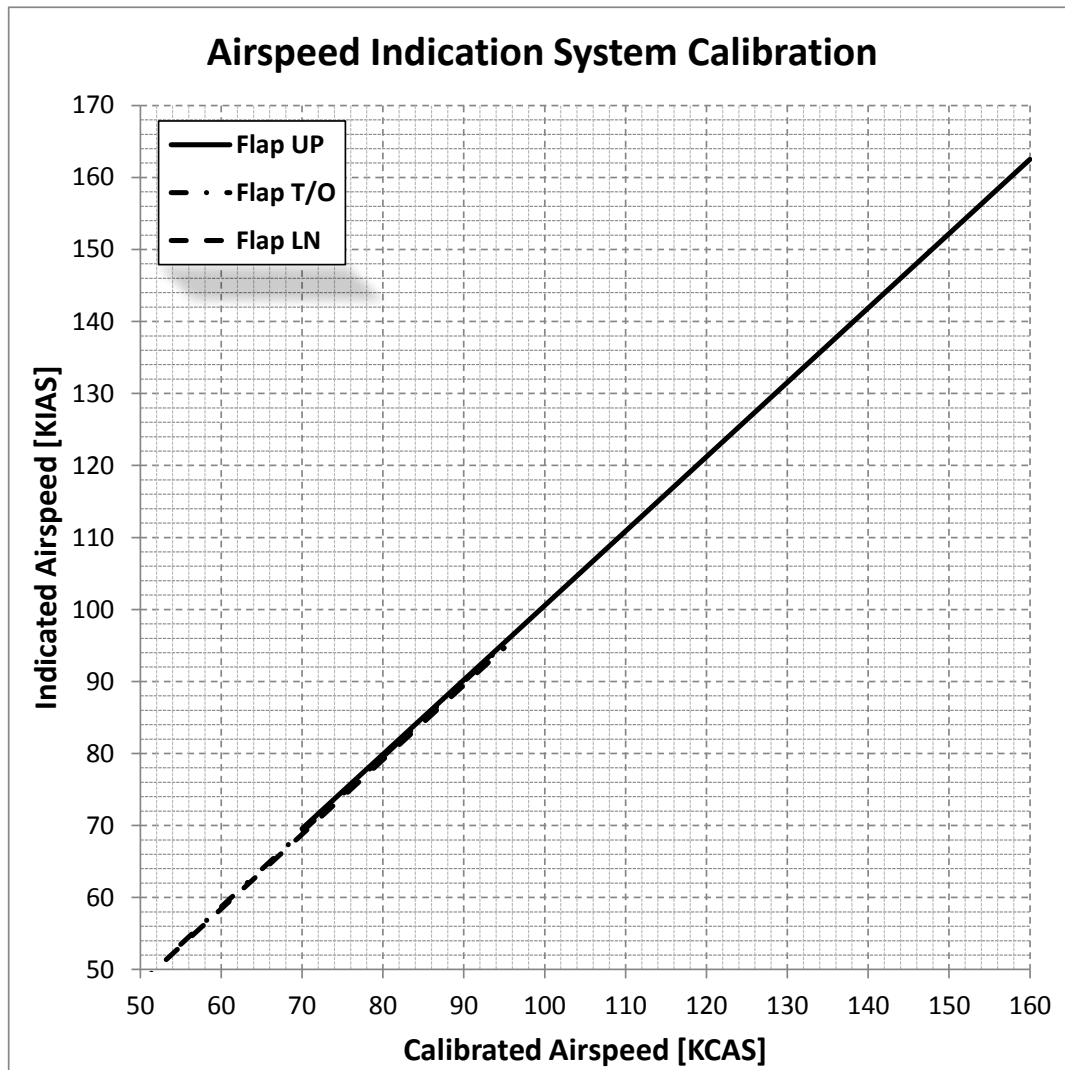


FIG. 5-1. CALIBRATED VS INDICATED AIRSPEED

Example:

**Given**

**Find**

KIAS 75.0

KCAS 74.7

Flap: UP

**NOTE**

Indicated airspeed assumes 0 as an instrument error

## Alternate Static Source

| Pressure Altitude<br>[ft] | IAS<br>[kn] | Alternate Static Air Open |                        | Vents Open  |                        | Vents and Hot Air Open |                        |
|---------------------------|-------------|---------------------------|------------------------|-------------|------------------------|------------------------|------------------------|
|                           |             | IAS<br>[kn]               | H <sub>p</sub><br>[ft] | IAS<br>[kn] | H <sub>p</sub><br>[ft] | IAS<br>[kn]            | H <sub>p</sub><br>[ft] |
| 1000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 75                        | 1020                   | 72          | 1010                   | 72                     | 1020                   |
|                           | 90          | 95                        | 1020                   | 92          | 1030                   | 93                     | 1020                   |
|                           | 110         | 115                       | 1030                   | 113         | 1020                   | 112                    | 1020                   |
|                           | 135         | 140                       | 1040                   | 139         | 1030                   | 137                    | 1030                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 1020                   | 63          | 1020                   | 62                     | 1010                   |
|                           | 70          | 75                        | 1020                   | 73          | 1020                   | 72                     | 1020                   |
|                           | 90          | 94                        | 1020                   | 92          | 1020                   | 92                     | 1020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 1020                   | 61          | 1020                   | 61                     | 1020                   |
|                           | 70          | 72                        | 1020                   | 72          | 1020                   | 71                     | 1020                   |
|                           | 90          | 92                        | 1020                   | 91          | 1020                   | 91                     | 1020                   |
| 5000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 5020                   | 72          | 5020                   | 71                     | 5020                   |
|                           | 90          | 94                        | 5030                   | 93          | 5020                   | 92                     | 5020                   |
|                           | 110         | 114                       | 5030                   | 113         | 5020                   | 112                    | 5020                   |
|                           | 133         | 137                       | 5040                   | 136         | 5030                   | 135                    | 5020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 5010                   | 62          | 5020                   | 61                     | 5010                   |
|                           | 70          | 74                        | 5020                   | 73          | 5020                   | 72                     | 5020                   |
|                           | 90          | 93                        | 5030                   | 93          | 5020                   | 93                     | 5020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 5030                   | 62          | 5020                   | 61                     | 5000                   |
|                           | 70          | 72                        | 5020                   | 72          | 5010                   | 71                     | 5010                   |
|                           | 90          | 92                        | 5020                   | 92          | 5020                   | 91                     | 5010                   |
| 8000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 8020                   | 72          | 8020                   | 71                     | 8020                   |
|                           | 90          | 93                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           | 110         | 113                       | 8030                   | 112         | 8020                   | 112                    | 8020                   |
|                           | 128         | 131                       | 8040                   | 130         | 8030                   | 130                    | 8020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 8010                   | 62          | 8020                   | 61                     | 8010                   |
|                           | 70          | 73                        | 8020                   | 72          | 8020                   | 72                     | 8020                   |
|                           | 90          | 92                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 61                        | 8020                   | 61          | 8020                   | 61                     | 8000                   |
|                           | 70          | 72                        | 8010                   | 71          | 8010                   | 71                     | 8010                   |
|                           | 90          | 92                        | 8010                   | 91          | 8010                   | 91                     | 8010                   |

## 4. ICAO STANDARD ATMOSPHERE

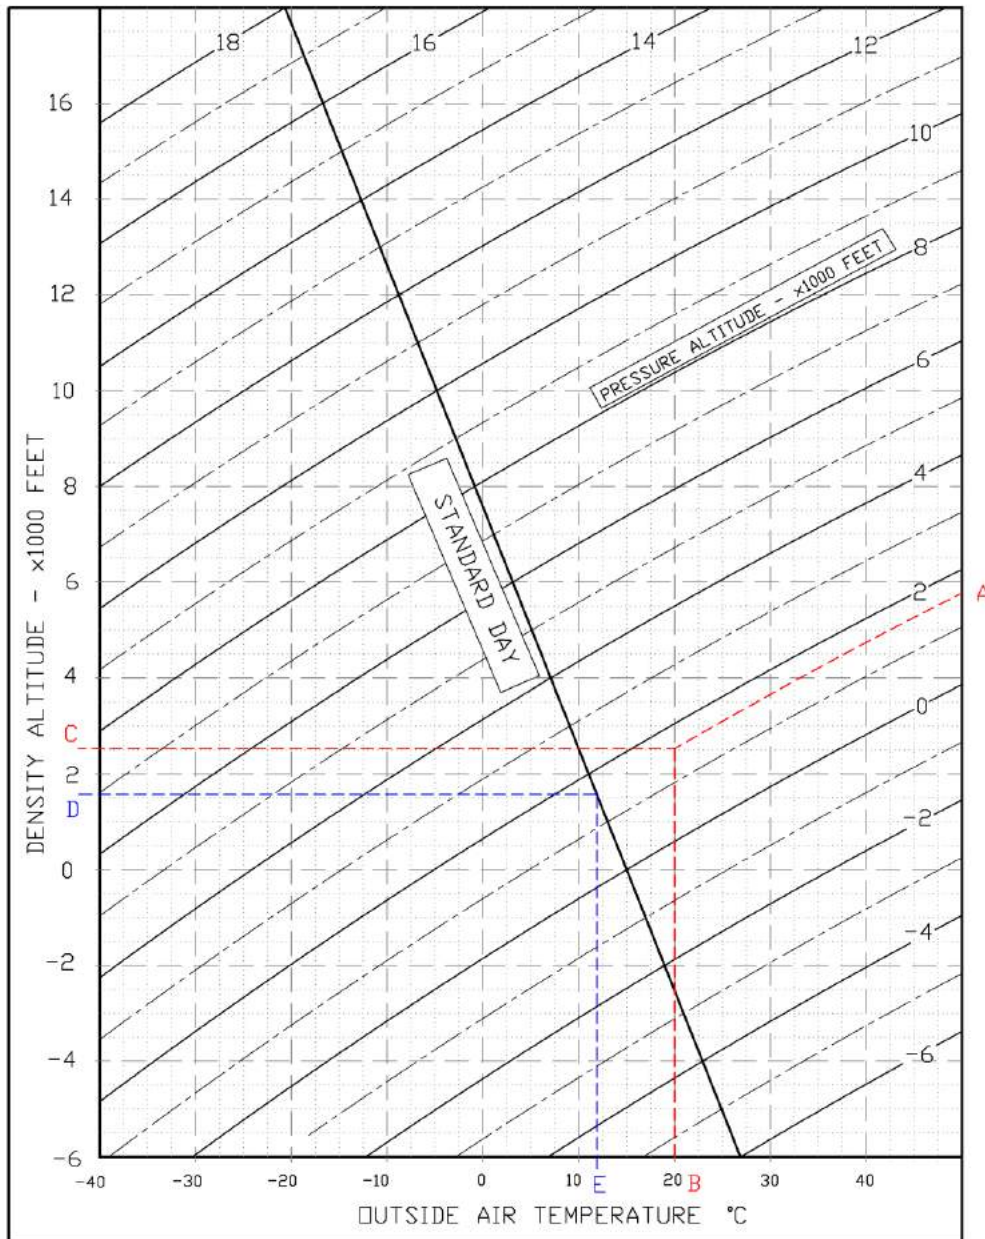


FIG. 5-2. ICAO CHART

Examples:

| <u>Scope</u>             | <u>Given</u>                                           | <u>Find</u>                     |
|--------------------------|--------------------------------------------------------|---------------------------------|
| <u>Density Altitude:</u> | A: Pressure altitude = 1600ft<br>B: Temperature = 20°C | → C: Density Altitude = 2550ft  |
| <u>ISA Temperature:</u>  | D: Pressure altitude = 1600ft                          | → E: ISA Air Temperature = 12°C |

## 5. STALL SPEED

**Weight:** 1160 kg (2557 lb)

**Throttle Lever:** IDLE

**CG:** Most Forward (19%)

**No ground effect**

| WEIGHT                               | BANK<br>ANGLE | STALL SPEED |      |           |      |            |      |
|--------------------------------------|---------------|-------------|------|-----------|------|------------|------|
|                                      |               | FLAPS 0°    |      | FLAPS T/O |      | FLAPS FULL |      |
|                                      |               | KIAS        | KCAS | KIAS      | KCAS | KIAS       | KCAS |
| [kg]<br>([lb])                       | [deg]         |             |      |           |      |            |      |
| <b>1160<br/>(2557)</b><br>(FWD C.G.) | <b>0</b>      | 59          | 60   | 53        | 55   | 50         | 52   |
|                                      | <b>15</b>     | 60          | 61   | 54        | 56   | 51         | 53   |
|                                      | <b>30</b>     | 64          | 65   | 58        | 59   | 54         | 56   |
|                                      | <b>45</b>     | 71          | 71   | 64        | 65   | 61         | 62   |
|                                      | <b>60</b>     | 85          | 85   | 77        | 78   | 73         | 74   |

### NOTE

*Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 350 ft with banking below 15°.*

## 6. CROSSWIND

Maximum demonstrated crosswind is 12 kts.

⇒ Example:

### Given

Wind direction (with respect to aircraft longitudinal axis) =  $30^\circ$

Wind speed = 20 kts

### Find

Headwind = 17.5 kts

Crosswind = 10 kts

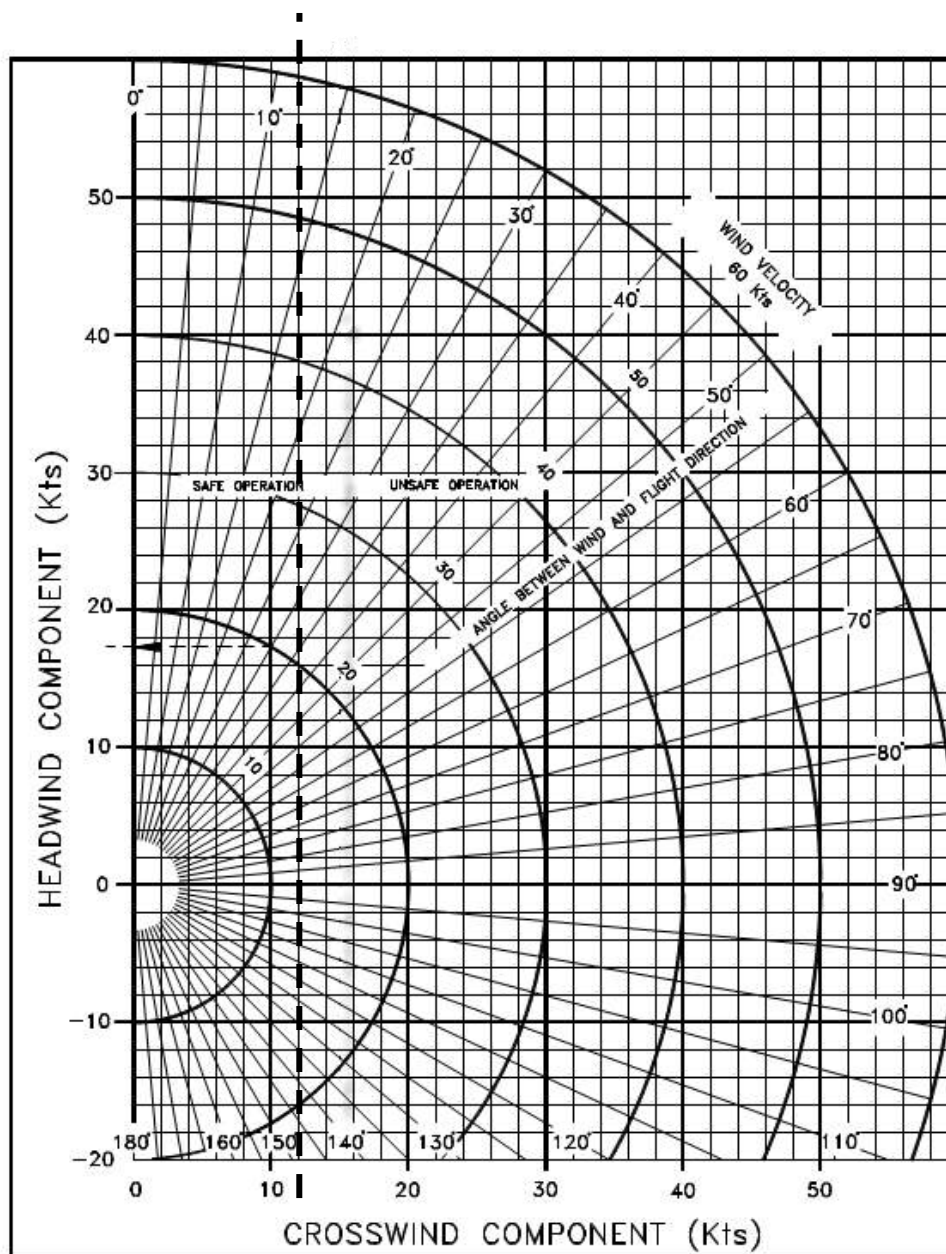


FIG. 5-3. CROSSWIND CHART

## 7. TAKE-OFF PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factored to distances of 1.10

| <b>Weight = 1160 kg (2557 lb)</b>         |              | <b>Corrections</b>                                    |                  |                  |                  |               |
|-------------------------------------------|--------------|-------------------------------------------------------|------------------|------------------|------------------|---------------|
| <b>Flaps: T/O</b>                         |              | <b>Headwind: - 10 m (33 ft) for each kn</b>           |                  |                  |                  |               |
| <b>Speed at Lift-Off = 60 KIAS</b>        |              | <b>Tailwind: +20 m (66 ft) for each kn</b>            |                  |                  |                  |               |
| <b>Speed Over 50ft Obstacle = 65 KIAS</b> |              | <b>Grass Runway: + 10% to Ground Roll</b>             |                  |                  |                  |               |
| <b>Throttle Lever: Full Forward</b>       |              | <b>Runway slope: +10% to Ground Roll for each +1%</b> |                  |                  |                  |               |
| <b>Runway: Paved Runway</b>               |              |                                                       |                  |                  |                  |               |
| Pressure<br>Altitude<br>[ft]              |              | Distance [m]<br>(Distance [ft])                       |                  |                  |                  |               |
|                                           |              | Temperature [°C]                                      |                  |                  |                  | ISA           |
|                                           |              | -25                                                   | 0                | 25               | 50               |               |
| S.L.                                      | Ground Roll  | 291<br>(955)                                          | 366<br>(1201)    | 451<br>(1480)    | 548<br>(1798)    | 416<br>(1365) |
|                                           | At 50 ft AGL | 442<br>(1450)                                         | 552<br>(1811)    | 678<br>(2224)    | 818<br>(2684)    | 626<br>(2054) |
| 1000                                      | Ground Roll  | 317<br>(1040)                                         | 399<br>(1309)    | 492<br>(1614)    | 597<br>(1959)    | 446<br>(1463) |
|                                           | At 50 ft AGL | 481<br>(1578)                                         | 601<br>(1972)    | 737<br>(2418)    | 890<br>(2920)    | 670<br>(2198) |
| 2000                                      | Ground Roll  | 346<br>(1135)                                         | 436<br>(1430)    | 538<br>(1765)    | 652<br>(2139)    | 479<br>(1572) |
|                                           | At 50 ft AGL | 523<br>(1716 ft)                                      | 655<br>(2149 ft) | 803<br>(2635 ft) | 969<br>(3179 ft) | 718<br>(2356) |
| 3000                                      | Ground Roll  | 378<br>(1240)                                         | 476<br>(1562)    | 587<br>(1926)    | 712<br>(2336)    | 515<br>(1690) |
|                                           | At 50 ft AGL | 570<br>(1870)                                         | 713<br>(2339)    | 875<br>(2871)    | 1056<br>(3465)   | 770<br>(2526) |
| 4000                                      | Ground Roll  | 413<br>(1355)                                         | 520<br>(1706)    | 642<br>(2106)    | 779<br>(2556)    | 553<br>(1814) |
|                                           | At 50 ft AGL | 622<br>(2041)                                         | 778<br>(2552)    | 954<br>(3130)    | 1151<br>(3776)   | 825<br>(2707) |
| 5000                                      | Ground Roll  | 452<br>(1483)                                         | 569<br>(1867)    | 702<br>(2303)    | 851<br>(2792)    | 595<br>(1952) |
|                                           | At 50 ft AGL | 678<br>(2224)                                         | 848<br>(2782)    | 1041<br>(3415)   | 1256<br>(4121)   | 886<br>(2907) |
| 6000                                      | Ground Roll  | 494<br>(1621)                                         | 622<br>(2041)    | 768<br>(2520)    | 932<br>(3058)    | 640<br>(2100) |
|                                           | At 50 ft AGL | 740<br>(2428)                                         | 926<br>(3038)    | 1136<br>(3727)   | 1371<br>(4498)   | 951<br>(3120) |



| <b>Weight = 1060 kg (2337 lb)</b><br><b>Flaps: T/O</b><br><b>Speed at Lift-Off = 60 KIAS</b><br><b>Speed Over 50ft Obstacle = 65 KIAS</b><br><b>Throttle Lever: Full Forward</b><br><b>Runway: Paved Runway</b>        |                     |                                 |               |               |                |                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|---------------------------------|---------------|---------------|----------------|-----------------------|
| <b>Corrections</b><br><b>Headwind: - 10 m (33 ft) for each kn</b><br><b>Tailwind: + 20 m (66 ft) for each kn</b><br><b>Grass Runway: + 10% to Ground Roll</b><br><b>Runway slope: +10% to Ground Roll for each +1%</b> |                     |                                 |               |               |                |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                                       |                     | Distance [m]<br>(Distance [ft]) |               |               |                |                       |
|                                                                                                                                                                                                                        |                     | Temperature [°C]                |               |               |                | ISA                   |
|                                                                                                                                                                                                                        |                     | -25                             | 0             | 25            | 50             |                       |
| <b>S.L.</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 234<br>(768)                    | 295<br>(968)  | 364<br>(1194) | 441<br>(1447)  | <b>335<br/>(1099)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 358<br>(1178)                   | 448<br>(1470) | 549<br>(1801) | 663<br>(2175)  | <b>507<br/>(1663)</b> |
| <b>1000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 255<br>(837)                    | 321<br>(1053) | 397<br>(1302) | 481<br>(1578)  | <b>359<br/>(1178)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 389<br>(1276)                   | 487<br>(1598) | 598<br>(1962) | 721<br>(2365)  | <b>543<br/>(1781)</b> |
| <b>2000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 279<br>(915)                    | 351<br>(1152) | 433<br>(1421) | 525<br>(1722)  | <b>386<br/>(1266)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 424<br>(1391)                   | 530<br>(1739) | 651<br>(2136) | 785<br>(2575)  | <b>582<br/>(1909)</b> |
| <b>3000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 304<br>(997)                    | 383<br>(1257) | 473<br>(1552) | 574<br>(1883)  | <b>414<br/>(1358)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 462<br>(1516)                   | 578<br>(1896) | 709<br>(2326) | 856<br>(2808)  | <b>624<br/>(2047)</b> |
| <b>4000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 333<br>(1092)                   | 419<br>(1375) | 517<br>(1696) | 627<br>(2057)  | <b>445<br/>(1460)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 504<br>(1654)                   | 630<br>(2067) | 773<br>(2536) | 933<br>(3061)  | <b>669<br/>(2195)</b> |
| <b>5000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 364<br>(1194)                   | 458<br>(1503) | 565<br>(1854) | 686<br>(2251)  | <b>479<br/>(1572)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 549<br>(1801)                   | 687<br>(2254) | 843<br>(2766) | 1018<br>(3340) | <b>718<br/>(2356)</b> |
| <b>6000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 398<br>(1306)                   | 501<br>(1644) | 619<br>(2031) | 750<br>(2461)  | <b>515<br/>(1690)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 600<br>(1968)                   | 750<br>(2461) | 921<br>(3022) | 1111<br>(3645) | <b>770<br/>(2526)</b> |

## Section 5 - Performances

### TAKE-OFF PERFORMANCES

| <b>Weight = 960 kg (2116 lb)</b>          |                     | <b>Corrections</b>                                    |               |               |               |                       |
|-------------------------------------------|---------------------|-------------------------------------------------------|---------------|---------------|---------------|-----------------------|
| <b>Flaps: T/O</b>                         |                     | <b>Headwind: - 10 m (33 ft) for each kn</b>           |               |               |               |                       |
| <b>Speed at Lift-Off = 60 KIAS</b>        |                     | <b>Tailwind: + 20 m (66 ft) for each kn</b>           |               |               |               |                       |
| <b>Speed Over 50ft Obstacle = 65 KIAS</b> |                     | <b>Grass Runway: + 10% to Ground Roll</b>             |               |               |               |                       |
| <b>Throttle Lever: Full Forward</b>       |                     | <b>Runway slope: +10% to Ground Roll for each +1%</b> |               |               |               |                       |
| <b>Runway: Paved Runway</b>               |                     |                                                       |               |               |               |                       |
| Pressure<br>Altitude<br><br>[ft]          |                     | Distance [m]<br>(Distance [ft])                       |               |               |               |                       |
|                                           |                     | Temperature [°C]                                      |               |               |               | ISA                   |
|                                           |                     | -25                                                   | 0             | 25            | 50            |                       |
| <b>S.L.</b>                               | <b>Ground Roll</b>  | 185<br>(607)                                          | 232<br>(761)  | 287<br>(942)  | 348<br>(1142) | <b>264<br/>(866)</b>  |
|                                           | <b>At 50 ft AGL</b> | 284<br>(932)                                          | 355<br>(1165) | 436<br>(1430) | 526<br>(1726) | <b>402<br/>(1319)</b> |
| <b>1000</b>                               | <b>Ground Roll</b>  | 201<br>(659)                                          | 253<br>(830)  | 313<br>(1027) | 379<br>(1243) | <b>283<br/>(928)</b>  |
|                                           | <b>At 50 ft AGL</b> | 309<br>(1014)                                         | 387<br>(1270) | 474<br>(1555) | 572<br>(1877) | <b>431<br/>(1414)</b> |
| <b>2000</b>                               | <b>Ground Roll</b>  | 220<br>(722)                                          | 277<br>(909)  | 341<br>(1119) | 414<br>(1358) | <b>304<br/>(997)</b>  |
|                                           | <b>At 50 ft AGL</b> | 337<br>(1106)                                         | 421<br>(1381) | 516<br>(1693) | 623<br>(2044) | <b>462<br/>(1516)</b> |
| <b>3000</b>                               | <b>Ground Roll</b>  | 240<br>(787)                                          | 302<br>(991)  | 373<br>(1224) | 452<br>(1483) | <b>327<br/>(1073)</b> |
|                                           | <b>At 50 ft AGL</b> | 367<br>(1204)                                         | 459<br>(1506) | 563<br>(1847) | 679<br>(2228) | <b>495<br/>(1624)</b> |
| <b>4000</b>                               | <b>Ground Roll</b>  | 262<br>(860)                                          | 330<br>(1083) | 407<br>(1335) | 494<br>(1621) | <b>351<br/>(1152)</b> |
|                                           | <b>At 50 ft AGL</b> | 400<br>(1312)                                         | 500<br>(1640) | 613<br>(2011) | 740<br>(2428) | <b>531<br/>(1742)</b> |
| <b>5000</b>                               | <b>Ground Roll</b>  | 287<br>(942)                                          | 361<br>(1184) | 446<br>(1463) | 541<br>(1775) | <b>378<br/>(1240)</b> |
|                                           | <b>At 50 ft AGL</b> | 436<br>(1430)                                         | 546<br>(1791) | 669<br>(2195) | 807<br>(2648) | <b>570<br/>(1870)</b> |
| <b>6000</b>                               | <b>Ground Roll</b>  | 314<br>(1030)                                         | 395<br>(1296) | 488<br>(1601) | 592<br>(1942) | <b>406<br/>(1332)</b> |
|                                           | <b>At 50 ft AGL</b> | 476<br>(1562)                                         | 595<br>(1952) | 730<br>(2395) | 881<br>(2890) | <b>611<br/>(2005)</b> |

## Section 5 - Performances

### TAKE-OFF PERFORMANCES



## 8. TAKE-OFF RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Flaps: Take-Off |                                  |                                       |                        |             |             |             |            |
|-------------------------------------------------|----------------------------------|---------------------------------------|------------------------|-------------|-------------|-------------|------------|
| Weight<br><br>[kg]<br>([lb])                    | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>$V_y$<br><br>[KIAS] | Rate of Climb [ft/min] |             |             |             |            |
|                                                 |                                  |                                       | Temperature [°C]       |             |             |             | ISA        |
|                                                 |                                  |                                       | -25                    | 0           | 25          | 50          |            |
| <b>1160<br/>(2557)</b>                          | S.L.                             | 72                                    | 1008                   | 816         | 644         | 490         | <b>711</b> |
|                                                 | <b>2000</b>                      | 72                                    | 862                    | 673         | 504         | 352         | <b>596</b> |
|                                                 | <b>4000</b>                      | 72                                    | 716                    | 531         | 365         | 216         | <b>482</b> |
|                                                 | <b>6000</b>                      | 72                                    | 571                    | 389         | 226         | 79          | <b>368</b> |
|                                                 | <b>8000</b>                      | 72                                    | 427                    | 247         | 87          | <b>-57</b>  | <b>253</b> |
|                                                 | <b>10000</b>                     | 72                                    | 283                    | 107         | <b>-51</b>  | <b>-192</b> | <b>139</b> |
|                                                 | <b>12000</b>                     | 72                                    | 139                    | <b>-34</b>  | <b>-188</b> | <b>-327</b> | <b>25</b>  |
|                                                 | <b>14000</b>                     | 72                                    | <b>-4</b>              | <b>-174</b> | <b>-325</b> | <b>-462</b> | <b>-90</b> |
| <b>1060<br/>(2337)</b>                          | S.L.                             | 72                                    | 1162                   | 956         | 772         | 606         | <b>843</b> |
|                                                 | <b>2000</b>                      | 72                                    | 1005                   | 803         | 622         | 459         | <b>721</b> |
|                                                 | <b>4000</b>                      | 72                                    | 849                    | 650         | 472         | 312         | <b>598</b> |
|                                                 | <b>6000</b>                      | 72                                    | 694                    | 498         | 323         | 166         | <b>476</b> |
|                                                 | <b>8000</b>                      | 72                                    | 539                    | 346         | 175         | 20          | <b>353</b> |
|                                                 | <b>10000</b>                     | 72                                    | 384                    | 195         | 27          | <b>-125</b> | <b>230</b> |
|                                                 | <b>12000</b>                     | 72                                    | 230                    | 45          | <b>-121</b> | <b>-270</b> | <b>108</b> |
|                                                 | <b>14000</b>                     | 72                                    | 77                     | <b>-105</b> | <b>-268</b> | <b>-414</b> | <b>-15</b> |
| <b>960<br/>(2116)</b>                           | S.L.                             | 71                                    | 1343                   | 1120        | 920         | 741         | <b>997</b> |
|                                                 | <b>2000</b>                      | 71                                    | 1173                   | 954         | 758         | 581         | <b>865</b> |
|                                                 | <b>4000</b>                      | 71                                    | 1004                   | 788         | 596         | 422         | <b>732</b> |
|                                                 | <b>6000</b>                      | 71                                    | 835                    | 623         | 434         | 263         | <b>599</b> |
|                                                 | <b>8000</b>                      | 71                                    | 667                    | 459         | 273         | 105         | <b>466</b> |
|                                                 | <b>10000</b>                     | 71                                    | 500                    | 295         | 113         | <b>-52</b>  | <b>333</b> |
|                                                 | <b>12000</b>                     | 72                                    | 333                    | 132         | <b>-47</b>  | <b>-209</b> | <b>200</b> |
|                                                 | <b>14000</b>                     | 72                                    | 166                    | <b>-31</b>  | <b>-207</b> | <b>-365</b> | <b>67</b>  |

## 9. EN-ROUTE RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Flaps: UP |                                  |                                                |                        |      |      |      |             |
|-------------------------------------------|----------------------------------|------------------------------------------------|------------------------|------|------|------|-------------|
| Weight<br><br>[kg]<br>([lb])              | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>V <sub>Y</sub><br><br>[KIAS] | Rate of Climb [ft/min] |      |      |      |             |
|                                           |                                  |                                                | Temperature [°C]       |      |      |      | ISA         |
|                                           |                                  |                                                | -25                    | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                    | S.L.                             | 82                                             | 1070                   | 885  | 720  | 571  | <b>784</b>  |
|                                           | <b>2000</b>                      | 82                                             | 929                    | 747  | 585  | 439  | <b>674</b>  |
|                                           | <b>4000</b>                      | 82                                             | 789                    | 610  | 451  | 307  | <b>564</b>  |
|                                           | <b>6000</b>                      | 82                                             | 649                    | 474  | 317  | 176  | <b>454</b>  |
|                                           | <b>8000</b>                      | 82                                             | 510                    | 338  | 184  | 45   | <b>344</b>  |
|                                           | <b>10000</b>                     | 82                                             | 372                    | 202  | 51   | -85  | <b>234</b>  |
|                                           | <b>12000</b>                     | 82                                             | 233                    | 67   | -82  | -215 | <b>123</b>  |
|                                           | <b>14000</b>                     | 82                                             | 95                     | -68  | -213 | -345 | <b>13</b>   |
| <b>1060<br/>(2337)</b>                    | S.L.                             | 81                                             | 1222                   | 1023 | 846  | 686  | <b>914</b>  |
|                                           | <b>2000</b>                      | 81                                             | 1071                   | 875  | 701  | 544  | <b>796</b>  |
|                                           | <b>4000</b>                      | 81                                             | 920                    | 728  | 557  | 402  | <b>678</b>  |
|                                           | <b>6000</b>                      | 81                                             | 770                    | 581  | 413  | 261  | <b>560</b>  |
|                                           | <b>8000</b>                      | 81                                             | 620                    | 435  | 270  | 120  | <b>441</b>  |
|                                           | <b>10000</b>                     | 81                                             | 471                    | 289  | 127  | -20  | <b>323</b>  |
|                                           | <b>12000</b>                     | 81                                             | 323                    | 144  | -16  | -159 | <b>205</b>  |
|                                           | <b>14000</b>                     | 81                                             | 175                    | -1   | -157 | -299 | <b>86</b>   |
| <b>960<br/>(2116)</b>                     | S.L.                             | 81                                             | 1400                   | 1184 | 992  | 818  | <b>1066</b> |
|                                           | <b>2000</b>                      | 81                                             | 1236                   | 1024 | 835  | 664  | <b>938</b>  |
|                                           | <b>4000</b>                      | 81                                             | 1073                   | 864  | 678  | 510  | <b>810</b>  |
|                                           | <b>6000</b>                      | 81                                             | 910                    | 705  | 522  | 357  | <b>681</b>  |
|                                           | <b>8000</b>                      | 81                                             | 747                    | 546  | 366  | 204  | <b>553</b>  |
|                                           | <b>10000</b>                     | 80                                             | 585                    | 388  | 211  | 52   | <b>424</b>  |
|                                           | <b>12000</b>                     | 80                                             | 424                    | 230  | 57   | -99  | <b>296</b>  |
|                                           | <b>14000</b>                     | 80                                             | 263                    | 73   | -97  | -250 | <b>168</b>  |

## 10. CRUISE PERFORMANCE

|                                                               |                     |      |       |                                                                                                                |                    |             |                                    |
|---------------------------------------------------------------|---------------------|------|-------|----------------------------------------------------------------------------------------------------------------|--------------------|-------------|------------------------------------|
| <b>Weight:</b> 1160 kg (2557 lb)<br><b>Mixture:</b> FULL RICH |                     |      |       | <b>Corrections</b><br><b>Best Power:</b> -10% to Full Rich F.C.<br><b>Best Economy:</b> -20% to Full Rich F.C. |                    |             |                                    |
| CORRECTIONS                                                   |                     |      |       |                                                                                                                |                    |             |                                    |
|                                                               |                     |      | KTAS  | Fuel Consumption                                                                                               | Endurance          | Range       | Specific Range                     |
| For each +15 °C of OAT                                        |                     |      | -2%   | -2.5%                                                                                                          | +2%                | +1%         | +1%                                |
| For each -15 °C of OAT                                        |                     |      | +1%   | +3%                                                                                                            | -4%                | -2%         | -1%                                |
| For -100 kg (-220 lb) of weight                               |                     |      | +3.3% | -                                                                                                              | -                  | +3%         | +4%                                |
| CRUISE PERFORMANCE                                            |                     |      |       |                                                                                                                |                    |             |                                    |
| Pressure Altitude<br>ft                                       | OAT<br>ISA<br>deg C | RPM  | KTAS  | Fuel Consumption<br>gal/hr (l/hr)                                                                              | Endurance<br>hr:mm | Range<br>nm | Specific Range<br>nm/gal<br>(nm/l) |
| 0                                                             | 15                  | 2700 | 137   | 16.6 (62.7)                                                                                                    | 3:40               | 502         | 8.3 (2.2)                          |
|                                                               |                     | 2600 | 131   | 15.3 (57.8)                                                                                                    | 3:59               | 521         | 8.6 (2.3)                          |
|                                                               |                     | 2500 | 125   | 14.1 (53.4)                                                                                                    | 4:18               | 538         | 8.8 (2.3)                          |
|                                                               |                     | 2400 | 119   | 13.1 (49.4)                                                                                                    | 4:39               | 553         | 9.1 (2.4)                          |
|                                                               |                     | 2200 | 107   | 11.3 (42.8)                                                                                                    | 5:22               | 573         | 9.4 (2.5)                          |
| 2000                                                          | 11                  | 2700 | 136   | 15.9 (60.1)                                                                                                    | 3:50               | 521         | 8.6 (2.3)                          |
|                                                               |                     | 2600 | 130   | 14.7 (55.6)                                                                                                    | 4:08               | 538         | 8.9 (2.3)                          |
|                                                               |                     | 2500 | 124   | 13.6 (51.5)                                                                                                    | 4:28               | 554         | 9.1 (2.4)                          |
|                                                               |                     | 2400 | 118   | 12.6 (47.9)                                                                                                    | 4:48               | 567         | 9.3 (2.5)                          |
|                                                               |                     | 2200 | 106   | 11.0 (41.8)                                                                                                    | 5:30               | 583         | 9.6 (2.5)                          |
| 4000                                                          | 7                   | 2700 | 135   | 15.2 (57.7)                                                                                                    | 3:59               | 540         | 8.9 (2.3)                          |
|                                                               |                     | 2600 | 129   | 14.1 (53.5)                                                                                                    | 4:18               | 556         | 9.1 (2.4)                          |
|                                                               |                     | 2500 | 123   | 13.1 (49.8)                                                                                                    | 4:37               | 570         | 9.4 (2.5)                          |
|                                                               |                     | 2400 | 117   | 12.3 (46.4)                                                                                                    | 4:57               | 581         | 9.6 (2.5)                          |
|                                                               |                     | 2200 | 105   | 10.8 (40.9)                                                                                                    | 5:37               | 592         | 9.7 (2.6)                          |

|                                                               |                     |      |       |                                                                                                                |                    |             |                                 |
|---------------------------------------------------------------|---------------------|------|-------|----------------------------------------------------------------------------------------------------------------|--------------------|-------------|---------------------------------|
| <b>Weight:</b> 1160 kg (2557 lb)<br><b>Mixture:</b> FULL RICH |                     |      |       | <b>Corrections</b><br><b>Best Power:</b> -10% to Full Rich F.C.<br><b>Best Economy:</b> -20% to Full Rich F.C. |                    |             |                                 |
| CORRECTIONS                                                   |                     |      |       |                                                                                                                |                    |             |                                 |
|                                                               |                     |      | KTAS  | Fuel Consumption                                                                                               | Endurance          | Range       | Specific Range                  |
| For each +15 °C of OAT                                        |                     |      | -2%   | -2.5%                                                                                                          | +2%                | +1%         | +1%                             |
| For each -15 °C of OAT                                        |                     |      | +1%   | +3%                                                                                                            | -4%                | -2%         | -1%                             |
| For -100 kg (-220 lb) of weight                               |                     |      | +3.3% | -                                                                                                              | -                  | +3%         | +4%                             |
| CRUISE PERFORMANCE                                            |                     |      |       |                                                                                                                |                    |             |                                 |
| Pressure Altitude<br>ft                                       | OAT<br>ISA<br>deg C | RPM  | KTAS  | Fuel Consumption<br>gal/hr (l/hr)                                                                              | Endurance<br>hr:mm | Range<br>nm | Specific Range<br>nm/gal (nm/l) |
| 6000                                                          | 3                   | 2600 | 128   | 13.6 (51.6)                                                                                                    | 4:27               | 573         | 9.4 (2.5)                       |
|                                                               |                     | 2500 | 122   | 12.7 (48.2)                                                                                                    | 4:47               | 585         | 9.6 (2.5)                       |
|                                                               |                     | 2400 | 116   | 11.9 (45.1)                                                                                                    | 5:06               | 594         | 9.8 (2.6)                       |
|                                                               |                     | 2200 | 104   | 10.6 (40.1)                                                                                                    | 5:44               | 598         | 9.8 (2.6)                       |
| 8000                                                          | -1                  | 2600 | 128   | 13.2 (49.9)                                                                                                    | 4:37               | 588         | 9.7 (2.6)                       |
|                                                               |                     | 2500 | 122   | 12.3 (46.7)                                                                                                    | 4:55               | 598         | 9.8 (2.6)                       |
|                                                               |                     | 2400 | 116   | 11.6 (44.0)                                                                                                    | 5:14               | 605         | 9.9 (2.6)                       |
|                                                               |                     | 2200 | 104   | 10.4 (39.5)                                                                                                    | 5:49               | 603         | 9.9 (2.6)                       |
| 10000                                                         | -5                  | 2600 | 127   | 12.8 (48.3)                                                                                                    | 4:46               | 603         | 9.9 (2.6)                       |
|                                                               |                     | 2500 | 121   | 12.0 (45.5)                                                                                                    | 5:04               | 610         | 10.0 (2.7)                      |
|                                                               |                     | 2400 | 115   | 11.4 (43.0)                                                                                                    | 5:21               | 614         | 10.1 (2.7)                      |
|                                                               |                     | 2200 | 103   | 10.3 (39.0)                                                                                                    | 5:54               | 606         | 10.0 (2.6)                      |
| 12000                                                         | -9                  | 2500 | 120   | 11.7 (44.4)                                                                                                    | 5:11               | 621         | 10.2 (2.7)                      |
|                                                               |                     | 2400 | 114   | 11.1 (42.1)                                                                                                    | 5:28               | 621         | 10.2 (2.7)                      |
|                                                               |                     | 2200 | 102   | 10.2 (38.5)                                                                                                    | 5:59               | 608         | 10.0 (2.6)                      |
|                                                               |                     |      |       |                                                                                                                |                    |             |                                 |

## 11. LANDING PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factored to distances of 1.67

| <b>Weight = 1160 kg (2557 lb)</b>           |              |                                                       |               |               |               |                       |
|---------------------------------------------|--------------|-------------------------------------------------------|---------------|---------------|---------------|-----------------------|
| <b>Corrections</b>                          |              |                                                       |               |               |               |                       |
| <b>Flaps: LAND</b>                          |              | <b>Headwind: - 4 m (-13 ft) for each kn</b>           |               |               |               |                       |
| <b>Short Final Approach Speed = 66 KIAS</b> |              | <b>Tailwind: + 13 m(+43 ft) for each kn</b>           |               |               |               |                       |
| <b>Throttle Lever: Idle</b>                 |              | <b>Grass Runway: +10% to Ground Roll</b>              |               |               |               |                       |
| <b>Runway: Paved</b>                        |              | <b>Runway slope: - 3% to Ground Roll for each +1%</b> |               |               |               |                       |
| Pressure<br>Altitude<br>[ft]                |              | Distance [m]<br>(Distance [ft])                       |               |               |               |                       |
|                                             |              | Temperature [°C]                                      |               |               |               | ISA                   |
|                                             |              | -25                                                   | 0             | 25            | 50            |                       |
| S.L.                                        | Ground Roll  | 204<br>(669)                                          | 225<br>(738)  | 245<br>(804)  | 266<br>(873)  | <b>237<br/>(778)</b>  |
|                                             | At 50 ft AGL | 488<br>(1601)                                         | 509<br>(1670) | 529<br>(1736) | 550<br>(1804) | <b>521<br/>(1709)</b> |
| 1000                                        | Ground Roll  | 212<br>(696)                                          | 233<br>(764)  | 254<br>(833)  | 276<br>(906)  | <b>244<br/>(801)</b>  |
|                                             | At 50 ft AGL | 496<br>(1627)                                         | 517<br>(1696) | 538<br>(1765) | 560<br>(1837) | <b>528<br/>(1732)</b> |
| 2000                                        | Ground Roll  | 220<br>(722)                                          | 242<br>(794)  | 264<br>(866)  | 286<br>(938)  | <b>251<br/>(823)</b>  |
|                                             | At 50 ft AGL | 504<br>(1654)                                         | 526<br>(1726) | 548<br>(1798) | 570<br>(1870) | <b>535<br/>(1755)</b> |
| 3000                                        | Ground Roll  | 228<br>(748)                                          | 251<br>(823)  | 274<br>(899)  | 297<br>(974)  | <b>259<br/>(850)</b>  |
|                                             | At 50 ft AGL | 512<br>(1680)                                         | 535<br>(1755) | 558<br>(1831) | 581<br>(1906) | <b>543<br/>(1781)</b> |
| 4000                                        | Ground Roll  | 236<br>(774)                                          | 260<br>(853)  | 284<br>(932)  | 308<br>(1010) | <b>267<br/>(876)</b>  |
|                                             | At 50 ft AGL | 520<br>(1706)                                         | 544<br>(1785) | 568<br>(1864) | 592<br>(1942) | <b>551<br/>(1808)</b> |
| 5000                                        | Ground Roll  | 245<br>(804)                                          | 270<br>(886)  | 295<br>(968)  | 320<br>(1050) | <b>275<br/>(902)</b>  |
|                                             | At 50 ft AGL | 529<br>(1736)                                         | 554<br>(1818) | 579<br>(1900) | 604<br>(1982) | <b>559<br/>(1834)</b> |
| 6000                                        | Ground Roll  | 255<br>(837)                                          | 280<br>(919)  | 306<br>(1004) | 332<br>(1089) | <b>284<br/>(932)</b>  |
|                                             | At 50 ft AGL | 539<br>(1768)                                         | 564<br>(1850) | 590<br>(1936) | 616<br>(2021) | <b>568<br/>(1864)</b> |

## 12. BALKED LANDING PERFORMANCE

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb and to angle of climb of 0.90

| Throttle Lever: Full Forward<br>Flaps: LAND<br>Speed: 67 KIAS |                                  |                              |      |      |      |             |
|---------------------------------------------------------------|----------------------------------|------------------------------|------|------|------|-------------|
| Weight<br><br>[kg]<br>[lb]                                    | Pressure<br>Altitude<br><br>[ft] | Steady Gradient of Climb [%] |      |      |      |             |
|                                                               |                                  | Temperature [°C]             |      |      |      | ISA         |
|                                                               |                                  | -25                          | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                                        | S.L.                             | 11.5                         | 8.6  | 6    | 3.6  | <b>7</b>    |
|                                                               | <b>1000</b>                      | 10.4                         | 7.5  | 4.9  | 2.6  | <b>6.1</b>  |
|                                                               | <b>2000</b>                      | 9.3                          | 6.4  | 3.9  | 1.6  | <b>5.3</b>  |
|                                                               | <b>3000</b>                      | 8.2                          | 5.3  | 2.8  | 0.5  | <b>4.4</b>  |
|                                                               | <b>4000</b>                      | 7.1                          | 4.3  | 1.8  | -0.5 | <b>3.5</b>  |
|                                                               | <b>5000</b>                      | 6                            | 3.2  | 0.7  | -1.5 | <b>2.7</b>  |
|                                                               | <b>6000</b>                      | 4.9                          | 2.1  | -0.3 | -2.6 | <b>1.8</b>  |
|                                                               | <b>7000</b>                      | 3.8                          | 1.1  | -1.4 | -3.6 | <b>0.9</b>  |
| <b>1060<br/>(2337)</b>                                        | S.L.                             | 13.6                         | 10.4 | 7.6  | 5    | <b>8.7</b>  |
|                                                               | <b>1000</b>                      | 12.4                         | 9.2  | 6.4  | 3.9  | <b>7.7</b>  |
|                                                               | <b>2000</b>                      | 11.2                         | 8    | 5.3  | 2.7  | <b>6.8</b>  |
|                                                               | <b>3000</b>                      | 10                           | 6.9  | 4.1  | 1.6  | <b>5.8</b>  |
|                                                               | <b>4000</b>                      | 8.8                          | 5.7  | 2.9  | 0.5  | <b>4.9</b>  |
|                                                               | <b>5000</b>                      | 7.6                          | 4.5  | 1.8  | -0.7 | <b>3.9</b>  |
|                                                               | <b>6000</b>                      | 6.4                          | 3.3  | 0.6  | -1.8 | <b>3</b>    |
|                                                               | <b>7000</b>                      | 5.2                          | 2.2  | -0.5 | -2.9 | <b>2</b>    |
| <b>960<br/>(2116)</b>                                         | S.L.                             | 16                           | 12.5 | 9.4  | 6.6  | <b>10.6</b> |
|                                                               | <b>1000</b>                      | 14.7                         | 11.2 | 8.1  | 5.3  | <b>9.6</b>  |
|                                                               | <b>2000</b>                      | 13.4                         | 9.9  | 6.8  | 4    | <b>8.5</b>  |
|                                                               | <b>3000</b>                      | 12                           | 8.6  | 5.6  | 2.8  | <b>7.5</b>  |
|                                                               | <b>4000</b>                      | 10.7                         | 7.3  | 4.3  | 1.5  | <b>6.4</b>  |
|                                                               | <b>5000</b>                      | 9.4                          | 6    | 3    | 0.3  | <b>5.4</b>  |
|                                                               | <b>6000</b>                      | 8.1                          | 4.7  | 1.7  | -1   | <b>4.3</b>  |
|                                                               | <b>7000</b>                      | 6.7                          | 3.4  | 0.5  | -2.2 | <b>3.3</b>  |

### **13. NOISE DATA**

Noise level, determined in accordance with ICAO/Annex 16 6<sup>th</sup> Ed., July 2011, Vol. I°, Chapter 10 and 14 CFR Part 36, is **77.576 dB(A)**.

*NOTE: No determination has been made by the Federal Aviation Administration that the noise levels of this aircraft are or should be acceptable or unacceptable for operation at, into, or out of, any airport.*

INTENTIONALLY LEFT BLANK



## **SECTION 6 – WEIGHT AND BALANCE**

### **INDEX**

|                                                  |           |
|--------------------------------------------------|-----------|
| <b>1. INTRODUCTION .....</b>                     | <b>3</b>  |
| <b>2. WEIGHING PROCEDURES.....</b>               | <b>4</b>  |
| <b>2.1. Preparation .....</b>                    | <b>4</b>  |
| <b>2.2. Levelling .....</b>                      | <b>4</b>  |
| <b>2.3. Weighing .....</b>                       | <b>4</b>  |
| <b>2.4. Determination of C.G. location .....</b> | <b>4</b>  |
| <b>2.5. Weighing record.....</b>                 | <b>5</b>  |
| <b>2.6. Weighing record (II).....</b>            | <b>6</b>  |
| <b>3. WEIGHTS AND C.G.....</b>                   | <b>7</b>  |
| <b>3.1. C.G. CALCULATION SAMPLES .....</b>       | <b>8</b>  |
| <b>3.1.1. FULL FUEL .....</b>                    | <b>8</b>  |
| <b>3.1.2. FULL PAYLOAD.....</b>                  | <b>8</b>  |
| <b>4. BAGGAGE LOADING .....</b>                  | <b>9</b>  |
| <b>5. EQUIPMENT LIST.....</b>                    | <b>11</b> |

INTENTIONALLY LEFT BLANK

## **1. INTRODUCTION**

This section describes the procedure for establishing the basic empty weight and the moment of the aircraft. Loading procedure information is also provided.

**NOTE**

*Aircraft must be operated in accordance with the limits concerning the maximum takeoff weight and CG excursion as reported in Flight Manual Section 2.*

Pilot is responsible for checking the weight and CG excursion are compliant with the related limits. CG excursion and weight limits are reported in Section 2 – Limitations.

## **2. WEIGHING PROCEDURES**

### **2.1. PREPARATION**

- Carry out weighing procedure inside closed hangar
- Remove from cabin any object unintentionally left
- Make sure Flight Manual and mandatory documents are on board
- Align nose wheel
- Drain fuel via the specific drain valve
- Oil and hydraulic fluid at the operating levels
- Move sliding seats to most forward position
- Raise flaps to fully retracted position
- Place control surfaces in neutral position
- Place scales (min. capacity 300 kg (661.4 lb)) under each wheel

### **2.2. LEVELLING**

- Level the aircraft (the reference for longitudinal levelling is made putting a spirit-level on the cabin floor as shown in the Aircraft Maintenance Manual).
- Adjust longitudinal attitude deflating nose tire

### **2.3. WEIGHING**

- Record weight shown on each scale
- Repeat weighing procedure three times
- Calculate empty weight


### **2.4. DETERMINATION OF C.G. LOCATION**

- Drop a plumb bob tangent to the wing leading edge and trace a reference mark on the floor (see Figure on Para. 2.5 or 2.6)
- Repeat the operation for other wing
- Stretch a taught line between the two marks
- Measure the distance between the reference line and both main and nose wheel axis (A and B distances respectively)
- Using recorded data it is possible to determine the aircraft C.G. location and the aircraft moment (see following table)

## 2.5. WEIGHING RECORD

Model **P2010** S/N: \_\_\_\_\_ Weighing no. \_\_\_\_ Date: \_\_\_\_\_

Datum: leading edge vertical

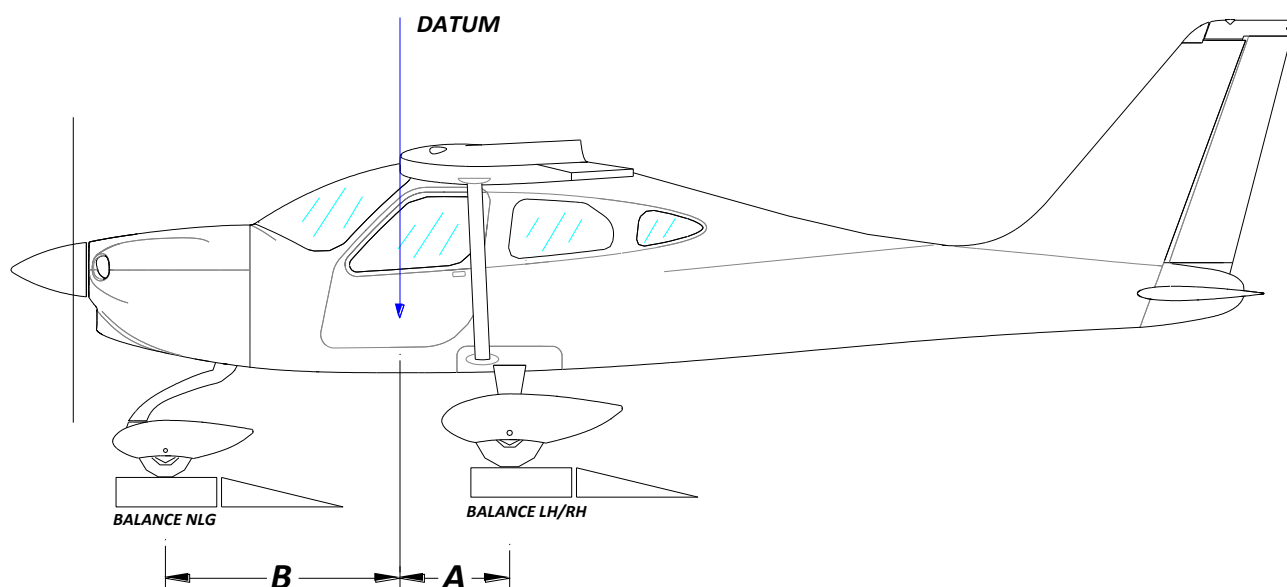

|                     | kg or lbs |                                    | meters or feet |
|---------------------|-----------|------------------------------------|----------------|
| Nose wheel weight   | $W_1 =$   | Plumb bob distance LH wheel        | $A_L =$        |
| LH wheel weight     | $W_L =$   | Plumb bob distance RH wheel        | $A_R =$        |
| RH wheel weight     | $W_R =$   | Average distance $(A_L + A_R)/2$   | $A =$          |
| $W_2 = W_L + W_R =$ |           | Plumb bob distance from nose wheel | $B =$          |

Empty weight  $W_e = W_1 + W_2 =$  [kg] or [lbs]

|                                                           |                                     |
|-----------------------------------------------------------|-------------------------------------|
| $D = \frac{W_2 \cdot (A - 13) - W_1 \cdot (B + 13)}{W_e}$ | $D\% = \frac{D}{1.378} \cdot 100 =$ |
| [m] or [ft]                                               |                                     |


Empty weight moment:  $M = (D \cdot W_e) =$  [m · kg] or [ft · lbs]

|                              |         |               |                             |
|------------------------------|---------|---------------|-----------------------------|
| Maximum takeoff weight       | $W_T =$ | [kg] or [lbs] | Signature<br>_____<br>_____ |
| Empty weight                 | $W_e =$ | [kg] or [lbs] |                             |
| Max. useful load $W_T - W_e$ | $W_u =$ | [kg] or [lbs] |                             |

## 2.6. WEIGHING RECORD (II)

Model **P2010** S/N: \_\_\_\_\_ Weighing no. \_\_\_\_ Date: \_\_\_\_\_

Datum: leading edge vertical

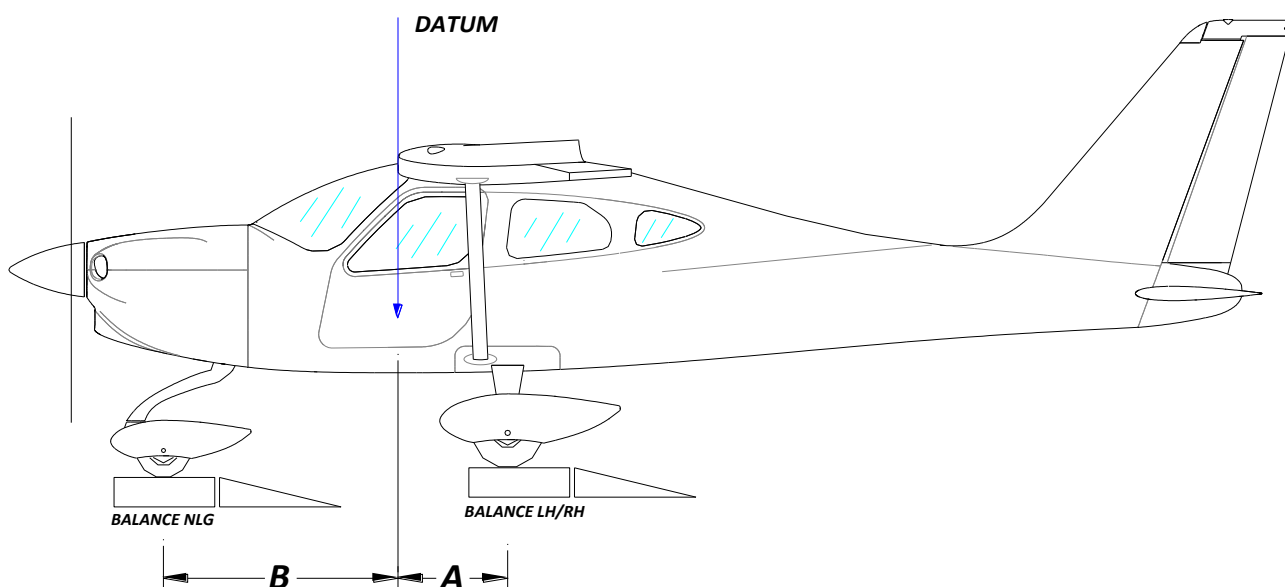

|                     | kg or lbs |                                    | meters or feet |
|---------------------|-----------|------------------------------------|----------------|
| Nose wheel weight   | $W_1 =$   | Plumb bob distance LH wheel        | $A_L =$        |
| LH wheel weight     | $W_L =$   | Plumb bob distance RH wheel        | $A_R =$        |
| RH wheel weight     | $W_R =$   | Average distance $(A_L + A_R)/2$   | $A =$          |
| $W_2 = W_L + W_R =$ |           | Plumb bob distance from nose wheel | $B =$          |

Empty weight  $W_e = W_1 + W_2 =$  [kg] or [lbs]

$$D = \frac{W_2 \cdot (A - 13) - W_1 \cdot (B + 13)}{W_e} =$$

[m] or [ft]

$$D\% = \frac{D}{1.378} \cdot 100 =$$

Empty weight moment:  $M = (D \cdot W_e) =$  [m · kg] or [ft · lbs]

|                              |         |               |                             |
|------------------------------|---------|---------------|-----------------------------|
| Maximum takeoff weight       | $W_T =$ | [kg] or [lbs] | Signature<br>_____<br>_____ |
| Empty weight                 | $W_e =$ | [kg] or [lbs] |                             |
| Max. useful load $W_T - W_e$ | $W_u =$ | [kg] or [lbs] |                             |

### 3. WEIGHTS AND C.G.

C.G. position can be defined by means of the chart below.

The pilot is responsible for ensuring the correct useful load loading.

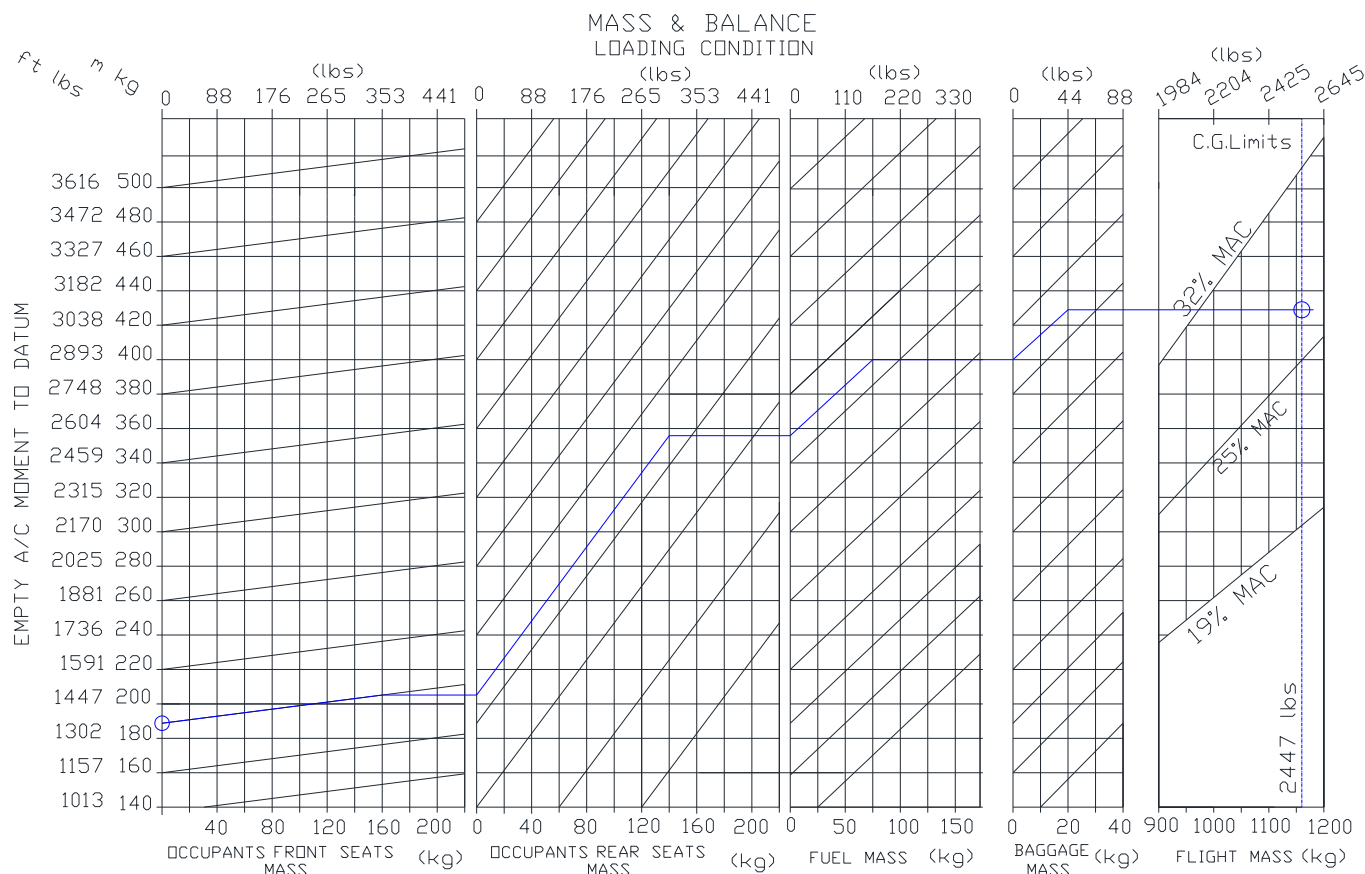


**Figure 1**

#### Example

|                       |      |                   |
|-----------------------|------|-------------------|
| A/C empty mass moment | 188  | kg*m (1360 lb*ft) |
| A/C empty mass        | 765  | kg (1687 lb)      |
| Occ. front seats      | 160  | kg (353 lb)       |
| Occ. rear seats       | 140  | kg (309 lb)       |
| Fuel                  | 75   | kg (165 lb)       |
| Baggage               | 20   | kg (44 lb)        |
| A/C T.O. weight       | 1160 | kg (2557 lb)      |

### 3.1. C.G. CALCULATION SAMPLES

#### 3.1.1. FULL FUEL

|                              | [kg]                       | Arm [mm]       | Moment [kg*mm]      |
|------------------------------|----------------------------|----------------|---------------------|
| Empty weight                 | 775 (1708 lb)              | 309 (1,01 ft)  | 239475 (1726 lb*ft) |
| CoG pos.                     | 23,4%                      |                |                     |
| <b>USEFUL LOAD</b>           |                            |                |                     |
| Pilot                        | 80 (176 lb)                | 133 (0,44 ft)  | 10640 (77 lb*ft)    |
| Pilot                        | 0                          | 133 (0,44 ft)  | 0                   |
| PAX                          | 0                          | 1057 (3,47 ft) | 0                   |
| PAX                          | 0                          | 1057 (3,47 ft) | 0                   |
| Baggages                     | 0                          | 1599 (5,25 ft) | 0                   |
| Fuel (liters)* $\rho_{fuel}$ | 240*0,72=172,8<br>(381 lb) | 612 (2 ft)     | 105754 (762 lb*ft)  |
| Useful load                  | 253<br>(558 lb)            | 460 (1,5 ft)   | 116394 (837 lb*ft)  |
|                              |                            |                |                     |
| W <sub>TO</sub>              | 1028 (2266 lb)             | 347 (1,14 ft)  | 356219 (2583 lb*ft) |
| CoG pos.                     | 26,1%                      |                |                     |

#### 3.1.2. FULL PAYLOAD

|                              | [kg]                     | Arm [mm]       | Moment [kg*mm]      |
|------------------------------|--------------------------|----------------|---------------------|
| Empty weight                 | 775 (1708 lb)            | 309(1,01 ft)   | 239475 (1726 lb*ft) |
| CoG pos.                     | 23,4%                    |                |                     |
| <b>USEFUL LOAD</b>           |                          |                |                     |
| Pilot                        | 80 (176 lb)              | 133 (0,44 ft)  | 10640 (77 lb*ft)    |
| Pilot                        | 80 (176 lb)              | 133 (0,44 ft)  | 10640 (77 lb*ft)    |
| PAX                          | 80 (176 lb)              | 1057 (3,47 ft) | 84560 (278 lb*ft)   |
| PAX                          | 80 (176 lb)              | 1057 (3,47 ft) | 84560 (278 lb*ft)   |
| Baggages                     | 0                        | 1599 (5,25 ft) | 0                   |
| Fuel (liters)* $\rho_{fuel}$ | 90*0,72=64,8<br>(198 lb) | 612 (2 ft)     | 39658 (396 lb*ft)   |
| Useful load                  | 385 (849 lb)             | 598 (1,96 ft)  | 230058 (1664 lb*ft) |
|                              |                          |                |                     |
| W <sub>TO</sub>              | 1160 (2557 lb)           | 405 (1,33 ft)  | 469883 (3401 lb*ft) |
| CoG pos.                     | 30,3%                    |                |                     |

$\rho_{fuel}$  = density of fuel



## **4. BAGGAGE LOADING**

The baggage loading in the dedicated compartment must be carried out in accordance with diagram addressed on PAR. 03 and with C.G. excursion and weight limitations reported in Section 2.

Pilot is provided with a red tie-down net and snap fasteners allowing for securing the loads on the compartment floor.



**CAUTION**

*Loading the baggage, make sure that you correctly stretched the net which must be secured to the four vertices of the floor.*

INTENTIONALLY LEFT BLANK

## **5. EQUIPMENT LIST**

The following is a list of equipment which may be installed in the **P2010**.  
The items marked with an "X" were installed on the airplane described at the beginning of the list and they are included in the Basic Empty Weight.

It is the owner's responsibility to retain this equipment list and amend it to reflect changes in equipment installed in this airplane.

| EQUIPMENT LIST                      |                                          | AIRCRAFT S/N _____                           | DATE: |                          |                      |
|-------------------------------------|------------------------------------------|----------------------------------------------|-------|--------------------------|----------------------|
| REF.                                | DESCRIPTION                              | P/N                                          | INST  | WEIGHT<br>[kg]<br>([lb]) | ARM<br>[m]<br>([ft]) |
| <b>INSTRUMENTATION</b>              |                                          |                                              |       |                          |                      |
| A1                                  | GARMIN G1000 IFDS                        |                                              |       |                          |                      |
| A2                                  | MD 302 MID Continent                     | 6420302-1                                    |       | 0.73<br>(1.61)           | -0.69<br>(-2.26)     |
| A3                                  | Compass                                  | C2400L4P                                     |       | 0.4<br>(0.88)            | -0.69<br>(-2.26)     |
| A4                                  | Pitch trim indicator – UMA instruments   | N0911S0U2DR00W                               |       | 0.1<br>(0.22)            | -0.69<br>(-2.26)     |
| A5                                  | Digital Clock - Davtron                  | M800-28V-BAT                                 |       | 0.1<br>(0.22)            | -0.69<br>(-2.26)     |
| A6                                  | GARMIN G500                              |                                              |       |                          |                      |
| A7                                  | GTN 650 (Com/Nav/Gps)                    | 011-02256-00                                 |       | 2.48                     | -0.69                |
| A8                                  | GNC 255A (Com/Nav)                       | 011-02719-00                                 |       | 1.37                     | -0.69                |
| A9                                  | GMA 340 (Audio Panel)                    | 011-00401-10                                 |       | 0.60                     | -0.69                |
| A10                                 | DME Indicator - KDI 572                  | 066-01069-0000                               |       | 0.36                     | -0.69                |
| A11                                 | ADF system - KR 87                       | 006-00184-XXX                                |       | 1.47                     | -0.69                |
| A12                                 | JP Instruments EDM 930                   | 790000-c-[XXX]                               |       | 1.36                     | -0.69                |
| A13                                 | Remote Alarm Display (RAD)               | 790749                                       |       | 0.1                      | 0.69                 |
| A14                                 | Rudder trim indicator                    | N0911R0L2R000W                               |       | 0.1                      | -0.69                |
| <b>AVIONICS &amp; MISCELLANEOUS</b> |                                          |                                              |       |                          |                      |
| B1                                  | ELT-ACK                                  | E-04                                         |       | 0.73<br>(1.61)           | 1.61<br>(5.28)       |
|                                     | ELT Kannad                               | 406 AF                                       |       | 1.10<br>(2.42)           | 1.61<br>(5.28)       |
| B2                                  | Front seats TECNAM                       | 210-10-5100-801 (LH)<br>210-10-5101-801 (RH) |       | 10x2 = 20<br>(22x2 = 44) | 0.50<br>(1.64)       |
|                                     | Front seats GEVEN                        | E5-01-009-T03 (LH)<br>E5-01-010-T03 (RH)     |       | 10x2 = 20<br>(22x2 = 44) | 0.50<br>(1.64)       |
| B3                                  | Rear seats TECNAM                        | 210-10-5300-801 (LH)<br>210-10-5400-801 (RH) |       | 9x2 = 18<br>(20x2 = 40)  | 1.26<br>(4.13)       |
|                                     | Rear seats GEVEN                         | E5-01-009-T03 (LH)<br>E5-01-010-T03 (RH)     |       | 10x2 = 20<br>(22x2 = 44) | 1.26<br>(4.13)       |
| B4                                  | Fire extinguisher                        | 13-07655                                     |       | 0.8<br>(1.76)            | -0.18<br>(-0.59)     |
|                                     | Fire extinguisher                        | A344T                                        |       | 1.0<br>(2.3)             | -0.18<br>(-0.59)     |
| B5                                  | First aid kit                            | FIA270160                                    |       | 0.2<br>(0.44)            | 0.5<br>(1.64)        |
| B6                                  | Torch                                    | -----                                        |       | 1<br>(2.2)               | -0.18<br>(-0.59)     |
| B7                                  | Battery GILL247- 24V -19Ah               | G247                                         |       | 19.3<br>(42.5)           | 4.20<br>(13.8)       |
|                                     | Battery GILL247- 24V -19Ah (MOD2010/112) | G247                                         |       | 19.3<br>(42.5)           | 4.74<br>(15.4)       |

| EQUIPMENT LIST                  |                                                    | AIRCRAFT S/N _____ | DATE: |                            |                      |
|---------------------------------|----------------------------------------------------|--------------------|-------|----------------------------|----------------------|
| REF.                            | DESCRIPTION                                        | P/N                | INST  | WEIGHT<br>[kg]<br>([lb])   | ARM<br>[m]<br>([ft]) |
| B8                              | Fuel qty sender – Electronics international        | P-300C             |       | 0.15<br>(0.33)             | 0.5<br>(1.64)        |
| B8                              | Fuel qty sender (MOD2010/044)                      | 210-7-1160-801     |       | 0.31<br>(0.68)             | 0.5<br>(1.64)        |
| B9                              | ADF Receiver – RA 3502                             | 0505.757-912       |       | 1.5<br>(3.3)               | 3.05<br>(10.01)      |
| B10                             | DME Transceiver - King KN 63                       | 066-01070-0001     |       | 2<br>(4.4)                 | 3.05<br>(10.01)      |
| <b>LIGHTS:</b>                  |                                                    |                    |       |                            |                      |
| B11                             | Nav/POS/Strobe Light SH wing - Ultragalactica Aveo | AVE-WPST R/G-54G   |       | 1<br>(2.2)                 | 0.23<br>(0.75)       |
| B12                             | Rudder Nav Light – PosiStrobe CT                   | AVE-POSW-62G       |       | 1<br>(2.2)                 | 5.5<br>(18.04)       |
| B13                             | Landing/Taxy Light - WHELEN Mod 7167400            | 01-0771674-00      |       | 2<br>(4.4)                 | -1.52<br>(-4.99)     |
| <b>PITOT STATIC:</b>            |                                                    |                    |       |                            |                      |
| B14                             | Pitot (Heated) - Falcon Gauge                      | 24-AN5812-1        |       | 3<br>(6.6)                 | 0.5<br>(1.64)        |
|                                 | Garmin Gap26 Pitot Tubes                           | 26-9-8032-000      |       | 3<br>(6.6)                 | 0.5<br>(1.64)        |
| <b>GARMIN GFC700 Autopilot:</b> |                                                    |                    |       |                            |                      |
| B15                             | Servo pitch GSA 80                                 | 011-00877-20       |       | 1.44                       | 5.3                  |
| B16                             | Servo roll GSA 80                                  | 011-00877-20       |       | 1.44                       | 2.05                 |
| B17                             | Servo pitch trim GSA 81                            | 011-00878-20       |       | 1.03                       | 5.3                  |
| <b>LANDING GEAR ACCESSORIES</b> |                                                    |                    |       |                            |                      |
| C1                              | Nose Landing Gear Wheel Fairing                    | 210-4-3001-401     |       | 1.2<br>(2.6)               | -1.48<br>(-4.86)     |
| C2                              | Main Landing Gear Wheel Fairings                   | 210-4-1020-001-L/R |       | 1.5x2 = 3<br>(3.3x2 = 6.6) | 0.66<br>(2.17)       |
|                                 |                                                    |                    |       |                            |                      |
|                                 |                                                    |                    |       |                            |                      |
|                                 |                                                    |                    |       |                            |                      |
|                                 |                                                    |                    |       |                            |                      |

INTENTIONALLY LEFT BLANK

---

**SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION****INDEX**

|                                                |           |
|------------------------------------------------|-----------|
| <b>1. INTRODUCTION .....</b>                   | <b>2</b>  |
| <b>2. AIRFRAME.....</b>                        | <b>2</b>  |
| 2.1. Wing .....                                | 2         |
| 2.2. Fuselage .....                            | 3         |
| 2.3. Empennages .....                          | 3         |
| 2.3.1. Horizontal Tail .....                   | 3         |
| 2.3.1. Rudder Surface .....                    | 4         |
| 2.4. Main Landing gear .....                   | 5         |
| 2.5. Nose landing gear.....                    | 7         |
| <b>3. FLIGHT CONTROLS .....</b>                | <b>8</b>  |
| <b>4. INSTRUMENT PANEL .....</b>               | <b>9</b>  |
| 4.1. Engine control lever .....                | 10        |
| 4.2. Alternate Air .....                       | 11        |
| 4.3. Defrost and Cabin Heat .....              | 11        |
| <b>5. SEATS AND SAFETY HARNESS .....</b>       | <b>13</b> |
| <b>6. DOORS .....</b>                          | <b>14</b> |
| <b>7. POWERPLANT .....</b>                     | <b>16</b> |
| 7.1. ENGINE .....                              | 16        |
| 7.2. PROPELLER .....                           | 16        |
| <b>8. FUEL SYSTEM.....</b>                     | <b>18</b> |
| <b>9. ELECTRICAL SYSTEM .....</b>              | <b>20</b> |
| 9.1. Stall Warning System .....                | 21        |
| 9.2. Avionics .....                            | 22        |
| 9.3. External Power Supply .....               | 23        |
| <b>10. PITOT-STATIC PRESSURE SYSTEMS .....</b> | <b>24</b> |
| <b>11. LIGHTS.....</b>                         | <b>26</b> |
| 11.1. External lights .....                    | 26        |
| 11.2. Internal lights .....                    | 27        |
| <b>12. PLACARDS .....</b>                      | <b>28</b> |
| 12.1. External Placards .....                  | 28        |
| 12.2. Internal Placards .....                  | 32        |

## 1. INTRODUCTION

This section provides description and operation of the aircraft and its systems.

## 2. AIRFRAME

P2010's airframe can be divided in the following main groups, as highlighted below on figure 7-1:

- 1) Wing
- 2) Fuselage
- 3) Empennage
- 4) Landing gear

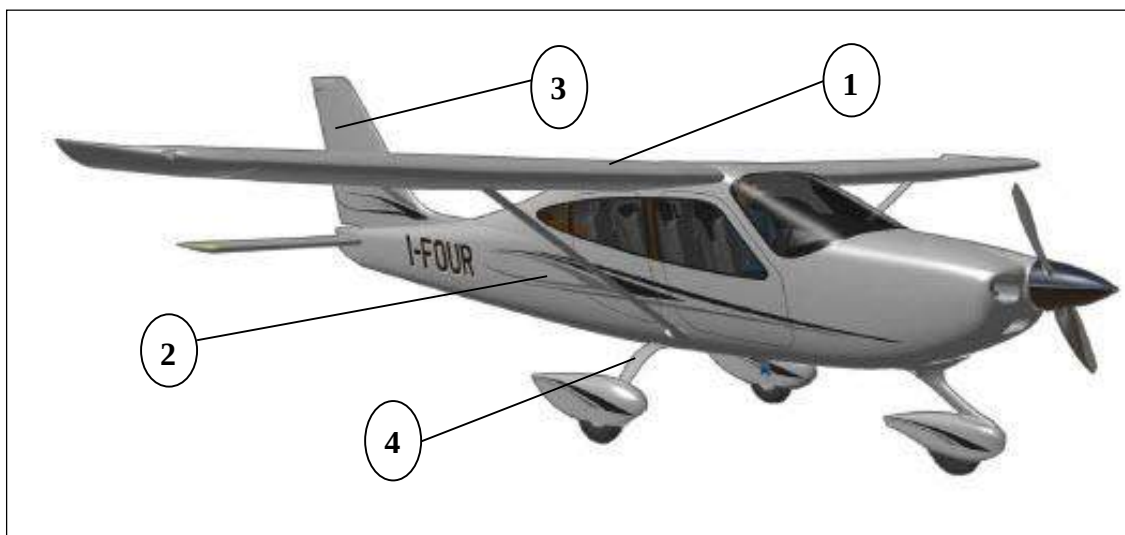


Fig. 7-1. P2010 AIRFRAME

### 2.1. WING

Each wing is connected to the fuselage by means of two bolt attachments and a single strut brace per side. The wings are made up of a central light alloy torsion box; a light alloy leading edge is attached to the front spar whereas the flap ("slotted") and the aileron ("frise") are attached to a rear spar through two hinges each.

The torsion box consists of a front and rear spar that represent its front and rear vertical walls; a series of ribs and wrap-around panels complete the structure. Front and rear spars are integrated with wing-fuselage attachment fittings.

Integral fuel tanks are located in the wing box, behind the main spar, with a capacity of 120 litres each (31,7 gallons).

The ailerons and flaps are made by an aluminium spar attached to a formed sheet metal leading edge and metal ribs; an aluminium skin surrounds the aileron structure.



## **2.2. FUSELAGE**

The P2010 fuselage is mainly made by carbon fibres composite materials.

The fuselage is made by two main shells that are later assembled bonding the two main bodies and the floor (composite) and adding aluminium parts that allow the connection of the main landing gear, seats, wing and instrument panel.

Fuselage and vertical fin are thus a unique body.

## **2.3. EMPENNAGES**

### **2.3.1. HORIZONTAL TAIL**

The horizontal tail is an all-moving type; the stabilizer and elevator form a single uniform plane called stabilator that rotates to the desired pitch setting.

The stabilator structure (see Figure 7-2) is made-up by two aluminium spar and ribs.

Aluminium skin panels are riveted to the above elements.

A trim tab provides stick force adjustment and longitudinal compensation through a control wheel located between pilot and co-pilot seats.

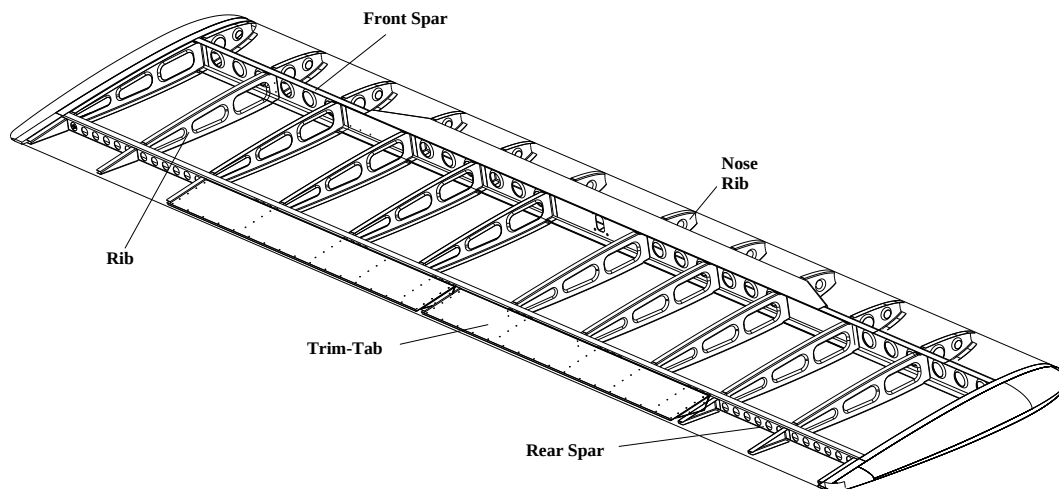


Fig. 7-2. STABILATOR STRUCTURE

### **2.3.1. RUDDER SURFACE**

The rudder structure is made-up by a single aluminium spar (1) and ribs (2). Aluminium skin panels (3) are riveted to the above elements. It is connected to the fin through two hinges; at the lower hinge a bellcrank (4) is connected for the movement transmission.

A trim tab (5) provides stick force adjustment and lateral compensation through a rocker switch located between pilot and co-pilot seats.

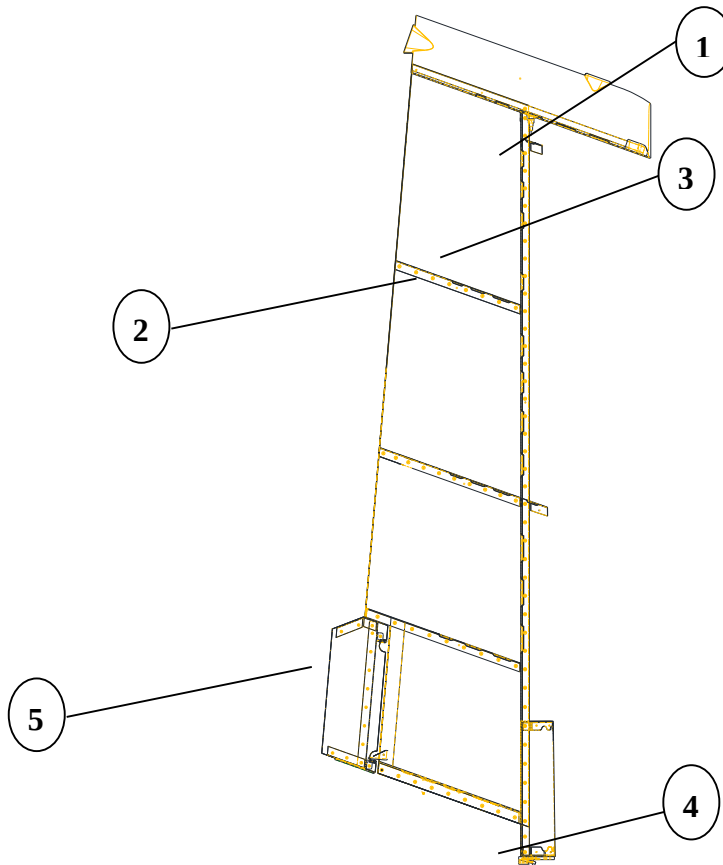


Fig. 7-3. RUDDER STRUCTURE

## **2.4. MAIN LANDING GEAR**

The main landing gear consists of two steel leaf-springs positioned crossways to the fuselage.

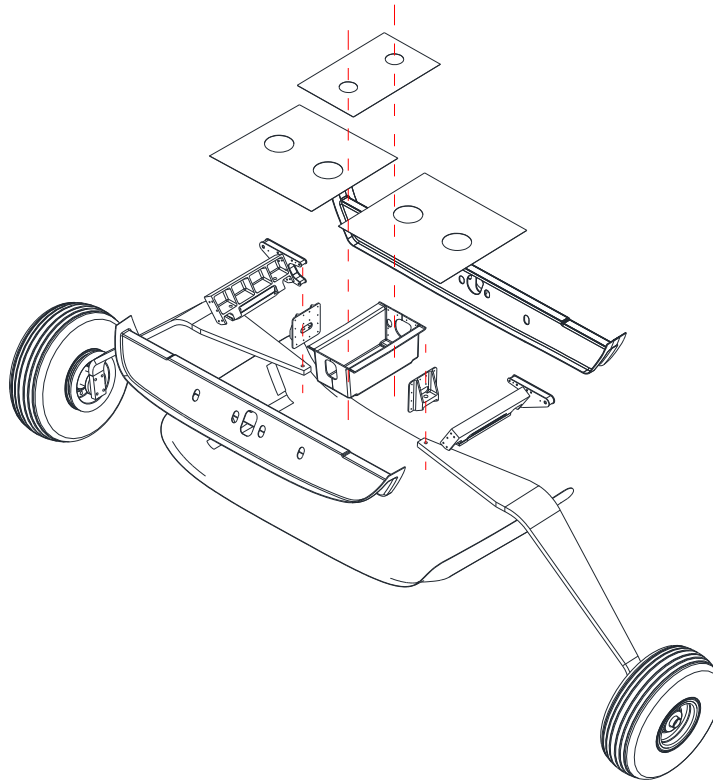


Fig. 7-4. MAIN LANDING GEAR STRUCTURE

The steel leaf-springs are attached to the fuselage structure on composite beams.

Wheels are cantilevered on gear struts and feature hydraulically actuated disc brakes controlled by toe. Main gear wheels install type 6.00-6 tires inflated at 36 psi (2.5 bar).

P2010 is provided with an independent hydraulically actuated brake system for each main wheel. A master cylinder is attached to each pilot's rudder pedal. Hydraulic pressure, applied via the master cylinders, enters the brake via lines connected to an inlet fitting on the caliper.

A parking brake valve, mounted in correspondence of the cabin floor and operated by a knob on the cockpit central pedestal, intercepts the hydraulic lines, once pressurized by toe brakes, to hold the brake assemblies linings tightened round the main wheels brake discs. Brakes can be operated from either pilot's and co-pilot's pedals: a single vented oil reservoir feeds the pilot side master cylinders which are connected, via hoses, with the co-pilot's side ones.

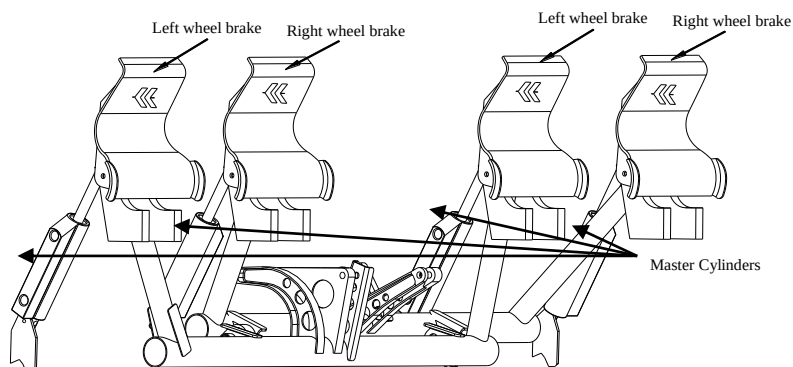


Fig. 7-5. RUDDER PEDALS AND BRAKE MASTER CYLINDERS (PILOT AND CO-PILOT SIDE)

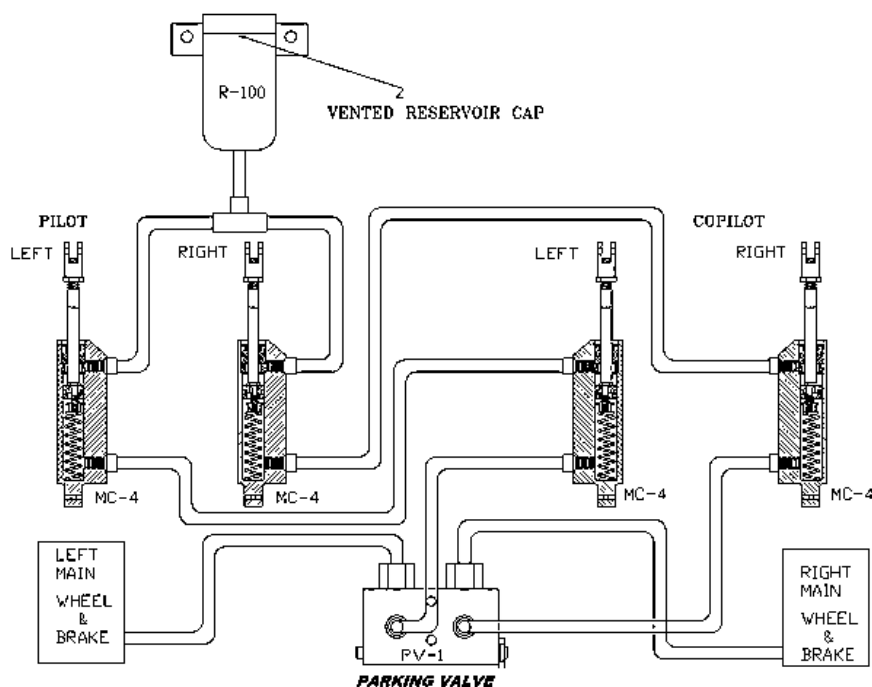


Fig. 7-6. BRAKE SYSTEM SCHEMATIC

## **2.5. NOSE LANDING GEAR**

A Pivoting nose gear is attached to the firewall reinforcement plate. The shock absorber is fitted on the upper machined component and directly on the nose landing gear structure.

In Figure 10 is shown:

- 1) *Hydraulic shock absorber*
- 2) *Firewall*
- 3) *Nose wheel (5.00-5 tire, inflated at 32 PSI (2.2 BAR))*

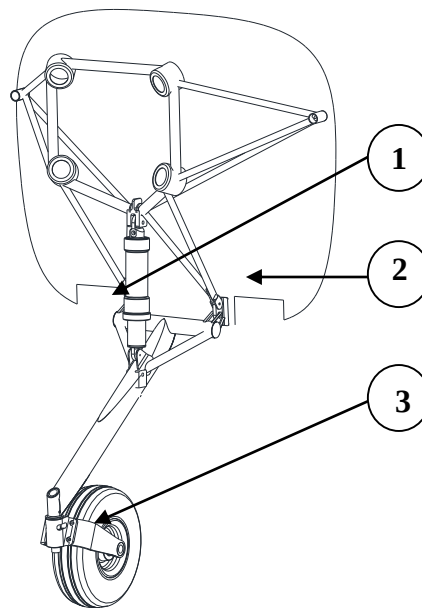


Fig. 7-7. NOSE LANDING GEAR

### **3. FLIGHT CONTROLS**

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

The control of the stabilator trim is operated by means of a control wheel, located between the two front seats that acts directly on the control cables.

Stabilator trim position is displayed on a dedicated analogue indicator located on the LH area of the instrument panel.

Rudder Trimming device for lateral control is provided by means of an electrical actuator controlled by a rocker switch located near the pitch trim wheel; the surface is connected to a potentiometer linked to a rudder trim indicator included in the Garmin G1000 EIS (Engine Indication System).

## 4. INSTRUMENT PANEL

The instrument panel is divided in three areas:

- The left area holds Garmin G1000 PFD, a chronometer and the pitch trim indicator;
- The Central area holds the standby unit for PFI parameters, MD 302 suite, and the ELT button.
- The right area holds Garmin G1000 MFD and breaker panel;
- The lower-LH portion of the instrument panel holds:
  - Ignition key;
  - Master and Generator switches;
  - Emergency fuel pump;
  - Avionic Master switch;
- The lower-Central portion of the instrument panel holds:
  - Fuel selector valve.
  - Flap Control
- The lower-RH portion of the instrument panel holds:
  - Pocket



Fig. 7-8. INSTRUMENT PANEL

#### **4.1. ENGINE CONTROL LEVER**

Engine handling is via three levers: Throttle, RPM lever, Mixture control lever.

They're situated on the center control; the use of "front/forward" and "rear/backward" is defined in relation to the direction of flight (longitudinal).

##### **Mixture control lever**

This lever (right hand lever with red handle) controls the fuel-air mixture, which is supplied to the engine.

With the lever full forward, extra fuel is being supplied to the engine which at higher performance setting contributes to engine cooling.

In cruise, the mixture should be made leaner in order to reach the appropriate fuel-air mixture. The leaning procedure is given in Chapter 4.

Lever forward (RICH) >> Mixture rich (in fuel)

Lever to rear (LEAN) >> Mixture lean (in fuel)

To shut off the engine the mixture control lever is pulled to the rear stop: air without fuel is drawn into the cylinders that shuts down.

##### **Throttle**

This lever (left hand with large knob) is used to control manifold pressure (MAP).

High manifold pressure means a large quantity of fuel-air mixture is being supplied to engine, while low manifold pressure means a lesser quantity of fuel-air mixture is being supplied.



## 4.2. ALTERNATE AIR

Alternate Air knob is located on the central pedestal; when the knob is fully pulled outward from the instrument panel, injectors receive maximum hot air. During normal operation, the knob is set in OFF position.

## 4.3. DEFROST AND CABIN HEAT

Two knobs, located on the lower side of the central pedestal, allow Defrost and Cabin Heat function. The one marked as “Defrost and Cabin Heat” allows hot air to perform windshield defrost and partially cabin heat.

The cabin heat control knob, when fully outward, allows cabin to receive maximum hot air. When both cabin heat and defrost and cabin heat are pulled, air is partitioned.



Fig. 7-9. CENTRAL PEDESTAL

INTENTIONALLY LEFT BLANK

## **5. SEATS AND SAFETY HARNESS**

In correspondence of the seats, three fitting points safety belts are provided; belt adjustment is via the sliding buckle located on the belt metal hook.

Seats are built with light allow tube structure and synthetic material cushioning. It is possible to perform following seat adjustments:

*Horizontal* – pulling the lower front lever and sliding the seat

*Vertical* – operating the lever located on the outward seat side

*Seat back inclination* – unlocking it via the lateral knob

These adjustments ensure the crew and passengers comfort.

## 6. DOORS

P2010 features three doors:

The main door is placed on the left side of the cabin, while on the right side there are two secondary doors, one on the front side and the other on the rear, used as an emergency exit.

On the right side of the cabin is located an additional door which gives access to the baggage compartment.

Baggage door can be opened from the inside of the cabin, where near the rear RH seat a dedicated knob is located.

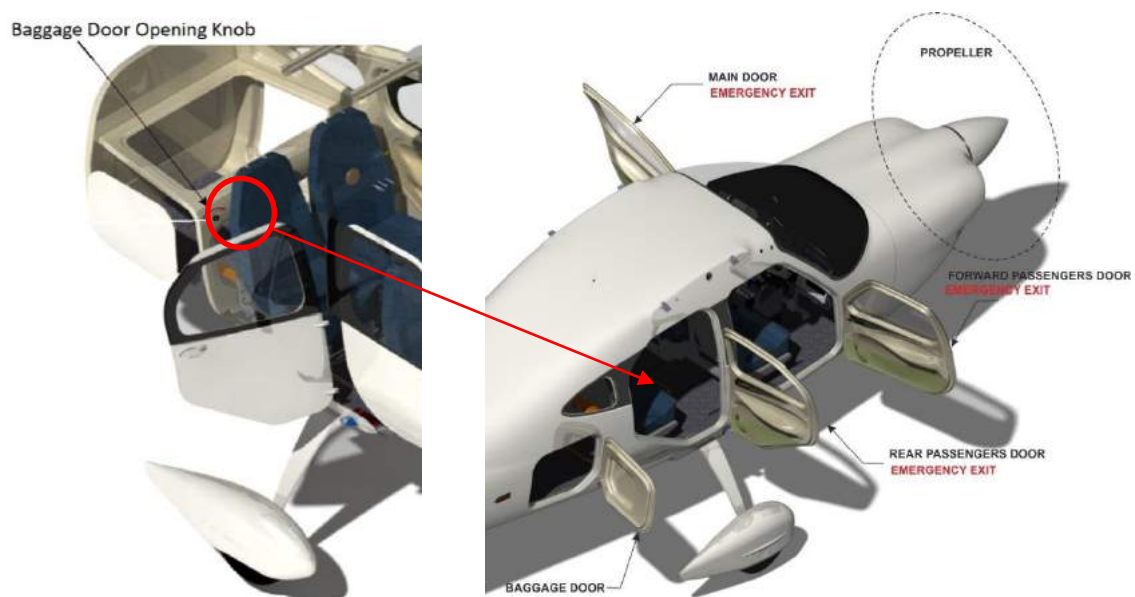


Fig. 7-11. DOORS AND BAGGAGE DOOR OPENING

“NOTE: opening of baggage compartment is only provided inside the cockpit. Occupants of rear seat shall be briefed in order to avoid unnecessary use of command by people seated in the rear seats”

The internal handle can be locked, to avoid any chance of inadvertent opening, by means of a hook located nearby the handle itself and upper safety block, following pictures show the functioning.



Fig. 7-12. HANDLE LOCKING

In case of rapid escapes or door handles malfunction, an emergency opening is provided on the rear side of the door.

The opening is operated by means of a hook, moved forward, that bypasses the normal door opening.



Fig. 7-13. EMERGENCY OPENING

## 7. POWERPLANT

### 7.1. ENGINE

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Manufacturer .....             | Lycoming Textron                                                                                            |
| Model .....                    | IO-360-M1A                                                                                                  |
| Type Certificate .....         | EASA TCDS no. IM.E.032                                                                                      |
| Engine type .....              | Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets. |
| Maximum power .....            | 134.0 kW (180hp) @ 2700 rpm                                                                                 |
| Maximum continuous power ..... | 134.0 kW (180hp) @ 2700 rpm                                                                                 |

| Oil Consumption            |      |     |                               |                             |
|----------------------------|------|-----|-------------------------------|-----------------------------|
| Operation                  | RPM  | HP  | Max.<br>Oil Cons.<br>Qts./Hr. | *Max.<br>Cyl. Head<br>Temp. |
| Normal Rated               | 2700 | 180 | .80                           | 500°F (260°C)               |
| Performance Cruise (75%)   | 2450 | 135 | .45                           | 500°F (260°C)               |
| Economy Cruise (60R Rated) | 2350 | 117 | .39                           | 500°F (260°C)               |

### 7.2. PROPELLER

|                        |                                         |
|------------------------|-----------------------------------------|
| Manufacturer .....     | MT Propeller                            |
| Model .....            | MT 188 R 145 – 4G                       |
| Type Certificate ..... | EASA TCDS no. P.006                     |
| Blades/hub .....       | 2 wood/composite blades – aluminium hub |
| Diameter .....         | 1880 mm (6,17 ft) no reduction allowed  |
| Type .....             | Fixed pitch                             |

INTENTIONALLY LEFT BLANK

## 8. FUEL SYSTEM

The fuel system is designed to supply the reciprocating engine (Lycoming IO-360-M1A) with the suitable flow rate and pressure according to engine limitations required by Lycoming operator manual.

Following figure shows a schematic of the fuel system assy for P2010 airplane.

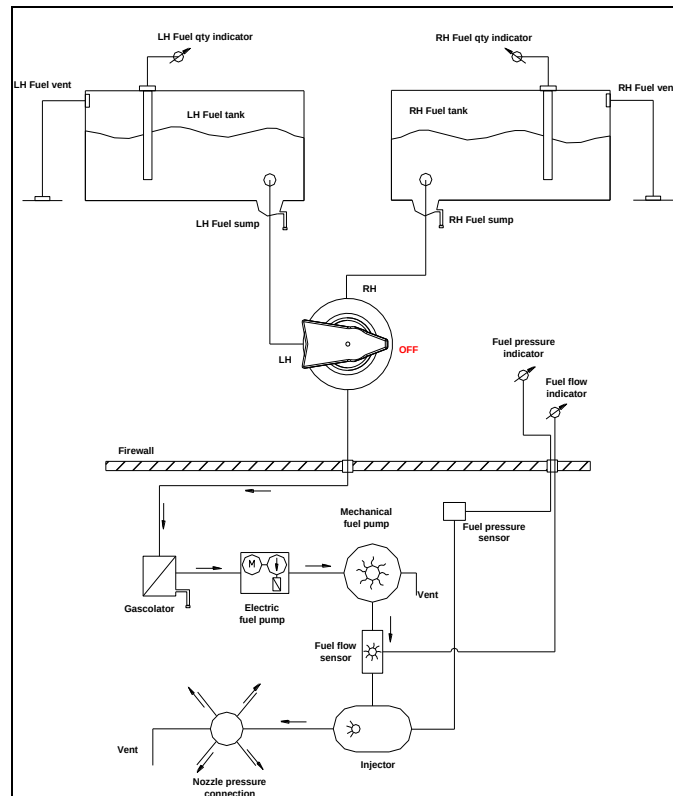


Fig. 7-14. FUEL SYSTEM SCHEME

Each fuel tank is integrated within the wing box. The capacity of each tank is 120 liters (31,7 gal.), total capacity is thus 240 liters (63.4 gal.).

The internal side of fuel tank is accessible for inspection through 4 upper dedicated caps.

Two bottom inspection panels allow the inspection of vent line and tank structure.

An anti-sloshing movable wall is located within each fuel tank, this prevents fuel centrifugation which is a possible cause of undesired engine shut down.

The fuel tank filler cap is located on the top of the wing, in the area outside of the tank and it is easily accessible from the leading edge of the aircraft. At the lowest point of the tank it is positioned a drain sump.

The engine is equipped with an engine gear pumps, mechanical (primary). An additional auxiliary electrical fuel pump is provided (auxiliary).

The fuel selector is operated by a fuel selector control knob located in the cabin on the central panel. The fuel selector control and the fuel valve are connected via a rigid control rod.



INTENTIONALLY LEFT BLANK

## **9. ELECTRICAL SYSTEM**

Primary DC power is provided by an external alternator with a 28 VDC output, rated of 70 Amps @ 2700 rpm. During normal operations, it recharges the battery.

Secondary DC power is provided by a lead type battery (GILL G-247) which provides the energy necessary for feeding the essential electrical loads in the event of an alternator failure.

The switch between the energy sources is automatic and no action is required in order to activate the alternate energy source.

For ground maintenance and/or starting, an external power socket is provided.

The alternator and battery are connected to the battery bus in order to provide energy for the electric equipment.

Each electrically fed instrument is connected to a dedicated circuit breaker which protects the cable from the battery bus to the associated electric equipment.



*If the Ignition is in the position L, R, or BOTH, an accidental movement of the propeller may start the engine with possible danger for bystanders.*

In the following figure is presented the electrical system architecture.

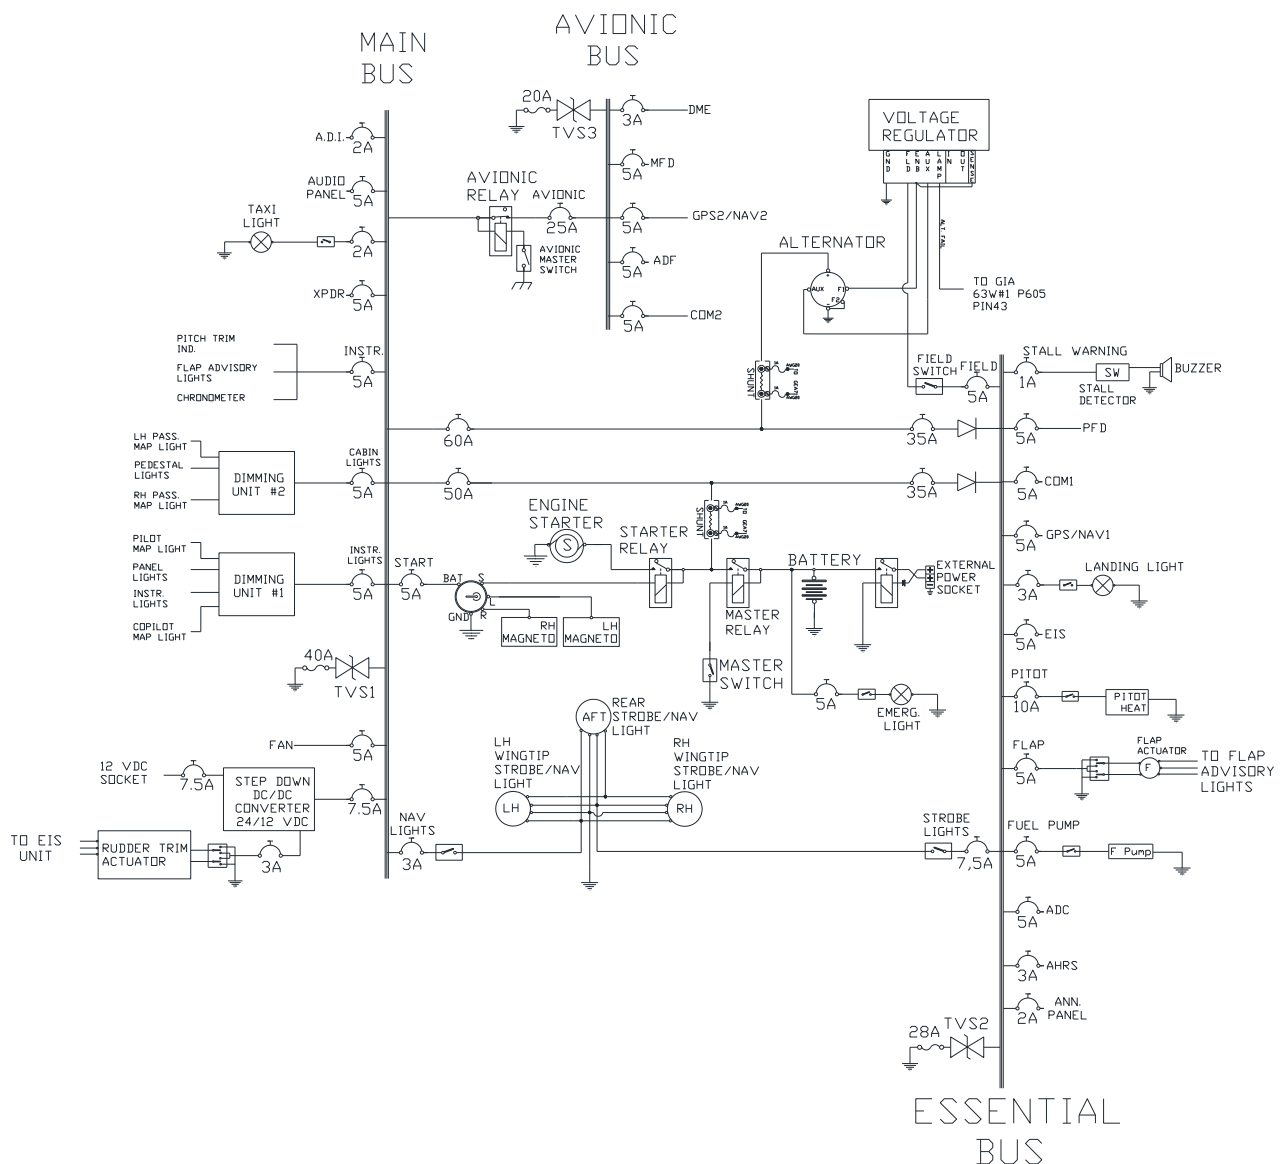


FIG.7-15. ELECTRICAL SYSTEM ARCHITECTURE

## 9.1. STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.

## **9.2. AVIONICS**

The avionic system installed on P2010 is mainly based on the integrated avionic suite Garmin G1000. The installed configuration is based on a two-screen layout.

Primary flight information are displayed on the LH screen, namely PFD (Primary Flight Display).

Primary Engine and moving map information are displayed on the RH display, namely MFD (Multi-Function Display).

Both communication and navigation means, including the ones provided by third party units (i.e. ADF and DME), are integrated within the suite and their related information are displayed on both PFD and MFD.

In the event of a PFD or MFD failure the “reversionary mode” is automatically enabled.

In the event of a failure of the automatic reversion logic, the pilot can force reversionary mode by pressing “reversionary mode” button marked in red and located on the audio-panel.

When reversionary mode is activated primary flight and engine information are presented together on the remaining display.

In order to provide the pilot with main flight information in the event of a dual display failure of both PFD and MFD, or in the event of an AHRS and ADC units combined failure, an integrated digital stand-by instrument, Mid-Continent MD-302, featuring airspeed, altitude, attitude and slip information is installed.

A dedicated analogue indicator is provided for pitch trim position.

The installed equipment is such that the aircraft is able to fly under day/night VFR and day/night IFR rules and to perform ILS CAT I approaches with ILS.

### **9.3. EXTERNAL POWER SUPPLY**

On the right side of the tail cone, an external power is present. Using this device it is possible to feed the electric system directly on the main bus bar, by an external power source. It should be used at the engine start-up in cold weather condition.

A white advisory “EXT. POWER” label will appear on Garmin PFD display upon connection of external power in order to advise pilot; the label will disappear upon disconnection of ground external power.



*Exercise caution while applying external power.*

*Exercise extreme caution while disconnecting external power with engine running due to airflow coming from the propeller.*

*Approach the power supply receptacle from rear of the wing.*

*Make a positive check, upon disconnection, that:*

- *the power chord is free from any aircraft structure*
- *the receptacle is firmly closed.*

Follow this procedure to start the engine using the external power source.

1. Ignition key, Master switch, Generator switch: OFF
2. Open the receptacle door and insert the external power source's plug into the socket
3. Engine start-up procedure (see Sect. 4 in this manual)
4. Disconnect the external power source's plug and close firmly the receptacle door.

## 10. PITOT-STATIC PRESSURE SYSTEMS

The P2010 air speed/altitude indicating systems are connected with a Pitot-Static system based on a total pressure/Pitot probe (simple Pitot tube, heated for icing protection) mounted on left wing strut and two static pressure ports connected in parallel and located in correspondence of engine firewall on left and right side of fuselage. Flexible hoses connects total pressure and static ports to primary analogue instruments, anemometer and altimeter.

Garmin G1000 suite and standby MD 302 unit are connected to both static and total pressure lines providing both air speed and altitude information.

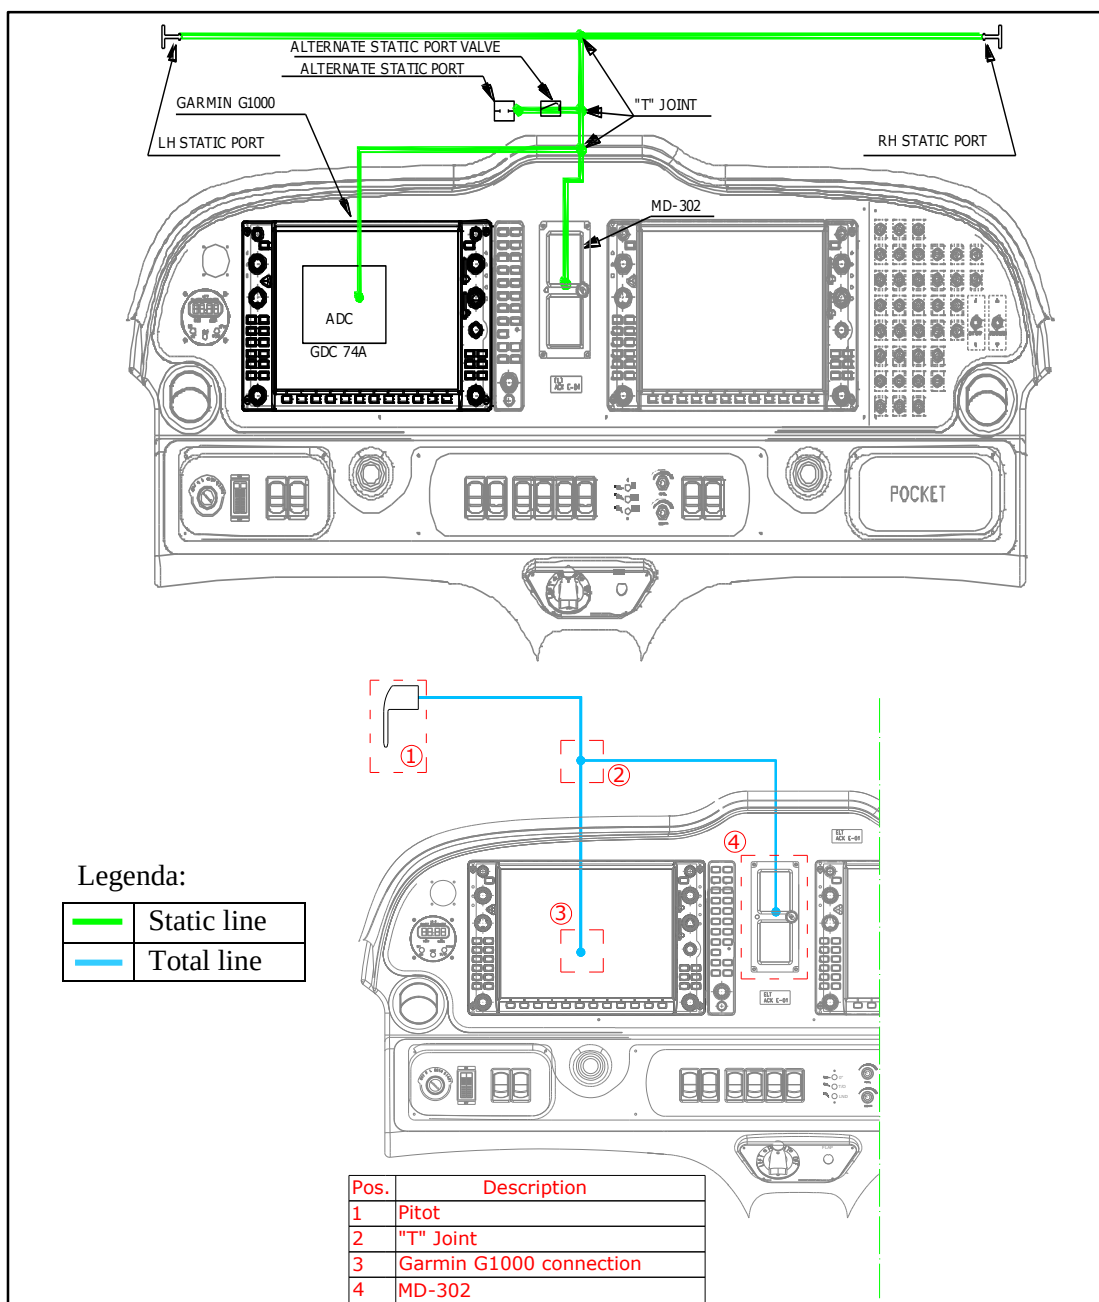


FIG.7-16. PITOT-STATIC SYSTEM

INTENTIONALLY LEFT BLANK

## 11. LIGHTS

### 11.1. EXTERNAL LIGHTS

P2010 is equipped with the following external lights:

- 2 combined LED NAV/POS/Strobe integrated lights located on RH and LH wing;
- 1 POS/strobe combined light located on the rear (fixed on the rudder);
- 1 combined LED landing and taxi light located on the lower engine cowling.

The following schematic shows the configuration layout for external lights:



FIG.7-17. EXTERNAL LIGHTS



## 11.2. INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

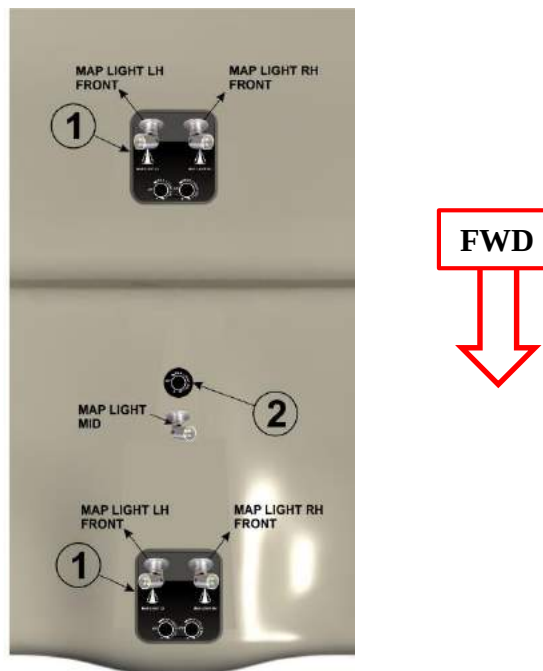


FIG.7-18. CABIN CEILING LIGHTS LAYOUT

The instrument panel can be illuminated by 8 incandescence light strips, all dimmable.



FIG.7-19. INSTRUMENT PANEL LIGHTS LAYOUT

## 12. PLACARDS


In addition to the limitation placards reported on Section 2, following placards are installed on the aircraft.

### NOTE


*Additionally, nearby the placards listed below (English language), directly translated placards in the language of the country in which the airplane is registered can be installed, when required by the specific NAA.*

### 12.1. EXTERNAL PLACARDS

Aircraft Registration Placard:

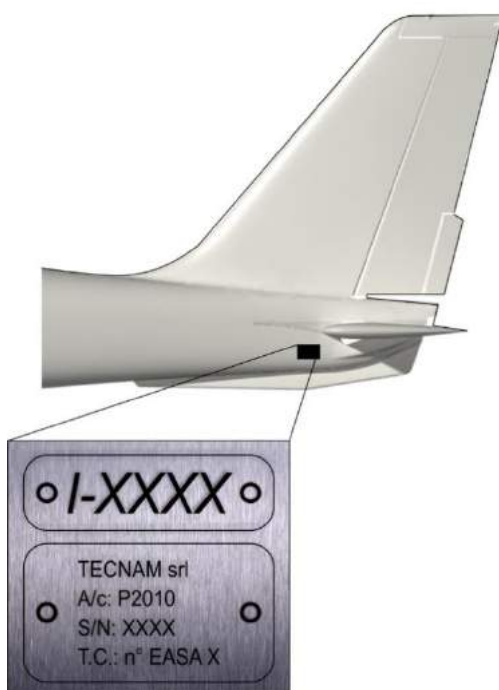

External Power Socket and baggage compartment placards:

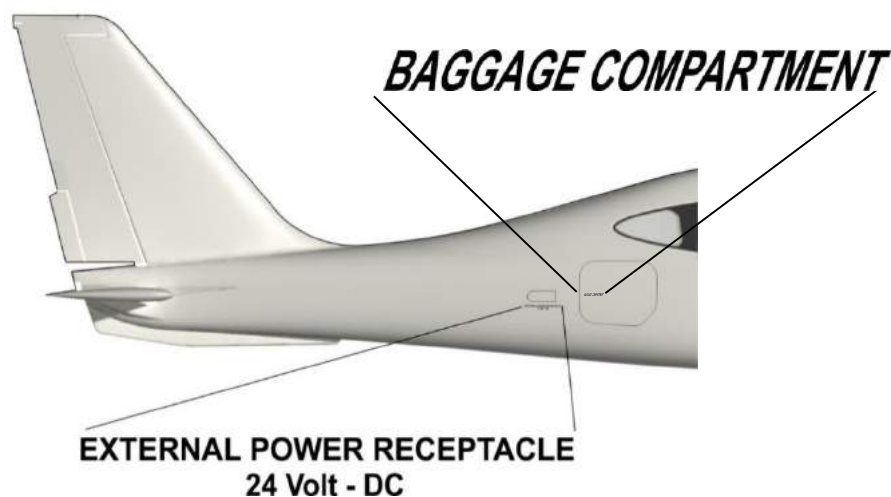

## Static Ports:




## Lift Point:



## Wheel Fairing "No Step":




**Allowed Fuel Placard:**

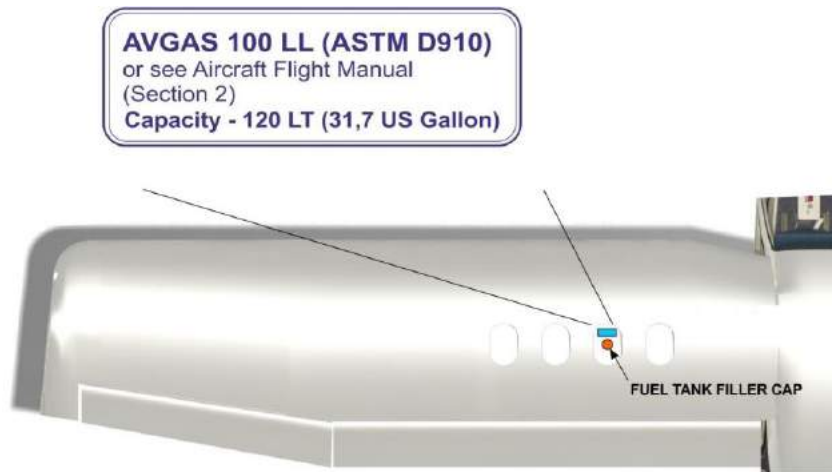


**Tire Pressure placard:**



**Stabilator degrees placard:**

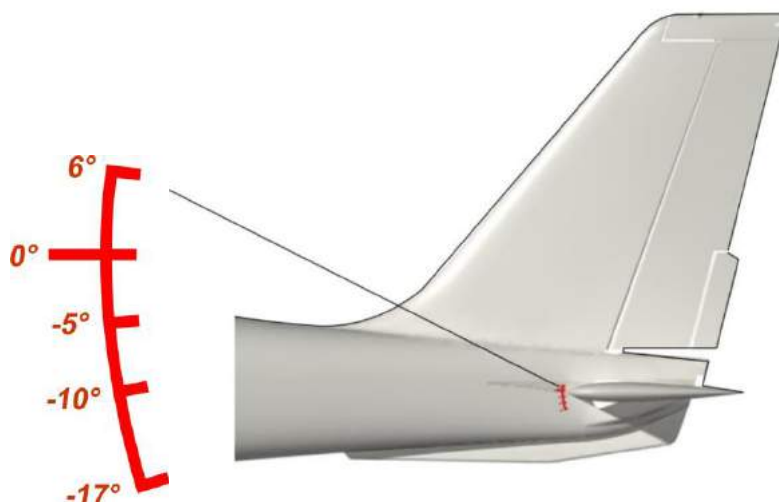

## Emergency exit placards:

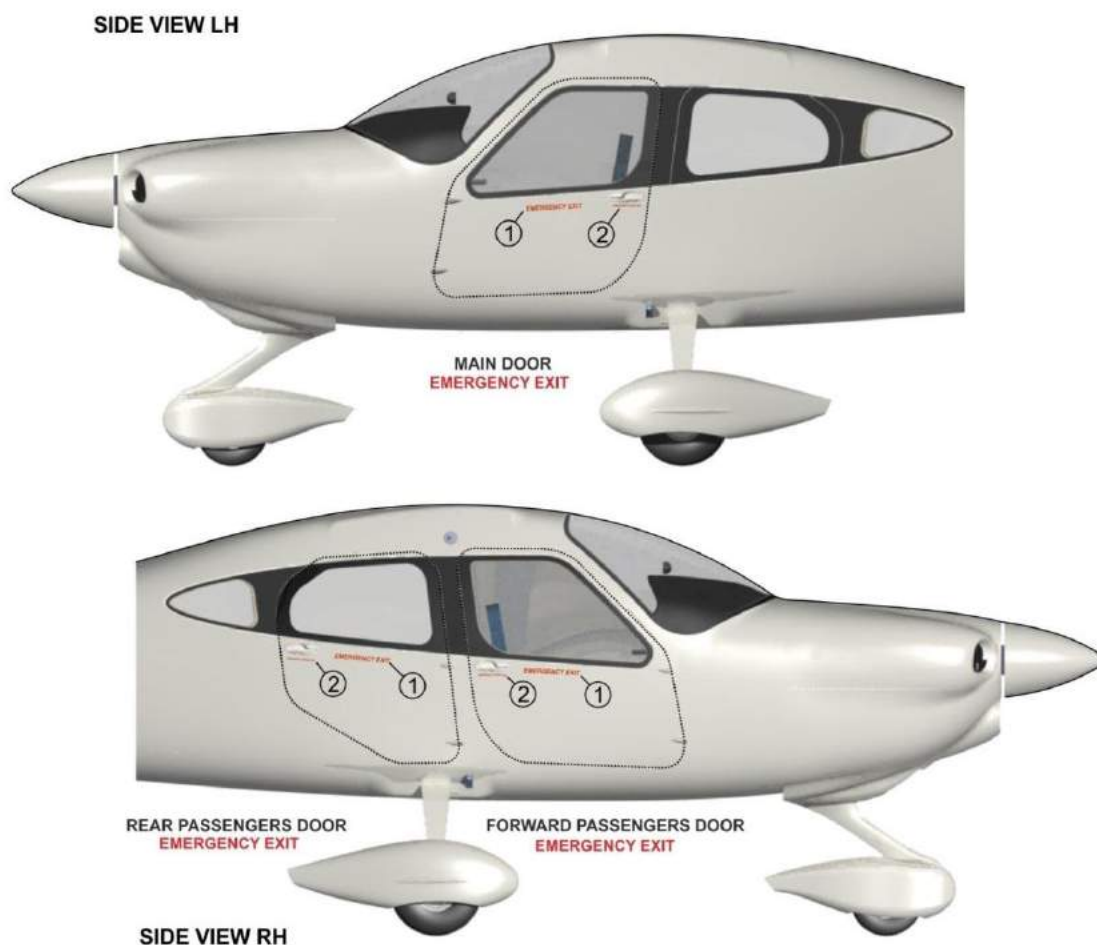



① **EMERGENCY EXIT**

② **FOR EMERGENCY ACCESS**  
OPEN DOOR WITH HANDLE



## 12.2. INTERNAL PLACARDS


Safety equipment placards:

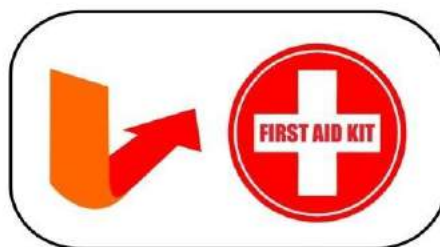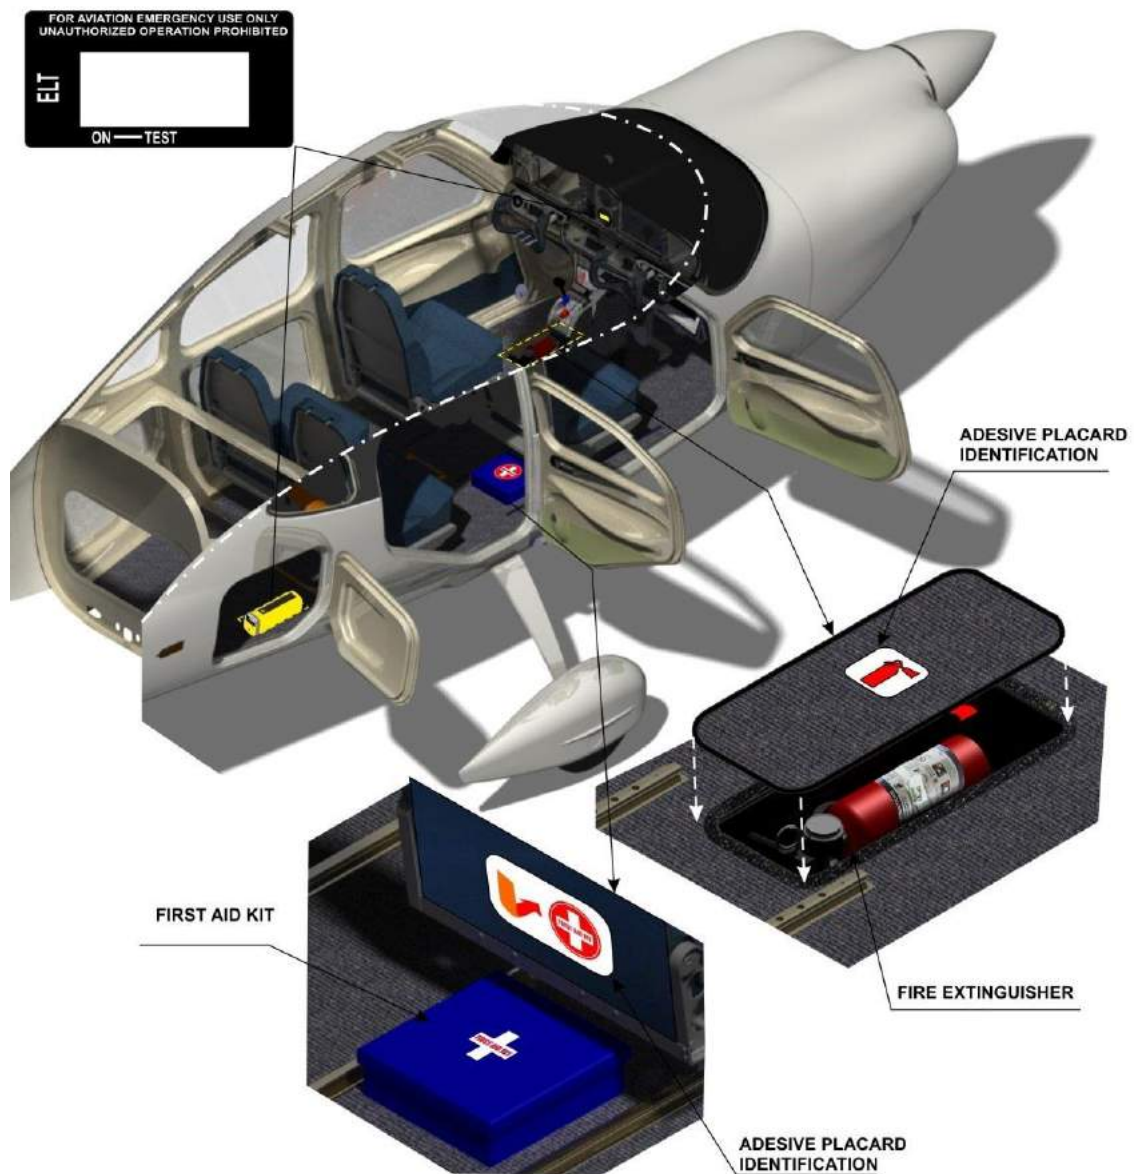

**ELT unit position placard:**



**Breaker Panel placards:**

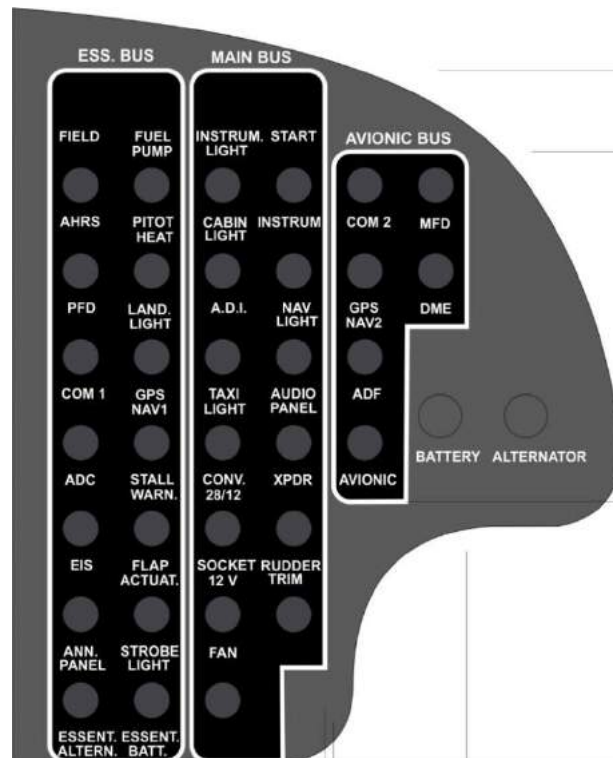


**Magnetic Compass placard:**



|       |   |     |     |   |     |     |
|-------|---|-----|-----|---|-----|-----|
| For   | N | 30  | 60  | E | 120 | 150 |
| Steer |   |     |     |   |     |     |
| For   | S | 210 | 240 | W | 300 | 330 |
| Steer |   |     |     |   |     |     |


DATE RADIO ON AIRPATH

**Battery Placard:**

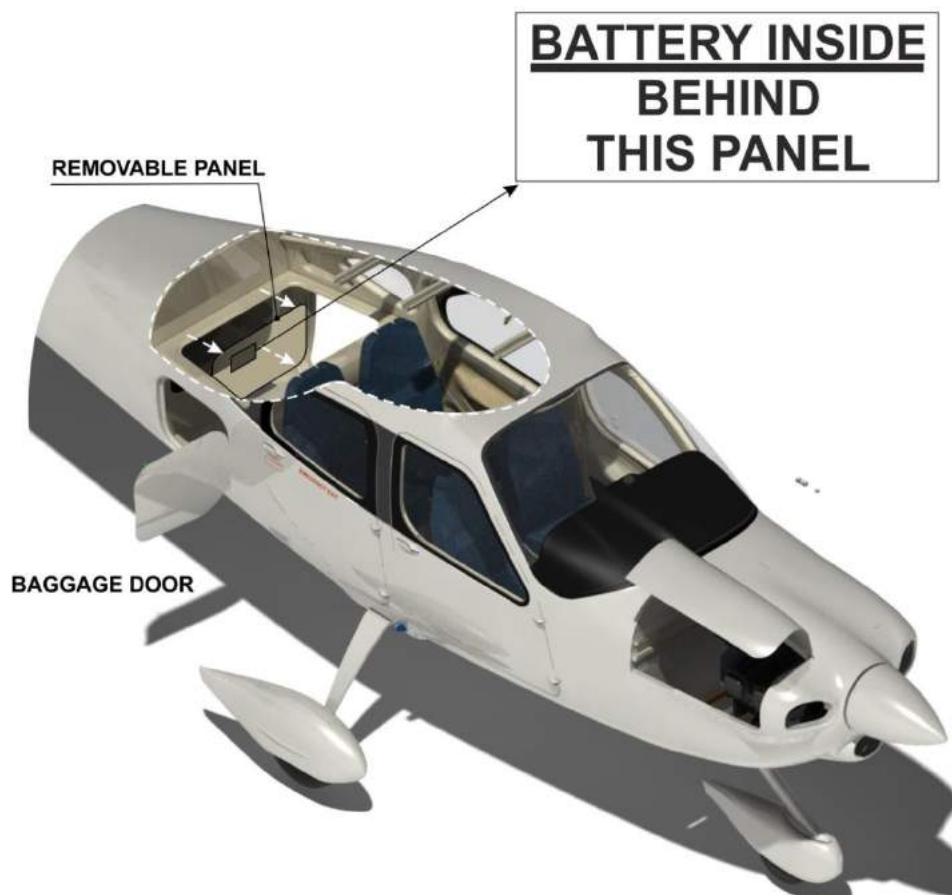



### Oil Filler placard:

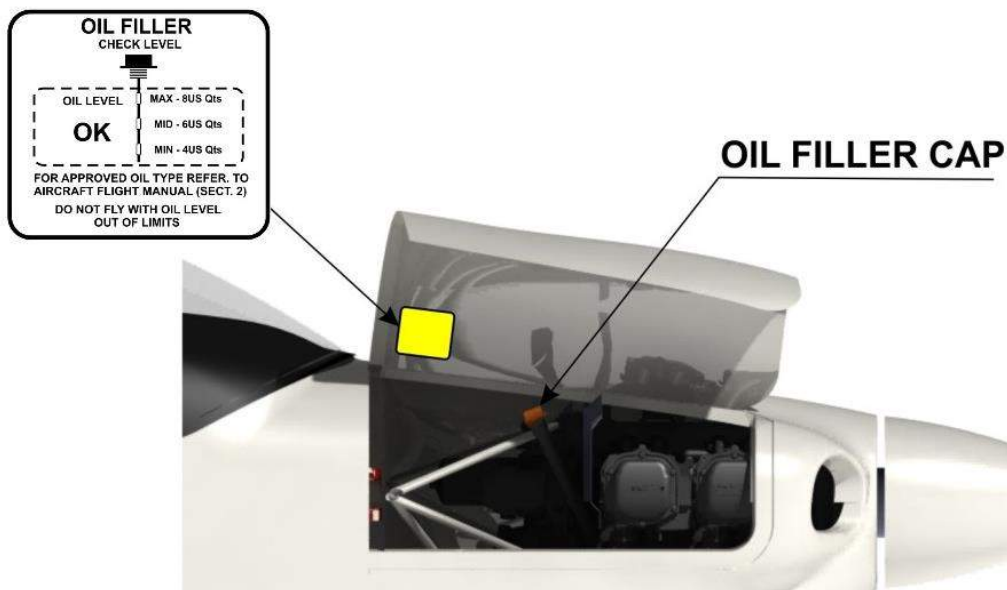

### Emergency exit placards



Pedestal placards:




**Fuel selector valve and Flap control knob:**



**Baggage Door opening knob:**



**Oil brake reservoir placard:**

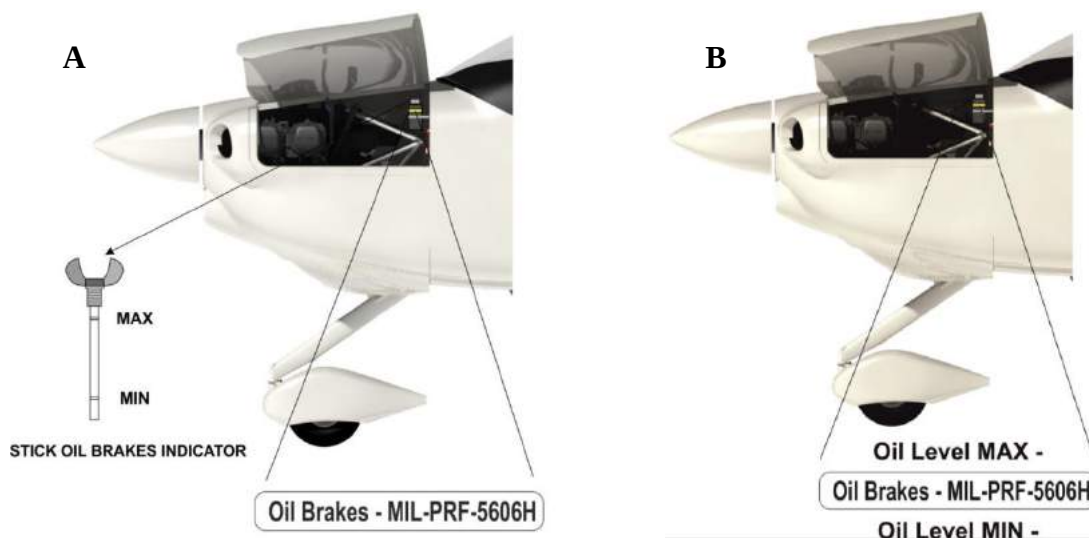

**A – Oil brake reservoir placard**

**B – Oil brake reservoir placard if MOD2010/020 is installed**

INTENTIONALLY LEFT BLANK

**SECTION 8 – GROUND HANDLING & SERVICE****INDEX**

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>1. Introduction .....</b>                         | <b>3</b>  |
| <b>2. Aircraft Inspection Intervals.....</b>         | <b>5</b>  |
| <b>3. Aircraft Changes or Repairs .....</b>          | <b>6</b>  |
| <b>4. Maintenance .....</b>                          | <b>7</b>  |
| <b>4.1 Refuelling.....</b>                           | <b>7</b>  |
| <b>4.2 Engine and Brakes Oil level control .....</b> | <b>7</b>  |
| <b>4.3 Landing gear tires pressure control .....</b> | <b>9</b>  |
| <b>5. Engine Cowling Check .....</b>                 | <b>10</b> |
| <b>5.1 Upper cowling .....</b>                       | <b>10</b> |
| <b>5.2 Lower Cowling.....</b>                        | <b>10</b> |
| <b>6. Ground Handling.....</b>                       | <b>11</b> |
| <b>6.1 Towing .....</b>                              | <b>11</b> |
| <b>6.2 Parking and Tie-Down .....</b>                | <b>11</b> |
| <b>6.3 Mooring .....</b>                             | <b>13</b> |
| <b>6.4 Jacking .....</b>                             | <b>14</b> |
| <b>6.5 Road Transport.....</b>                       | <b>14</b> |
| <b>7. Cleaning And Care.....</b>                     | <b>15</b> |
| <b>7.1 Windows.....</b>                              | <b>15</b> |
| <b>7.2 External surfaces .....</b>                   | <b>15</b> |
| <b>7.3 Propeller .....</b>                           | <b>15</b> |
| <b>7.4 Engine .....</b>                              | <b>15</b> |
| <b>7.5 Internal surfaces .....</b>                   | <b>15</b> |
| <b>8. Ice removal.....</b>                           | <b>16</b> |

INTENTIONALLY LEFT BLANK

## **1. INTRODUCTION**

This section contains factory-recommended procedures for proper ground handling and routine care and servicing. It also identifies certain inspection and maintenance requirements.

It is recommended to follow a planned schedule of lubrication and preventive maintenance based on climatic and flying conditions encountered locally.

INTENTIONALLY LEFT BLANK



## **2. AIRCRAFT INSPECTION INTERVALS**

Scheduled inspections must be performed in accordance with the instructions addressed on the Aircraft Maintenance Manual. Independently from the aircraft flight hours, an annual inspection has to be performed.

All required inspections are reported in the Aircraft Maintenance Manual.

As far as the scheduled/unscheduled engine maintenance is concerned, refer to the engine manufacturer Maintenance Manual.

*Unscheduled inspections/maintenance tasks are necessary when one or more of following conditions occur:*



**CAUTION**

1. *Emergency landing*
2. *Breaking / damage of propeller (or in case of simple impact)*
3. *Engine fire*
4. *Lighting damage*
5. *Any type of damage or failure*

### **3. AIRCRAFT CHANGES OR REPAIRS**

Aircraft changes or repairs must be performed in accordance with Aircraft Maintenance Manual and Job cards provided by TECNAM.

## 4. MAINTENANCE

### 4.1 REFUELLING



**WARNING**

- Do not perform aircraft refuelling near flames, sparks or similar.
- Avoid fuel contact with the skin: a skin corrosion could occur.
- Make sure that a fire extinguisher is available nearby during refuelling operations.
- Make sure that overall aircraft instrumentation is turned OFF before performing the refuelling.
- Do not operate switches and/or pushbuttons inside the aircraft during refuelling operation; make sure that crew left the aircraft before performing refuelling.
- Make sure that the aircraft is electrically connected to the ground.

### 4.2 ENGINE AND BRAKES OIL LEVEL CONTROL

1. Open the engine cowl (RH)
2. Clean the dipstick and soak it in the reservoir
3. Remove dipstick and read oil level
4. If required, replenish oil: oil level should be between max. and min. Marks shown on the dipstick
5. Close the engine cowl
6. Repeat for LH engine cowl side for Oil brakes level control.

**RH Engine Cowling**

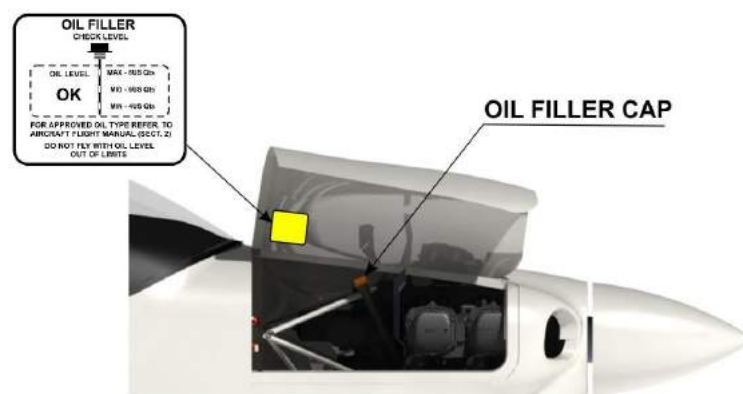


FIG. 8-1. OIL CHECK

**LH Engine Cowling**

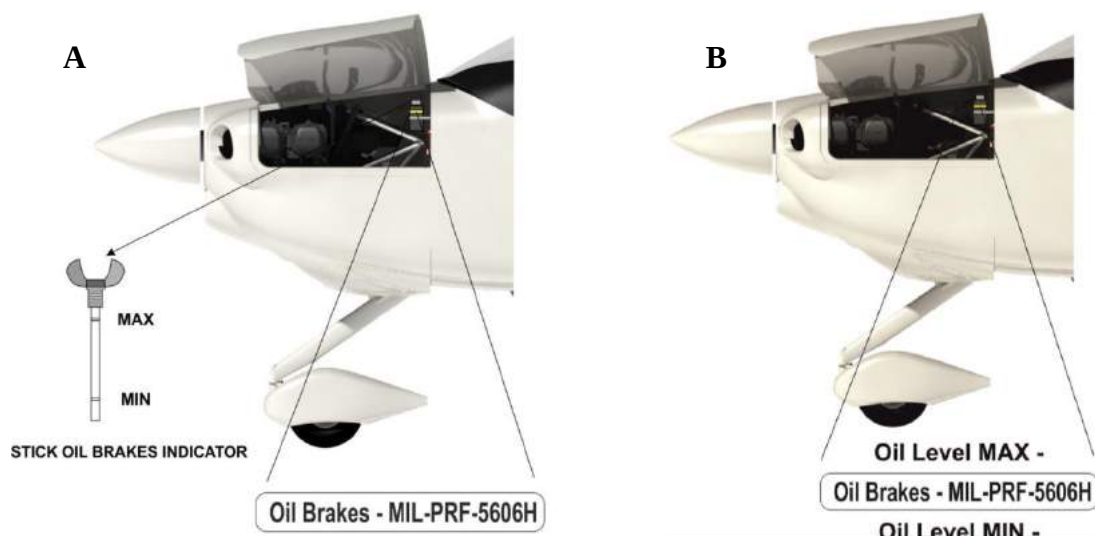


FIG. 8-1 BIS OIL CHECK

**A – Oil brake reservoir placard**

**B – Oil brake reservoir placard if MOD2010/020 is installed**

### **4.3 LANDING GEAR TIRES PRESSURE CONTROL**

For each wheel proceed as follows:

1. Remove wheel fairing
2. Unscrew the tire cap
3. Connect a gauge
4. Read the pressure value
5. If required, rectify the pressure (nose tire 2.2 Bar / 32 psi, main landing gear tires 2.5 Bar / 36 psi)
6. Fit the tire cap
7. Install wheel fairing



FIG. 8-2. TIRE PRESSURE PLACARDS

## **5. ENGINE COWLING CHECK**

### **5.1 UPPER COWLING**

1. Parking brake: *ON*
2. Fuel selector valve: *OFF*
3. Ignition key: *OFF*
4. Generator & Master switches: *OFF*
5. Unlatch all four butterfly Cam-locks mounted on the cowling by rotating them 90° counter clockwise while slightly pushing inwards.
6. Remove engine cowling paying attention to propeller shaft passing through nose.
7. To assemble: rest cowling horizontal insuring proper fitting of nose base reference pins.
8. Secure latches by applying light pressure, check for proper assembly and fasten Cam-locks.



*Butterfly Cam-locks are locked when tabs are horizontal and open when tabs are vertical. Verify tab is below latch upon closing.*

### **WARNING**

### **5.2 LOWER COWLING**

1. After disassembling upper cowling, move the propeller to a horizontal position.
2. Using a standard screwdriver, press and rotate 90° the two Cam-locks positioned on lower cowling by the firewall.
3. Disconnect the ram-air duct from the NACA intake. Pull out the first hinge pin positioned on the side of the firewall, then, while holding cowling, pull out second hinge pin; remove cowling with downward motion.
4. For installation follow reverse procedure.

## **6. GROUND HANDLING**

### **6.1 TOWING**

The aircraft is most easily and safely maneuvered by hand by pushing on wing struts near attachments or by pulling it by its propeller near the axle. A tow bar can be fixed onto nose gear fork. Aircraft may be steered by turning rudder or, for steep turns, by pushing lightly on tail cone to lift nose wheel.

### **6.2 PARKING AND TIE-DOWN**

#### **General**

Under normal weather conditions, the airplane may be parked and headed in a direction that will facilitate servicing without regard to prevailing winds. Ensure that it is sufficiently protected against adverse weather conditions and present no danger to other aircraft.

#### **Procedure**

1. Position airplane on levelled surface, headed into the prevailing wind, if practical.
2. Engage parking brake
3. Secure pilot control wheel by wrapping the seat belt around it

#### **NOTE:**

*Do not engage the parking brakes at low ambient temperature, when an accumulation of moisture may cause the brakes to freeze, or when they become hot from severe use. In this case use wheel chocks.*

In case of long time parking or overnight parking, it is recommended to moor the a/c as shown on Para.6.3.



#### **CAUTION**

*Moorings is strongly recommended when the wind is more than 15 knots and the a/c is completely refuelled.*

INTENTIONALLY LEFT BLANK



### 6.3 MOORING

The aircraft is moored to insure its immovability, protection, and security under various weather conditions.



**CAUTION**

*Mooring is strongly recommended when the wind is more than 15 knots and the a/c is completely refuelled.*

#### Procedure

1. Position airplane on levelled surface and headed into the prevailing wind, if practical
2. Centre nose wheel and engage parking brake and/or use the wheel chocks


#### NOTE:

*Do not engage the parking brakes at low ambient temperature, when an accumulation of moisture may cause the brakes to freeze, or when they become hot from severe use. In these cases use wheel chocks.*

3. Secure pilot control stick by wrapping the seat belt around it
4. Assure that flaps are retracted
5. Electrically ground airplane, by connecting ground cable to the engine muffle
6. Install control locks
7. Install protective plugs
8. Close and lock cabin doors.
9. Secure tie-down cables to the nose gear leg (and to the wings (in correspondence of wing struts) and tail cone tie-down rings at approximately 45 degree with respect to the ground.

#### NOTE:

*Additional preparation for high winds includes tie-down ropes from the main landing gear employment.*

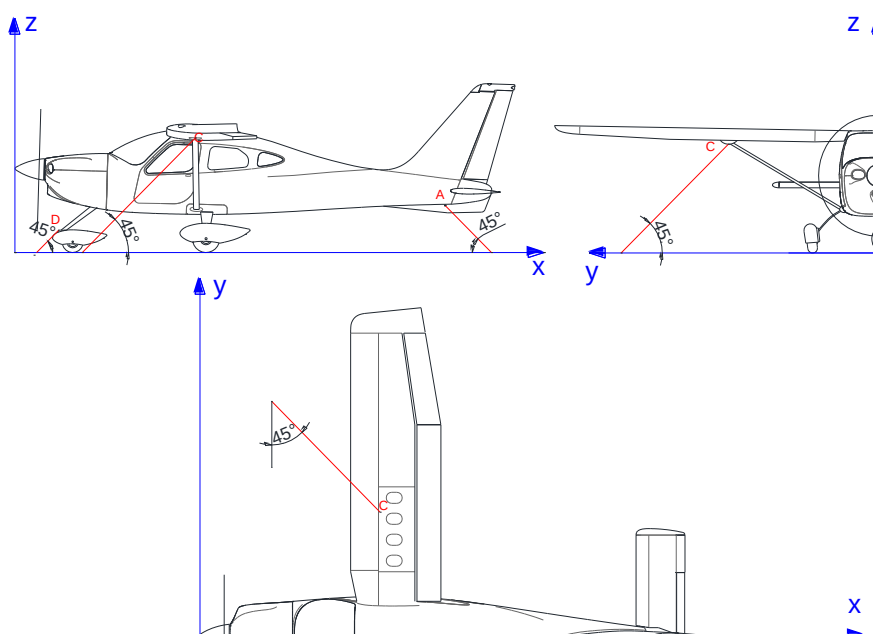

#### **6.4 JACKING**

The aircraft can be lifted up by hydraulic jacks in correspondence of the points shown by external placards.

For the correct procedure please refer to the Maintenance Manual.

#### **6.5 ROAD TRANSPORT**

It is recommended to secure tightly all aircraft components onto the cart to avoid damage during transport. Minimum cart size is 9x4 meters. It is suggested to place wings under the aircraft's bottom, secured by specific clamps. Secondary components like the stabilator shall be protected from accidental hits using plastic or other material. For correct rigging and de-rigging procedure, refer to the Maintenance Manual.

## **7. CLEANING AND CARE**



*Aircraft surface must be kept clean to ensure expected flight performance. Excessively dirty surfaces can affect normal flight conditions.*

### **7.1 WINDOWS**

For windows cleaning, it is allowed the use of acrylic products employed for glass and Plexiglas surfaces cleaning.

### **7.2 EXTERNAL SURFACES**

Aircraft surface is cleaned with soapy water; they are not allowed solvents or alcohol based products. Died insects must be removed using hot water.

It is advisable to avoid outside aircraft parking for long periods; it is always convenient to keep the aircraft in the hangar.

### **7.3 PROPELLER**

To preserve its functionality avoiding wear and corrosion, the propeller manufacturer uses, for external surface painting, an acrylic paint which is resistant to all solvents. In any case it is advisable to clean the propeller using exclusively soapy water.

### **7.4 ENGINE**

Engine cleaning is part of the scheduled maintenance. Refer to the engine manufacturer Maintenance Manual for operating and for planning its cleaning.

### **7.5 INTERNAL SURFACES**

Interiors must be cleaned with a rate of 3 to 6 months. Any object present in the cabin (like pens, lost property, maps etc) must be removed.

The instrumentation as a whole must be cleaned with a humid cloth; plastic surfaces can be cleaned with suitable products.

For parts not easily accessible, perform cleaning with a small brush; seats must be cleaned with a humid cloth.

## **8. ICE REMOVAL**

Anti icing products are not allowed. To remove ice, tow the aircraft in the hangar and operate with a soft brush or a humid cloth.

## SECTION 9 – AFM SUPPLEMENTS

### INDEX

|                                  |          |
|----------------------------------|----------|
| <b>INDEX .....</b>               | <b>1</b> |
| <b>1. Introduction .....</b>     | <b>2</b> |
| <b>2. Supplements list .....</b> | <b>3</b> |

## 1. INTRODUCTION

This Section concerns the supplemental manuals of additional (or optional) instrumentation equipping the **P2010** and/or information and limitations related to installed equipment configuration or needed to fit local national rules.

## 2. SUPPLEMENTS LIST

| Aircraft S/N |                                                                                    | Registration marks |      | Date                     |                          |
|--------------|------------------------------------------------------------------------------------|--------------------|------|--------------------------|--------------------------|
|              |                                                                                    |                    |      |                          |                          |
| Sup.<br>N    | Title                                                                              | Rev.<br>N          | Date | APPLICABLE               |                          |
|              |                                                                                    |                    |      | YES                      | NO                       |
| D01          | GARMIN GFC700 Autopilot                                                            | 2                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D02          | Variable Pitch Propeller                                                           | 3                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D03          | Alternative avionic configuration                                                  | 2                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D04          | Automotive Fuel                                                                    | 1                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D05          | Argentine AFMS                                                                     | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D06          | Reserved                                                                           | /                  |      | /                        | /                        |
| D07          | GFC700 Autopilot for Variable Pitch Propeller equipped aeroplanes                  | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D08          | Alternative avionics configuration for variable pitch propeller equipped airplanes | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D09          | Reserved                                                                           | /                  |      | /                        | /                        |
| D10          | Lycoming IO-390 Engine and GARMIN G1000 NXi Avionic Suite                          | 1                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D11          | Brazil AFMS                                                                        | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D12          | Battery relocation                                                                 | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D13          | New engine cowling                                                                 | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D14          | Autopilot provision for IO-390 equipped airplanes                                  | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |
| D15          | G1000 NXi avionics suite                                                           | 0                  |      | <input type="checkbox"/> | <input type="checkbox"/> |

INTENTIONALLY LEFT BLANK



**SUPPLEMENT NO. D01**
**AFMS FOR GARMIN GFC700 AUTOPILOT INSTALLATION  
AND RNAV/RNP NAVIGATION ELIGIBILITY**
**Record of Revisions**

| Rev | Revised page      | Description of Revision                                                                                           | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                                   |
|-----|-------------------|-------------------------------------------------------------------------------------------------------------------|-----------------|-----------|----------|-----------------------------------------------------------------------------------------|
|     |                   |                                                                                                                   | DO              | OoA       | HDO      |                                                                                         |
| 0   | -                 | First Issue                                                                                                       | D. Ronca        | C. Caruso | M. Oliva |                                                                                         |
| 1   | 2A-15, 17 thru 20 | Amended to add the wording "Approved" in order to better identify the pages approved according to EASA regulation | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (Approval No. MOD2010/070.160118) |
| 2   | 6A-11 thru 12     | Pages removed                                                                                                     | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (Approval No. MOD2010/103.161026) |
|     |                   |                                                                                                                   |                 |           |          |                                                                                         |
|     |                   |                                                                                                                   |                 |           |          |                                                                                         |

**List of Effective Pages**

|                    | Page                                     | Revision |
|--------------------|------------------------------------------|----------|
| <b>Cover Pages</b> | D01-1 thru 23                            | Rev. 0   |
| <b>Section 1</b>   | 1A-13, 1A-16 thru 31                     | Rev. 0   |
| <b>Section 2</b>   | 2A-15, 2A-17 thru 20                     | Rev. 1   |
| <b>Section 3</b>   | 3A-31 thru 35                            | Rev. 0   |
| <b>Section 4</b>   | 4A-27 thru 38                            | Rev. 0   |
| <b>Section 7</b>   | 7A-8 thru 9, 7A-20 thru 21, 7A-27, 7A-33 | Rev. 0   |

---

## **INDEX**

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>INDEX .....</b>                                        | <b>2</b>  |
| <b>INTRODUCTION .....</b>                                 | <b>3</b>  |
| <b>Section 1 – GENERAL .....</b>                          | <b>5</b>  |
| <b>Section 2 – LIMITATIONS .....</b>                      | <b>8</b>  |
| <b>Section 3 – EMERGENCY PROCEDURES.....</b>              | <b>11</b> |
| <b>Section 4 – NORMAL PROCEDURES .....</b>                | <b>14</b> |
| <b>Section 5 – PERFORMANCE .....</b>                      | <b>16</b> |
| <b>Section 6 – WEIGHT AND BALANCE .....</b>               | <b>18</b> |
| <b>Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION .....</b> | <b>20</b> |
| <b>Section 8 – GROUND HANDLING &amp; SERVICE .....</b>    | <b>22</b> |

### **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

## **INTRODUCTION**

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when equipped with Garmin GFC 700 autopilot device interfacing Garmin G1000.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

**Supplement D01: pages replacement instructions**

## **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

According to A/C configuration apply following pages replacement:

| <b>Supplement D01<br/>GENERAL<br/>page</b> |                 | <b>AFM<br/>Section 1<br/>page</b> |
|--------------------------------------------|-----------------|-----------------------------------|
| 1A-13                                      | <b>REPLACES</b> | 1-13 of basic AFM, Section 1      |
| 1A-16 thru 31                              | <b>REPLACES</b> | 1-16 of basic AFM, Section 1      |

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

### Autopilot acronyms

|             |                                     |             |                                    |
|-------------|-------------------------------------|-------------|------------------------------------|
| <i>AC</i>   | Advisory Circular                   | <i>GNSS</i> | Global Navigation Satellite System |
| <i>A/C</i>  | Aircraft                            | <i>GP</i>   | Glide Path                         |
| <i>ADC</i>  | Air Data Computer                   | <i>GPS</i>  | Global Position System             |
| <i>ADF</i>  | Automatic Direction Finder          | <i>GS</i>   | Glide Slope                        |
| <i>ADI</i>  | Attitude Directional Indicator      | <i>GSA</i>  | Garmin Servo Actuator              |
| <i>AFCS</i> | Automatic Flight Control Systyem    | <i>GSM</i>  | Garmin Servo Mount                 |
| <i>AHRS</i> | Attitude Heading Reference System   | <i>HDG</i>  | Heading                            |
| <i>ALT</i>  | Altitude                            | <i>HSDB</i> | High Speed Data Bus                |
| <i>ALTS</i> | Altitude Selector                   | <i>IAU</i>  | Integrated Avionic Unit            |
| <i>AMPS</i> | Ampere                              | <i>LOC</i>  | Localizer                          |
| <i>A/P</i>  | Autopilot                           | <i>LRU</i>  | Line Repleaceable Unit             |
| <i>APR</i>  | Approach                            | <i>LVL</i>  | Level                              |
| <i>ARP</i>  | Aerospace Recommended Practice      | <i>MAG</i>  | Magnetometer                       |
| <i>ASI</i>  | Air Speed Indicator                 | <i>MET</i>  | Manual Electric Trim               |
| <i>BC</i>   | Back Course                         | <i>MFD</i>  | Multi-Function Display             |
| <i>CAS</i>  | Caution Advisory System             | <i>NAV</i>  | Navigation                         |
| <i>CDI</i>  | Course Deviation Indicator          | <i>OAT</i>  | Outside Air Temperature            |
| <i>CS</i>   | Certification Specifications        | <i>PFD</i>  | Primary Flight Display             |
| <i>CWS</i>  | Control Wheel steering              | <i>PFI</i>  | Primary Flight Information         |
| <i>DC</i>   | Direct Current                      | <i>PFT</i>  | Pre Flight Test                    |
| <i>DME</i>  | Distance Measuring Equipment        | <i>PWM</i>  | Pulse Width Modulation             |
| <i>EIS</i>  | Engine Indication System            | <i>SAE</i>  | SAE International                  |
| <i>ESP</i>  | Electronic Stability and Protection | <i>TDM</i>  | Time Division Multiplexing         |
| <i>FD</i>   | Flight Director                     | <i>USP</i>  | Under Speed Protection             |
| <i>FLC</i>  | Flight Level Change                 | <i>VHF</i>  | Very-High Frequency                |
| <i>GA</i>   | Go Around                           | <i>VNV</i>  | Vertical Navigation                |
| <i>GDU</i>  | Garmin Display Unit                 | <i>VS</i>   | Vertical Speed                     |
| <i>GIA</i>  | Garmin Integrated Avionics          | <i>XPDR</i> | Transponder                        |

## **12 AUTOPILOT DESCRIPTION**

P2010 aircraft is equipped, as an optional equipment, with an integrated 2-axis autopilot suite manufactured by Garmin and identified as GFC 700. This autopilot suite was designed as an option for the G1000 integrated flight deck. The autopilot is controlled via dedicated keys grouped in a control panel located on the MFD. The installed MFD display is different with respect to standard P2010 configuration since it is GDU 1044.

The autopilot suite installed on P2010 is based on the following configuration:

- 1 Roll servo
- 1 Pitch servo
- 1 Pitch Trim servo

Neither yaw axis nor rudder trim tab control is provided.

The autopilot is connected to electric system through the below listed circuit breakers connected to the avionics bus:


- 1) A/P (5A)
- 2) PITCH TRIM (3A)

The installed servos are capstan type and are composed of two main components:

- A servo motor
- A servo capstan including the servo clutch

The following block diagram describes the avionic system installed on P2010 and its interconnections with the autopilot servos:



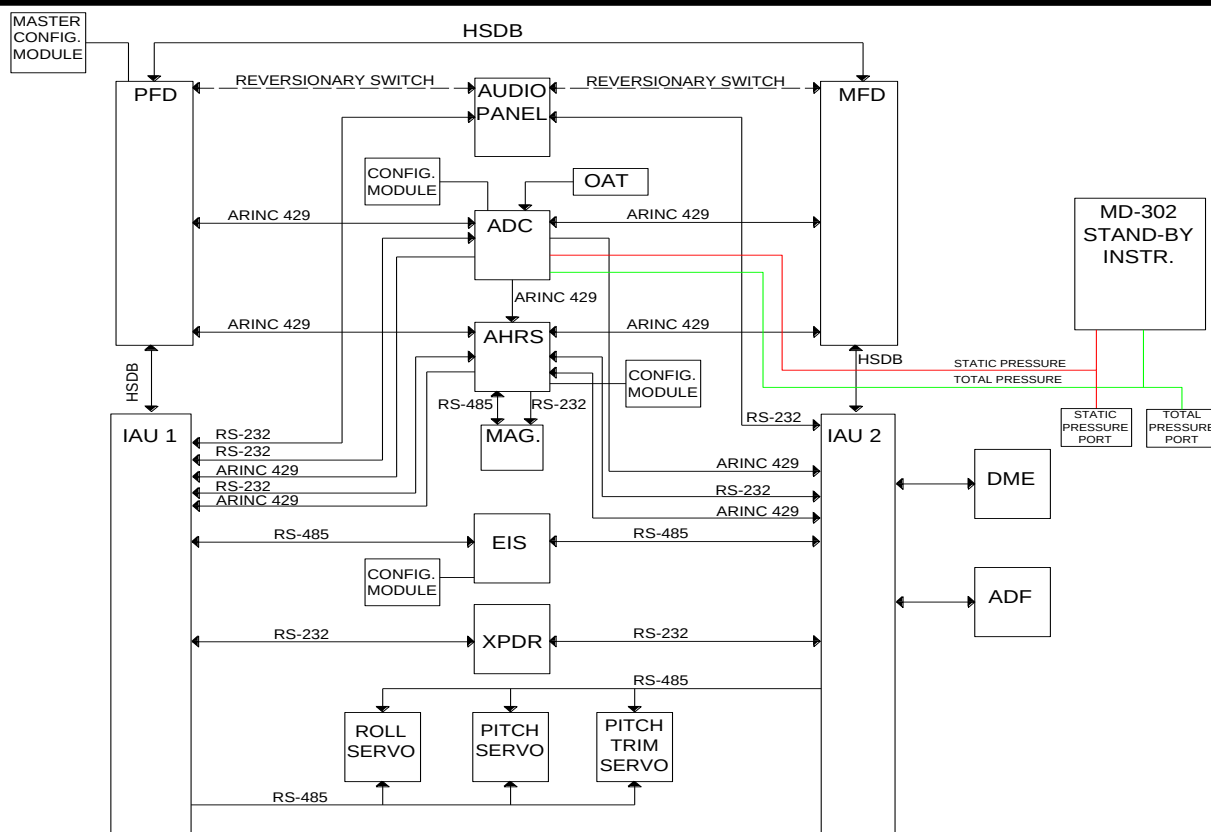

The multifunction display (MFD) provides the pilot with a dedicated set of keys for autopilot control (see red frame in the below picture).



The roll servo is located under the pilot seat and is fixed to a/c structure using a dedicated mount. Pitch and pitch trim servos are located in the tail cone and are installed on a dedicated mount which hosts both the servos.

GFC 700 is an integrated autopilot since it uses several information provided by other units embodied in the G1000 avionics suite in order to compute the maneuvers to be performed by the aeroplane and actuate them. The below table lists the functions which are required in order to have the GFC 700 operational and the G1000 LRUs responsible for providing it:

| <b>LRU<br/>Function</b>                                                  | <b>PFD/MFD<br/>(GDU 104X)</b>                | <b>ADC<br/>(GDC<br/>74X)</b> | <b>AHRS<br/>(GRS<br/>77)</b> | <b>MAG.<br/>(GMU<br/>44)</b> | <b>IAU1/2<br/>(GIA<br/>63W)</b> | <b>ACTUA-<br/>TOR<br/>(GSA 8X)</b> | <b>CAP-<br/>STAN<br/>(GSM 8X)</b> |
|--------------------------------------------------------------------------|----------------------------------------------|------------------------------|------------------------------|------------------------------|---------------------------------|------------------------------------|-----------------------------------|
| AFCS mode select buttons                                                 | ✓                                            |                              |                              |                              |                                 |                                    |                                   |
| Display of the AFCS mode annunciations and flight director command bars. | ✓<br>(PFD NORMAL)<br>(MFD REVER-<br>SIONARY) |                              |                              |                              |                                 |                                    |                                   |
| Attitude/Heading information                                             |                                              |                              | ✓                            | ✓                            |                                 |                                    |                                   |
| Air data information                                                     |                                              | ✓                            |                              |                              |                                 |                                    |                                   |
| Navigational database Parameters                                         | ✓                                            |                              |                              |                              |                                 |                                    |                                   |
| GPS/WAAS, VOR, and ILS navigational data                                 |                                              |                              |                              |                              | ✓                               |                                    |                                   |
| Mode logic, flight director computations, and servo management           |                                              |                              |                              |                              | ✓                               |                                    |                                   |
| Autopilot computations and monitoring                                    |                                              |                              |                              |                              |                                 | ✓                                  |                                   |
| Aircraft control surface Actuation                                       |                                              |                              |                              |                              |                                 |                                    | ✓                                 |
| Trim functionality                                                       |                                              |                              |                              |                              |                                 | ✓                                  |                                   |

In control of the roll axis, the autopilot senses turn rate, as well as closure rate to the selected course, along with the non-rate quantities of heading error, course error and course deviation indication.

In control of the pitch axis, the autopilot senses vertical speed, acceleration, and closure rate to the selected glideslope, along with the non-rate quantities of altitude and glideslope deviation indication.

The “autotrim” function senses when the aircraft needs to be trimmed about the pitch axis, and responds by driving the trim servo in the proper direction to provide trim.

## 12.1 GDU 1044 (MFD)

GDU 1044 MFD unit can display as default engine parameters and moving map information, along with other information that can be selected by the pilot (see the first figure below); when reversionary mode is active it will display flight parameters (in the form of PFD with the left strip engine information, as can be seen in the second figure below). It is the user interface for P2010 avionics suite. GDU 1044 unit replaces the GDU 1040 unit on instrument panel RH side (MFD).



**GDU 1044 (MFD)**

Reversionary mode:

- In the event of a single display failure the system is able to automatically switch the critical information including flight and engine parameters on the remaining display presenting them in a compact view. In the event of a failure of the automatic switch logic, the pilot can easily force the reversionary mode by pressing the red button on the bottom of the audio panel thus getting both flight and engine parameters information, necessary for continued safe flight, on the remaining display.

*NAV1 and COM1 (provided by the failed PFD) Flagged Invalid*




**GDU 1044 (MFD) in reversionary mode**

### Autopilot control panel

The GDU1044 includes a set of additional softkeys dedicated to the control of Autopilot system.

The following dedicated AFCS keys are located on the bezel of the MFD (refer picture below):

- 1) **AP Key:** Engages/ disengages the autopilot
- 2) **FD Key:** Activates/deactivates the flight director only
- 3) **NAV Key:** Selects/deselects Navigation Mode
- 4) **ALT Key:** Selects/deselects Altitude Hold Mode
- 5) **VS Key:** Selects/deselects Vertical Speed Mode
- 6) **FLC Key:** Selects/deselects Flight Level Change Mode
- 7) **HDG Key:** Selects/deselects Heading Select Mode
- 8) **APR Key:** Selects/deselects Approach Mode
- 9) **VNV Key:** Selects/deselects Vertical Path Tracking Mode for Vertical Navigation flight control
- 10) **NOSE UP/ NOSE DN Keys:** Control the mode reference in Pitch Hold, Vertical Speed and Flight Level Change modes

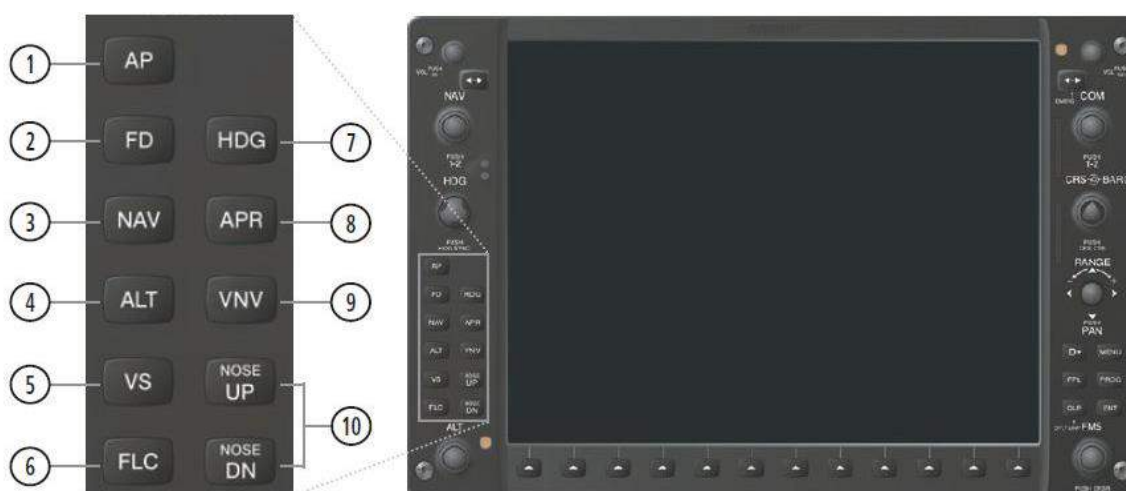

**Autopilot control panel**

---


## 12.2 PILOT CONTROL WHEEL AND THROTTLE BUTTONS

On the left side of pilot's and copilot's control wheels there are two PTT switches (the one on pilot control wheel is shown below as **(1)**) that, when pushed, allow radio transmission. These switches are momentaneous ones thus acting in such a way that when they are released the active COM device returns to the non-transmitting state. These switches are already installed in the basic aircraft which is not equipped with the autopilot.

The following additional dedicated AFCS controls are located on the pilot control wheel, separately from the MFD, and on the throttle handle:

- |                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AP DISC Switch:</b> | Disengages the autopilot and interrupts pitch trim operation<br>This switch may be used to mute the aural autopilot disconnect alert.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>AP Trim Switch:</b> | Used to command manual electric trim. This composite switch is split into left and right sides. The left switch is the ARM contact and the right switch controls the DN (forward) and UP (rearward) contacts. The AP TRIM ARM switch can be used to disengage the autopilot and to acknowledge an autopilot disconnect alert and mute the associated aural tone. Manual trim commands are generated only when both sides of the switch are operated simultaneously. If either side of the switch is active separately for more than three seconds, MET function is disabled and 'PTRM' is displayed as the AFCS Status Annunciation on the PFD. The function remains disabled until both sides of the switch are inactivated. |
| <b>CWS Button:</b>     | While pressed, the Control Wheel Steering allows manual control of the aircraft while the autopilot is engaged and synchronizes the flight director's Command Bars with the current aircraft pitch (if not in Glideslope Mode) and roll (if in Roll Hold Mode). Upon release of the CWS Button, the flight director may establish new reference points, depending on the current pitch and roll modes. CWS operation details are discussed in the flight director modes section.                                                                                                                                                                                                                                              |
| <b>TO/GA Switch:</b>   | The GA Switch is located on the throttle handle.<br><br>Go Around and Takeoff modes are coupled pitch and roll modes and are annunciated as both the vertical and lateral modes when active. In these modes, the flight director commands a constant set pitch attitude and keeps the wings level. The GA Switch is used to select both modes. The mode entered by the flight director depends on whether the aircraft is on the ground.                                                                                                                                                                                                                                                                                      |

The above mentioned AFCS controls are depicted in the below figures.

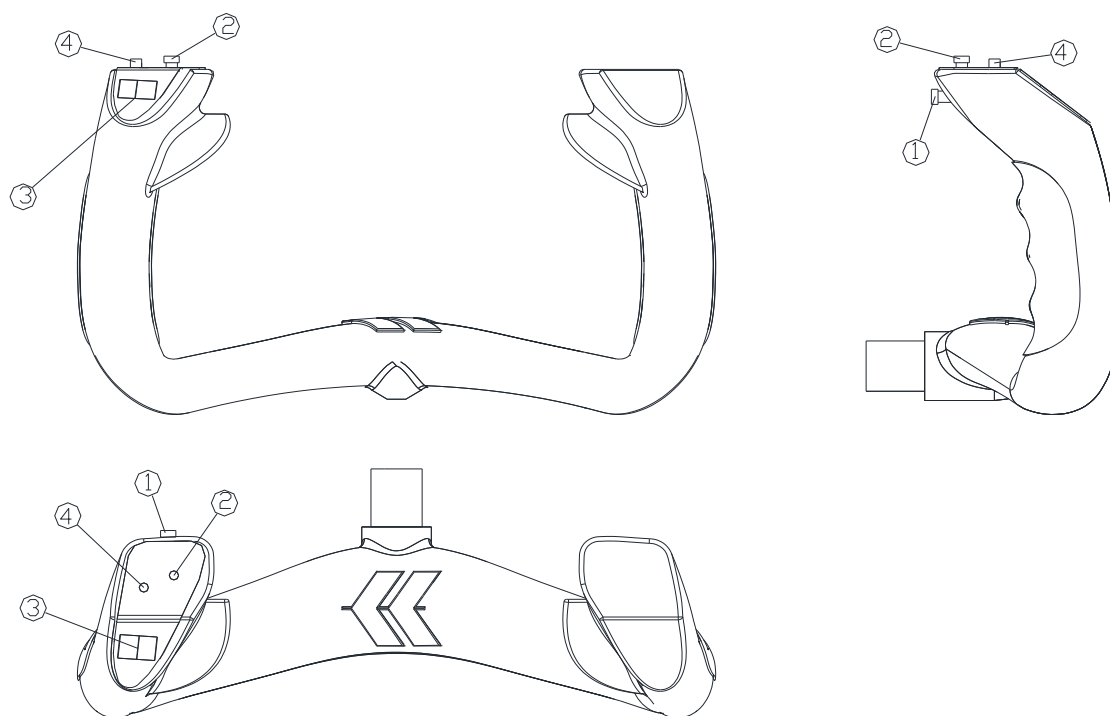

where:

- 1) PTT switch
- 2) AP DISC Switch
- 3) AP Trim Switch
- 4) CWS Button





## **13 AUTOPILOT FUNCTIONS AND FEATURES**

GFC 700 autopilot suite is deeply integrated with Garmin G1000 avionics suite which integrates both the a/p controls and the sensors providing the required data to the servos.

The GFC 700 AFCS is equipped with the following main operating functions:

- **Flight Director (FD)** — Flight director commands are displayed on the PFD. The flight director provides:
  - ✓ Command Bars showing pitch/roll guidance
  - ✓ Pitch/roll mode selection and processing
  - ✓ Autopilot communication
- **Autopilot (AP)** — Autopilot operation occurs within the pitch, roll, and pitch trim servo and provides servo monitoring and automatic flight control in response to flight director steering commands, AHRS attitude and rate information, and air-speed.
- **Manual Electric Trim (MET)** — The pitch trim servo provides manual electric trim capability when the autopilot is not engaged.
- **ESP** (Electronic Stability & Protection) keeps the aircraft within well defined operational limits thus preventing the pilot to operate the aircraft outside a specific envelope when it is being hand flown. This feature only operates when autopilot is not engaged and its operation is mutually exclusive with autopilot operation.
- **USP** (Underspeed Protection) is a flight director function that reacts to underspeed conditions in a way that allows the autopilot to remain engaged but prevents the airplane from stalling.



### **13.1 ESP**

Garmin GFC 700 is equipped with an envelope protection feature referred as ESP (Electronic Stability & Protection). Electronic Stability and Protection continuously monitors the aircraft. The system works by applying a correcting force to the controls in order to nudge pilot to avoid extreme attitudes that may bring the aircraft, if not corrected, to exceed normal flying envelope.

This software feature aims to provide protection against aircraft operation outside a desired flight envelope. ESP will maintain the desired operating envelope, defined at autopilot development time, by automatically engaging one or more servos when the aircraft is near the operating limit and nudging pilot to come back to nominal operating envelope. While ESP utilizes the same sensors, processors, and actuators as the GFC 700 autopilot, it is basically a separate function. ESP can be overpowered by the pilot and can be temporarily disabled using the AP disconnect or CWS switches. It functions independently of the aircraft's autopilot system (although it uses the same control servos), so it basically operates "in background" whenever the pilot is hand-flying the airplane.

**The ESP feature will only function with GPS available, A/P MASTER SWITCH ON (but autopilot not engaged) and aircraft above 200ft AGL.**

#### **ESP enabling:**

As a standard, ESP will automatically set to enable at power-up.

The system is configured in order to allow the pilot to disable ESP (or re-enable it if previously disabled after power up) via the AUX – SYSTEM SETTINGS page on MFD.

If ESP has been disabled via MFD, it will automatically be set to ON upon any battery/power reset.

ESP function uses the same servos that provide autopilot functionality while autopilot is not engaged, as such, if power is cut from these servos both autopilot and ESP functions will be unavailable.

Based on the above if "AUTOPILOT MASTER" is set to OFF, power to servos is cut irrespectively of their mode of operation (autopilot or ESP).

The pilot can interrupt ESP by pressing and holding either the Control Wheel Steering (CWS) or Autopilot Disconnect (AP DISC TRIM INTRPT) switch. Upon releasing the CWS or AP DISC TRIM INTRPT switch, ESP force will again be applied, provided aircraft attitude and/or airspeed are within their respective engagement limits.

ESP can be enabled or disabled on the AUX-SYSTEM SETUP 2 Page on the MFD.

To enable or disable ESP:

- 1) Turn the large FMS Knob to select the AUX Page Group.
- 2) Turn the small FMS Knob to select the System Setup Page.
- 3) If necessary, select the SETUP 2 Softkey to display the AUX-SYSTEM SETUP 2 Page. If the AUX-SYSTEM SETUP 2 is already displayed, proceed to step 4.
- 4) Press the FMS Knob to activate the cursor.
- 5) Turn the large FMS Knob to place cursor in the STABILITY & PROTECTION field.
- 6) Turn the small FMS Knob to select 'ENABLE' or 'DISABLE'.
- 7) Press the FMS Knob to remove the cursor.

### ESP engagement and operation:

ESP is automatically enabled on system power up.

#### NOTE

*ESP unavailability and/or failure is indicated to the pilot on PFD by the advisory "ESP not available" on alert window.*

#### NOTE

*ESP will turn OFF upon loss of both GPS. The ADVSY "ESP OFF" will appear on the alert window in case of loss of both GPS.*

### 13.1.1 PITCH MODE

Pitch attitude boundaries are set based on P2010 aircraft performances. Since pitch ESP augments the natural aircraft longitudinal stability, no special symbology is required.

Value that have been set-up for the P2010 are as follows:

Nose above the horizon:

Engagement low threshold: + 15°  
 Engagement upper threshold: + 18°  
 Lower disengage threshold: + 12°

Nose below the horizon:

Engagement low threshold: -15°  
 Engagement upper threshold: -20°  
 Lower disengage threshold: -13°

ESP utilizes electronic torque and speed commands to augment the aircraft's stability: it uses an Electronic Torque Limit (ETL) and an Electronic Speed Limit (ESL) to limit the maximum authority of the ESP function. ESP is inactive when the pitch attitude is within the positive and negative engagement limits defined in the certification gain file.

When the aircraft reaches the engagement limit, ESP ramps up the servo torque command to adjust the aircraft back toward zero pitch attitude. ESP uses a rate command to drive the attitude back to the nominal range and does not try to control to a specific attitude. As the pitch attitude returns to the nominal range, the torque and pitch rate are reduced until the aircraft reaches the disengagement limit at which time ESP turns off. The disengagement threshold is sized so that the transition from ESP being active to being inactive is transparent to the pilot (no transient when ESP turns off).

If, when ESP engages, the aircraft continues to pitch away from the nominal attitude range the torque command will increase with increasing pitch deviation. Above the upper disengagement limit specified in the certification gain file ESP will be disabled.

### 13.1.2 ROLL MODE

Roll mode is similar to pitch mode and also utilizes configurable gain file parameters to define engagement and disengagement limits as well as the speed and torque curves.

The engagement and disengagement attitude limits are displayed with double hash marks on the roll indicator when ESP is available and /or active. The lack of double hash marks above 200 ft AGL (when autopilot is not connected) is a clear indication that ESP is not available.

Values for the symmetric roll attitude limits are as follows:

Engagement low threshold:  $\pm 45^\circ$

Engagement upper threshold:  $\pm 75^\circ$

Lower disengage threshold:  $\pm 30^\circ$


Electronic stability and protection action starts at the predetermined bank angle. Since crossing this bank angle results in a change in aircraft stability (and therefore handling characteristics) indications of this boundary are provided to the pilot.



When ESP is inactive (roll attitude within nominal limits) only the engagement limits are displayed in order to reduce clutter on the roll indicator. As the bank

angle is increased, a region of an increasing force as a function of bank angle is entered. The envelope protection system adds bank stability in this region. As the bank angle is increased further, a constant force is applied to right the airplane.

See the below figure for an example of the ESP engagement limits.

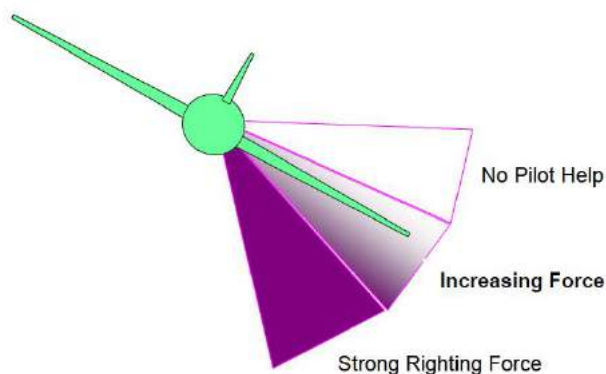

### VMO

Exceeding VMO will result in ESP applying force to raise the nose; when the high speed condition is remedied, ESP force is no longer applied.

Engage Limit: 165 KIAS

Upper Limit: 168 KIAS

Lower disengage Limit: 160 KIAS

## 13.2 USP

Underspeed Protection (USP) is a flight director function that reacts to underspeed conditions, designed to discourage aircraft operation below minimum established airspeeds.

Pilot will be warned of impending low speed conditions, and if no action will be taken FD will directly react in a way that allows the A/P to remain engaged but prevents the airplane from stalling.



**WARNING**

*USP function has been developed in order to warn pilot of impending low speed conditions, and if no action will be taken FD will directly react in a way that allows the Autopilot to remain engaged but prevents the airplane from stalling.*

*Pilot action is still expected at first warning of low airspeed conditions in order to prevent a low speed conditions, so to maintain normal flight.*



**CAUTION**

*When autopilot is engaged USP will provide the pilot with aural/visual cues to make him aware of an impending stall and will drive the servos in order to prevent stall.*

*When autopilot is not engaged and only Flight director is active, USP will provide the pilot with aural/visual cues to make him aware of an impending stall but servos will not be driven.*



How Underspeed Protection functions depends on which vertical flight director mode is selected.

For the purpose of this discussion, the vertical flight director modes can be divided into two categories:

- It is important to maintain altitude for as long as possible (altitude-critical modes).
- Maintaining altitude is less crucial (non-altitude critical modes).



**CAUTION**

*If USP engages while Autopilot is in PIT or VS mode, and power is abruptly set to full throttle, pilot may expect a slight nose up tendency that will be quickly counteracted by autopilot. This is a normal behaviour, the slight nose up tendency in this case will be due to abrupt power advance, but will be immediately damped by Autopilot (with PIT or VS turning green on the annunciation panel).*



**CAUTION**

*USP engagement is a consequence of autopilot failing to properly monitoring A/P and aircraft behaviour. This is mainly caused by a pilot request that cannot be fulfilled due to lack of power coupled with unattainable pitch input.*

*Pilot need to continuously monitor autopilot performance, while checking that mode selections are compatible with aircraft performance.*



**CAUTION**

*If Autopilot is engaged in FLC mode, FLC mode will downgrade to PIT mode when in USP for more than 10 seconds.*



**CAUTION**

*If USP engages while in ALT mode, upon USP disengagement FD will command bars to regain pre-selected altitude (altitude selected before USP engagement). Pilot must monitor A/P to check if previous pre-selected altitude is still attainable with energy available. It is recommended in this case to pre-select a new altitude in order to speed-up energy management and recover from slow speed conditions.*

**NOTE**

*When USP becomes active, expect a small FD adjustment due to reaction to very low speed condition.*

### 13.2.1 ALTITUDE CRITICAL MODES (ALT, GS, GP, TO, GA, FLC)

When the airspeed trend vector (dedicated algorithm) reaches 65 +/- 2 KIAS a single aural “AIRSPEED” will sound, alerting the pilot to the impending under-speed condition, which requires pilot action.

If the aircraft decelerates to stall warning and a speed of 65 KIAS is reached, the lateral and vertical flight director modes will change from active to armed and the autopilot will provide input causing the aircraft to pitch down and the wings to level.



The aural “AIRSPEED” alert will sound every five seconds.

If aircraft is unintentionally decelerated to 65 KIAS, a MINSPD annunciation posts above the airspeed tape on PFD in alternating amber and black text. A red “UNDERSPEED PROTECT ACTIVE” annunciation will appear to the right of the vertical speed indicator. USP will drive the pitch down until the indicated airspeed increases above 70 KIAS or stall warning turns off, plus two knots (whichever comes first).

When USP disengages, autopilot will cause the aircraft to pitch up until recapturing the vertical reference (vertical and lateral flight director modes will change from white armed to green active).



### 13.2.2 NON ALTITUDE CRITICAL MODES (VS, VNAV, IAS)

When the **airspeed trend vector** (dedicated algorithm) reaches 65 +/- 2 KIAS a single aural “AIRSPEED” will sound, alerting the pilot to the impending under-speed condition, which requires pilot action.

If the aircraft is allowed to decelerate to an IAS below the minimum commandable autopilot airspeed (65 Kts for P2010), a red “UNDERSPEED PROTECT ACTIVE” annunciation appear to the right of the vertical speed indicator.

Vertical flight director mode will change from active to armed, Flight Director and autopilot will command the aircraft to pitch down until reaching a pitch attitude at which IAS equals at least the minimum commandable autopilot airspeed, avoiding the development of a stall condition.



When airspeed increases (as a result of adding power/thrust) to an IAS above 70 KIAS, USP will then disengage and the autopilot will command the aircraft to pitch up until recapturing the vertical reference (vertical vertical flight director mode will switch from white armed to green active).

INTENTIONALLY LEFT BLANK

---

## **Section 9 – Supplements**

*Ed. 1, Rev.0*

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**



**Supplement D01: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

According to A/C configuration apply following pages replacement:

| <b>Supplement D01<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 2<br/>page</b> |
|------------------------------------------------|-----------------|-----------------------------------|
| 2A-15                                          | <b>REPLACES</b> | 2-15 of basic AFM, Section 2      |
| 2A-17 thru 20                                  | <b>REPLACES</b> | 2-17 of basic AFM, Section 2      |

INTENTIONALLY LEFT BLANK

---

## **Section 9 – Supplements**

*Ed. 1, Rev.0*

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

## 19 LIMITATIONS PLACARDS

Hereinafter limitation placards, related to the operating limitations, are placed in plain view on the pilot.

### 19.1 SPEED LIMITATIONS

On the left side instrument panel, above on the left, it is placed the following placard reporting the speed limitations:

Operating Manoeuvring speed  
 $V_o = 120 \text{ KIAS}$

### 19.2 OPERATING LIMITATIONS

On the central side of the instrument panel, the following placard is placed reminding the observance of aircraft operating limitations according to installed equipment configuration, see KOEL paragraph 18.

THIS A/C CAN BE OPERATED ONLY IN NORMAL CATEGORY  
 DAY-NIGHT-VFR-IFR (WITH REQUIRED EQUIPMENT) IN NON-ICING CONDITIONS.  
 NO AEROBATICS MANOEUVRES, INCLUDING SPINNING, APPROVED.  
 FOR OPERATIONAL LIMITATIONS REFER TO FLIGHT MANUAL

When the Autopilot is installed, next placard is added on the instrument panel to the right of the preceding one:

**OPERATING LIMITATIONS FOR P2010 GARMIN GFC700 AUTOPILOT**

- Pilot with seat belt fastened must be seated at the left pilot position during A/P Ops
- Do not use A/P during take-off and landing
- For RNAV/RNP departures, navigation and approaches pilot must confirm GPS, RAIM and SBAS system availability, in order to comply with appropriate minimum requirements.
- Min. alt. AGL for A/P Operations are:
  - Cruise and descent: 800 ft AGL
  - Climb after T/O and during non-precision approaches: 400 ft AGL
  - Cat.1 ILS Approaches only (200ft AGL)

### 19.3 No SMOKING PLACARD

On the right hand side of the instrument panel the following placard is placed reminding the observance for “no smoking”:

**NO SMOKING**

## 20 AUTOPILOT LIMITATIONS

**NOTE**

*The “Garmin G1000 Pilot’s Guide for the Tecnam P2010” (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version) must be carried in the aircraft and made available to the pilot at all time.*

Following operating limitations shall apply when the aircraft is equipped with Garmin GFC700 Autopilot:

- The Autopilot is certified for Category I – ILS Approaches [with a decision height not lower than 200 ft AGL (61 m)]
- During Autopilot operation, a pilot with seat belt fastened must be seated at the left pilot position
- Maximum speed for Autopilot operation is 150 KIAS
- Do not use autopilot for airspeed below 70 KIAS
- Minimum approach speed is 70 KIAS
- The autopilot must be OFF during takeoff and landing
- Minimum altitude AGL for Autopilot operation is:
  - b. Cruise and Descent: 800 ft (244 m) AGL
  - c. Climb after Take-off: 400 ft (122 m) AGL
  - d. ILS CAT I precision approach: 200 ft (61 m) AGL
- Use of the autopilot or manual electric trim system is prohibited before the satisfactory completion of the Pre-flight procedure.
- Autopilot USP function requires flaps indicators lights in the cockpit to be efficient for correct operation. If one flap indicator light gets inoperative during flight, USP function is not assured.

## **21 PBN (RNAV & RNP) OPERATIONAL ELIGIBILITY**

### **21.1 GENERAL GNSS NAVIGATION EQUIPMENT APPROVALS**

The GPS/GNSS receivers in the G1000 System are certified to TSO C129a Class A1 and ETSO C129a Class A1 or TSO C145a and ETSO 2C145a.

The Garmin GNSS navigation system as installed in this airplane complies with the requirements of AC 20-138A, JAA TGL-10 and AMCs 20-4A, 20-27A and 20-28.

It's approved for navigation using GPS and SBAS (within the coverage of a Satellite Based Augmentation System complying with ICAO Annex 10) for IFR en route, terminal area, precision and non-precision approach operations.

The G1000 System meets the requirements for GPS/GNSS as a Primary Means of Navigation for Oceanic/Remote Operations (RNP-10) per AC 20-138C, FAA Notice N8110.60, FAA Order 8400-12C and FAA Order 8700-1. Both GPS/GNSS receivers are required to be operating and receiving usable signals except for routes requiring only one Long Range Navigation sensor.

In accordance to ICAO doc 9613 (Fourth Edition – 2013), the G1000 System has been shown to be eligible for:

- B-RNAV (RNAV-5) per AMC 20-4A.
- RNAV1 / P-RNAV (RNP-1) Enroute and Terminal navigation per JAA TGL-10 Rev.1.
- RNP APCH LNAV/VNAV per EASA AMC 20-27. This does not include APV BARO-VNAV operation which is not cleared.
- LPV with SBAS per EASA AMC 20-28.

provided that the G1000 is receiving usable navigation information from at least one GPS receiver.

## **21.2 G1000 GNSS (GPS/SBAS) NAVIGATION SYSTEM LIMITATIONS**

The pilot must confirm at system initialization that the Navigation database is current. Navigation database is expected to be current for the duration of the flight.

If the AIRAC cycle will change during flight, the pilot must ensure the accuracy of navigation data, including suitability of navigation facilities used to define the routes and procedures for flight. If an amended chart affecting navigation data is published for the procedure, the database must not be used to conduct the procedure.

GPS/SBAS based IFR enroute, oceanic, and terminal navigation is prohibited unless the pilot verifies and uses a valid, compatible, and current Navigation database or verifies each waypoint for accuracy by reference to current approved data.

Discrepancies that invalidate a procedure must be reported to Garmin International. The affected procedure is prohibited from being flown using data from the Navigation database until a new Navigation database is installed in the airplane and verified that the discrepancy has been corrected.

Contact information to report Navigation database discrepancies can be found at [www.Garmin.com](http://www.Garmin.com)>Support>Contact Garmin Support>Aviation. Pilots and operators can view navigation data base alerts at [www.Garmin.com](http://www.Garmin.com) > In the Air> Nav-Data Alerts.

For flight planning purposes, in areas where SBAS coverage is not available, the pilot must check RAIM availability.

Within Europe, RAIM availability can be determined using the G1000 WFDE Prediction program or Europe's AUGER GPS RAIM Prediction Tool at <http://augur.ecacnav.com/augur/app/home>.

This requirement is not necessary if SBAS coverage is confirmed to be available along the entire route of flight.

The route planning and WFDE prediction program may be downloaded from the GARMIN G1000 website on the internet. For information on using the WFDE Prediction Program, refer to GARMIN WAAS FDE Prediction Program, part number 190-00643-01, 'WFDE Prediction Program instructions'.

For flight planning purposes for operations within European B-RNAV and P-RNAV airspace, if more than one satellite is scheduled to be out of service, then the availability of GPS integrity RAIM shall be confirmed for the intended flight (route and time).

In the event of a predicted continuous loss of RAIM of more than five minutes for any part of the intended flight, the flight should be delayed, cancelled, or re-routed on a track where RAIM requirements can be met.

Both GPS navigation receivers must be operating and providing GPS navigation guidance to the PFD for operations requiring RNP-4 performance.

Whenever possible, RNP and RNAV routes including Standard Instrument Departures (SIDs) and Obstacle Departure Procedures (ODPs), Standard Terminal Arrival (STAR), and enroute RNAV "Q" and RNAV "T" routes should be loaded into

## P2010 - Aircraft Flight Manual

---

the flight plan from the database in their entirety, rather than loading route waypoints from the database into the flight plan individually. Selecting and inserting individual named fixes from the database is permitted, provided all fixes along the published route to be flown are inserted. "GPS", "or GPS", and "RNAV (GPS)" instrument approaches using the G1000 System are prohibited unless the pilot verifies and uses the current Navigation database. GPS based instrument approaches must be flown in accordance with an approved instrument approach procedure that is loaded from the Navigation database.

Not all published Instrument Approach Procedures (IAP) are in the Navigation database.

Pilots planning on flying an RNAV instrument approach must ensure that the Navigation database contains the planned RNAV Instrument Approach Procedure and that approach procedure must be loaded from the Navigation database into the FMS flight plan by its name.

The navigation equipment required to join and fly an instrument approach procedure is indicated by the title of the procedure and notes on the IAP chart.

Use of the GARMIN G1000 GPS/SBAS receivers to provide navigation guidance during the final approach segment of an ILS, LOC, LOC-BC, LDA, SDF,MLS or any other type of approach not approved for "or GPS" navigation is prohibited. When using the G1000 VOR/LOC/GS receivers to fly the final approach segment, VOR/LOC/GS navigation data must be selected and presented on the CDI.

### **SID/STAR**

The use of SIDs and STARs stored in GPS data base is only authorized, if the pilot has checked that GPS procedure corresponds to the one given in the official documentation (coordinates of various points and paths between points).

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**



**Supplement D01: pages replacement instructions**

### **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

According to A/C configuration apply following pages replacement:

| <b>Supplement D01<br/>EMERGENCY PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section 3<br/>page</b>           |
|---------------------------------------------------------|-----------------|---------------------------------------------|
| 3A-31 thru 35                                           | <b>REPLACES</b> | *Added at the end of Section 3 of basic AFM |

### **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

## **12 AUTOPILOT EMERGENCY PROCEDURES**

**NOTE**

*In the event of autopilot malfunction, or when the system is not performing as expected or commanded, take immediately the aircraft control disconnecting the autopilot which must be set inoperative until the failure has been identified and corrected.*

### **12.1 AUTOPILOT HARDOVER OR FAILURE TO HOLD THE SELECTED HEADING**

In case of A/P hardover or failure to hold selected heading, apply following procedure:

**Accomplish items 1 and 2 simultaneously:**

- |                             |                                                                           |
|-----------------------------|---------------------------------------------------------------------------|
| 1. Airplane control wheel   | <i>GRASP FIRMLY and OVERPOWER if necessary to regain aircraft control</i> |
| 2. AP DISC/TRIM INTR switch | <i>PRESS</i>                                                              |
| 3. AP MASTER SWITCH         | <i>OFF</i>                                                                |
| 4. AP Circuit Breaker       | <i>PULL</i>                                                               |

**WARNING**

*Following an A/P or MET system malfunction, do not engage the autopilot until the cause of the malfunction has been corrected.*

**NOTE**

*When Autopilot is disconnected, it may be necessary operate the pitch trim through either the Manual Electric Trim Switch or the Trim Wheel.*

## 12.2 ALTITUDE LOST DURING A PITCH AXIS AUTOPILOT MALFUNCTION AND RECOVERY

Following table addresses the altitude lost during a pitch axis malfunction and recovery for each reported flight phase:

| Flight phase | Altitude loss |
|--------------|---------------|
| Climb        | 90 ft         |
| Cruise       | 200 ft        |
| Descent      | 170 ft        |
| Maneuvering  | 210 ft        |
| Approach     | 70 ft         |

## 12.3 ELECTRIC TRIM MALFUNCTION

In case of Electric Trim malfunction (either in AP Autotrim mode or when manually operated through the Manual Electric Trim Switch), apply following procedure:

- |                             |                       |
|-----------------------------|-----------------------|
| 1. AP DISC/TRIM INTR switch | <i>PRESS and HOLD</i> |
| 2. TRIM MASTER SWITCH       | <i>OFF</i>            |
| 3. TRIM Circuit Breaker     | <i>PULL</i>           |
| 4. AP DISC/TRIM INTR switch | <i>RELEASE</i>        |



**CAUTION**

*When Autopilot is disconnected because of a pitch trim malfunction, hold the control wheel firmly.*

**NOTE**

*When electric trim is disconnected, it is necessary operate the pitch trim through the Trim Wheel.*

**NOTE**

*When electric trim is disconnected, Autopilot system can be operated both in pitch and roll modes; nevertheless, when a pitch mode (ALT HOLD, VS, GS) is engaged, the Autopilot will provide an annunciation whenever it is necessary to manually trim the aircraft about the pitch axis using the Trim Wheel. Make reference to "Garmin G1000 Integrated Avionic System Pilot's Guide" for Tecnam P2010 (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version).*

---

## **12.4 AMPLIFIED EMERGENCY PROCEDURES**

The following observations provide additional information for more complete understanding of the recommended course(s) of action in emergency situations.

1. An autopilot or autotrim malfunction occurs when there is an uncommanded deviation in the airplane flight path or when there is abnormal control wheel or trim wheel motion. In some cases, (especially for autopilot trim), there may be little to no airplane motion, but the PITCH TRIM annunciator (LH side of PDF) may come on.
2. The primary concern in reacting to an autopilot or autopilot trim system malfunction, or to an automatic disconnect of the autopilot, is to keep control of the airplane. Immediately grasp the control wheel and push and hold the A/P DISC/TRIM INT switch throughout the recovery. Manipulate the controls as required to safely keep the airplane within all of its operating limitations. Elevator trim should be used manually as needed to relieve control forces.  
  
Switch the AP MASTER SWITCH to OFF and, when time is available after aircraft recovery, open (pull) the AUTOPILOT circuit breaker on the lower right hand corner of the circuit breaker panel to completely disable the autopilot system.
3. A MET (Manual Electric Trim) system malfunction (without pilot actuation of the manual electric trim switches) may be recognized by the PITCH TRIM annunciator coming on or by unusual trim wheel motions with the autopilot not engaged. As with an autopilot malfunction, the first concern following a manual electric trim system malfunction is to keep the airplane in control. Grasp the control wheel firmly and push and hold down the A/P DISC/TRIM INT switch. Switch the trim cut-out switch to OFF.

**12.5 ABNORMAL PROCEDURES**

This table is a quick access table that provide additional information regarding residual A/P capabilities in case loss of autopilot servos and/or pitch trim servo.

**NOTE**

*With A/P engaged, in case of loss of both A/P servos and pitch trim servo, the disconnect tone will play continuously, until acknowledged through A/P button on MFD or trim switch on control wheel.*

| LOSS OF A/P SERVO | LOSS OF PITCH TRIM SERVO | A/P STATUS | NOTES                                                                                                                                                                                                                               | A/P FUNCTIONALITY                                                                                                        | ESP STATUS |     | USP STATUS                                            |                            |
|-------------------|--------------------------|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|------------|-----|-------------------------------------------------------|----------------------------|
|                   |                          |            |                                                                                                                                                                                                                                     |                                                                                                                          | ON         | OFF | ON                                                    | OFF                        |
| X                 | X                        | DISENGAGED | <u>MEPT Unavailable</u><br>PTRM red on PFD<br>NO VERT MODES on PFD                                                                                                                                                                  | A/P can be engaged, but only lateral modes will be correctly flown (lack of pitch trim).<br>FD is operative in all modes | X          |     | X<br>(can't hold 65 kts without pitch trim available) |                            |
|                   |                          |            | <u>A/P disconnect</u><br>PTCH red annunciation on PFD<br>NO VERT MODES on PFD                                                                                                                                                       | A/P can't be engaged<br>FD is operative in all modes                                                                     |            | X   |                                                       | X<br>(only MINSPD warning) |
|                   |                          |            | ESP Fail on alert window<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page<br><u>A/P disconnect &amp; MEPT Unavailable</u>                                                                                | A/P can't be engaged<br>FD is operative in all modes                                                                     |            | X   |                                                       | X<br>(only MINSPD warning) |
|                   | X                        |            | <u>MEPT Unavailable</u><br>PTRM red annunciation on PFD<br>NO VERT MODES on PFD                                                                                                                                                     | A/P fully operative<br>FD is operative in all modes                                                                      | X          |     | X<br>(can't hold 65 kts without pitch trim available) |                            |
| X                 |                          | ENGAGED    | <u>A/P disconnect</u><br>PTCH red annunciation on PFD<br>NO VERT MODES on PFD                                                                                                                                                       | A/P disconnects and can't be engaged<br>FD is operative in all modes                                                     |            | X   |                                                       | X<br>(only MINSPD warning) |
|                   |                          |            | ESP Fail on window alert<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page<br><u>A/P continuous disconnect tone can be silenced through the AP button on MFD and by the trim switch on control wheel.</u> | A/P disconnects and can't be engaged<br>FD is operative in all modes                                                     |            | X   |                                                       | X<br>(only MINSPD warning) |
|                   |                          |            | <u>A/P disconnect &amp; MEPT Unavailable</u><br>AFCS red annunciation on PFD (1")                                                                                                                                                   |                                                                                                                          |            |     |                                                       |                            |
|                   | X                        |            | ESP Fail on alert window<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page<br>PTRM C&M red cross on MFD SYS page                                                                                          |                                                                                                                          |            |     |                                                       |                            |

This table is a quick access table that provide additional information regarding residual A/P capabilities in case of loss of PFD or MFD.

| <b>PFD</b> | <b>MFD</b> | <b>NOTES</b>                                                                                                                                                                                                  |
|------------|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ON → OFF   | ON         | A/P reverts to PIT & ROLL (from any mode selected)<br>No aural from A/P (both A/P DISC & USP)                                                                                                                 |
| ON         | ON → OFF   | A/P stays in the selected mode<br>A/P control keyboard unavailable<br>A/P can be disconnected with A/P DISC button on control wheel<br>FD command bars cannot be eliminated<br>ESP Off on alert window on PFD |
| ON → OFF   | ON → OFF   | A/P automatically disconnects after ~ 4 to 5 seconds<br>A/P disconnection tone plays endlessly until A/P DISC button is pressed                                                                               |

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**



**Supplement D01: pages replacement instructions**

## **SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures**

According to A/C configuration apply following pages replacement:

| <b>Supplement D01<br/>NORMAL PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section 4<br/>page</b>           |
|------------------------------------------------------|-----------------|---------------------------------------------|
| 4A-27 thru 38                                        | <b>REPLACES</b> | *Added at the end of Section 4 of basic AFM |

---

## **Section 9 – Supplements**

*Ed. 1, Rev.0*

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

INTENTIONALLY LEFT BLANK

---

## **Section 9 – Supplements**

*Ed. 1, Rev.0*

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

## 6 AUTOPILOT NORMAL PROCEDURES

**NOTE**

*For detailed description of A/P selections, behaviour and display outlook, refer to the “Garmin G1000 Pilot’s Guide for the Tecnam P2010” (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version); it must be always carried in the aircraft and made available to the pilot at all time.*

**NOTE**

*If A/P Master switch and /or Trim disconnect switch are inadvertently switched OFF, it will be necessary to reset both switches to allow A/P and pitch trim functionality. In this case pilot will make sure A/P is disengaged before reset. The single reset of only one of the switches will not permit to reset the single functionality.*

### PREFLIGHT:

#### AIRCRAFT PRE-FLIGHT CHECKS:

- 1) MASTER SWITCH (BAT): ON.
- 2) AVIONICS MASTER SWITCH: ON.
- 3) AUTOPILOT MASTER SWITCH: ON.
- 4) POWER APPLICATION and SELFTEST - The autopilot tests itself when power is first made available. The test is a sequence of internal checks before starting normal system operation. The test sequence is shown on PFD left upper corner by the red AFCS label followed by the white PFT label, ending with double AP disengagement tone (which indicates a successful completion).

Autopilot system availability is shown under system page on MFD.

**WARNING**

If the red AFCS stays ON, the A/P has failed the preflight test. Put the A/P MASTER SWITCH OFF to make sure that the A/P will not operate.

- 5) MANUAL ELECTRIC TRIM (MET) SYSTEM - TEST.

Pitch Trim: cycle fully up and down, then set to NEUTRAL.

**NOTE**

*Both pitch trim halves must be actuated to move pitch trim. Any movement of the elevator trim wheel during the check of either the LH or RH Switch only means that the Manual Electric Trim System has failed.*

- 6) ELEVATOR TRIM WHEEL - SET pointer to takeoff position.
- 7) AVIONICS MASTER SWITCH: OFF
- 8) MASTER SWITCH (BAT): OFF

## 7 AUTOPILOT MODES

**WARNING****NOTE**

*When the A/P is engaged, the pilot must continuously monitor and be ready to disengage the A/P. Do the Emergency Recovery procedure if A/P operation is erratic or does not correctly control the airplane.*

*The “Garmin G1000 Pilot’s Guide for the Tecnam P2010” (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version) must be carried in the aircraft and made available to the pilot at all time.*

**NOTE**

*Autopilot tracking performance will not be as good as usual in turbulence.*

**NOTE**

*Autopilot engagement / disengagement is not equivalent to servo engagement/disengagement. Use the CWS Button to disengage the pitch and roll while the autopilot remains active.*

### HDG

**NOTE**

*Pressing the HDG knob synchronizes the Selected Heading to the current heading.*

*In this case expect a small heading overshoot that will be subsequently corrected.*

### VS MODE

**WARNING**

*Selection of a vertical speed beyond the capability of the aircraft can create a condition of reduced airspeed, and possibly lead to USP activation.*

*During A/P operation, pilot must set the A/P Vs rate and engine power to make sure that airspeed remains within autopilot envelope and does not exceed any other airplane operating limitation.*

**WARNING**

*VS is an open mode, which will engage irrespective of Selected Altitude. Pilot monitoring is always required to make sure that a correct Selected Altitude is shown on PFD.*

### SELECTED ALTITUDE CAPTURE MODE (ALTS)

**NOTE**

*Pressing the CWS Button while in Selected Altitude Capture Mode does not cancel the mode.*

**ALTITUDE HOLD MODE (ALT)****NOTE**

Turning the ALT knob while in Altitude Hold Mode changes the Selected Altitude, but not the FD Altitude Reference, and does not cancel the mode.

**FLC MODE****CAUTION**

The Selected Altitude **MUST** be set before selecting Flight Level Change Mode. FLC IAS selection is directly linked to actual IAS, pilot will need to monitor airspeed after selection of FLC mode.

**VERTICAL NAVIGATION MODES (VPTH, ALTV)****NOTE**

VNV is disabled when parallel or dead reckoning mode is active.

**NOTE**

The selected altitude takes precedence over any other vertical constraints.

**NOTE**

If another pitch mode key is pressed while Vertical Path Tracking Mode is selected, VPTH mode reverts to armed.

If the selected altitude is not at least 75 ft below the VNV Target Altitude, the FD captures the Selected Altitude once Vertical Path Tracking Mode become active (ALTS is armed rather than ALTV).

**NOTE**

Altitude preselect must show an altitude **below** the flight plan's Target Altitude.

If the selected altitude is not at least 75 ft below the VNV Target Altitude, the FD captures the Selected Altitude once Vertical Path Tracking Mode become active (ALTS is armed rather than ALTV).

**NOTE**

If VPTH is armed more than 5 minutes prior to descent path capture, acknowledgement is required for the FD to transition from Altitude Hold to VPTH.

To proceed with descent path capture if the white "VPTH" flashes, do the following:

- Press VNV Key
- Turn ALT knob to adjust the Selected Altitude.

If the selected altitude is not at least 75 ft below the VNV Target Altitude, the FD captures the Selected Altitude once Vertical Path Tracking Mode become active (ALTS is armed rather than ALTV).

**NOTE**

Armed VNV Target Altitude and Selected Altitude capture modes are mutually exclusive. Selected Altitude Capture Mode is armed also (not annunciated) whenever VNV Target Altitude Capture Mode is armed.

**APPROACH MODES****NOTE**

The selected navigation receiver must have a valid VOR or LOC signal or active GPS course for the flight director to enter Approach Mode.

## 8 AUTOPILOT ABNORMAL PROCEDURES

### Loss of a single GPS:

In case of loss of a single GPS, RNAV guidance will still be available as the system will automatically revert to the other available GPS without losing any autopilot / FD guidance.

The ALERT window will switch to ADVSY and start to flash; when selected a “*AHRS1 GPS – AHRS1 using backup GPS source*” CAS message will appear inside the alert window.

### Loss of both GPS:

In case of loss of both GPS, RNAV guidance will not be available anymore.

The ALERT window will switch to ADVSY and start to flash; when selected a “*GPS NAV LOST – Loss of GPS navigation. Insufficient satellites*” CAS message will appear inside the alert window. In this case also ESP will be lost and the “*ESP OFF*” CAS message will also appear inside the alert window.

Further to that, a yellow “LOI” (loss of integrity) CAS message will be displayed on the HIS and all other GPS related information (e.g. wind) will turn to yellow.

If GPS nava mode is being selected, the HSI on the PFD will not display the deviation bar. If GPS is selected as navigation source a “*AHRS1 GPS – AHRS1 operating exclusively in no-GPS mode*” CAS message will appear inside the alert window.

#### **NOTE**

*Dead Reckoning Mode only functions in Enroute (ENR) or Oceanic (OCN) phase of flight. In all other phases, an invalid GPS solution produces a “NO GPS POSITION” annunciation on the map and the G1000 stops using GPS.*

It is important to note that estimated navigation data supplied by the G1000 in DR Mode may become increasingly unreliable and must not be used as a sole means of navigation. If while in DR Mode airspeed and/or heading data is also lost or not available, the DR function may not be capable of accurately tracking estimated position and, consequently, the system may display a path that is different than the actual movement of the aircraft. Estimated position information displayed by the G1000 through DR while there is no heading and/or airspeed data available shall not be used for navigation.

DR Mode is inherently less accurate than the standard GPS/SBAS Mode due to the lack of satellite measurements needed to determine a position.

**NOTE**

*Changes in wind speed and/or wind direction compound the relative inaccuracy of DR Mode. Because of this degraded accuracy, other navigation equipment must be relied upon for position awareness until GPS-derived position data is restored.*

DR Mode is indicated on the G1000 by the appearance of the letters 'DR' superimposed in yellow over the 'own aircraft' symbol.

In addition, 'DR' is prominently displayed in yellow on the HSI slightly above and to the right of the aircraft symbol on the CDI. Also, the CDI deviation bar is removed from the display. Lastly, but at the same time, a 'GPS NAV LOST' alert message appears on the PFD.

Normal navigation using GPS/SBAS source data resumes automatically once a valid GPS solution is restored. As a result of operating in DR Mode, all GPS-derived data is computed based upon an estimated position and is displayed as yellow text on the display to denote degraded navigation source information.

Also, while the G1000 is in DR Mode, some terrain functions are not available. Additionally, the accuracy of all nearest information (airports, airspaces, and waypoints) is questionable. Finally, airspace alerts continue to function, but with degraded accuracy.

**RAIM AVAILABILITY:**

Because of tighter protection limit on approaches, there may be times when RAIM is not available. The G1000 automatically monitors RAIM and warns with an alert message when it is not available. If RAIM is not predicted to be available for the final approach course, the approach does not become active, as indicated by the message "Approach is not active".

If RAIM is not available when crossing the FAF, the missed approach procedure must be flown.

## 9 ADDITIONAL GUIDANCE FOR RNAV GPS

Experience of RNAV systems, and Flight FMS in general, has identified the pitfalls of waypoint entry error at the receiver as well as inaccuracies and errors in the database itself.

Research and experience have both shown that human error, often the result of a lack of familiarity with the airborne equipment, represents the major hazard in operations using RNAV systems. Therefore, it is imperative that pilots understand their system thoroughly and are able to determine whether it is safe to proceed.

This requires robust procedures, which check for possible errors in the computer database, monitor continued performance of the RNAV systems and enable pilots to identify and avoid not only their own mistakes but also errors in the information presented to them.

Flight planning on RNAV routes should include the following recommendation.

- During the pre-flight planning phase, given a GPS constellation of 23 satellites or less (22 or less for GPS stand-alone equipment that incorporate pressure altitude aiding), the availability of GPS integrity (RAIM) should be confirmed for the intended flight (route and time). This should be obtained from a prediction program either ground-based, or provided as an equipment function, or from an alternative method acceptable to the Authority;
- Where a navigation data base is installed, the data base validity (current AIRAC cycle) should be checked before flight;
- Traditional navigation equipment (e.g. VOR, DME and ADF) should be selected to available aids so as to allow immediate cross-checking or reversion in the event of loss of GPS navigation capability.

### (a) Pre-flight Planning

During the pre-flight planning phase, the availability of the navigation infrastructure, required for the intended operation, including any non-RNAV contingencies, must be confirmed for the period of intended operation. Availability of the onboard navigation equipment necessary for the route to be flown must be confirmed. The onboard navigation database must be appropriate for the region of intended operation and must include the navigation aids, waypoints, and coded terminal airspace procedures for the departure, arrival and alternate airfields.

Where the responsible airspace authority has specified in the AIP that dual P-RNAV systems are required for specific terminal P-RNAV procedure, the availability of dual P-RNAV systems must be confirmed. This typically will apply where procedures are effective below the applicable minimum obstacle clearance altitude or where radar coverage is inadequate for the purposes of supporting P-RNAV. This will also take into account the particular hazards of a terminal area and the feasibility of contingency procedures following loss of P-RNAV capability.

RAIM availability must be confirmed with account taken of the latest information.



**(b) Departure**

At system initialisation, the flight crew must confirm that the navigation database is current and verify that the aircraft position has been entered correctly. The active flight plan should be checked by comparing the charts, SID or other applicable documents, with the map display. This includes confirmation of the waypoint sequence, reasonableness of track angles and distances, any altitude or speed constraints, and, where possible, which waypoints are fly-by and which are fly-over. If required by a procedure, a check will need to be made to confirm that updating will use a specific navigation aid(s), or to confirm exclusion of a specific navigation aid. A procedure shall not be used if doubt exists as to the validity of the procedure in the navigation database.

**The creation of new waypoints by manual entry into the RNAV system by the flight crew is not permitted as it would invalidate the affected P-RNAV procedure.**

Route modifications in the terminal area may take the form of radar headings or 'direct to' clearances and the flight crew must be capable of reacting in a timely fashion. This may include the insertion in the flight plan of waypoints loaded from the database.

During the procedure and where feasible, flight progress should be monitored for navigational reasonableness, by cross-checks, with conventional navigation aids using the primary display.

**(c) Arrival**

Prior to the arrival phase, the flight crew should verify that the correct terminal procedure has been loaded. The active flight plan should be checked by comparing the charts with the map display. This includes confirmation of the waypoint sequence, reasonableness of track angles and distances, any altitude or speed constraints, and, where possible, which waypoints are fly-by and which are fly-over. If required by a procedure, a check will need to be made to confirm that updating will exclude a particular navigation aid. A procedure shall not be used if doubt exists as to the validity of the procedure in the navigation database.

Note: as a minimum, the arrival checks could be a simple inspection of a suitable map display that achieves the objectives of this paragraph.

**The creation of new waypoints by manual entry into the RNAV system by the flight crew would invalidate the P-RNAV procedure and is not permitted.**

Where the contingency to revert to a conventional arrival procedure is required, the flight crew must make the necessary preparation.

During the procedure and where feasible, flight progress should be monitored for navigational reasonableness by cross-checks with conventional navigation aids using the primary display.

Route modifications in the terminal area may take the form of radar headings or 'direct to' clearances and the flight crew must be capable of reacting in a timely fashion.

Although a particular method is not mandated, any published altitude and speed constraints must be observed.

In the event that either the GPS or the EGNOS signal is not available at the destination, by the nature of the system, and its susceptibility to interference, there exists the possibility that it will also be unavailable over a wide area. Therefore it is probable that the signal will also be unavailable at a nearby diversion aerodrome.

Notwithstanding any normal operational requirements for the identification of an alternate aerodrome, where a RNAV approach is to be flown in conditions where a visual approach will not be possible; pilots should always ensure that either:

- 1) A different type of approach system is available at the destination, not dependent on GPS data and for which the weather is forecast to be suitable to enable a landing to be made from that approach, or;
- 2) There is at least one alternate destination within range, where a different type of approach system is available, which is not dependent on GPS data and for which the weather is forecast to be suitable to enable a landing to be made from that approach.

### 9.1 APPROACH APPLICATIONS

**NOTE**

*When GPS is not approved for the selected final approach course, the message "NOT APPROVED FOR GPS" is displayed. GPS provides guidance for the approach, but the HIS must be switched to a NAV receiver to fly the final course of the approach.*

**NOTE**

*If certain GPS parameters (SBAS, RAIM, etc.) are not available, some published approach procedures for the desired airport may not be displayed in the list of available approaches.*

An Approach Procedure (APPR) can be loaded at any airport that has one available, and provides guidance for non-precision and precision approaches to airports with published instrument approach procedures.

**NOTE**

*Only one approach can be loaded at a time in a flight plan. If an approach is loaded when another approach is already in the active flight plan, the new approach replaces the previous approach. The route is defined by selection of an approach and the transition waypoints.*

Whenever an approach is selected, the choice to either “load” or “activate” is given. “Loading” adds the approach to the end of the flight plan without immediately using it for navigation guidance. This allows continued navigation via the intermediate waypoints in the original flight plan, but keeps the procedure available on the Active Flight Plan Page for quick activation when needed. “Activating” also adds the procedure to the end of the flight plan but immediately begins to provide guidance to the first waypoint in the approach.

When selecting an approach, a “GPS” designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. Some procedures do not have this designation, meaning the GPS receiver can be used for supplemental navigation guidance only.

**NOTE**

*If the GPS receiver cannot be used for primary guidance, the appropriate navigation receiver must be used for the selected approach (e.g., VOR or ILS). The final course segment of ILS approaches, for example, must be flown by tuning the NAV receiver to the proper frequency and selecting that NAV receiver on the CDI.*

The G1000 SBAS GPS allows for flying LNAV, LP, LP+V and LPV approach service levels according to the published chart. The ‘+V’ designation adds advisory vertical guidance for assistance in maintaining a constant vertical glidepath similar to an ILS glideslope on approach. This guidance is displayed on the system PFD in the same location as the ILS glideslope using a magenta diamond. A sample of how the active approach service level is annunciated on the HSI is shown in the following table:

| HSI Annunciation                           | Description                                                                                                                    | Example on HSI                                                                                                                                      |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| LNAV                                       | RNAV GPS approach using published LNAV minima                                                                                  |  <p><b>Approach Service Level</b><br/>- LNAV, LP, LP+V, LPV</p> |
| LP<br>(available only if SBAS available)   | RNAV GPS approach using published LP minima (downgrades to LNAV if SBAS unavailable)                                           |                                                                                                                                                     |
| LP+V<br>(available only if SBAS available) | RNAV GPS approach using published LP minima<br>Advisory vertical guidance is provided (downgrades to LNAV if SBAS unavailable) |                                                                                                                                                     |
| LPV<br>(available only if SBAS available)  | RNAV GPS approach using published LPV minima                                                                                   |                                                                                                                                                     |

Before reaching the IAF, the flight crew should verify that the correct procedure has been loaded into the receiver's route or flight plan. A comparison with the approach chart should be made including the following:

- a) The waypoint sequence.
- b) Reasonableness of the tracks and distances of the approach legs, accuracy of the inbound course and mileage of the FAS.
- c) Verify from the charts, map display or CDU, which waypoints are fly-by and which are fly-over.
- d) Check any map display to ensure the track lines actually 'fly-over' or 'fly-by' the respective waypoints in the procedure.

By the time the aircraft reaches the IAF the pilot should have completed the above and been cleared for the approach. Also, the approach must have been activated in the receiver at least by this time.

Approach Applications which are classified as RNP Approach (APCH) in accordance with ICAO Doc 9613 Performance Based Navigation (PBN) Manual (and ICAO state Letter SP65/4-10/53) give access to minima (on an instrument approach procedure) designated as:

#### **LNAV (Lateral Navigation)**

This is a Non-Precision or 2D Approach with Lateral only navigation guidance provided by GNSS and an Aircraft Based Augmentation System (ABAS). Receiver Autonomous Integrity Monitoring (RAIM) is a form of ABAS. Lateral guidance is linear with accuracy to within +/- 0.3 NM parallel to either side of the final approach track.

#### **LP (Localiser Performance)**

This is a Non-Precision or 2D Approach with Lateral only navigation guidance provided by GNSS and SBAS. The EGNOS is a form of SBAS in Europe. The lateral guidance is angular with increasing sensitivity as the aircraft continues along the final approach track; much like a localiser indication.

#### **LPV (Localiser Performance with Vertical Guidance)**

This is an Approach Procedure with Vertical Guidance. The Lateral and Vertical guidance is provided by GPS and SBAS. Lateral and vertical guidance are angular with increasing sensitivity as the aircraft progresses down the final approach track; much like an ILS indication. LPV approach and annunciation on HSI is available only if SBAS is available.



**CAUTION**

*Before selecting a LPV approach, make sure SBAS is indicated ACTIVE in the GPS status box on AUX-GPS STATUS page on MFD. If DISABLED highlight the appropriate SBAS SELECTION Box under SBAS softkey under AUX-GPS Status Page on MFD.*

**NOTE**

*Should SBAS signal be lost, augmentation is lost. It may be possible to continue with LNAV only but this is reliant on the availability of RAIM.*

**NOTE:** The instrument approach procedures associated with RNP APCH are entitled RNAV (GNSS) to reflect that GNSS is the primary navigation system. With the inherent onboard performance monitoring and alerting provided by GNSS, the navigation specification qualifies as RNP, however these procedures pre-date PBN, so the chart name has remained as RNAV.

#### **Missed approach procedures**

Before commencing an RNAV (GNSS) missed approach, a MAP should be possible without reference to GPS derived navigation so that, in the event of a loss of GPS accuracy or loss of integrity during the approach, a safe return to above Minimum Sector Altitude can be made.

This may be possible by dead reckoning (DR) navigation but where this is not possible and the MAP requires reference to terrestrial navigation aids, these must be available, tuned and correctly identified before passing the IAF and remain available throughout the approach.

Reasons for a missed approach are many and if GPS information remains available for the MAP, the pilot must be able to sequence the system correctly past the MAP, in order to follow the published MAP correctly.

Pilots should be fully competent in the necessary selection routines required by their own equipment, in order to transition to the MAP and preserve accurate navigation throughout.

When GPS navigation is NOT available for the MAP, it may be necessary to reset the display function of the HSI/CDI to disengage GPS information and regain VOR/LOC display. Pilots must be fully conversant with navigation display selections in order safely to follow the MAP.

#### **Abnormal procedures for approaches**

As the aircraft approaches the FAF (LNAV Only, without SBAS), the receiver automatically perform a final RAIM prediction for the approach. The receiver will not enter the approach mode if this RAIM prediction is negative. In this case, the approach should be discontinued.

However, this RAIM check assumes availability of the full constellation and will not take account of scheduled interruptions or failures. This can lead to a successful RAIM prediction at this point when the RAIM function itself is not available.

If RAIM is lost after passing the FAF the equipment should continue to provide navigation, where possible for five minutes, before giving a RAIM loss indication and this should be enough to complete the approach.

Should RAIM detect an out of tolerance situation, a warning will be given and a missed approach should be initiated immediately.

The approach should always be discontinued:

- If the receiver fails to engage the correct approach mode or;
- In case of Loss Of Integrity (LOI) monitoring or;
- Whenever the HSI/CDI indication (or GP indication where applicable) exceeds half scale displacement or;
- If a RAIM (or equivalent) warning is activated or;
- If RAIM (or equivalent) function is not available and annunciated before passing the FAF.

Supplement D01: pages replacement instructions

## **SECTION 5 – PERFORMANCE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 5 Performance**

According to A/C configuration refer to the basic AFM, Section 5 – Performance

INTENTIONALLY LEFT BLANK

---

## **Section 9 – Supplements**

*Ed. 1, Rev.0*

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**



Supplement D01: pages replacement instructions

## **SECTION 6 – WEIGHT AND BALANCE**

Refer to the basic AFM, Section 6 Weight and Balance

INTENTIONALLY LEFT BLANK

**Supplement D01: pages replacement instructions**

## **SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**

**Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems Description**

According to A/C configuration apply following pages replacement:

| <b>Supplement D01<br/>AIRFRAME AND SYSTEMS DESCRIPTION<br/>page</b> |                 | <b>AFM<br/>Section 7<br/>page</b>       |
|---------------------------------------------------------------------|-----------------|-----------------------------------------|
| 7A-8 thru 9                                                         | <b>REPLACES</b> | 7-8 thru 9 of basic AFM,<br>Section 7   |
| 7A-20 thru 21                                                       | <b>REPLACES</b> | 7-20 thru 21 of basic AFM,<br>Section 7 |
| 7A-27                                                               | <b>REPLACES</b> | 7-27 of basic AFM, Section 7            |
| 7A-33                                                               | <b>REPLACES</b> | 7-33 of basic AFM, Section 7            |

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

### **3 FLIGHT CONTROLS**

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

The control of the stabilator trim is operated by means of both a control wheel, located between the two front seats that acts directly on the control cables, and an electrical actuator controlled by a switch located on the control wheel; stabilator trim position is displayed on a dedicated analogue indicator located on the LH area of the instrument panel.

Rudder Trimming device for lateral control is provided by means of an electrical actuator controlled by a rocker switch located near the pitch trim wheel; the surface is connected to a potentiometer linked to a rudder trim indicator included in the Garmin G1000 EIS (Engine Indication System).

## 4 INSTRUMENT PANEL

The instrument panel is divided in three areas:

- The left area holds Garmin G1000 PFD, a chronometer and the pitch trim indicator;
- The Central area holds the standby unit for PFI parameters, MD 302 suite, and the ELT button.
- The right area holds Garmin G1000 MFD with dedicated AP control buttons and breaker panel;
- The lower-LH portion of the instrument panel holds:
  - Ignition key;
  - Master and Generator switches;
  - Emergency fuel pump;
  - Avionic Master switch;
  - AP Master switch
  - Trim Disconnect switch
- The lower-Central portion of the instrument panel holds:
  - Fuel selector valve.
  - Flap Control
- The lower-RH portion of the instrument panel holds:
  - Pocket



Fig. 7-8. INSTRUMENT PANEL

## 9 ELECTRICAL SYSTEM

Primary DC power is provided by an external alternator with a 28 VDC output, rated of 70 Amps @ 2700 rpm. During normal operations, it recharges the battery.

Secondary DC power is provided by a lead type battery (GILL G-247) which provides the energy necessary for feeding the essential electrical loads in the event of an alternator failure.

The switch between the energy sources is automatic and no action is required in order to activate the alternate energy source.

For ground maintenance and/or starting, an external power socket is provided.

The alternator and battery are connected to the battery bus in order to provide energy for the electric equipment.

Each electrically fed instrument is connected to a dedicated circuit breaker which protects the cable from the battery bus to the associated electric equipment.



**WARNING**

*If the Ignition is in the position L, R, or BOTH, an accidental movement of the propeller may start the engine with possible danger for bystanders.*

In the following figure is presented the electrical system architecture.

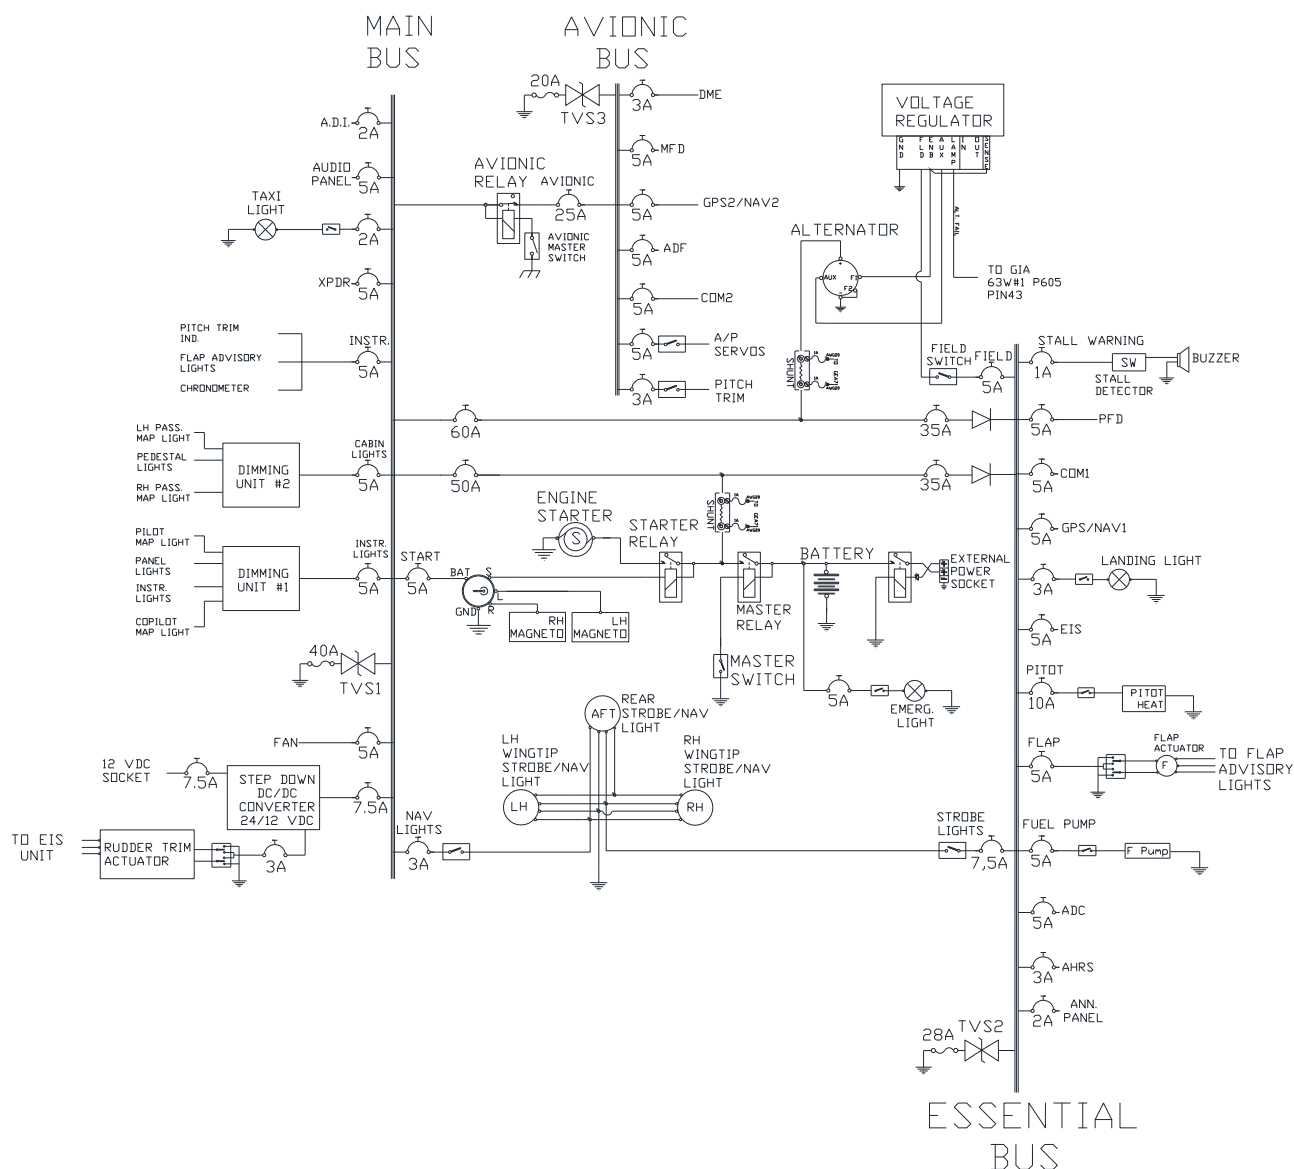


FIG.7-15. ELECTRICAL SYSTEM ARCHITECTURE

### 12.3 STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.



## 11.2 INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

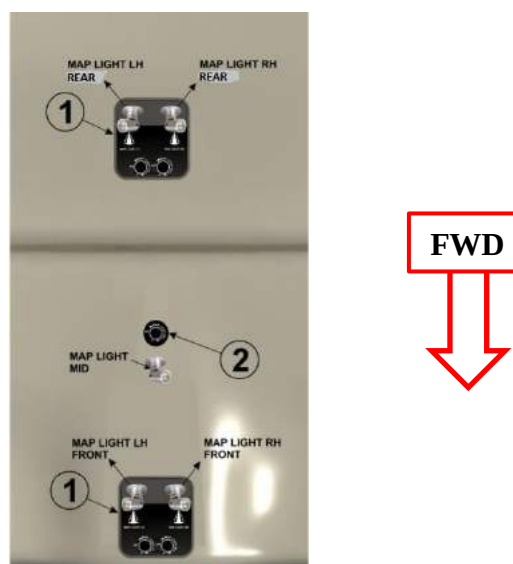



FIG.7-18. CABIN CEILING LIGHTS LAYOUT

The instrument panel can be illuminated by 8 incandescence light strips, all dimmable.




FIG.7-19. INSTRUMENT PANEL LIGHTS LAYOUT

ELT unit position placard:

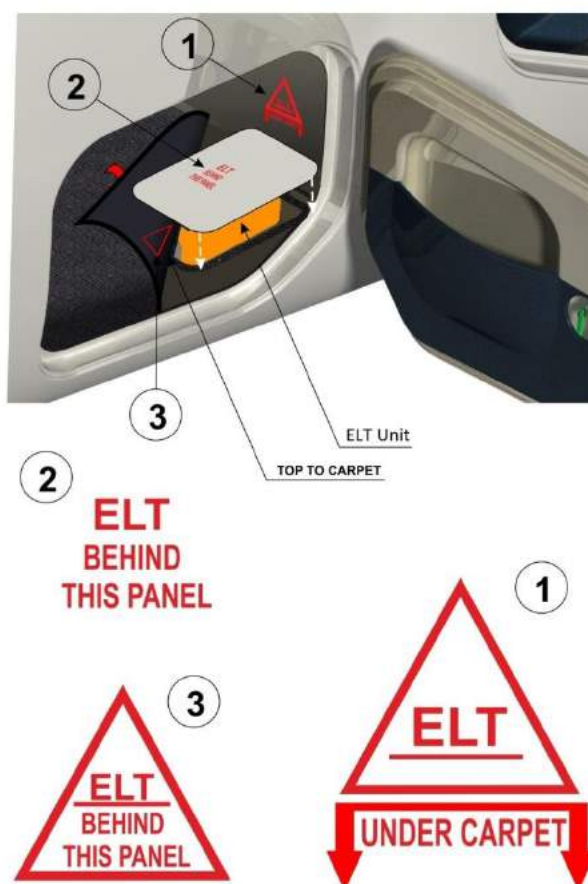

Breaker Panel placards:

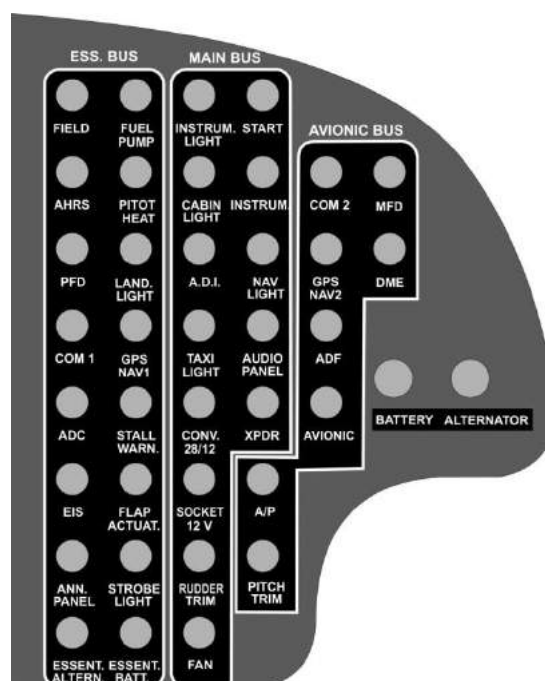



Supplement D01: pages replacement instructions

## **SECTION 8 – GROUND HANDLING & SERVICE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 8 Ground Handling & Service**

According to A/C configuration refer to the basic AFM, Section 8 – Ground Handling  
& Service

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

INTENTIONALLY LEFT BLANK

## **Section 9 – Supplements**

**Supplement no. D01 – GARMIN GFC700 AUTOPILOT INSTALLATION AND RNAV/RNP  
NAVIGATION ELIGIBILITY**

## SUPPLEMENT NO. D02

### AFMS FOR VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES

#### Record of Revisions

| Rev | Revised page  | Description of Revision                                                                                           | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                      |
|-----|---------------|-------------------------------------------------------------------------------------------------------------------|-----------------|-----------|----------|----------------------------------------------------------------------------|
|     |               |                                                                                                                   | DO              | OoA       | HDO      |                                                                            |
| 0   | –             | New Edition                                                                                                       | D. Ronca        | M. Oliva  | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/067.151030) |
| 1   | V2-6,7,10,11  | Amended to add the wording “Approved” in order to better identify the pages approved according to EASA regulation | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/070.160118) |
| 2   | V5-13 thru 16 | Amended cruise performance to add fuel consumption for different power setting                                    | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/103.161026) |
| 3   | V3-4          | Reference airspeeds table added.                                                                                  | F. Auricchio    | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/131.180403) |

#### List of Effective Pages

| Page        | Page           | Revision |
|-------------|----------------|----------|
| Cover Pages | D02-2 thru 8   | Rev 0    |
|             | D02-10 thru 18 | Rev 0    |
|             | D02-1, 9       | Rev 3    |
| Section 1   | V1-6           | Rev 1    |
| Section 2   | V2-7           | Rev 1    |
|             | V2-9, 10       | Rev 1    |
| Section 3   | V3-4           | Rev 3    |
|             | V3-14          | Rev 0    |
|             | V3-18 thru 19  | Rev 0    |
| Section 4   | V4-7           | Rev 0    |
|             | V4-15          | Rev 0    |
|             | V4-19 thru 26  | Rev 0    |
| Section 5   | V5-1 thru 12   | Rev 0    |
|             | V5-13 thru 16  | Rev 2    |
|             | V5-17 thru 19  | Rev 0    |
| Section 7   | V7-10 thru 11  | Rev 0    |
|             | V7-16          | Rev 0    |
|             | V7-27          | Rev 0    |
|             | V7-36          | Rev 0    |

## **INTRODUCTION**

The information contained herein supplements or supersedes the basic Aircraft Flight Manual: detailed instructions are provided to allow the owner for replacing the AFM pages containing information amended as per MT variable pitch propeller in subject.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

**Supplement D02: pages replacement instructions**

### **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

Apply following pages replacement:

| <b>Supplement D02 –<br/>GENERAL page</b> |                 | <b>AFM<br/>Section 1 page</b> |
|------------------------------------------|-----------------|-------------------------------|
| 1-6                                      | <b>REPLACES</b> | Page 1-6 of AFM, Section 1    |



INTENTIONALLY LEFT BLANK

**5. ENGINE**

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Manufacturer .....             | Lycoming Engines                                                                                            |
| Model .....                    | IO-360-M1A                                                                                                  |
| Type Certificate .....         | EASA TCDS no. IM.E.032                                                                                      |
| Engine type .....              | Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets. |
| Maximum power .....            | 134.0 kW (180hp) @ 2700 rpm                                                                                 |
| Maximum continuous power ..... | 129.2 kW (173.3hp) @ 2600 rpm                                                                               |

**6. PROPELLER**

|                        |                                             |
|------------------------|---------------------------------------------|
| Manufacturer .....     | MT Propeller                                |
| Model .....            | MTV-15-B/193-52                             |
| Type Certificate ..... | EASA TCDS no. P.098                         |
| Blades/hub .....       | wood/composite 2-blades – aluminum hub      |
| Diameter .....         | 1930 mm (76 in) (no reduction is permitted) |
| Type .....             | Variable pitch                              |

**Governor**

|                    |              |
|--------------------|--------------|
| Manufacturer ..... | MT Propeller |
| Model .....        | P-860-23:    |
| Type .....         | Hydraulic    |

INTENTIONALLY LEFT BLANK

**Supplement D02: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

Apply following pages replacement:

| <b>Supplement D02 –<br/>LIMITATIONS page</b> |                 | <b>AFM<br/>Section 2 page</b> |
|----------------------------------------------|-----------------|-------------------------------|
| V2-7                                         | <b>REPLACES</b> | Page 2-7 of AFM, Section 2    |
| V2-9                                         | <b>REPLACES</b> | Page 2-9 of AFM, Section 2    |
| V2-10                                        | <b>REPLACES</b> | Page 2-10 of AFM, Section 2   |

INTENTIONALLY LEFT BLANK

#### 4. POWERPLANT LIMITATIONS

Following table reports the operating limitations the installed engine:

**ENGINE MANUFACTURER:** Lycoming Engines

**ENGINE MODEL:** IO-360-M1A

**MAXIMUM POWER:**

|            | Max Power<br>(hp) | Max rpm.<br>Prop. rpm |
|------------|-------------------|-----------------------|
| Max. T.O.  | 180               | 2700                  |
| Max. Cont. | 173.3             | 2600                  |

##### Temperatures:

Max CHT ..... 500° F (260° C)

Max Oil ..... 245° F (118° C)

##### Oil Pressure:

Minimum Idling ..... 25 psi (1.7 Bar)

Minimum Normal ..... 55 psi (3.8 Bar)

Maximum Normal ..... 95 psi (6.5 Bar)

Starting, Warm-up, taxi and take-off (Max) ..... 115 psi (7.9 Bar)

##### Fuel pressure:

- At Inlet to fuel injector:

Minimum ..... 14 psi (0.96 Bar)

Maximum ..... 35 psi (2.41 Bar)

## **5. PAINT**

To ensure that the temperature of the composite structure does not exceed limits, the outer surface of the aeroplane must be painted with white paint, except for areas of registration marks, placards, and ornament.

Refer to Aircraft Maintenance Manual (AMM), ATA Chapter 4 and 51, for specific paint requirements.

## **6. PROPELLER**

**MANUFACTURER:** ..... MT Propeller

**MODEL:** ..... MTV 15B/193-52

**TYPE:** ..... wood/composite 2-blade, variable pitch

**DIAMETER:** ..... 1930 mm (76 in) (no reduction is permitted)

## **7. MAXIMUM OPERATING ALTITUDE**

Maximum operating altitude is 12000 ft (3658 m) MSL.



**CAUTION**

*At altitudes above 10000 ft (3048 m) up to and including 12000 ft (3658 m), flight crew is recommended to use supplemental oxygen.*

## **8. AMBIENT TEMPERATURE**

Ambient temperature: from -25°C to +50°C.



**WARNING**

*Flight in expected and/or known icing conditions is forbidden.*

## 4. POWERPLANT INSTRUMENT MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

| INSTRUMENT |        | RED ARC<br>Minimum<br>limit | WHITE ARC<br>Advisory | GREEN ARC<br>Safe<br>operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum<br>limit |
|------------|--------|-----------------------------|-----------------------|--------------------------------|-----------------------|-----------------------------|
| PROPELLER  | RPM    | /                           | /                     | 950-2600                       | 0-950<br>2600-2700    | 2700 (line)                 |
| OIL TEMP.  | °F     | /                           | /                     | 140-245                        | 0 - 140               | 245 - 255                   |
| CHT        | °F     | /                           | 435 (line)            | 150-475                        | 0 – 150<br>475-500    | 500-510                     |
| EGT        | °F     | /                           | 1000-1500             | /                              | 1375 (line)           | 1500-1550                   |
| OIL PRESS  | psi    | 0-25                        | /                     | 55-95                          | 25 - 55<br>95-115     | 115 - 125                   |
| FUEL PRESS | psi    | 0-14                        | /                     | 14-35                          | /                     | 35 - 40                     |
| FUEL QTY   | litres | 0                           | /                     | 0-115                          | /                     | /                           |
|            | gal    | 0                           |                       | 0-30,4                         |                       |                             |
| FUEL FLOW  | l/hr   | /                           | 0-75                  | /                              | /                     | /                           |
|            | gal/hr |                             | 0-20                  |                                |                       |                             |

## 5. OTHER INSTRUMENT MARKINGS

| INSTRUMENT | RED ARC<br>Minimum limit | GREEN ARC<br>Safe operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum limit |
|------------|--------------------------|-----------------------------|-----------------------|--------------------------|
| Voltmeter  | 20-21 Volt               | 24–30 Volt                  | 21–24 Volt            | 30-31                    |



INTENTIONALLY LEFT BLANK

**Supplement D02: pages replacement instructions**

### **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

Apply following pages replacement:

| <b>Supplement D02 –<br/>Emergency Procedures page</b> |                 | <b>AFM<br/>Section 3 page</b>       |
|-------------------------------------------------------|-----------------|-------------------------------------|
| V3-4                                                  | <b>REPLACES</b> | Page 3-4 of AFM, Section 3          |
| V3-14                                                 | <b>REPLACES</b> | Page 3-14 of AFM, Section 3         |
| V3-18 thru 19                                         | <b>REPLACES</b> | Page 3-18 thru 19 of AFM, Section 3 |
|                                                       |                 |                                     |

INTENTIONALLY LEFT BLANK

**1.1. REFERENCE AIRSPEEDS FOR EMERGENCY PROCEDURES**

|                                  |                |
|----------------------------------|----------------|
| Best glide speed ( $V_{GLIDE}$ ) | <b>84 KIAS</b> |
| No-flaps Approach Speed          | <b>80 KIAS</b> |

### 6.3 PROPELLER OVERSPEED

In case of propeller overspeed in flight, apply following procedure:

- |                          |              |
|--------------------------|--------------|
| 1. Throttle Lever .....  | REDUCE power |
| 2. Propeller Lever ..... | Decrease RPM |
| 3. Mixture Lever .....   | As required  |
| 4. RPM indicator .....   | CHECK        |

If it is not possible to decrease propeller rpm, **land as soon as possible** applying *Forced landing* procedure. (See Para 11)



**CAUTION**

*Maximum propeller rpm exceedance may cause engine components damage.*

*Monitor engine RPM; overspeed shall be prevented by retarding propeller lever.*

### 6.4 IRREGULAR RPM

1. Fuel pump: .....ON
2. Fuel quantity and pressure indicators: .....CHECK
3. If necessary: ..... SWITCH TANK

#### **If engine continues to run irregularly**

- **Land as soon as possible.**

## **6.10 DEFECTIVE ENGINE CONTROLS**

### **Defective Mixture Control Cable**

1. Maintain altitude to the nearest airfield
2. During descent, check engine behaviour to a higher power setting. A lean mixture can lead to engine roughness and loss of power. Landing approach must be planned accordingly.

**WARNING**

Go-around may then be impossible.

### **Defective Throttle Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with Propeller lever
2. Perform landing with shut-down engine applying *Forced landing procedure*. (See Para 11)

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*. (See Para 11)

### **Defective Propeller Lever Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with throttle
2. Perform normal landing.

**WARNING**

Go-around may then be impossible.

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*. (See Para 11)

## 7 INFLIGHT ENGINE RESTART

### 7.1 PROPELLER WINDMILLING

*In case of engine shutdown, propeller will keep windmilling and will not stop, preventing the use of ignition key. Engine inflight restart must be performed without using ignition key with propeller windmilling in order to avoid possible engine damages.*

*Typical indication of a potential engine shutdown, with windmilling propeller, will be RPM running sub-idle below 600-500 RPM, to be confirmed by other engine instrument (OIL Pressure, CHT, EGT running down abnormally).*

*Inflight engine restart may be performed during 1g flight anywhere within the normal operating envelope of the airplane.*



**WARNING**

- |                                  |                         |
|----------------------------------|-------------------------|
| 1. Master switch .....           | Check ON                |
| 2. Fuel pump .....               | ON                      |
| 3. Fuel quantity indicator ..... | CHECK                   |
| 4. Fuel Selector .....           | SWITCH TANK             |
| 5. Throttle Lever .....          | Minimum 1cm. above IDLE |
| 6. Propeller Lever.....          | Full forward            |
| 7. Mixture .....                 | FULL rich               |
| 8. Throttle lever .....          | SET as required         |

#### **In case of unsuccessful engine restart:**

- **Land as soon as possible** applying *Forced landing procedure*. (See Para 11)

#### **In case of successful engine restart:**

- **Land as soon as possible**



**CAUTION**

*After engine restart, if practical, moderate propeller rpm to allow the temperatures for stabilizing in the green arcs.*

INTENTIONALLY LEFT BLANK



**Supplement D02: pages replacement instructions**

### **SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures**

Apply following pages replacement:

| <b>Supplement D02 –<br/>Normal Procedures page</b> |                 | <b>AFM<br/>Section 4 page</b>       |
|----------------------------------------------------|-----------------|-------------------------------------|
| V4-7                                               | <b>REPLACES</b> | Page 4-7 of AFM, Section 4          |
| V4-15                                              | <b>REPLACES</b> | Page 4-15 of AFM, Section 4         |
| V4-19 thru 26                                      | <b>REPLACES</b> | Page 4-19 thru 26 of AFM, Section 4 |
|                                                    |                 |                                     |
|                                                    |                 |                                     |

INTENTIONALLY LEFT BLANK

### 3. AIRSPEEDS FOR NORMAL OPERATIONS

The following airspeeds are those which are significant for normal operations.

|                                     | <b>FLAPS</b> | <b>1160kg<br/>(2557lbs)</b> |
|-------------------------------------|--------------|-----------------------------|
| Rotation Speed ( $V_R$ )            | T/O          | <b>60 KIAS</b>              |
| Best Angle-of-Climb Speed ( $V_X$ ) | T/O          | <b>65 KIAS</b>              |
| Best Angle-of-Climb Speed ( $V_X$ ) | 0°           | <b>75 KIAS</b>              |
| Best Rate-of-Climb speed ( $V_Y$ )  | 0°           | <b>82 KIAS</b>              |
| Flaps ( $V_{FE}$ )                  | T/O & LAND   | <b>91 KIAS</b>              |
| No flaps approach                   | 0°           | <b>80 KIAS</b>              |
| Approach speed                      | T/O          | <b>75 KIAS</b>              |
| Final Approach Speed                | FULL         | <b>70 KIAS</b>              |
| Manoeuvring speed ( $V_A$ )         | 0°           | <b>120 KIAS</b>             |
| V glide                             | 0°           | <b>84 KIAS</b>              |
| Never Exceed Speed ( $V_{NE}$ )     | 0°           | <b>166 KIAS</b>             |

## 5. CHECKLISTS

### 5.1. BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*
2. Flight controls: operate full stroke checking for movement smoothness, free of play and friction.
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Throttle: *IDLE*
6. Propeller Lever: *HIGH RPM*
7. Mixture control Lever: *LEAN*
8. Circuit Breakers: *check all IN*
9. Master switch: *ON, wait PFD turn on, Check ALT OUT caution ON, Check LOW FP and LOW OP warning ON*
10. Only before the first flight of the day:
  - Standby Instrument: Check no red crosses displayed.
    - a. Press and hold the control knob (approx. 2 sec)
    - b. Rotate the knob selecting “INFO>” page then press it
    - c. Select “BATTERY INFO” page then press the knob
    - d. Check “CHARGE (%)” to be more than 80%, then exit menu
11. Avionic Master switch: *ON, wait MFD turn on, check instruments, check Voltage on Main and Essential Buses.*
12. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection), then update the Garmin fuel content in the totalizer accordingly*

#### NOTE

The totalizer function available on Garmin Engine page allows input only up to 230lbs (maximum usable fuel). Initial Fuel indication on totalizer must be corrected manually (as it does not use the aircraft fuel quantity indicators as input). Once correctly initialized, fuel consumption on totalizer is very precise as it takes instantaneous fuel flow for computation.

13. Electric fuel pump: *ON (check for audible pump noise and increase of fuel pressure)*
14. Warning “LOW FUEL PRESSURE”: *extinguished*
15. Electric fuel pump: *OFF*
16. Flap control: *cycle fully extended and then set to T/O*
17. Pitch Trim: *cycle fully up and down, then set to NEUTRAL*
18. Rudder trim: *cycle full right and left, then set to NEUTRAL*



#### WARNING

Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct  $V_R$ .

19. Nav & Strobe lights: *ON*

#### NOTE

In absence of RH seat occupant: fasten seat belts around the seat in order to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency.

20. Doors: *Closed and locked*

**5.5. BEFORE TAKEOFF**

1. Parking brake: *brake pedal press, ON*
2. Engine instruments: *Check within limits*
3. ALT OUT caution: *OFF (check)*
4. Electric Fuel pump: *ON*
5. Fuel selector valve: *select the fullest tank*
6. Fuel pressure: *check*
7. Mixture: *FULL RICH*

**NOTE**

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance.  
The mixture may be adjusted to obtain smooth engine operations.*

8. Throttle: *set 1500 RPM*
  - a. Alternate Air check:
    - Alternate Air: *PULL (Check drop 50-100 RPM)*
  - b. Mixture check:
    - Mixture: *reduce*
    - EGT: *check increase*
    - FF: *check decrease*
    - Mixture: *FULL RICH*
9. Throttle: *2100 RPM*
10. Propeller Lever:
  - *Pull back until a drop of max. 500 RPM is reached then high RPM*
  - *Cycle 3 times*
11. Magneto Check: *L – BOTH – R – BOTH*
  - *Max RPM drop: 175 RPM*
  - *Max. difference: 50 RPM*
12. Throttle: *Idle*
13. Flaps: *check T/O*
14. Pitch and Rudder trim: *check neutral*
15. Flight controls: *check free*
16. Seat belts: *check fastened*
17. Doors: *check closed and locked*
18. Parking brake: *Release*
19. Landing light: *ON as required*
20. XPDR: *ON*

## 5.6. TAKEOFF

For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixt may cause rough running of the engine or a loss of performance. The mixture may be justed to obtain smooth engine operations.

**NOTE**

Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft den altitude or higher.

During climb, a rough method of correctly leaning is to slowly reduce mixture lever until increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.

1. Pitot HEAT: ON if required
2. Fuel pump: ON
3. Brakes: apply
4. Throttle: FULL and check approximately  $2680 \pm 20$  RPM

**WARNING**

Engine proper performance at full throttle shall be checked early in the ground roll in order to abandon take-off if necessary.

A rough engine, sluggish RPM increase or failure to reach take-off RPM are reasons for abandoning the take-off. If the engine oil is cold, an oil pressure in the yellow sector is permissible.

5. Engine instruments: check parameters within the limits
6. Brakes: Release
7. Rotation speed  $V_R$ : 60 KIAS
8. Airspeed: 67 KIAS

Above a safe height:

9. Propeller lever: 2600 RPM
10. Landing lights: OFF

## 5.7. CLIMB

**NOTE**

*Due to position of fuel sensors, during climb fuel gauges in cockpit will indicate a fuel quantity slightly lower than the real amount. Regaining level flight will immediately restore correct indications.*

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance.*

*The mixture may be adjusted to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft density altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until an increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Flaps: *UP* (minimum speed 73 KIAS)

**NOTE**

*Expect to adjust pitch trim (pitch up) when retracting flaps after take-off*

2. Establish climb Vy: 82 KIAS
3. Electrical fuel pump: *OFF*
4. Fuel pressure: *check within limits*
5. Throttle: *FULL*
6. MIXTURE: *RICH*, above 5000ft keep EGT constant
7. Engine instruments: *in the GREEN*

**NOTE**

*If the fuel pressure warning light illuminates, or the fuel pressure indication is below green arc, the electrical fuel pump must be switched ON.*

## 5.8. CRUISE

1. Power: set performance as required, refer to table in section 5 of AFM
2. Propeller lever: 1800-2400 RPM
3. Fuel tank selector: as required to maintain symmetric balance
4. Mixture: set in accordance with following para 5.9

### NOTE

To optimize engine life, the cylinder head temperature (CHT) should lie between 150°F and 400°F in continuous operation, and not rise above 435°F in fast cruise.

### NOTE

Monitor and manually compensate asymmetrical fuel consumption by switching fuel selector valve. Switch ON the electric fuel pump prior to swap the fuel feeding from one tank to another.

## 5.9. MIXTURE ADJUSTMENT RECOMMENDATION



**CAUTION**

The maximum permissible cylinder head temperature (500 °F) must never be exceeded.

The mixture control lever should always be moved slowly.

Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH before throttle adjustment.

Care should always be taken that the cylinders do not cool down too quickly.

The cooling rate should not exceed 50 °F per minute.

### NOTE

For maximum service life cylinder head temperature should be kept below 475 °F (high performance cruise) and below 435 °F (for economy cruise).

### Best Cruise Economy Mixture

The best economy mixture setting may only be used up to a power setting of 75 %. In order to obtain the lowest specific fuel consumption at a particular power setting, proceed as follows:

- Slowly pull the mixture control lever back towards LEAN until the engine starts to run roughly.
- Then push the mixture control lever forward just far enough to restore smooth running. At the same time the exhaust gas temperature (EGT) should reach a maximum.

### Best Cruise Power Mixture

The mixture can be set for maximum performance at all power settings:

- The mixture should first be set as for best economy.
- The mixture should then be enriched until the exhaust gas temperature is approximately 100°F lower.

This mixture setting produces the maximum performance for a given manifold pressure and is mainly used for high power settings (approximately 75 %).



## 5.10. DESCENT

**NOTE**

*Due to position of fuel sensors, during descent fuel gauges in cockpit will indicate a fuel quantity slightly higher than the real amount. Regaining level flight will immediately restore correct indications.*

1. Mixture control: *slowly full rich*
2. Propeller lever: *as required*
3. Throttle: *reduce as required*

*Shock cooling shortens engine life.*

*When reducing power, the change in cylinder head temperature should not exceed 50°F per minute. In order to ensure best practice and avoid potential illumination of ALT FAIL (due to low propeller speed), the following best practice should be observed:*

**NOTE**

- *Reducing power to maintain a minimum descent speed of 84 KIAS (best glide) and / or a blade angle to maintain 850 RPM;*
- *Opening the ALTER AIR command to full open (to avoid ice accretion).*

*The maximum permissible cylinder head temperature (500 °F) must never be exceeded.*

*The mixture control lever should always be moved slowly.*

*Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH.*

**CAUTION**

*Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.*

### 5.11. BEFORE LANDING

1. Electric fuel pump: *ON*
  2. Fuel valve: *select the fullest tank*
  3. Landing Light: *ON*
- On downwind, leg abeam touch down point:*
4. Flaps: *set T/O (below 90KIAS)*

**NOTE**

*Expect to adjust pitch trim (pitch down) when extending flaps to T/O or LAND*

5. Approach speed: *set*
- On final leg, before landing:*
6. Mixture control lever: *RICH*
  7. Propeller Lever: *HIGH RPM*
  8. Flaps: *LAND*
  9. Final Approach Speed: *set*
  10. Optimal touchdown speed: *60 KIAS*



**CAUTION**

*In conditions such as (e.g.) strong wind, danger of windshear or turbulence a higher approach speed shall be selected..*

### 5.12. BALKED LANDING/MISSED APPROACH

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to V<sub>Y</sub> or V<sub>X</sub> as applicable*
3. Flaps position: *T/O*

*Above a safe height:*

4. Propeller lever: *2600 RPM*
5. Landing lights: *OFF*

### 5.13. GO-AROUND

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to V<sub>Y</sub> or V<sub>X</sub> as applicable*
3. Flaps position: *T/O*

### 5.14. AFTER LANDING

1. Throttle: *Idle*
2. Brakes: *apply*
3. Pitot heat: *OFF (if ON)*
4. Flaps: *UP*
5. Electric Fuel Pump: *OFF*
6. XPDR: *OFF*
7. Landing light: *OFF*

**5.15. ENGINE SHUT DOWN**

1. Parking brake: *set*
2. Keep engine running at 1200 propeller rpm for about one minute in order to reduce latent heat.
3. Avionic equipment: *OFF*
4. Throttle: *idle*
5. Magnetos: *Check OFF – BOTH*
6. Mixture: *closed*
7. Ignition key: *OFF, key extracted*
8. Strobe light: *OFF*
9. Avionic Master: *OFF*
10. Master & Generator switches: *OFF*
11. Fuel selector valve: *OFF*

**WARNING**

*For safety, verify propeller is fully stopped before any other action.*

**CAUTION**

*Instruct passenger to fully open RH door and depart, avoiding contact with wheels and sharp wing control surfaces edges.*

**5.16. POSTFLIGHT CHECKS**

1. Flight controls: *lock by means of seat belts*
2. Wheel chocks and wing mooring lines: *Set*
3. Parking brake: *Release*
4. Doors: *Close and lock*
5. Protection plugs: *set over pitot tube, stall warning, static ports*

**5.17. FLIGHT IN RAIN**

Performance deteriorates in rain; this applies particularly to take-off distance and maximum Horizontal speed. The effect on flight characteristics is minimal.

**5.18. REFUELLING**

Before refuelling, the airplane must be connected to electrical ground.

**5.19. FLIGHT AT HIGH ALTITUDE**

At high altitudes the provision of oxygen for the occupant is necessary. Legal requirements for the provision of oxygen should be adhered to (see para 2.9).

Supplement D02: pages replacement instructions

## **SECTION 5 – PERFORMANCES**

Supplement D02- Performances pages replace basic AFM Section 5 as whole

INTENTIONALLY LEFT BLANK

---

## **SECTION 5 – PERFORMANCE**

### **INDEX**

|                                                       |           |
|-------------------------------------------------------|-----------|
| <b>1. Introduction .....</b>                          | <b>2</b>  |
| <b>2. Use of Performance Charts .....</b>             | <b>2</b>  |
| <b>3. Airspeed Indicator System Calibration .....</b> | <b>3</b>  |
| <b>4. ICAO Standard Atmosphere .....</b>              | <b>5</b>  |
| <b>5. Stall speed .....</b>                           | <b>6</b>  |
| <b>6. Crosswind .....</b>                             | <b>7</b>  |
| <b>7. Take-Off performances.....</b>                  | <b>8</b>  |
| <b>8. Take-off Rate of Climb.....</b>                 | <b>11</b> |
| <b>9. En-Route Rate of Climb .....</b>                | <b>12</b> |
| <b>10.Cruise Performance .....</b>                    | <b>13</b> |
| <b>11.Landing performances.....</b>                   | <b>17</b> |
| <b>12.Balked Landing Performance .....</b>            | <b>18</b> |
| <b>13.Noise Data .....</b>                            | <b>19</b> |

## **1. INTRODUCTION**

This section provides all necessary data for an accurate and comprehensive planning of flight activity from takeoff to landing.

Data reported in graphs and/or in tables were determined using:

- ✓ “Flight Test Data” under conditions prescribed by EASA CS-23 regulation
- ✓ aircraft and engine in good condition
- ✓ average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performances were carried out by theoretical means for:

- ✓ Airspeed
- ✓ External temperature
- ✓ Altitude
- ✓ Weight
- ✓ Runway type and condition

## **2. USE OF PERFORMANCE CHARTS**

Performances data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.



### 3. AIRSPEED INDICATOR SYSTEM CALIBRATION

#### Normal Static Source

Graph shows calibrated airspeed  $V_{IAS}$  as a function of indicated airspeed  $V_{CAS}$ .

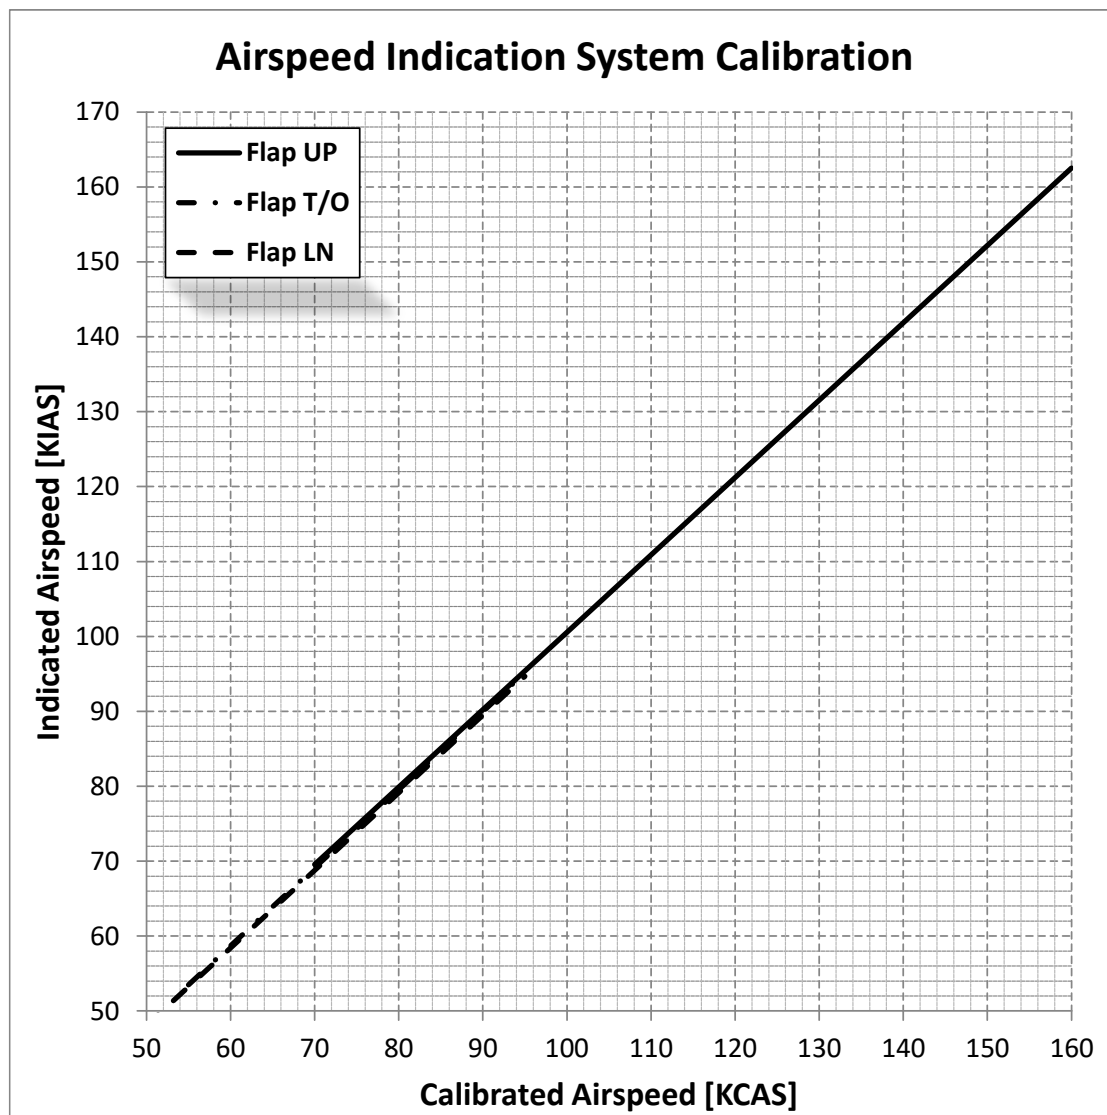


Fig. 5-1. Calibrated vs Indicated Airspeed

Example:

Given

KIAS 75.0

Flap: UP

Find

KCAS 74.7

**NOTE**

Indicated airspeed assumes 0 as an instrument error

**Alternate Static Source**

| Pressure Altitude<br>[ft] | IAS<br>[kn] | Alternate Static Air Open |                        | Vents Open  |                        | Vents and Hot Air Open |                        |
|---------------------------|-------------|---------------------------|------------------------|-------------|------------------------|------------------------|------------------------|
|                           |             | IAS<br>[kn]               | H <sub>P</sub><br>[ft] | IAS<br>[kn] | H <sub>P</sub><br>[ft] | IAS<br>[kn]            | H <sub>P</sub><br>[ft] |
| 1000                      |             | <b>FLAP UP</b>            |                        |             |                        |                        |                        |
|                           | 70          | 75                        | 1020                   | 72          | 1010                   | 72                     | 1020                   |
|                           | 90          | 95                        | 1020                   | 92          | 1030                   | 93                     | 1020                   |
|                           | 110         | 115                       | 1030                   | 113         | 1020                   | 112                    | 1020                   |
|                           | 135         | 140                       | 1040                   | 139         | 1030                   | 137                    | 1030                   |
|                           |             | <b>FLAP T/O</b>           |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 1020                   | 63          | 1020                   | 62                     | 1010                   |
|                           | 70          | 75                        | 1020                   | 73          | 1020                   | 72                     | 1020                   |
|                           | 90          | 94                        | 1020                   | 92          | 1020                   | 92                     | 1020                   |
|                           |             | <b>FLAP LND</b>           |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 1020                   | 61          | 1020                   | 61                     | 1020                   |
|                           | 70          | 72                        | 1020                   | 72          | 1020                   | 71                     | 1020                   |
|                           | 90          | 92                        | 1020                   | 91          | 1020                   | 91                     | 1020                   |
| 5000                      |             | <b>FLAP UP</b>            |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 5020                   | 72          | 5020                   | 71                     | 5020                   |
|                           | 90          | 94                        | 5030                   | 93          | 5020                   | 92                     | 5020                   |
|                           | 110         | 114                       | 5030                   | 113         | 5020                   | 112                    | 5020                   |
|                           | 133         | 137                       | 5040                   | 136         | 5030                   | 135                    | 5020                   |
|                           |             | <b>FLAP T/O</b>           |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 5010                   | 62          | 5020                   | 61                     | 5010                   |
|                           | 70          | 74                        | 5020                   | 73          | 5020                   | 72                     | 5020                   |
|                           | 90          | 93                        | 5030                   | 93          | 5020                   | 93                     | 5020                   |
|                           |             | <b>FLAP LND</b>           |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 5030                   | 62          | 5020                   | 61                     | 5000                   |
|                           | 70          | 72                        | 5020                   | 72          | 5010                   | 71                     | 5010                   |
|                           | 90          | 92                        | 5020                   | 92          | 5020                   | 91                     | 5010                   |
| 8000                      |             | <b>FLAP UP</b>            |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 8020                   | 72          | 8020                   | 71                     | 8020                   |
|                           | 90          | 93                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           | 110         | 113                       | 8030                   | 112         | 8020                   | 112                    | 8020                   |
|                           | 128         | 131                       | 8040                   | 130         | 8030                   | 130                    | 8020                   |
|                           |             | <b>FLAP T/O</b>           |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 8010                   | 62          | 8020                   | 61                     | 8010                   |
|                           | 70          | 73                        | 8020                   | 72          | 8020                   | 72                     | 8020                   |
|                           | 90          | 92                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           |             | <b>FLAP LND</b>           |                        |             |                        |                        |                        |
|                           | 60          | 61                        | 8020                   | 61          | 8020                   | 61                     | 8000                   |
|                           | 70          | 72                        | 8010                   | 71          | 8010                   | 71                     | 8010                   |
|                           | 90          | 92                        | 8010                   | 91          | 8010                   | 91                     | 8010                   |

## 4. ICAO STANDARD ATMOSPHERE

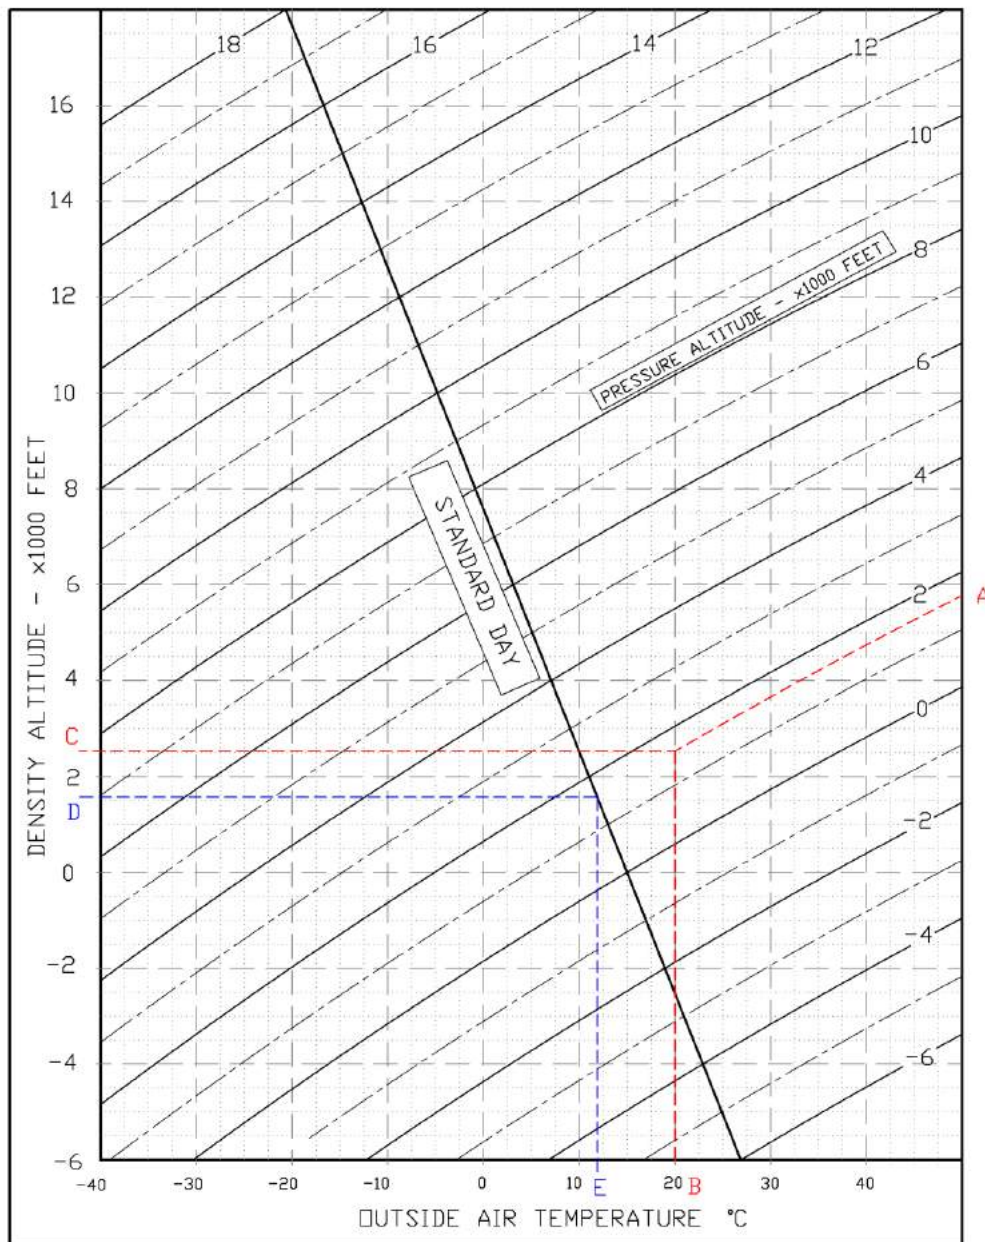


FIG. 5-2. ICAO CHART

Examples:

| <u>Scope</u>             | <u>Given</u>                                           | <u>Find</u>                     |
|--------------------------|--------------------------------------------------------|---------------------------------|
| <u>Density Altitude:</u> | A: Pressure altitude = 1600ft<br>B: Temperature = 20°C | → C: Density Altitude = 2550ft  |
| <u>ISA Temperature:</u>  | D: Pressure altitude = 1600ft                          | → E: ISA Air Temperature = 12°C |

## 5. STALL SPEED

**Weight:** 1160 kg (2557 lb)

**Throttle Lever:** IDLE

**CG:** Most Forward (19%)

**No ground effect**

| WEIGHT                               | BANK<br>ANGLE | STALL SPEED |      |           |      |            |      |
|--------------------------------------|---------------|-------------|------|-----------|------|------------|------|
|                                      |               | FLAPS 0°    |      | FLAPS T/O |      | FLAPS FULL |      |
|                                      |               | KIAS        | KCAS | KIAS      | KCAS | KIAS       | KCAS |
| [kg]<br>([lb])                       | [deg]         |             |      |           |      |            |      |
| <b>1160<br/>(2557)</b><br>(FWD C.G.) | <b>0</b>      | 59          | 60   | 53        | 55   | 50         | 52   |
|                                      | <b>15</b>     | 60          | 61   | 54        | 56   | 51         | 53   |
|                                      | <b>30</b>     | 64          | 65   | 58        | 59   | 54         | 56   |
|                                      | <b>45</b>     | 71          | 71   | 64        | 65   | 61         | 62   |
|                                      | <b>60</b>     | 85          | 85   | 77        | 78   | 73         | 74   |

### NOTE

*Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 350 ft with banking below 15°.*

## 6. CROSSWIND

Maximum demonstrated crosswind is 12 kts

⇒ Example:

### Given

Wind direction (with respect to aircraft longitudinal axis) =  $30^\circ$

Wind speed = 20 kts

### Find

Headwind = 17.5 kts

Crosswind = 10 kts

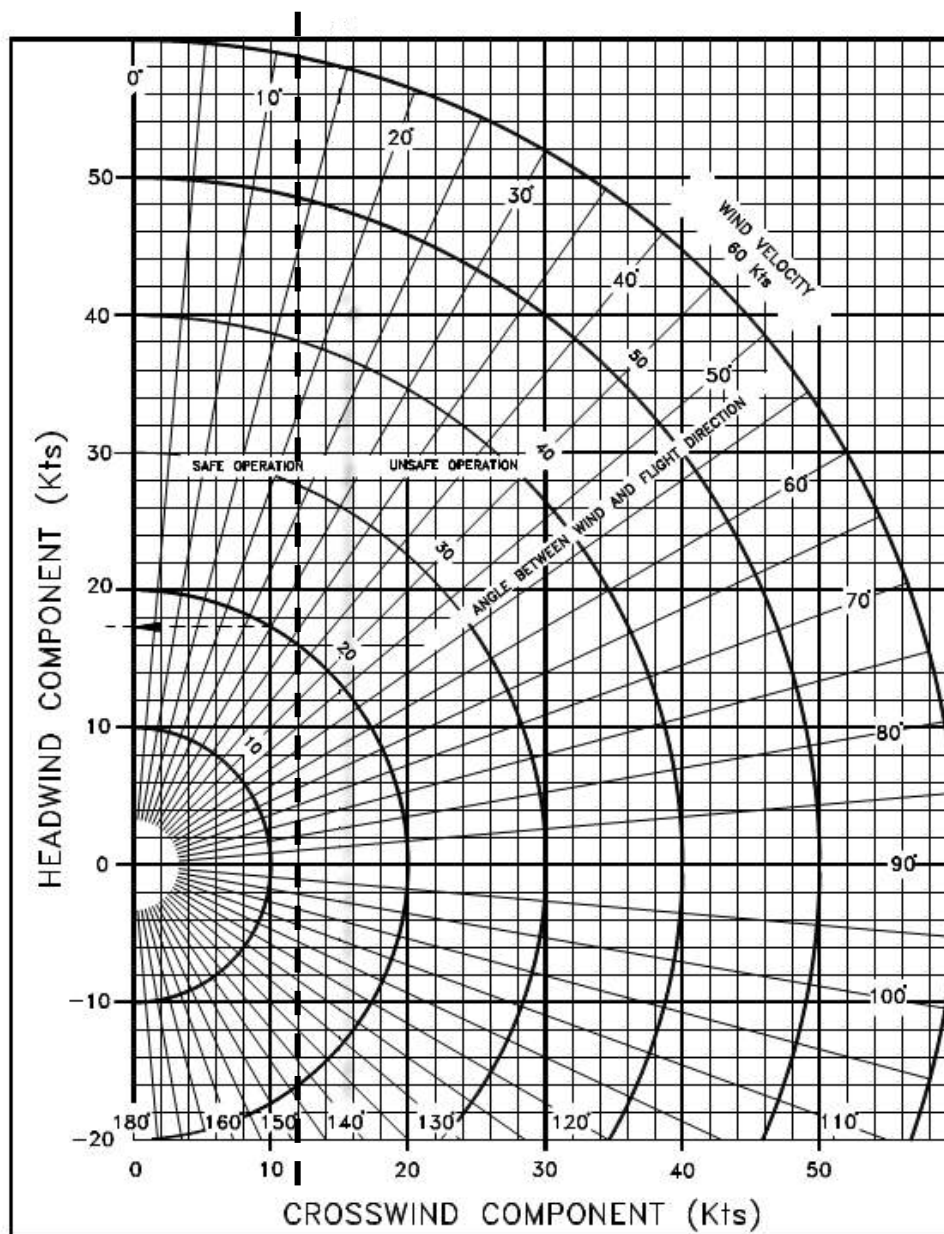


FIG. 5-3. CROSSWIND CHART



## 7. TAKE-OFF PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factor to distances of 1.10

**Weight = 1160 kg (2557 lb)**

Flaps: T/O

Speed at Lift-Off = 60 KIAS

Speed Over 50ft Obstacle = 65 KIAS

Throttle and Propeller Lever: Full Forward

Runway: Paved

**Corrections**

Headwind: -10 m for each kn

Tailwind: +20 m for each kn

Grass Runway: +10% to Ground Roll

Runway slope: +10% to Ground Roll for each +1%

| Pressure<br>Altitude<br><br>[ft] |              | Distance [m]<br>(Distance [ft]) |               |                |                |                       |
|----------------------------------|--------------|---------------------------------|---------------|----------------|----------------|-----------------------|
|                                  |              | Temperature [°C]                |               |                |                | ISA                   |
|                                  |              | -25                             | 0             | 25             | 50             |                       |
| S.L.                             | Ground Roll  | 234<br>(768)                    | 295<br>(968)  | 364<br>(1194)  | 442<br>(1450)  | <b>336<br/>(1102)</b> |
|                                  | At 50 ft AGL | 421<br>(1381)                   | 526<br>(1726) | 644<br>(2113)  | 776<br>(2546)  | <b>595<br/>(1952)</b> |
| 1000                             | Ground Roll  | 256<br>(840)                    | 322<br>(1056) | 397<br>(1302)  | 482<br>(1581)  | <b>360<br/>(1181)</b> |
|                                  | At 50 ft AGL | 458<br>(1503)                   | 572<br>(1877) | 701<br>(2300)  | 844<br>(2769)  | <b>637<br/>(2090)</b> |
| 2000                             | Ground Roll  | 279<br>(915)                    | 352<br>(1155) | 434<br>(1424)  | 526<br>(1726)  | <b>387<br/>(1270)</b> |
|                                  | At 50 ft AGL | 499<br>(1637)                   | 622<br>(2041) | 762<br>(2500)  | 918<br>(3012)  | <b>682<br/>(2238)</b> |
| 3000                             | Ground Roll  | 305<br>(1001)                   | 384<br>(1260) | 474<br>(1555)  | 575<br>(1886)  | <b>415<br/>(1362)</b> |
|                                  | At 50 ft AGL | 543<br>(1781)                   | 678<br>(2224) | 830<br>(2723)  | 1000<br>(3281) | <b>731<br/>(2398)</b> |
| 4000                             | Ground Roll  | 333<br>(1093)                   | 420<br>(1378) | 518<br>(1699)  | 628<br>(2060)  | <b>446<br/>(1463)</b> |
|                                  | At 50 ft AGL | 591<br>(1939)                   | 738<br>(2421) | 904<br>(2966)  | 1089<br>(3573) | <b>783<br/>(2569)</b> |
| 5000                             | Ground Roll  | 364<br>(1194)                   | 459<br>(1506) | 566<br>(1857)  | 687<br>(2254)  | <b>480<br/>(1575)</b> |
|                                  | At 50 ft AGL | 645<br>(2116)                   | 805<br>(2641) | 986<br>(3235)  | 1188<br>(3898) | <b>840<br/>(2756)</b> |
| 6000                             | Ground Roll  | 399<br>(1309)                   | 502<br>(1647) | 620<br>(2034)  | 752<br>(2467)  | <b>516<br/>(1693)</b> |
|                                  | At 50 ft AGL | 703<br>(2306)                   | 878<br>(2881) | 1075<br>(3527) | 1296<br>(4252) | <b>901<br/>(2956)</b> |

| <b>Weight = 1060 kg (2337 lb)</b>                                                                                                                                                                   |              |                                 |               |               |                |                       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------------|---------------|----------------|-----------------------|
| <b>Flaps: T/O</b><br><b>Speed at Lift-Off = 60 KIAS</b><br><b>Speed Over 50ft Obstacle = 65 KIAS</b><br><b>Throttle and Propeller Lever: Full Forward</b><br><b>Runway: Paved</b>                   |              |                                 |               |               |                |                       |
| <b>Corrections</b><br><b>Headwind: -10 m for each kn</b><br><b>Tailwind: +20 m for each kn</b><br><b>Grass Runway: +10% to Ground Roll</b><br><b>Runway slope: +10% to Ground Roll for each +1%</b> |              |                                 |               |               |                |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                    |              | Distance [m]<br>(Distance [ft]) |               |               |                |                       |
|                                                                                                                                                                                                     |              | Temperature [°C]                |               |               |                | ISA                   |
|                                                                                                                                                                                                     |              | -25                             | 0             | 25            | 50             |                       |
| S.L.                                                                                                                                                                                                | Ground Roll  | 189<br>(620)                    | 238<br>(781)  | 293<br>(961)  | 356<br>(1168)  | <b>270<br/>(886)</b>  |
|                                                                                                                                                                                                     | At 50 ft AGL | 342<br>(1122)                   | 427<br>(1401) | 523<br>(1716) | 630<br>(2067)  | <b>483<br/>(1585)</b> |
| 1000                                                                                                                                                                                                | Ground Roll  | 206<br>(676)                    | 259<br>(850)  | 320<br>(1050) | 388<br>(1273)  | <b>290<br/>(951)</b>  |
|                                                                                                                                                                                                     | At 50 ft AGL | 372<br>(1220)                   | 464<br>(1522) | 569<br>(1867) | 685<br>(2247)  | <b>517<br/>(1696)</b> |
| 2000                                                                                                                                                                                                | Ground Roll  | 225<br>(738)                    | 283<br>(928)  | 349<br>(1145) | 424<br>(1391)  | <b>311<br/>(1020)</b> |
|                                                                                                                                                                                                     | At 50 ft AGL | 405<br>(1329)                   | 505<br>(1657) | 619<br>(2031) | 745<br>(2444)  | <b>554<br/>(1818)</b> |
| 3000                                                                                                                                                                                                | Ground Roll  | 246<br>(807)                    | 309<br>(1014) | 382<br>(1253) | 463<br>(1519)  | <b>334<br/>(1096)</b> |
|                                                                                                                                                                                                     | At 50 ft AGL | 441<br>(1447)                   | 550<br>(1804) | 674<br>(2211) | 812<br>(2664)  | <b>593<br/>(1946)</b> |
| 4000                                                                                                                                                                                                | Ground Roll  | 268<br>(879)                    | 338<br>(1109) | 417<br>(1368) | 506<br>(1660)  | <b>359<br/>(1178)</b> |
|                                                                                                                                                                                                     | At 50 ft AGL | 480<br>(1575)                   | 599<br>(1965) | 734<br>(2408) | 884<br>(2900)  | <b>636<br/>(2087)</b> |
| 5000                                                                                                                                                                                                | Ground Roll  | 294<br>(965)                    | 370<br>(1214) | 456<br>(1496) | 553<br>(1814)  | <b>386<br/>(1266)</b> |
|                                                                                                                                                                                                     | At 50 ft AGL | 523<br>(1716)                   | 653<br>(2142) | 800<br>(2625) | 964<br>(3163)  | <b>682<br/>(2238)</b> |
| 6000                                                                                                                                                                                                | Ground Roll  | 321<br>(1053)                   | 404<br>(1325) | 499<br>(1637) | 605<br>(1985)  | <b>416<br/>(1365)</b> |
|                                                                                                                                                                                                     | At 50 ft AGL | 571<br>(1873)                   | 713<br>(2339) | 873<br>(2864) | 1052<br>(3451) | <b>732<br/>(2402)</b> |

| <b>Weight = 960 kg (2116 lb)</b><br><b>Flaps: T/O</b><br><b>Speed at Lift-Off = 60 KIAS</b><br><b>Speed Over 50ft Obstacle = 65 KIAS</b><br><b>Throttle and Propeller Lever: Full Forward</b><br><b>Runway: Paved</b> |              |                                 |               |               |               |                       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------------|---------------|---------------|-----------------------|
| <b>Corrections</b><br><b>Headwind: -10 m for each kn</b><br><b>Tailwind: +20 m for each kn</b><br><b>Grass Runway: +10% to Ground Roll</b><br><b>Runway slope: +10% to Ground Roll for each +1%</b>                   |              |                                 |               |               |               |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                                      |              | Distance [m]<br>(Distance [ft]) |               |               |               |                       |
|                                                                                                                                                                                                                       |              | Temperature [°C]                |               |               |               | ISA                   |
|                                                                                                                                                                                                                       |              | -25                             | 0             | 25            | 50            |                       |
| S.L.                                                                                                                                                                                                                  | Ground Roll  | 149<br>(489)                    | 187<br>(614)  | 231<br>(758)  | 281<br>(922)  | <b>213<br/>(699)</b>  |
|                                                                                                                                                                                                                       | At 50 ft AGL | 272<br>(892)                    | 340<br>(1115) | 416<br>(1365) | 501<br>(1644) | <b>384<br/>(1260)</b> |
| 1000                                                                                                                                                                                                                  | Ground Roll  | 162<br>(531)                    | 204<br>(669)  | 252<br>(827)  | 306<br>(1004) | <b>229<br/>(751)</b>  |
|                                                                                                                                                                                                                       | At 50 ft AGL | 296<br>(971)                    | 369<br>(1211) | 452<br>(1483) | 545<br>(1788) | <b>411<br/>(1348)</b> |
| 2000                                                                                                                                                                                                                  | Ground Roll  | 177<br>(581)                    | 223<br>(732)  | 275<br>(902)  | 334<br>(1096) | <b>245<br/>(804)</b>  |
|                                                                                                                                                                                                                       | At 50 ft AGL | 322<br>(1056)                   | 402<br>(1319) | 492<br>(1614) | 593<br>(1946) | <b>440<br/>(1444)</b> |
| 3000                                                                                                                                                                                                                  | Ground Roll  | 194<br>(636)                    | 244<br>(801)  | 301<br>(988)  | 365<br>(1198) | <b>264<br/>(866)</b>  |
|                                                                                                                                                                                                                       | At 50 ft AGL | 350<br>(1148)                   | 438<br>(1437) | 536<br>(1759) | 645<br>(2116) | <b>472<br/>(1549)</b> |
| 4000                                                                                                                                                                                                                  | Ground Roll  | 212<br>(696)                    | 266<br>(873)  | 329<br>(1079) | 399<br>(1309) | <b>283<br/>(928)</b>  |
|                                                                                                                                                                                                                       | At 50 ft AGL | 382<br>(1253)                   | 477<br>(1565) | 584<br>(1916) | 703<br>(2306) | <b>506<br/>(1660)</b> |
| 5000                                                                                                                                                                                                                  | Ground Roll  | 231<br>(758)                    | 291<br>(955)  | 360<br>(1181) | 436<br>(1430) | <b>305<br/>(1001)</b> |
|                                                                                                                                                                                                                       | At 50 ft AGL | 416<br>(1365)                   | 520<br>(1706) | 636<br>(2087) | 766<br>(2513) | <b>542<br/>(1778)</b> |
| 6000                                                                                                                                                                                                                  | Ground Roll  | 253<br>(830)                    | 319<br>(1047) | 393<br>(1289) | 477<br>(1565) | <b>328<br/>(1076)</b> |
|                                                                                                                                                                                                                       | At 50 ft AGL | 454<br>(1489)                   | 567<br>(1860) | 694<br>(2277) | 836<br>(2743) | <b>582<br/>(1909)</b> |



## 8. TAKE-OFF RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2600 RPM<br>Flaps: Take-Off |                                  |                                                |                        |      |      |      |             |
|------------------------------------------------------------------------|----------------------------------|------------------------------------------------|------------------------|------|------|------|-------------|
| Weight<br><br>[kg]<br>([lb])                                           | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>V <sub>y</sub><br><br>[KIAS] | Rate of Climb [ft/min] |      |      |      |             |
|                                                                        |                                  |                                                | Temperature [°C]       |      |      |      | ISA         |
|                                                                        |                                  |                                                | -25                    | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                                                 | S.L.                             | 72                                             | 974                    | 808  | 659  | 525  | <b>717</b>  |
|                                                                        | <b>2000</b>                      | 71                                             | 848                    | 684  | 538  | 406  | <b>617</b>  |
|                                                                        | <b>4000</b>                      | 70                                             | 721                    | 560  | 417  | 287  | <b>518</b>  |
|                                                                        | <b>6000</b>                      | 69                                             | 596                    | 437  | 296  | 169  | <b>419</b>  |
|                                                                        | <b>8000</b>                      | 68                                             | 470                    | 315  | 176  | 51   | <b>320</b>  |
|                                                                        | <b>10000</b>                     | 67                                             | 345                    | 193  | 56   | -67  | <b>221</b>  |
|                                                                        | <b>12000</b>                     | 67                                             | 221                    | 71   | -63  | -184 | <b>122</b>  |
|                                                                        | <b>14000</b>                     | 66                                             | 96                     | -51  | -182 | -300 | <b>23</b>   |
| <b>1060<br/>(2337)</b>                                                 | S.L.                             | 70                                             | 1118                   | 943  | 787  | 647  | <b>848</b>  |
|                                                                        | <b>2000</b>                      | 69                                             | 985                    | 813  | 660  | 522  | <b>744</b>  |
|                                                                        | <b>4000</b>                      | 69                                             | 853                    | 684  | 533  | 397  | <b>640</b>  |
|                                                                        | <b>6000</b>                      | 68                                             | 721                    | 555  | 406  | 273  | <b>536</b>  |
|                                                                        | <b>8000</b>                      | 68                                             | 589                    | 426  | 280  | 149  | <b>431</b>  |
|                                                                        | <b>10000</b>                     | 67                                             | 458                    | 298  | 155  | 26   | <b>327</b>  |
|                                                                        | <b>12000</b>                     | 66                                             | 327                    | 170  | 29   | -97  | <b>223</b>  |
|                                                                        | <b>14000</b>                     | 66                                             | 197                    | 43   | -95  | -220 | <b>119</b>  |
| <b>960<br/>(2116)</b>                                                  | S.L.                             | 69                                             | 1288                   | 1103 | 937  | 787  | <b>1001</b> |
|                                                                        | <b>2000</b>                      | 69                                             | 1147                   | 964  | 801  | 654  | <b>890</b>  |
|                                                                        | <b>4000</b>                      | 68                                             | 1006                   | 827  | 666  | 522  | <b>780</b>  |
|                                                                        | <b>6000</b>                      | 68                                             | 866                    | 689  | 532  | 390  | <b>669</b>  |
|                                                                        | <b>8000</b>                      | 67                                             | 726                    | 553  | 398  | 258  | <b>558</b>  |
|                                                                        | <b>10000</b>                     | 66                                             | 586                    | 416  | 264  | 127  | <b>448</b>  |
|                                                                        | <b>12000</b>                     | 66                                             | 447                    | 280  | 131  | -3   | <b>337</b>  |
|                                                                        | <b>14000</b>                     | 65                                             | 309                    | 145  | -2   | -134 | <b>226</b>  |

**9. EN-ROUTE RATE OF CLIMB****NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2600 RPM<br>Flaps: UP |                                  |                                                |                        |      |      |      |             |
|------------------------------------------------------------------|----------------------------------|------------------------------------------------|------------------------|------|------|------|-------------|
| Weight<br><br>[kg]<br>[lb]                                       | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>V <sub>Y</sub><br><br>[KIAS] | Rate of Climb [ft/min] |      |      |      |             |
|                                                                  |                                  |                                                | Temperature [°C]       |      |      |      | ISA         |
|                                                                  |                                  |                                                | -25                    | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                                           | S.L.                             | 82                                             | 1131                   | 944  | 776  | 625  | <b>841</b>  |
|                                                                  | <b>2000</b>                      | 81                                             | 989                    | 804  | 639  | 491  | <b>729</b>  |
|                                                                  | <b>4000</b>                      | 80                                             | 846                    | 665  | 503  | 357  | <b>618</b>  |
|                                                                  | <b>6000</b>                      | 79                                             | 705                    | 526  | 367  | 224  | <b>506</b>  |
|                                                                  | <b>8000</b>                      | 78                                             | 563                    | 388  | 232  | 91   | <b>394</b>  |
|                                                                  | <b>10000</b>                     | 77                                             | 423                    | 251  | 97   | -41  | <b>282</b>  |
|                                                                  | <b>12000</b>                     | 76                                             | 282                    | 113  | -37  | -173 | <b>171</b>  |
|                                                                  | <b>14000</b>                     | 76                                             | 142                    | -23  | -171 | -305 | <b>59</b>   |
| <b>1060<br/>(2337)</b>                                           | S.L.                             | 82                                             | 1284                   | 1085 | 907  | 747  | <b>976</b>  |
|                                                                  | <b>2000</b>                      | 81                                             | 1133                   | 937  | 762  | 605  | <b>857</b>  |
|                                                                  | <b>4000</b>                      | 80                                             | 982                    | 789  | 618  | 463  | <b>739</b>  |
|                                                                  | <b>6000</b>                      | 79                                             | 831                    | 642  | 474  | 322  | <b>621</b>  |
|                                                                  | <b>8000</b>                      | 78                                             | 682                    | 496  | 330  | 181  | <b>502</b>  |
|                                                                  | <b>10000</b>                     | 77                                             | 532                    | 350  | 187  | 40   | <b>384</b>  |
|                                                                  | <b>12000</b>                     | 76                                             | 383                    | 204  | 45   | -99  | <b>265</b>  |
|                                                                  | <b>14000</b>                     | 75                                             | 235                    | 59   | -97  | -239 | <b>147</b>  |
| <b>960<br/>(2116)</b>                                            | S.L.                             | 81                                             | 1465                   | 1251 | 1060 | 888  | <b>1134</b> |
|                                                                  | <b>2000</b>                      | 80                                             | 1302                   | 1092 | 905  | 735  | <b>1007</b> |
|                                                                  | <b>4000</b>                      | 79                                             | 1140                   | 934  | 749  | 583  | <b>880</b>  |
|                                                                  | <b>6000</b>                      | 78                                             | 979                    | 776  | 595  | 432  | <b>753</b>  |
|                                                                  | <b>8000</b>                      | 77                                             | 818                    | 619  | 441  | 281  | <b>625</b>  |
|                                                                  | <b>10000</b>                     | 76                                             | 658                    | 462  | 287  | 130  | <b>498</b>  |
|                                                                  | <b>12000</b>                     | 75                                             | 498                    | 306  | 134  | -20  | <b>371</b>  |
|                                                                  | <b>14000</b>                     | 74                                             | 339                    | 150  | -18  | -170 | <b>244</b>  |

## 10. CRUISE PERFORMANCE

| Weight: 1160 kg         |               |                                     |             |                            | Corrections                          |             |                            |                                    |             |                            |
|-------------------------|---------------|-------------------------------------|-------------|----------------------------|--------------------------------------|-------------|----------------------------|------------------------------------|-------------|----------------------------|
| Mixture: FULL RICH      |               |                                     |             |                            | Best Power: -10% to Full Rich F.C.   |             |                            |                                    |             |                            |
| Pressure Altitude: 0 ft |               |                                     |             |                            | Best Economy: -20% to Full Rich F.C. |             |                            |                                    |             |                            |
| RPM                     | MAP<br>[inHg] | ISA – 30°C (-15°C)<br>PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | ISA (15°C)<br>PWR<br>[%MCP]          | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | ISA + 30°C (45°C)<br>PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| 2700                    | 29.9          | 113                                 | 138         | 19.2 (72.7)                | 107                                  | 139         | 18.4 (69.7)                | 102                                | 141         | 17.7 (67)                  |
| 2600                    | 29.9          | 109                                 | 136         | 18.7 (70.8)                | 103                                  | 138         | 17.9 (67.8)                | 98                                 | 139         | 17.2 (65.1)                |
|                         | 28            | 101                                 | 132         | 17.6 (66.6)                | 96                                   | 134         | 16.9 (64)                  | 91                                 | 135         | 16.3 (61.7)                |
|                         | 26            | 90                                  | 126         | 16.1 (60.9)                | 85                                   | 127         | 15.4 (58.3)                | 81                                 | 128         | 14.9 (56.4)                |
|                         | 24            | 79                                  | 120         | 14.7 (55.6)                | 75                                   | 121         | 14.1 (53.4)                | 71                                 | 121         | 13.6 (51.5)                |
|                         | 22            | 69                                  | 113         | 13.3 (50.3)                | 65                                   | 113         | 12.8 (48.5)                | 62                                 | 113         | 12.4 (46.9)                |
|                         | 20            | 59                                  | 105         | 11.9 (45)                  | 56                                   | 104         | 11.5 (43.5)                | 53                                 | 103         | 11.1 (42)                  |
| 2450                    | 29.9          | 103                                 | 133         | 17.9 (67.8)                | 98                                   | 135         | 17.1 (64.7)                | 93                                 | 136         | 16.5 (62.5)                |
|                         | 28            | 95                                  | 129         | 16.8 (63.6)                | 90                                   | 130         | 16.1 (60.9)                | 85                                 | 131         | 15.5 (58.7)                |
|                         | 26            | 85                                  | 123         | 15.4 (58.3)                | 80                                   | 124         | 14.8 (56)                  | 76                                 | 125         | 14.3 (54.1)                |
|                         | 24            | 75                                  | 117         | 14.1 (53.4)                | 71                                   | 117         | 13.5 (51.1)                | 67                                 | 118         | 13.1 (49.6)                |
|                         | 22            | 65                                  | 110         | 12.8 (48.5)                | 62                                   | 110         | 12.3 (46.6)                | 59                                 | 110         | 11.9 (45)                  |
|                         | 20            | 55                                  | 102         | 11.5 (43.5)                | 52                                   | 101         | 11.1 (42)                  | 50                                 | 100         | 10.7 (40.5)                |
| 2350                    | 29.9          | 100                                 | 131         | 17.4 (65.9)                | 94                                   | 133         | 16.7 (63.2)                | 90                                 | 134         | 16.1 (60.9)                |
|                         | 28            | 91                                  | 127         | 16.2 (61.3)                | 86                                   | 128         | 15.6 (59.1)                | 82                                 | 129         | 15 (56.8)                  |
|                         | 26            | 81                                  | 121         | 15 (56.8)                  | 77                                   | 122         | 14.4 (54.5)                | 73                                 | 123         | 13.9 (52.6)                |
|                         | 24            | 72                                  | 115         | 13.7 (51.9)                | 68                                   | 115         | 13.1 (49.6)                | 65                                 | 115         | 12.7 (48.1)                |
|                         | 22            | 62                                  | 108         | 12.4 (46.9)                | 59                                   | 108         | 12 (45.4)                  | 56                                 | 107         | 11.6 (43.9)                |
|                         | 20            | 53                                  | 99          | 11.1 (42)                  | 50                                   | 98          | 10.7 (40.5)                | 48                                 | 96          | 10.4 (39.4)                |

| <b>Weight:</b> 1160 kg            |               |                    |             |                          | <b>Corrections</b>                          |             |                          |                   |             |                          |
|-----------------------------------|---------------|--------------------|-------------|--------------------------|---------------------------------------------|-------------|--------------------------|-------------------|-------------|--------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                          | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                          |                   |             |                          |
| <b>Pressure Altitude:</b> 3000 ft |               |                    |             |                          | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                          |                   |             |                          |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-21°C) |             |                          | ISA (9°C)                                   |             |                          | ISA + 30°C (39°C) |             |                          |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>[L/h] | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>[L/h] | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>[L/h] |
| <b>2700</b>                       | <b>26.8</b>   | <b>104</b>         | <b>137</b>  | <b>17.9 (67.8)</b>       | <b>98</b>                                   | <b>138</b>  | <b>17.2 (65.1)</b>       | <b>93</b>         | <b>139</b>  | <b>16.5 (62.5)</b>       |
| <b>2600</b>                       | 26.8          | 100                | 135         | 17.4 (65.9)              | 94                                          | 136         | 16.7 (63.2)              | 90                | 137         | 16.1 (60.9)              |
| <b>2600</b>                       | 26            | 96                 | 133         | 16.9 (64)                | 90                                          | 134         | 16.2 (61.3)              | 86                | 135         | 15.6 (59.1)              |
| <b>2600</b>                       | 24            | 85                 | 126         | 15.4 (58.3)              | 80                                          | 127         | 14.8 (56)                | 76                | 128         | 14.3 (54.1)              |
| <b>2600</b>                       | 22            | 76                 | 128         | 14.3 (54.1)              | 70                                          | 120         | 13.5 (51.1)              | 67                | 120         | 13 (49.2)                |
| <b>2600</b>                       | 20            | 63                 | 111         | 12.6 (47.7)              | 60                                          | 111         | 12.1 (45.8)              | 57                | 110         | 11.7 (44.3)              |
| <b>2600</b>                       | 18            | 53                 | 101         | 11.1 (42)                | 50                                          | 99          | 10.7 (40.5)              | 47                | 97          | 10.4 (39.4)              |
| <b>2450</b>                       | 26.8          | 94                 | 132         | 16.6 (62.8)              | 89                                          | 132         | 15.9 (60.2)              | 84                | 133         | 15.3 (57.9)              |
| <b>2450</b>                       | 26            | 90                 | 129         | 16.1 (60.9)              | 85                                          | 129         | 15.4 (58.3)              | 81                | 130         | 14.8 (56)                |
| <b>2450</b>                       | 24            | 80                 | 123         | 14.7 (55.6)              | 75                                          | 123         | 14.2 (53.8)              | 72                | 124         | 13.7 (51.9)              |
| <b>2450</b>                       | 22            | 70                 | 116         | 13.5 (51.1)              | 66                                          | 116         | 12.9 (48.8)              | 63                | 117         | 12.5 (47.3)              |
| <b>2450</b>                       | 20            | 60                 | 108         | 12.1 (45.8)              | 57                                          | 108         | 11.6 (43.9)              | 54                | 107         | 11.3 (42.8)              |
| <b>2450</b>                       | 18            | 50                 | 97          | 10.7 (40.5)              | 47                                          | 97          | 10.4 (39.4)              | 45                | 95          | 10.1 (38.2)              |
| <b>2350</b>                       | 26.8          | 90                 | 130         | 16.1 (60.9)              | 85                                          | 131         | 15.5 (58.7)              | 81                | 131         | 14.9 (56.4)              |
| <b>2350</b>                       | 26            | 86                 | 127         | 15.6 (59.1)              | 81                                          | 128         | 15 (56.8)                | 77                | 129         | 14.4 (54.5)              |
| <b>2350</b>                       | 24            | 77                 | 121         | 14.3 (54.1)              | 72                                          | 122         | 13.8 (52.2)              | 69                | 122         | 13.3 (50.3)              |
| <b>2350</b>                       | 22            | 67                 | 114         | 13.1 (49.6)              | 64                                          | 114         | 12.6 (47.7)              | 60                | 114         | 12.2 (46.2)              |
| <b>2350</b>                       | 20            | 57                 | 105         | 11.7 (44.3)              | 54                                          | 105         | 11.3 (42.8)              | 51                | 103         | 11 (41.6)                |
| <b>2350</b>                       | 18.5          | 50                 | 98          | 10.7 (40.5)              | 47                                          | 95          | 10.4 (39.4)              | 45                | 92          | 10.1 (38.2)              |

| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 6000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-27°C) |             |                            | ISA (3°C)                                   |             |                            | ISA + 30°C (33°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>23.9</b>   | <b>94</b>          | <b>135</b>  | <b>16.6 (62.8)</b>         | <b>89</b>                                   | <b>136</b>  | <b>15.9 (60.2)</b>         | <b>84</b>         | <b>137</b>  | <b>15.3 (57.9)</b>         |
| <b>2600</b>                       | 23.9          | 90                 | 133         | 16.1 (60.9)                | 85                                          | 134         | 15.5 (58.7)                | 81                | 134         | 14.9 (56.4)                |
| <b>2600</b>                       | 23            | 85                 | 130         | 15.5 (58.7)                | 80                                          | 130         | 14.8 (56)                  | 76                | 131         | 14.3 (54.1)                |
| <b>2600</b>                       | 22            | 80                 | 126         | 14.8 (56)                  | 75                                          | 127         | 14.2 (53.8)                | 72                | 127         | 13.6 (51.5)                |
| <b>2600</b>                       | 20            | 68                 | 117         | 13.2 (50)                  | 64                                          | 117         | 12.7 (48.1)                | 61                | 117         | 12.3 (46.6)                |
| <b>2600</b>                       | 19            | 63                 | 113         | 12.5 (47.3)                | 59                                          | 112         | 12 (45.4)                  | 56                | 111         | 11.6 (43.9)                |
| <b>2600</b>                       | 18            | 57                 | 108         | 11.7 (44.3)                | 54                                          | 106         | 11.3 (42.8)                | 51                | 104         | 10.9 (41.3)                |
| <b>2450</b>                       | 23.9          | 85                 | 129         | 15.4 (58.3)                | 80                                          | 130         | 14.8 (56)                  | 76                | 131         | 14.2 (53.8)                |
| <b>2450</b>                       | 23            | 80                 | 126         | 14.8 (56)                  | 75                                          | 127         | 14.2 (53.8)                | 72                | 127         | 13.7 (51.9)                |
| <b>2450</b>                       | 22            | 75                 | 123         | 14.1 (53.4)                | 71                                          | 123         | 13.6 (51.5)                | 67                | 123         | 13.1 (49.6)                |
| <b>2450</b>                       | 20            | 64                 | 114         | 12.7 (48.1)                | 61                                          | 114         | 12.2 (46.2)                | 58                | 113         | 11.8 (44.7)                |
| <b>2450</b>                       | 19            | 59                 | 110         | 12 (45.4)                  | 56                                          | 109         | 11.6 (43.9)                | 53                | 107         | 11.2 (42.4)                |
| <b>2450</b>                       | 18            | 54                 | 104         | 11.3 (42.8)                | 51                                          | 102         | 10.9 (41.3)                | 49                | 99          | 10.6 (40.1)                |
| <b>2350</b>                       | 23.9          | 81                 | 127         | 15 (56.8)                  | 77                                          | 128         | 14.4 (54.5)                | 73                | 128         | 13.8 (52.2)                |
| <b>2350</b>                       | 23            | 77                 | 124         | 14.3 (54.1)                | 73                                          | 124         | 13.8 (52.2)                | 69                | 124         | 13.3 (50.3)                |
| <b>2350</b>                       | 22            | 72                 | 121         | 13.7 (51.9)                | 68                                          | 121         | 13.2 (50)                  | 65                | 120         | 12.7 (48.1)                |
| <b>2350</b>                       | 20            | 62                 | 112         | 12.3 (46.6)                | 58                                          | 111         | 11.9 (45)                  | 55                | 110         | 11.5 (43.5)                |
| <b>2350</b>                       | 19            | 57                 | 107         | 11.7 (44.3)                | 54                                          | 106         | 11.2 (42.4)                | 51                | 103         | 10.9 (41.3)                |
| <b>2350</b>                       | 18.5          | 54                 | 104         | 11.3 (42.8)                | 51                                          | 102         | 10.9 (41.3)                | 49                | 99          | 10.6 (40.1)                |

| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 9000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-33°C) |             |                            | ISA (-3°C)                                  |             |                            | ISA + 30°C (27°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>21.3</b>   | <b>85</b>          | <b>133</b>  | <b>15.4 (58.3)</b>         | <b>80</b>                                   | <b>133</b>  | <b>14.7 (55.6)</b>         | <b>76</b>         | <b>133</b>  | <b>14.2 (53.8)</b>         |
| <b>2600</b>                       | 21.3          | 81                 | 130         | 15 (56.8)                  | 77                                          | 131         | 14.3 (54.1)                | 73                | 131         | 13.8 (52.2)                |
| <b>2600</b>                       | 20            | 73                 | 124         | 13.8 (52.2)                | 69                                          | 124         | 13.3 (50.3)                | 65                | 123         | 12.8 (48.5)                |
| <b>2600</b>                       | 19            | 67                 | 119         | 13.1 (49.6)                | 64                                          | 119         | 12.6 (47.7)                | 60                | 118         | 12.1 (45.8)                |
| <b>2600</b>                       | 18            | 62                 | 114         | 12.3 (46.6)                | 58                                          | 113         | 11.9 (45)                  | 55                | 111         | 11.5 (43.5)                |
| <b>2450</b>                       | 21.3          | 77                 | 127         | 14.3 (54.1)                | 72                                          | 127         | 13.7 (51.9)                | 69                | 127         | 13.2 (50)                  |
| <b>2450</b>                       | 20            | 69                 | 121         | 13.3 (50.3)                | 65                                          | 121         | 12.8 (48.5)                | 62                | 119         | 12.3 (46.6)                |
| <b>2450</b>                       | 19            | 64                 | 116         | 12.6 (47.7)                | 60                                          | 115         | 12.1 (45.8)                | 57                | 114         | 11.7 (44.3)                |
| <b>2450</b>                       | 18            | 59                 | 111         | 11.9 (45)                  | 55                                          | 109         | 11.4 (43.2)                | 52                | 106         | 11.1 (42)                  |
| <b>2350</b>                       | 19            | 66                 | 121         | 12.9 (48.8)                | 62                                          | 120         | 12.4 (46.9)                | 59                | 117         | 11.9 (45)                  |
| <b>2350</b>                       | 18            | 60                 | 115         | 12.2 (46.2)                | 57                                          | 113         | 11.7 (44.3)                | 54                | 110         | 11.3 (42.8)                |

| <b>Weight:</b> 1160 kg             |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|------------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH          |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 12000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                                | MAP<br>[inHg] | ISA – 30°C (-39°C) |             |                            | ISA (-9°C)                                  |             |                            | ISA + 30°C (21°C) |             |                            |
|                                    |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                        | <b>19</b>     | <b>75</b>          | <b>128</b>  | <b>14.1 (53.4)</b>         | <b>70</b>                                   | <b>128</b>  | <b>13.5 (51.1)</b>         | <b>67</b>         | <b>128</b>  | <b>13 (49.2)</b>           |
| <b>2600</b>                        | 19            | 72                 | 126         | 13.7 (51.9)                | 68                                          | 126         | 13.2 (50)                  | 64                | 125         | 12.7 (48.1)                |
| <b>2600</b>                        | 18            | 66                 | 121         | 13 (49.2)                  | 63                                          | 120         | 12.4 (46.9)                | 59                | 118         | 12 (45.4)                  |
| <b>2450</b>                        | 19            | 68                 | 123         | 13.2 (50)                  | 64                                          | 122         | 12.7 (48.1)                | 61                | 121         | 12.2 (46.2)                |
| <b>2450</b>                        | 18            | 63                 | 118         | 12.5 (47.3)                | 59                                          | 116         | 12 (45.4)                  | 56                | 113         | 11.6 (43.9)                |
| <b>2350</b>                        | 19            | 66                 | 121         | 12.9 (48.8)                | 62                                          | 120         | 12.4 (46.9)                | 59                | 117         | 11.9 (45)                  |
| <b>2350</b>                        | 18            | 60                 | 115         | 12.2 (46.2)                | 57                                          | 113         | 11.7 (44.3)                | 54                | 110         | 11.3 (42.8)                |

**11. LANDING PERFORMANCES****NOTE**

To account for likely in service performance variations apply a factored to distances of 1.67

| Weight = 1160 kg (2557 lb)           |              | Corrections                                   |               |               |               |                       |
|--------------------------------------|--------------|-----------------------------------------------|---------------|---------------|---------------|-----------------------|
| Flaps: LAND                          |              | Headwind: -4 m for each kn                    |               |               |               |                       |
| Short Final Approach Speed = 66 KIAS |              | Tailwind: +13 m for each kn                   |               |               |               |                       |
| Throttle Lever: Idle                 |              | Grass Runway: +10% to Ground Roll             |               |               |               |                       |
| Runway: Paved                        |              | Runway slope: -3% to Ground Roll for each +1% |               |               |               |                       |
| Pressure<br>Altitude<br>[ft]         |              | Distance [m]<br>(Distance [ft])               |               |               |               |                       |
|                                      |              | Temperature [°C]                              |               |               |               | ISA                   |
|                                      |              | -25                                           | 0             | 25            | 50            |                       |
| S.L.                                 | Ground Roll  | 204<br>(669)                                  | 225<br>(738)  | 245<br>(804)  | 266<br>(873)  | <b>237<br/>(778)</b>  |
|                                      | At 50 ft AGL | 488<br>(1601)                                 | 509<br>(1670) | 529<br>(1736) | 550<br>(1804) | <b>521<br/>(1709)</b> |
| 1000                                 | Ground Roll  | 212<br>(696)                                  | 233<br>(764)  | 254<br>(833)  | 276<br>(906)  | <b>244<br/>(801)</b>  |
|                                      | At 50 ft AGL | 496<br>(1627)                                 | 517<br>(1696) | 538<br>(1765) | 560<br>(1837) | <b>528<br/>(1732)</b> |
| 2000                                 | Ground Roll  | 220<br>(722)                                  | 242<br>(794)  | 264<br>(866)  | 286<br>(938)  | <b>251<br/>(823)</b>  |
|                                      | At 50 ft AGL | 504<br>(1654)                                 | 526<br>(1726) | 548<br>(1798) | 570<br>(1870) | <b>535<br/>(1755)</b> |
| 3000                                 | Ground Roll  | 228<br>(748)                                  | 251<br>(823)  | 274<br>(899)  | 297<br>(974)  | <b>259<br/>(850)</b>  |
|                                      | At 50 ft AGL | 512<br>(1680)                                 | 535<br>(1755) | 558<br>(1831) | 581<br>(1906) | <b>543<br/>(1781)</b> |
| 4000                                 | Ground Roll  | 236<br>(774)                                  | 260<br>(853)  | 284<br>(932)  | 308<br>(1010) | <b>267<br/>(876)</b>  |
|                                      | At 50 ft AGL | 520<br>(1706)                                 | 544<br>(1785) | 568<br>(1864) | 592<br>(1942) | <b>551<br/>(1808)</b> |
| 5000                                 | Ground Roll  | 245<br>(804)                                  | 270<br>(886)  | 295<br>(968)  | 320<br>(1050) | <b>275<br/>(902)</b>  |
|                                      | At 50 ft AGL | 529<br>(1736)                                 | 554<br>(1818) | 579<br>(1900) | 604<br>(1982) | <b>559<br/>(1834)</b> |
| 6000                                 | Ground Roll  | 255<br>(837)                                  | 280<br>(919)  | 306<br>(1004) | 332<br>(1089) | <b>284<br/>(932)</b>  |
|                                      | At 50 ft AGL | 539<br>(1768)                                 | 564<br>(1850) | 590<br>(1936) | 616<br>(2021) | <b>568<br/>(1864)</b> |

## 12. BALKED LANDING PERFORMANCE

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb and to angle of climb of 0.90

| Throttle and Propeller Lever: Full Forward |                   |                              |      |     |      |             |
|--------------------------------------------|-------------------|------------------------------|------|-----|------|-------------|
| Flaps: LAND                                |                   |                              |      |     |      |             |
| Speed: 67 KIAS                             |                   |                              |      |     |      |             |
| Weight                                     | Pressure Altitude | Steady Gradient of Climb [%] |      |     |      |             |
|                                            |                   | Temperature [°C]             |      |     |      | ISA         |
| [kg]<br>[lb]                               | [ft]              | -25                          | 0    | 25  | 50   |             |
| <b>1160<br/>(2557)</b>                     | S.L.              | 10.9                         | 8.6  | 6.6 | 4.7  | <b>7.4</b>  |
|                                            | <b>1000</b>       | 10.0                         | 7.8  | 5.7 | 3.9  | <b>6.7</b>  |
|                                            | <b>2000</b>       | 9.2                          | 6.9  | 4.9 | 3.1  | <b>6.0</b>  |
|                                            | <b>3000</b>       | 8.3                          | 6.1  | 4.1 | 2.3  | <b>5.3</b>  |
|                                            | <b>4000</b>       | 7.4                          | 5.2  | 3.2 | 1.4  | <b>4.6</b>  |
|                                            | <b>5000</b>       | 6.6                          | 4.4  | 2.4 | 0.6  | <b>3.9</b>  |
|                                            | <b>6000</b>       | 5.7                          | 3.5  | 1.6 | -0.2 | <b>3.3</b>  |
|                                            | <b>7000</b>       | 4.8                          | 2.7  | 0.7 | -1.0 | <b>2.6</b>  |
| <b>1060<br/>(2337)</b>                     | S.L.              | 12.9                         | 10.4 | 8.1 | 6.1  | <b>9.0</b>  |
|                                            | <b>1000</b>       | 11.9                         | 9.4  | 7.2 | 5.2  | <b>8.3</b>  |
|                                            | <b>2000</b>       | 11.0                         | 8.5  | 6.3 | 4.3  | <b>7.5</b>  |
|                                            | <b>3000</b>       | 10.0                         | 7.6  | 5.4 | 3.4  | <b>6.8</b>  |
|                                            | <b>4000</b>       | 9.1                          | 6.7  | 4.5 | 2.5  | <b>6.0</b>  |
|                                            | <b>5000</b>       | 8.1                          | 5.7  | 3.6 | 1.7  | <b>5.3</b>  |
|                                            | <b>6000</b>       | 7.2                          | 4.8  | 2.7 | 0.8  | <b>4.5</b>  |
|                                            | <b>7000</b>       | 6.2                          | 3.9  | 1.8 | -0.1 | <b>3.8</b>  |
| <b>960<br/>(2116)</b>                      | S.L.              | 15.2                         | 12.4 | 10  | 7.7  | <b>10.9</b> |
|                                            | <b>1000</b>       | 14.1                         | 11.4 | 9.0 | 6.7  | <b>10.1</b> |
|                                            | <b>2000</b>       | 13.1                         | 10.4 | 7.9 | 5.8  | <b>9.3</b>  |
|                                            | <b>3000</b>       | 12.0                         | 9.3  | 6.9 | 4.8  | <b>8.4</b>  |
|                                            | <b>4000</b>       | 11.0                         | 8.3  | 5.9 | 3.8  | <b>7.6</b>  |
|                                            | <b>5000</b>       | 10.0                         | 7.3  | 4.9 | 2.8  | <b>6.8</b>  |
|                                            | <b>6000</b>       | 8.9                          | 6.3  | 3.9 | 1.8  | <b>6.0</b>  |
|                                            | <b>7000</b>       | 7.9                          | 5.3  | 2.9 | 0.9  | <b>5.2</b>  |



---

### **13. NOISE DATA**

Noise level, determined in accordance with ICAO/Annex 16 6<sup>th</sup> Ed., July 2011, Vol. I°, Chapter 10 and 14 CFR 36.1581(c), is **80.58** dB(A).

*NOTE: No determination has been made by the Federal Aviation Administration that the noise levels of this aircraft are or should be acceptable or unacceptable for operation at, into, or out of, any airport.*

INTENTIONALLY LEFT BLANK

**Supplement D02: pages replacement instructions**

**SECTION 7 – AIRCRAFT AND SYSTEMS DESCRIPTION**

Make sure you first applied instructions reported on the basic AFM,  
Section 7 Aircraft and Systems Description

Apply following pages replacement:

| <b>Supplement D02 –<br/>Performances page</b> |                 | <b>AFM<br/>Section 7 page</b>       |
|-----------------------------------------------|-----------------|-------------------------------------|
| V7-10 thru 11                                 | <b>REPLACES</b> | Page 7-10 thru 11 of AFM, Section 7 |
| V7-16                                         | <b>REPLACES</b> | Page 7-16 of AFM, Section 7         |
| V7-27                                         | <b>REPLACES</b> | Page 7-27 of AFM, Section 7         |
| V7-36                                         | <b>REPLACES</b> | Page 7-36 of AFM, Section 7         |

INTENTIONALLY LEFT BLANK

## **4.1 ENGINE CONTROL LEVER**

Engine handling is via three levers: Throttle, RPM lever, Mixture control lever.

They're situated on the center control; the use of "front/forward" and "rear/backward" is defined in relation to the direction of flight (longitudinal).

### **Mixture control lever**

This lever (right hand lever with red handle) controls the fuel-air mixture, which is supplied to the engine.

With the lever full forward, extra fuel is being supplied to the engine which at higher performance setting contributes to engine cooling.

In cruise, the mixture should be made leaner in order to reach the appropriate fuel-air mixture. The leaning procedure is given in Chapter 4.

Lever forward (RICH) >> Mixture rich (in fuel)

Lever to rear (LEAN) >> Mixture lean (in fuel)

To shut off the engine the mixture control lever is pulled to the rear stop: air without fuel is drawn into the cylinders that shuts down.

### **Throttle**

This lever (left hand with large knob) is used to control manifold pressure (MAP).

High manifold pressure means a large quantity of fuel-air mixture is being supplied to engine, while low manifold pressure means a lesser quantity of fuel-air mixture is being supplied.

### **Propeller lever**

By means of this lever (central lever with blue handle) the propeller governor controls the propeller pitch, and consequently engine RPM. A selected RPM is held constant by the governor independent of the airspeed and the throttle setting.

Lever forward (HIGH RPM) = fine pitch

Lever rearward (LOW RPM) = coarse pitch

Following a defect in governor or oil system, the blades go to the finest possible pitch (maximum RPM), thus allowing continuation of the flight.



*Following failure of the governor or a serious drop in oil pressure, the RPM should be adjusted using the throttle. Every effort should be made not to exceed 2700 RPM.*



*The throttle and RPM lever should be moved slowly, in order to avoid over-speed and excessively rapid RPM changes.*

## 4.2 ALTERNATE AIR

Alternate Air knob is located on the central pedestal; when the knob is fully pulled outward from the instrument panel, injectors receive maximum hot air. During normal operation, the knob is set in OFF position.

## 4.3 DEFROST AND CABIN HEAT

Two knobs, located on the lower side of the central pedestal, allow Defrost and Cabin Heat function. The one marked as “Defrost and Cabin Heat” allows hot air to perform windshield defrost and partially cabin heat.

The cabin heat control knob, when fully outward, allows cabin to receive maximum hot air. When both cabin heat and defrost and cabin heat are pulled, air is partitioned.



Fig. 7-9. CENTRAL PEDESTAL

## 7. POWERPLANT

### 7.1. ENGINE

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Manufacturer .....             | Lycoming Textron                                                                                            |
| Model .....                    | IO-360-M1A                                                                                                  |
| Type Certificate .....         | EASA TCDS no. IM.E.032                                                                                      |
| Engine type .....              | Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets. |
| Maximum power .....            | 134.0 kW (180hp) @ 2700 rpm                                                                                 |
| Maximum continuous power ..... | 129.2 kW (173.3hp) @ 2600 rpm                                                                               |

| Oil Consumption            |      |     |                         |                       |
|----------------------------|------|-----|-------------------------|-----------------------|
| Operation                  | RPM  | HP  | Max. Oil Cons. Qts./Hr. | *Max. Cyl. Head Temp. |
| Normal Rated               | 2700 | 180 | .80                     | 500°F (260°C)         |
| Performance Cruise (75%)   | 2450 | 135 | .45                     | 500°F (260°C)         |
| Economy Cruise (60R Rated) | 2350 | 117 | .39                     | 500°F (260°C)         |

### 7.2. PROPELLER

|                        |                                         |
|------------------------|-----------------------------------------|
| Manufacturer .....     | MT Propeller                            |
| Model .....            | MTV-15-B/193-52                         |
| Type Certificate ..... | EASA TCDS no. P.098                     |
| Blades/hub .....       | wood/composite 2-blades – aluminium hub |
| Diameter .....         | 1930 mm (6,33 ft) no reduction allowed  |
| Type .....             | Variable pitch                          |

#### Governor

|                    |              |
|--------------------|--------------|
| Manufacturer ..... | MT Propeller |
| Model .....        | P-860-23:    |
| Type               | Hydraulic    |

## 11.2 INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

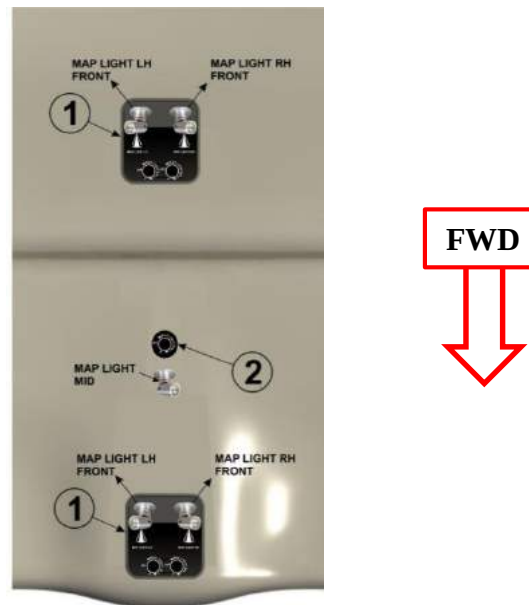


FIG.7-18. CABIN CEILING LIGHTS LAYOUT

The instrument panel can be illuminated by 8 incandescence light strips, all dimmable.



FIG.7-19. INSTRUMENT PANEL LIGHTS LAYOUT



Pedestal placards:



## Supplement no. D03

### AFMS FOR ALTERNATIVE AVIONICS CONFIGURATION

#### Record of Revisions

| Rev | Revised page | Description of Revision                                                                                           | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                                   |
|-----|--------------|-------------------------------------------------------------------------------------------------------------------|-----------------|-----------|----------|-----------------------------------------------------------------------------------------|
|     |              |                                                                                                                   | DO              | OoA       | HDO      |                                                                                         |
| 0   | -            | First Issue                                                                                                       | D. Ronca        | M. Oliva  | M. Oliva |                                                                                         |
| 1   | 2G-13        | Amended to add the wording “Approved” in order to better identify the pages approved according to EASA regulation | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (Approval No. MOD2010/070.160118) |
| 2   | 6G-11,12     | Pages removed                                                                                                     | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (Approval No. MOD2010/103.161026) |
|     |              |                                                                                                                   |                 |           |          |                                                                                         |
|     |              |                                                                                                                   |                 |           |          |                                                                                         |

#### List of Effective Pages

|                    | Page                                           | Revision |
|--------------------|------------------------------------------------|----------|
| <b>Cover Pages</b> | D03-1 thru 22                                  | Rev. 0   |
| <b>Section 2</b>   | 2G-13                                          | Rev. 1   |
| <b>Section 3</b>   | 3G-5 thru 7, 3G-10, 3G-16 thru 17, 3G-25       | Rev. 0   |
| <b>Section 4</b>   | 4G-4 thru 5, 4G-9, 4G-15 thru 18, 4G-20, 4G-24 | Rev. 0   |
| <b>Section 7</b>   | 7G-8 thru 9, 7G-20 thru 24, 7G-27              | Rev. 0   |

## **INDEX**

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>INTRODUCTION .....</b>                                 | <b>3</b>  |
| <b>Section 1 – GENERAL .....</b>                          | <b>5</b>  |
| <b>Section 2 – LIMITATIONS .....</b>                      | <b>7</b>  |
| <b>Section 3 – EMERGENCY PROCEDURES.....</b>              | <b>10</b> |
| <b>Section 4 – NORMAL PROCEDURES .....</b>                | <b>13</b> |
| <b>Section 5 – PERFORMANCE .....</b>                      | <b>16</b> |
| <b>Section 6 – WEIGHT AND BALANCE .....</b>               | <b>18</b> |
| <b>Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION .....</b> | <b>20</b> |
| <b>Section 8 – GROUND HANDLING &amp; SERVICE .....</b>    | <b>22</b> |

## **INTRODUCTION**

The information contained herein supplements or supersedes the basic Aircraft Flight Manual: detailed instructions are provided to allow the owner for replacing the AFM pages containing information amended as per Garmin G500 in subject.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

INTENTIONALLY LEFT BLANK

Supplement D03: pages replacement instructions

### **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

According to A/C configuration refer to the basic AFM, Section 1 – General

INTENTIONALLY LEFT BLANK

**Supplement D03: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

According A/C configuration apply following pages replacement:

| <b>Supplement D03<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 2 page</b>     |
|------------------------------------------------|-----------------|-----------------------------------|
| 2G-13                                          | <b>REPLACES</b> | Page 2-13 of basic AFM, Section 2 |



INTENTIONALLY LEFT BLANK

## 18. KINDS OF OPERATION EQUIPMENT LIST (KOEL)

This paragraph reports the KOEL table, concerning the equipment list required on board under CS-23 regulations to allow flight operations in VFR Day/Night and IFR Day/Night. Flight in VFR Day/Night and IFR is permitted only if the prescribed equipment is installed and operational. Additional equipment, or a different equipment list, for the intended operation may be required by national operational requirements and also depends on the airspace classification and route to be flown.

The owner is responsible for fulfilling these requirements.

| Equipment                                | VFR Day        | VFR Night        | IFR Day        | IFR Night        | Note                                                                                                                                                              |
|------------------------------------------|----------------|------------------|----------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>External Power</b>                    |                |                  |                |                  |                                                                                                                                                                   |
| Circuit Breakers                         | •              | •                | •              | •                | As Required                                                                                                                                                       |
| Battery                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| <b>Safety Equipment &amp; Furnishing</b> |                |                  |                |                  |                                                                                                                                                                   |
| First Aid kit                            | •              | •                | •              | •                |                                                                                                                                                                   |
| Fire extinguisher                        | •              | •                | •              | •                |                                                                                                                                                                   |
| ELT                                      | •              | •                | •              | •                |                                                                                                                                                                   |
| Torch (with spare batt.)                 |                | •                |                | •                |                                                                                                                                                                   |
| <b>Ice Protection</b>                    |                |                  |                |                  |                                                                                                                                                                   |
| Pitot heating system                     |                | •                | •              | •                |                                                                                                                                                                   |
| <b>Landing Gear</b>                      |                |                  |                |                  |                                                                                                                                                                   |
| Wheel pants                              |                |                  |                |                  | Removable                                                                                                                                                         |
| <b>Lights</b>                            |                |                  |                |                  |                                                                                                                                                                   |
| Landing/taxi lights                      | •              | •                | •              | •                |                                                                                                                                                                   |
| Strobe lights                            | •              | •                | •              | •                |                                                                                                                                                                   |
| NAV lights                               | •              | •                | •              | •                |                                                                                                                                                                   |
| Cabin lights                             |                | •                |                | •                |                                                                                                                                                                   |
| Instrument lights                        |                | •                |                | •                |                                                                                                                                                                   |
| Emergency light                          |                | •                |                | •                |                                                                                                                                                                   |
| Dimming Devices                          |                | •                |                | •                |                                                                                                                                                                   |
| Day/Night switch                         |                | •                |                | •                |                                                                                                                                                                   |
| <b>COM/Navigation/Engine parameters</b>  |                |                  |                |                  |                                                                                                                                                                   |
| Magnetic compass                         | •              | •                | •              | •                |                                                                                                                                                                   |
| GARMIN G500 Suite                        | •              | •                | •              | •                |                                                                                                                                                                   |
| GDU 620 (PFD/MFD)                        | •              | •                | •              | •                |                                                                                                                                                                   |
| MD 302 suite                             | •              | •                | •              | •                |                                                                                                                                                                   |
| GTN 650                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| GNC 255A                                 | •              | •                | •              | •                |                                                                                                                                                                   |
| GMA 340                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| DME Indicator-KDI 572                    | •              | •                | •              | •                |                                                                                                                                                                   |
| ADF system - KR 87                       | •              | •                | •              | •                |                                                                                                                                                                   |
| JP Instruments EDM 930                   | •              | •                | •              | •                |                                                                                                                                                                   |
| Remote Alarm Display                     | •              | •                | •              | •                |                                                                                                                                                                   |
| Pitot system                             | •              | •                | •              | •                |                                                                                                                                                                   |
| Clock                                    | •              | •                | •              | •                |                                                                                                                                                                   |
| <b>Flight Controls</b>                   |                |                  |                |                  |                                                                                                                                                                   |
| Pitch trim indicator                     | •              | •                | •              | •                |                                                                                                                                                                   |
| Flap System                              | •              | •                | •              | •                |                                                                                                                                                                   |
| Flaps position lights                    | •              | •                | •              | •                |                                                                                                                                                                   |
| Rudder trim indicator                    | •              | •                | •              | •                |                                                                                                                                                                   |
| Rudder trim system                       | •              | •                | •              | •                | only for VFR operations, rudder trim system may be inoperative provided the trim tab is fixed in the streamlined position and the system is electrically disabled |
| Stall warning system                     | •              | •                | •              | •                |                                                                                                                                                                   |
|                                          | <b>VFR Day</b> | <b>VFR Night</b> | <b>IFR Day</b> | <b>IFR Night</b> |                                                                                                                                                                   |

INTENTIONALLY LEFT BLANK

**Supplement D03: pages replacement instructions**

### **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

According A/C configuration apply following pages replacement:

| <b>Supplement D03<br/>EMERGENCY PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section 3 page</b> |
|---------------------------------------------------------|-----------------|-------------------------------|
| 3G-5                                                    | <b>REPLACES</b> | 3-5 of basic AFM, Section 3   |
| 3G-6                                                    | <b>REPLACES</b> | 3-6 of basic AFM, Section 3   |
| 3G-7                                                    | <b>REPLACES</b> | 3-7 of basic AFM, Section 3   |
| 3G-10                                                   | <b>REPLACES</b> | 3-10 of basic AFM, Section 3  |
| 3G-16                                                   | <b>REPLACES</b> | 3-16 of basic AFM, Section 3  |
| 3G-17                                                   | <b>REPLACES</b> | 3-17 of basic AFM, Section 3  |
| 3G-25                                                   | <b>REPLACES</b> | 3-25 of basic AFM, Section 3  |

INTENTIONALLY LEFT BLANK

## 2. FAILURES INDICATED ON THE ANNUNCIATION PANEL

The annunciator panel, located on the centre of the instrument panel, contains 9 lights for warnings, cautions and advisories. The colours are as follows:

|                      |                                                                                                     |
|----------------------|-----------------------------------------------------------------------------------------------------|
| <b><u>GREEN:</u></b> | to indicate that pertinent device is turned ON                                                      |
| <b><u>AMBER:</u></b> | to indicate no-hazard situations which have to be considered and which require a proper crew action |
| <b><u>RED:</u></b>   | to indicate emergency conditions                                                                    |
| <b><u>WHITE:</u></b> | to indicate advisory messages                                                                       |

### 2.1 ALTERNATOR FAILURE



If **ALT FAIL** caution is **ON**:

1. Circuit breaker(s)..... *Check*
2. Generator SWITCH..... *OFF*
3. Generator SWITCH..... *ON*


If **ALT FAIL** CAUTION REMAINS on:

4. Generator SWITCH..... *OFF*


#### **NOTE**

*A fully charged battery shall supply electrical power for at least 30 minutes.*

## 2.2 PITOT HEATING SYSTEM FAILURE

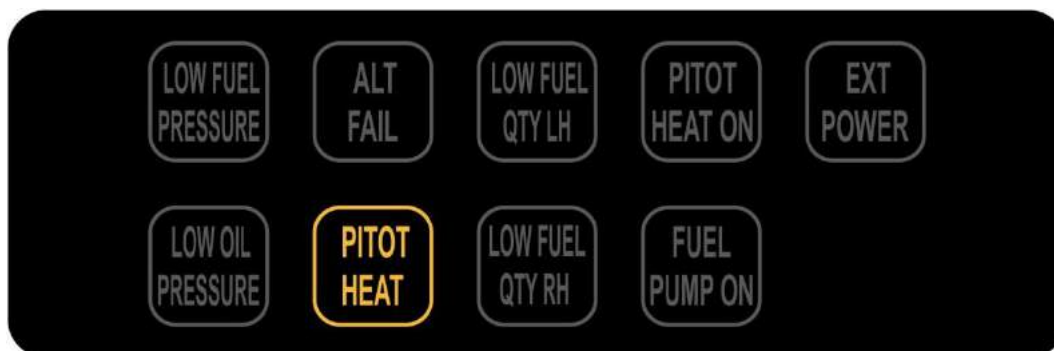

When the Pitot Heating system is activated, the green **PITOT HEAT ON** advisory light turns on and the amber **PITOT HEAT** caution light turns **OFF**, indicating that the Pitot Heating system is functioning properly.

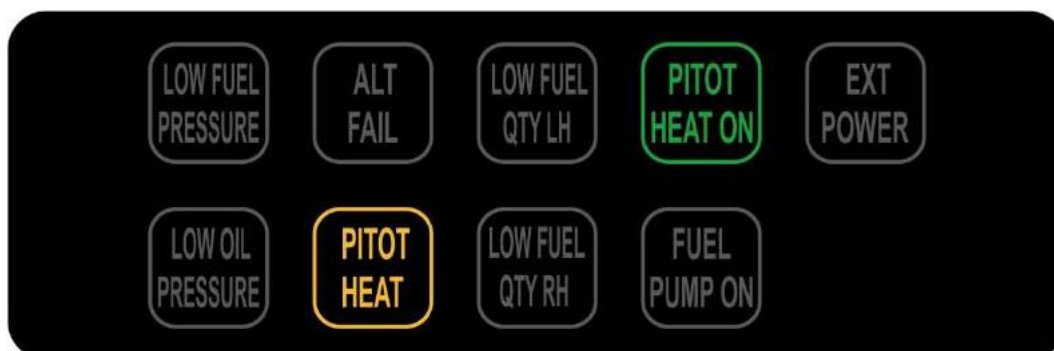

If the amber **PITOT HEAT** caution light is **ON** when the green **PITOT HEAT ON** light is on, then the Pitot Heating system is not functioning properly.

In this case apply following procedure:

1. Pitot heat switch ..... **OFF**
2. Pitot heat circuit breaker ..... **CHECK IN**
3. Pitot heat switch ..... **ON**
4. **PITOT HEAT** caution light ..... **CHECK**

**NOTE**

*if the amber light stays ON, avoid visible moisture and OATs below 10° C.*

### 3. G500 SYSTEM FAILURES

#### 3.1 LOSS OF INFORMATION DISPLAYED

When a LRU or a LRU function fails, a large red 'X' is typically displayed on the display field associated with the failed data.

#### NOTE

*In most of cases, the red "X" annunciation is accompanied by a message advisory alert issuing a flashing ADVISORY Softkey annunciation which, once selected, acknowledges the presence of the message advisory alert and displays the alert text message in the Alerts Window.*

#### 3.2 LOSS OF AIRSPEED INFORMATION

|                                                                                    |                                                                               |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
|  | <p><b>AIRSPEED FAIL</b><br/>(RED X ON DISPLAY FIELD)</p>                      |
|                                                                                    | <p>Display system is not receiving airspeed input from Air Data Computer.</p> |

**INSTRUCTION:** revert to standby instrument



### 3.7 DISPLAY FAILURE

In case of display failure refer to backup instrument (MD302) for primary flight information, and to GTN650 for navigation information.

### 3.8 LOW FUEL QUANTITY LEFT



#### If fuel quantity LH is under 24 litres

1. Fuel tank selector ..... Switch to RH fuel tank

### 3.9 LOW FUEL QUANTITY RIGHT



#### If fuel quantity RH is under 24 litres

1. Fuel tank selector ..... Switch to LH fuel tank

### 3.10 LOW FUEL QUANTITY LEFT AND RIGHT




#### If fuel quantity LH and RH is under 24 litres

1. **Land as soon as practical:** land at the nearest approved landing area where suitable repairs can be made.

## 6.7 OIL PRESSURE LIMITS EXCEEDANCE

### LOW OIL PRESSURE

If oil pressure is under the lower limit (25 psi)

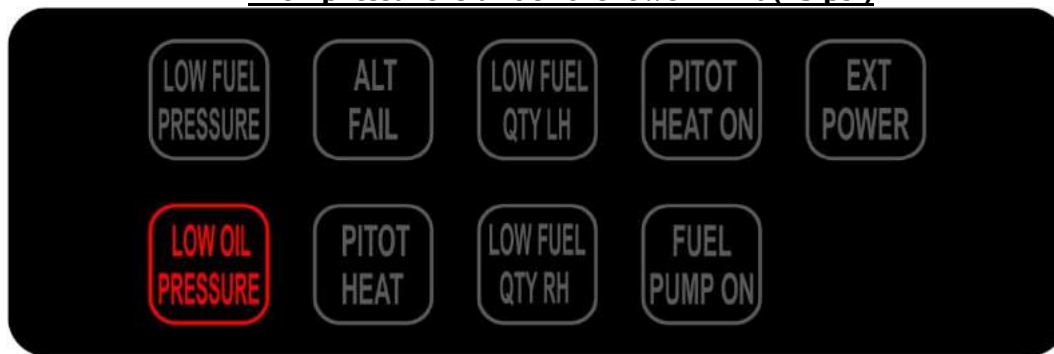

1. Throttle Lever ..... *REDUCE to minimum practical*
2. Mixture Lever ..... *as required*
3. OIL TEMP ..... *CHECK within limits*
4. OIL PRESS ..... *CHECK*

If oil pressure does not increase and temperature remains within limits

Monitor oil and cylinder head temperatures.

Land as soon as practicable.

If oil pressure does not increase and temperature exceeds limits

Reduce engine power to minimum required.

Land as soon as possible applying Forced landing procedure. (See Para 11)

Be prepared for engine failure and emergency landing.

If oil pressure tends to zero (combined with vibration, loss of oil, unusual metallic smoke and noise)

Apply Forced landing procedure. (See Para 11)

### HIGH OIL PRESSURE

If oil pressure exceeds upper limit (115 psi)

1. Throttle Lever ..... *first REDUCE engine power by 10%*
2. Mixture Lever ..... *as required*
3. OIL PRESS ..... *CHECK*


If oil pressure does not increase

4. Land as soon as possible applying Forced landing procedure. (See Para 11)

#### NOTE

An excessive oil pressure value can be counteracted by decreasing propeller rpm.

## 6.8 LOW FUEL PRESSURE

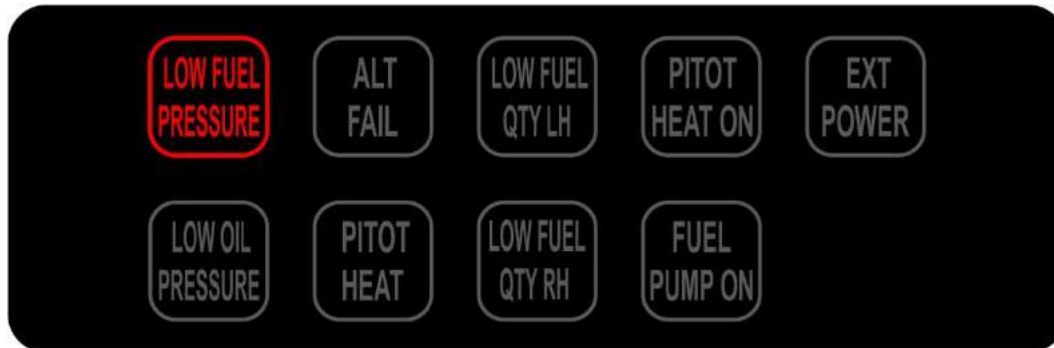

### If fuel pressure decreases below the lower limit (14 psi)

1. Electric fuel pump.....ON
2. Fuel selector valve.....Select opposite fuel tank if NOT empty
3. Fuel quantity .....CHECK

If fuel pressure doesn't build up:

1. **Land as soon as practical.** Prepare for potential engine failure and prepare to apply *Forced landing procedure*. (See Para 11)

## 6.9 HIGH FUEL PRESSURE

### If fuel pressure increases above the upper limit (35 psi)

1. **Land as soon as possible.** Prepare for potential engine shut down and apply *Forced landing procedure*. (See Para 11)

Possible injector failure or obstruction.

## 10. OTHER EMERGENCIES

### 10.1 LOSS OF ESSENTIAL BUS

In case of loss of essential bus, the following will be lost (related breakers are listed):

|               |               |
|---------------|---------------|
| PFD/MFD       | FLAP ACTUATOR |
| COM1          | PITOT HEAT    |
| GPS/NAV1      | STROBE LIGHT  |
| EIS           | LANDING LIGHT |
| FUEL PUMP     | AHRS          |
| FIELD         | ADC           |
| STALL WARNING | ANN. PANEL    |
| XPDR          |               |

Electrical power from Alternator is lost, battery will automatically provide energy (duration at least 30 min.).

Pilot will need to make reference to standby instrument for primary flight information and parameters.

Pilot will be able to use the audio panel and COM2/NAV2.

Engine parameters and related warnings/cautions are lost.

Flaps extension and retraction will be lost, apply Flaps control failure procedure (See Para 10.6).

Strobe and landing lights will be lost, NAV and taxi lights are still available; taxi light will be the only visual aid for landing in night conditions.

### 10.2 LOSS OF MAIN BUS

In case of loss of main bus, the main bus voltage will drop to zero.

The following will be lost (related breakers are listed):

|                                                      |                      |                                       |
|------------------------------------------------------|----------------------|---------------------------------------|
| AUDIO PANEL                                          | NAV LIGHT            | INSTRUMENT (clock, pitch trim indic.) |
| A.D.I. (available running on internal battery power) | TAXI LIGHT           | COM2                                  |
| INSTR. LIGHT                                         | 28/12 VDC CONVERTER  | NAV2                                  |
| CABIN LIGHT                                          | RUDDER TRIM ACTUATOR | ADF                                   |
| START                                                | 12VDC SOCKET         | DME                                   |

Fail safe operation of audio panel allows pilot to transmit and use COM1 using headphones only; speakers will not be available.

For night flights, all instrument lights will be lost, but emergency light will still be available.

INTENTIONALLY LEFT BLANK

**Supplement D03: pages replacement instructions**

**SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures**

According A/C configuration apply following pages replacement:

| <b>Supplement D03 –<br/>NORMAL PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section 4 page</b>     |
|--------------------------------------------------------|-----------------|-----------------------------------|
| 4G-4                                                   | <b>REPLACES</b> | Page 4-4 of basic AFM, Section 4  |
| 4G-5                                                   | <b>REPLACES</b> | Page 4-5 of basic AFM, Section 4  |
| 4G-9                                                   | <b>REPLACES</b> | Page 4-9 of basic AFM, Section 4  |
| 4G-15                                                  | <b>REPLACES</b> | Page 4-15 of basic AFM, Section 4 |
| 4G-16                                                  | <b>REPLACES</b> | Page 4-16 of basic AFM, Section 4 |
| 4G-17                                                  | <b>REPLACES</b> | Page 4-17 of basic AFM, Section 4 |
| 4G-18                                                  | <b>REPLACES</b> | Page 4-18 of basic AFM, Section 4 |
| 4G-20                                                  | <b>REPLACES</b> | Page 4-20 of basic AFM, Section 4 |
| 4G-24                                                  | <b>REPLACES</b> | Page 4-24 of basic AFM, Section 4 |

INTENTIONALLY LEFT BLANK

## 2. IFR FLIGHT: G500 GROUND TRAINING PRE-REQUISITES

The aircraft is equipped with a Garmin G500 avionic suite that integrates radio aids navigation with GPS navigation, providing an outstanding capability to support IFR flight, from basic instrument flight training to complex IFR scenario.

### NOTE

*Depending on national regulations, in some countries flying IFR with a single engine aircraft without autopilot installation and/or single pilot may or may not be allowed, any customer must pay careful attention to check limitations that may apply.*

The use of G500 software requires full system knowledge (Garmin applicable manual with specific peculiar limitations), careful preparation, ground and pre-flight training before flight.

Furthermore, as a minimum during training, it's strongly recommended using the avionic suite in IFR with incremental steps after initial basic IFR instruction:

1. Initial use of a single radio-aids (No GPS);
2. Use of two radio-aids (No GPS);
3. Use of GPS for point to point navigation (No approaches);
4. Use of VNAV feature;
5. Full use of avionic suite.

The flight training syllabus for IFR instruction will need to address this incremental approach in order to give pilots awareness of full avionic potential, and to highlight the complexity of single pilot usage of G500 Garmin suite enroute or inside high density airspace structure.



### CAUTION

*During IFR flight, the workload that may develop using full avionic suite could get high in single pilot; pilot planning is important and essential in order to correctly address all avionic functions and aids.*

Considering the complexity of the G500 suite, sound judgment will be required (weather, airspace complexity, pilot skills) to assess the best option for IFR steer guidance.



**NOTE**

*The necessity to correct or modify flight plans in the Garmin G500 under these conditions may distract pilots from basic handling causing deviations from assigned parameters, so careful attention must be exercised to avoid deviations on flying parameters.*

*It's highly recommended to continue cross-checking flight parameters when entering flight data into the G500, especially when trying to create / insert arrival and departure procedures and / or VNAV profiles as the quantity of actions needed is high and may distract pilots from basic and precise handling.*

The following prescriptions, other than those already present in the G500 manual, shall be observed:

- Use of GPS for precision approach navigation mode is not allowed.
- Use of GPS is prohibited as primary means for navigation. GPS is approved as supplemental means for navigation;
- Use of GPS is prohibited for IFR in terminal area or in non-precision approach operations;

If Receiver Autonomous Integrity Monitoring (RAIM) function becomes unavailable in enroute phase of flight, position must be verified every 15 minutes using other IFR approved navigation system.

**Turbulence and / or Crosswind:**

Presence of moderate to heavy turbulence and / or strong crosswind conditions (above 20 kts crosswind) will require high drift angle to correct for wind (above 15° drift) and highly reduce spare capabilities to do other concurrent tasks inside the cockpit other than precise flying.

## **4. PRE-FLIGHT INSPECTION**

Before each flight, it is necessary to carry out a complete aircraft check including a cabin inspection followed by an external inspection, as below detailed.

### **4.1 CABIN INSPECTION**

1. Aircraft documents (ARC, Certificate of Airworthiness, Noise certificate, Radio COM certificate, AFM): *check current and on board*
2. Weight and balance: *calculate (ref. to Section 6) and check within limits*
3. Breaker: *all IN*
4. Safety belts: *connected to hard points, check condition*
5. Ignition key: *OFF, key extracted*
6. Master switch: *ON*
7. Voltmeter: *check within the limits*
8. Lights: *all ON, check for operation*
9. Annunciator panel: *check all lights*
10. Acoustic stall warning: *check for operation*
11. Master switch: *OFF*
12. Baggage: *check first aid kit, ELT, fire extinguisher, luggage secured with restraint net.*

## 5. CHECKLISTS

### 5.1 BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*
2. Flight controls: operate full stroke checking for movement smoothness, free of play and friction.
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Throttle: *IDLE*
6. Mixture control Lever: *LEAN*
7. Circuit Breakers: *check all IN*
8. Master switch: *ON*, wait EDM930 turn on, Check ALT OUT caution ON, Check LOW FP and LOW OP warning ON
9. Only before the first flight of the day:
  - Standby Instrument: Check no red crosses displayed.
  - a. Press and hold the control knob (approx. 2 sec)
  - b. Rotate the knob selecting "INFO>" page then press it
  - c. Select "BATTERY INFO" page then press the knob
  - d. Check "CHARGE (%)" to be more than 80%, then exit menu
10. Avionic Master switch: *ON*
11. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection), then update the EDM930 fuel content in the totalizer accordingly)*

#### NOTE

The totalizer function available on EDM930 Engine page allows input only up to 230lbs (maximum usable fuel). Initial Fuel indication on totalizer must be corrected manually (as it does not use the aircraft fuel quantity indicators as input). Once correctly initialized, fuel consumption on totalizer is very precise as it take instantaneous fuel flow for computation.

12. Electric fuel pump: *ON (check for audible pump noise and increase of fuel pressure)*
13. Warning "LOW FUEL PRESSURE": *extinguished*
14. Electric fuel pump: *OFF*
15. Flap control: *cycle fully extended and then set to T/O*
16. Pitch Trim: *cycle fully up and down, then set to NEUTRAL*
17. Rudder trim: *cycle full right and left, then set to NEUTRAL*



Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct  $V_R$ .

#### WARNING

18. Nav & Strobe lights: *ON*

#### NOTE

In absence of RH seat occupant: *fasten seat belts around the seat in order to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency.*

19. Doors: *Closed and locked*

## 5.2 ENGINE STARTING

### (a) Cold engine

1. Engine throttle: *1cm above idle*
2. Fuel selector valve: *select the tank with less fuel*
3. Electric fuel pump: *ON*
4. Mixture: *full open for 3 – 5" (positive fuel flow indication) then CUT-OFF*
5. Propeller area: *check that area is clear of persons / objects*



*Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.*



CAUTION

*Do not overheat the starter motor. Do not operate it for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.*

6. Ignition key: *BOTH*
7. Ignition key: *START*

*When engine start turning and first indication of a starting condition exist:*

8. Mixture: *rapidly move to FULL RICH*
9. Throttle: *set 1000 – 1200 RPM*
10. Check oil pressure rises within 10 sec.
11. Check "OIL PRESSURE LOW": *extinguished*
12. Electric fuel pump: *OFF*
13. Check fuel pressure: *within limits*
14. Generator switch: *ON*
15. Voltmeter: *increase and check within green arc*
16. ALT FAIL caution: *extinguished*

### NOTE

*Avoid idling operations on the ground for optimum engine operation, maintain 1000-1200 RPM, do not exceed 2200 RPM on the ground.*

17. Engine instruments: *Check within limits*
18. Check for annunciator panel with no cautions

**(b) Warm engine**

1. Engine throttle: idle
2. Fuel selector valve: *select the tank with less fuel*
3. Electric fuel pump: *ON*
4. Propeller area: *check for area clear of persons / objects*

**WARNING**

*Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.*

**CAUTION**

*Do not overheat the starter motor. Do not operate it for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.*

5. Ignition key: *BOTH*
6. Ignition key: *START*

*When engine start turning and first indication of a starting condition exist:*

7. Mixture: *rapidly move to FULL RICH*
8. Throttle: *set 1000 – 1200 RPM*
9. Check oil pressure rises within 10 sec.
10. Check “OIL PRESSURE LOW”: *extinguished*
11. Electric fuel pump: *OFF*
12. Check fuel pressure *within limits*
13. Generator switch: *ON*
14. Voltmeter: *increase and check within green arc*
15. ALT FAIL caution: *extinguished*

**NOTE**

*Avoid idling operations on the ground for optimum engine operation, maintain 1000-1200 RPM, do not exceed 2200 RPM on the ground.*

16. Engine instruments: *check within green arc*
17. Check for annunciator panel with no cautions

### 5.3 BEFORE TAXIING

1. Flight instruments and avionics: *set, TEST functions*
2. Altimeter: *set*
3. Pitot Heat: *ON, test for ammeter indication, then OFF*
4. Taxi light: *ON*
5. Parking brake: *OFF*

**CAUTION**

*When taxiing at close range to other aircraft, or during night flight in clouds, fog or haze, the strobe lights should be switched OFF. The NAV lights must always be switched ON during night procedures.*

### 5.4 TAXIING

1. Parking brake: *Release*
2. Brakes: *check*
3. Flight instruments: *check altimeter.*

#### NOTE

*Avoid prolonged idling during taxi.*

**CAUTION**

*Alternator lights may appear when reducing engine RPM below 950 RPM (yellow a. The light will stay ON until RPM is increased above.*

*During taxi, it is recommended to maintain propeller speed at 1000RPM or above in order to preserve a full loaded battery, minimise annunciator nuisance and assure maximum battery performance during flight. Furthermore this is particularly true during cold weather to prevent lead fouling of spark plugs.*

*Following extended operation on the ground, or at high ambient temperatures, the following indications of fuel vapor lock may appear:*

- Arbitrary changes in idle RPM and fuel flow;
- Slow reaction of the engine to operation of throttle;
- Engine will not run with throttle in IDLE position.

**CAUTION**

#### **Solution:**

1. *For about 1 to 2 minutes, or until the engine settles, run at a speed of 1800 to 2000 RPM. Oil and cylinder head temperatures must stay within limits.*
2. *Pull throttle back to IDLE to confirm smooth running.*
3. *Set throttle to 1200 RPM and mixture for taxiing, i.e., use mixture control lever to set the maximum RPM attainable.*
4. *Immediately before the take-off run set the mixture for take-off, apply full throttle and hold this position for 10 seconds.*

#### NOTE

*Vapor lock can be avoided if the engine is run at speeds of 1800 RPM or more.*

## 5.6 TAKEOFF

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft density altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until increase of approx. 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Pitot HEAT: *ON if required*
2. Fuel pump: *ON*
3. Brakes: *apply*
4. Throttle: *FULL and check approximately 2100 ± 100 RPM*

**WARNING**

*Engine proper performance at full throttle shall be checked early in the ground roll in order to abandon take-off if necessary.*

*A rough engine, sluggish RPM increase or failure to reach take-off RPM are reasons for abandoning the take-off. If the engine oil is cold, an oil pressure in the yellow sector is permissible.*

5. Engine instruments: *check parameters within the limits*
6. Brakes: *Release*
7. Rotation speed  $V_R$ : *60 KIAS*
8. Landing lights: *OFF*

**5.11 BEFORE LANDING**

1. Electric fuel pump: *ON*
2. Fuel valve: *select the fullest tank*
3. Landing Light: *ON*

*On downwind, leg abeam touch down point:*

4. Flaps: *set T/O (below 90KIAS)*

**NOTE**

*Expect to adjust pitch trim (pitch down) when extending flaps to T/O or LAND*

5. Approach speed: *set*

*On final leg, before landing:*

6. Mixture control lever: *RICH*
7. Flaps: *LAND*
8. Final Approach Speed: *set*
9. Optimal touchdown speed: *60 KIAS*



*In conditions such as (e.g.) strong wind, danger of windshear or turbulence a higher approach speed shall be selected.*

**CAUTION****5.12 BALKED LANDING/MISSED APPROACH**

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

*Above a safe height:*

4. Landing lights: *OFF*

**5.13 GO-AROUND**

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

**5.14 AFTER LANDING**

1. Throttle: *Idle*
2. Brakes: *apply*
3. Pitot heat: *OFF (if ON)*
4. Flaps: *UP*
5. Electric Fuel Pump: *OFF*
6. XPDR: *OFF*
7. Landing light: *OFF*
8. Taxi Light: *ON*



INTENTIONALLY LEFT BLANK

Supplement D03: pages replacement instructions

## **SECTION 5 – PERFORMANCE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 5 Performance**

According to A/C configuration refer to the basic AFM, Section 5 – Performance

INTENTIONALLY LEFT BLANK

Supplement D03: pages replacement instructions

## **SECTION 6 – WEIGHT AND BALANCE**

Refer to the basic AFM, Section 6 Weight and Balance

INTENTIONALLY LEFT BLANK

**Supplement D03: pages replacement instructions**

## **SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**

**Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems Description**

According A/C configuration apply following pages replacement:

| <b>Supplement D03 –<br/>AIRFRAME AND SYSTEMS<br/>page</b> |                 | <b>AFM<br/>Section 7 page</b>     |
|-----------------------------------------------------------|-----------------|-----------------------------------|
| 7G-8                                                      | <b>REPLACES</b> | Page 7-8 of basic AFM, Section 7  |
| 7G-9                                                      | <b>REPLACES</b> | Page 7-9 of basic AFM, Section 7  |
| 7G-20                                                     | <b>REPLACES</b> | Page 7-20 of basic AFM, Section 7 |
| 7G-21                                                     | <b>REPLACES</b> | Page 7-21 of basic AFM, Section 7 |
| 7G-22                                                     | <b>REPLACES</b> | Page 7-22 of basic AFM, Section 7 |
| 7G-23                                                     | <b>REPLACES</b> | Page 7-23 of basic AFM, Section 7 |
| 7G-24                                                     | <b>REPLACES</b> | Page 7-24 of basic AFM, Section 7 |
| 7G-27                                                     | <b>REPLACES</b> | Page 7-27 of basic AFM, Section 7 |

INTENTIONALLY LEFT BLANK

### **3. FLIGHT CONTROLS**

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

The control of the stabilator trim is operated by means of a control wheel, located between the two front seats that acts directly on the control cables.

Stabilator trim position is displayed on a dedicated analogue indicator located on the LH area of the instrument panel.

Rudder Trimming device for lateral control is provided by means of an electrical actuator controlled by a rocker switch located near the pitch trim wheel; the surface is connected to a potentiometer linked to a rudder trim analogue indicator located on the LH area of the instrument panel.



## 4. INSTRUMENT PANEL

The instrument panel installed on P2010, when equipped with G500 suite, is presented below:

- N° 1 Garmin GDU 620 (PFD/MFD), (5);
- N° 1 Garmin GTN 650 (Com/Nav/Gps), (9);
- N° 1 Garmin GNC 255A (Com/Nav), (10);
- N° 1 Garmin GMA 340 (Audio Panel), (8);
- N° 1 Bendix/King KN 572 (DME unit), (14);
- N° 1 Bendix/King KR87 (ADF unit), (11);
- N° 1 JP Instruments EDM 930 (EIS unit), (13);
- N° 1 JP Instruments EDM 930 Remote Alarm Display, (12);
- N° 1 Mid-Continent MD-302 (Stand-by Instrument), (6);
- N° 1 Annunciator panel, (7);
- N° 1 Pitch trim indicator, (3);
- N° 1 Rudder trim indicator, (4);
- N° 1 Chronometer (2);



Fig. 7-8. INSTRUMENT PANEL

## 5. ELECTRICAL SYSTEM

Primary DC power is provided by an external alternator with a 28 VDC output, rated of 70 Amps @ 2700 rpm. During normal operations, it recharges the battery.

Secondary DC power is provided by a lead type battery (GILL G-247) which provides the energy necessary for feeding the essential electrical loads in the event of an alternator failure.

The switch between the energy sources is automatic and no action is required in order to activate the alternate energy source.

For ground maintenance and/or starting, an external power socket is provided.

The alternator and battery are connected to the battery bus in order to provide energy for the electric equipment.

Each electrically fed instrument is connected to a dedicated circuit breaker which protects the cable from the battery bus to the associated electric equipment.



*If the Ignition is in the position L, R, or BOTH, an accidental movement of the propeller may start the engine with possible danger for bystanders.*

In the following figure is presented the electrical system architecture.

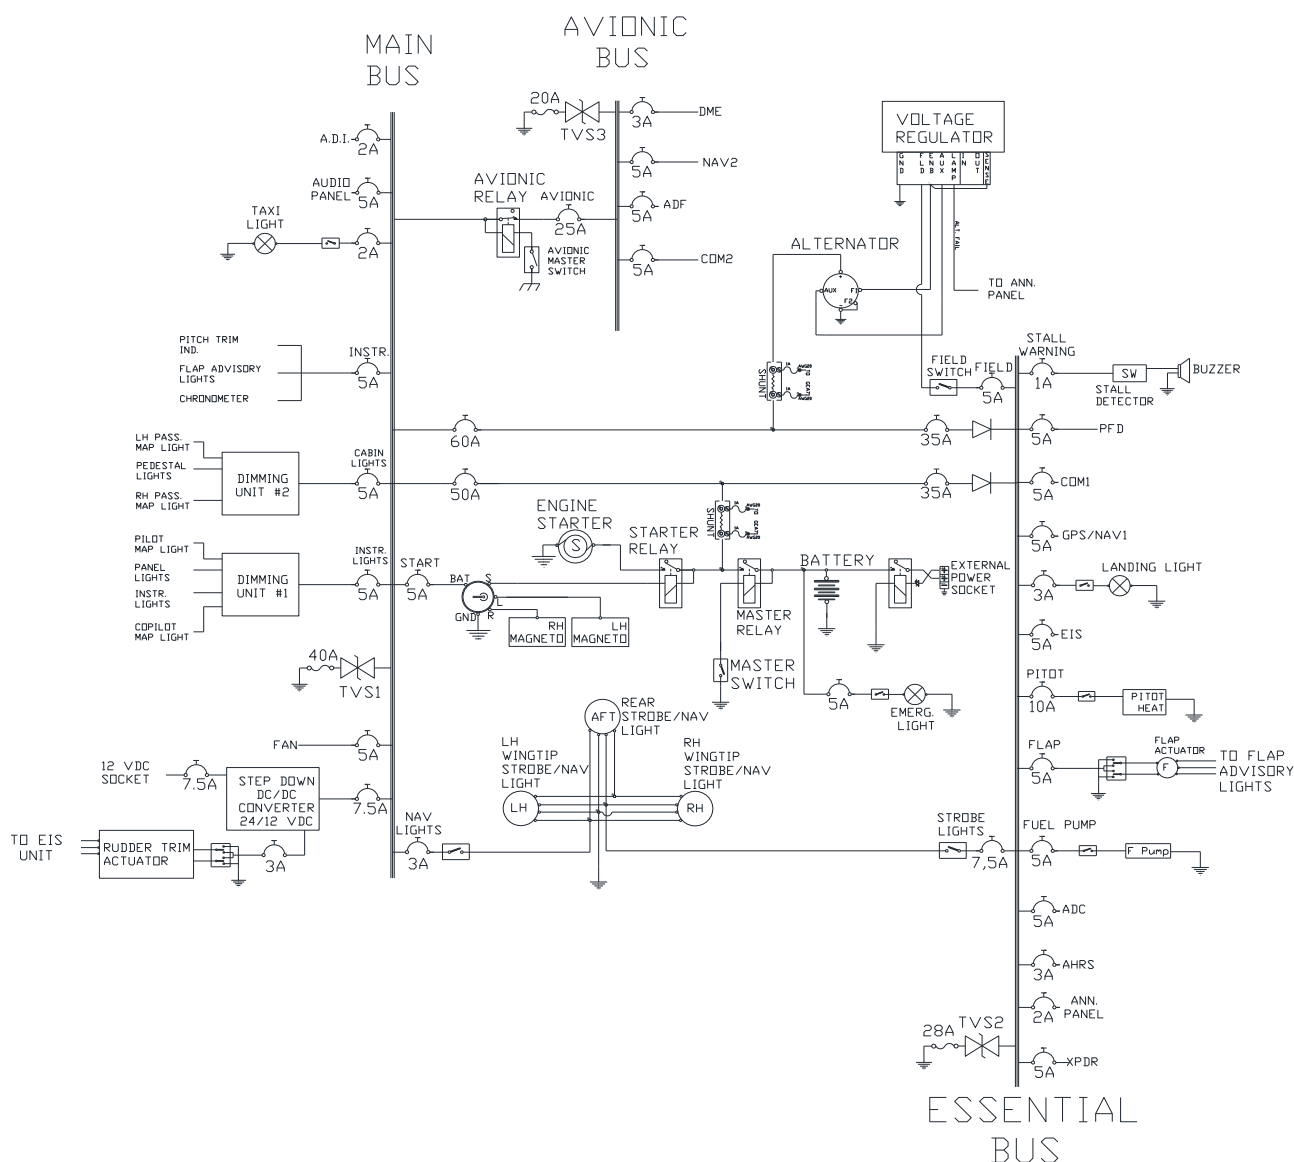


FIG.7-15. ELECTRICAL SYSTEM ARCHITECTURE

## 9.1 STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.

## 9.2 AVIONICS

P2010 avionic system, in this equipment configuration, is mainly based on avionics package Garmin G500.

The G500 suite installed on P2010 is based on a single display layout. It provides the pilot with all primary flight information and is able to act as a navigation indicator for external navigation sources such as VHF NAV and GPS. G500 also presents moving map information to the pilot.

Engine parameters are presented on an external instrument, EDM-930, equipped with an additional Remote Alarm Display which is intended to provide RPM and MAP information in the event of primary display failure.

An external annunciator panel is located in the top center area of the instrument panel.

In order to provide the pilot with main flight information in the event of PFD failure, or in the event of an AHRS and ADC units combined failure, an integrated digital stand-by instrument, Mid-Continent MD-302, featuring airspeed, altitude, attitude and slip information is installed.

An ELT device is installed and its control switch is located in the upper left area of the cockpit.

The Com/Nav functions are embodied into two devices, GNC 255 and GTN 650. The second one provides also GPS signal.

A dedicated DME and an dedicated ADF receivers are installed, and also a Transponder unit.

Two dedicated analogue indicators are provided for pitch and rudder trim positions.

The installed equipment is such that the aircraft is able to fly under day/night VFR and day/night IFR rules and to perform ILS CAT I approaches with ILS.




### CAUTION

*Standby MD302 has a better availability and integrity than Garmin G500 (at least for the critical parameters) against the HIRF/IEL threats. In case of inconsistency between Garmin PFD and MD-302SAM flight informations, it may be expected MD-302SAM to be more reliable, but cross-check with other flight parameters will be necessary to address the faulty source of information.*

### 9.3 EXTERNAL POWER SUPPLY

On the right side of the tail cone, an external power is present. Using this device it is possible to feed the electric system directly on the main bus bar, by an external power source. It should be used at the engine start-up in cold weather condition.

A white advisory “EXT. POWER” label will appear on annunciator panel upon connection of external power in order to advise pilot; the label will disappear upon disconnection of ground external power.

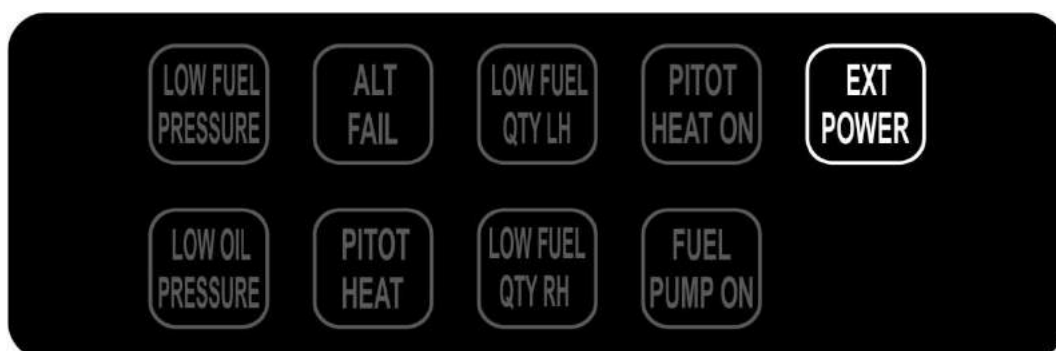

**CAUTION**

*Exercise caution while applying external power.*

*Exercise extreme caution while disconnecting external power with engine running due to airflow coming from the propeller.*

*Approach the power supply receptacle from rear of the wing.*

*Make a positive check, upon disconnection, that:*

- *the power chord is free from any aircraft structure*
- *the receptacle is firmly closed.*

Follow this procedure to start the engine using the external power source.

1. Ignition key, Master switch, Generator switch: OFF
2. Open the receptacle door and insert the external power source's plug into the socket
3. Engine start-up procedure (see Sect. 4 in this manual)
4. Disconnect the external power source's plug and close firmly the receptacle door.

## 10. PITOT-STATIC PRESSURE SYSTEMS

The P2010 air speed/altitude indicating systems are connected with a Pitot-Static system based on a total pressure/Pitot probe (simple Pitot tube, heated for icing protection) mounted on left wing strut and two static pressure ports connected in parallel and located in correspondence of engine firewall on left and right side of fuselage. Flexible hoses connects total pressure and static ports to primary analogue instruments, anemometer and altimeter.

Garmin G500 suite and standby MD 302 unit are connected to both static and total pressure lines providing both air speed and altitude information.

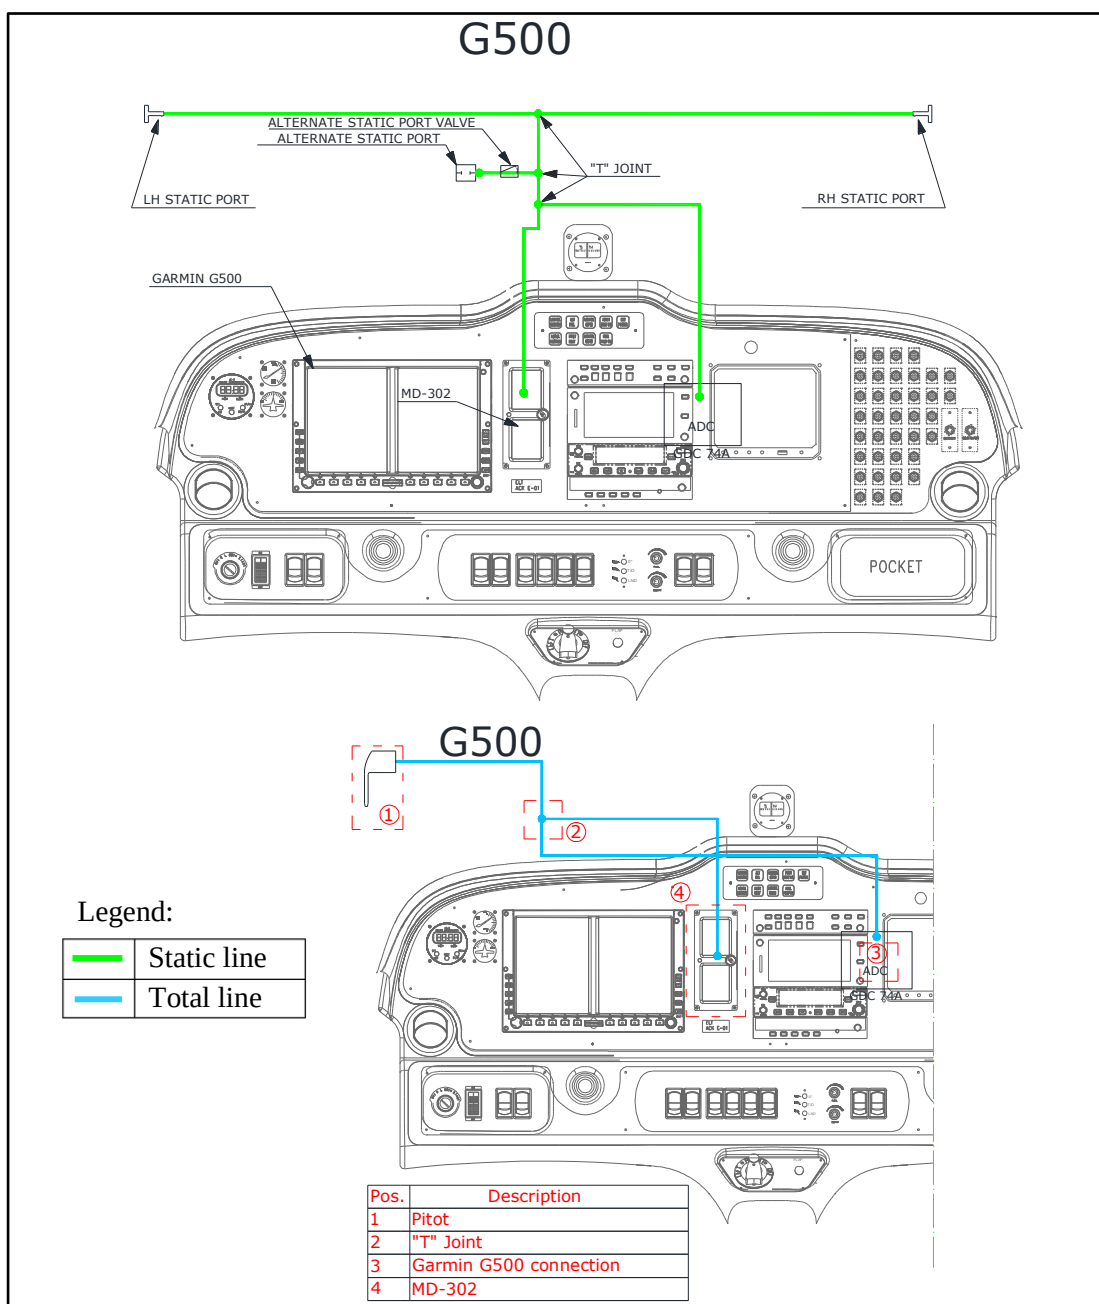


FIG.7-16. PITOT-STATIC SYSTEM

## 11.2 INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

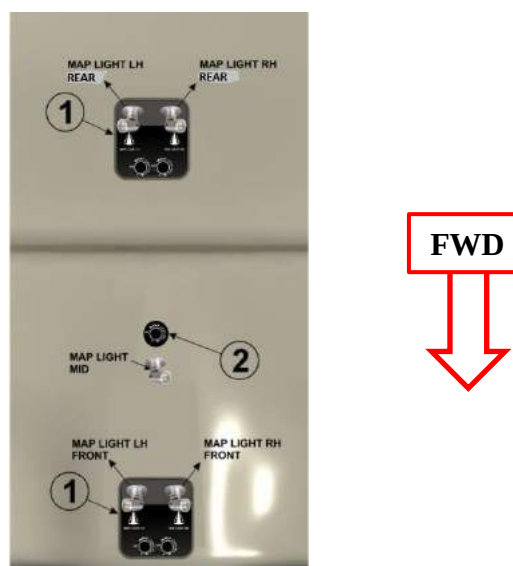


FIG.7-18. CABIN CEILING LIGHTS LAYOUT

The instrument panel can be illuminated by 8 incandescence light strips, all dimmable.



FIG.7-19. INSTRUMENT PANEL LIGHTS LAYOUT

Supplement D03: pages replacement instructions

## **SECTION 8 – GROUND HANDLING & SERVICE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 8 Ground Handling & Service**

Refer to the basic AFM, Section 8 – Ground Handling & Service



INTENTIONALLY LEFT BLANK

## Supplement no. D04

### AFMS FOR AUTOMOTIVE FUEL

#### Record of Revisions

| Rev | Revised page | Description of Revision                                                                                           | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                                   |
|-----|--------------|-------------------------------------------------------------------------------------------------------------------|-----------------|-----------|----------|-----------------------------------------------------------------------------------------|
|     |              |                                                                                                                   | DO              | OoA       | HDO      |                                                                                         |
| 0   | -            | First Issue                                                                                                       | D. Ronca        | C. Caruso | M. Oliva |                                                                                         |
| 1   | 2AF-8        | Amended to add the wording “Approved” in order to better identify the pages approved according to EASA regulation | D. Ronca        | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (Approval No. MOD2010/070.160118) |
|     |              |                                                                                                                   |                 |           |          |                                                                                         |
|     |              |                                                                                                                   |                 |           |          |                                                                                         |
|     |              |                                                                                                                   |                 |           |          |                                                                                         |

#### List of Effective Pages

|                    | Page          | Revision |
|--------------------|---------------|----------|
| <b>Cover Pages</b> | D04-1 thru 23 | Rev. 0   |
| <b>Section 2</b>   | 2AF-8         | Rev. 1   |
| <b>Section 6</b>   | 6AF-8         | Rev. 0   |
| <b>Section 7</b>   | 7AF-30        | Rev. 0   |

## **INDEX**

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>INTRODUCTION .....</b>                                 | <b>3</b>  |
| <b>Section 1 – GENERAL .....</b>                          | <b>5</b>  |
| <b>Section 2 – LIMITATIONS .....</b>                      | <b>7</b>  |
| <b>Section 3 – EMERGENCY PROCEDURES.....</b>              | <b>10</b> |
| <b>Section 4 – NORMAL PROCEDURES .....</b>                | <b>12</b> |
| <b>Section 5 – PERFORMANCE .....</b>                      | <b>14</b> |
| <b>Section 6 – WEIGHT AND BALANCE .....</b>               | <b>16</b> |
| <b>Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION .....</b> | <b>19</b> |
| <b>Section 8 – GROUND HANDLING &amp; SERVICE .....</b>    | <b>22</b> |

## **INTRODUCTION**

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when it uses Automotive Fuel MOGAS EN 228:2008(E).

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

INTENTIONALLY LEFT BLANK

**Supplement D04: pages replacement instructions**

## **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

According to A/C configuration refer to the basic AFM, Section 1 – General

INTENTIONALLY LEFT BLANK

**Supplement D04: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

According to A/C configuration apply following pages replacement:

| <b>Supplement D04<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 2<br/>page</b> |
|------------------------------------------------|-----------------|-----------------------------------|
| 2AF-8                                          | <b>REPLACES</b> | 2-8 of basic AFM, Section 2       |



INTENTIONALLY LEFT BLANK

## 5 FUEL

|                             |                                                                                  |
|-----------------------------|----------------------------------------------------------------------------------|
| <b>2 TANKS:</b>             | 120 litres each one (31.7 US gallons)                                            |
| <b>MAXIMUM CAPACITY:</b>    | 240 litres (63.4 US gallons)                                                     |
| <b>MAXIMUM USABLE FUEL:</b> | 231 litres (61 US gallons)                                                       |
| <b>APPROVED FUEL:</b>       | AVGAS Grade 91/96 or 100LL (ASTM D910) or<br>Automotive Fuel MOGAS EN228:2008(E) |

For additional information, refer to Lycoming Service Instruction No. 1070 and No. SI1070S, latest issue.

## 6 LUBRICANT

Recommended Grade Oil:

| <b>Average Ambient Temperature</b> | <b>MIL-L-6082B or SAEJ1966 Spec. Mineral Grades</b> | <b>MIL-L-22851 or SAEJ1899 Spec. Ashless Dispersant Grades</b> |
|------------------------------------|-----------------------------------------------------|----------------------------------------------------------------|
| All Temperatures                   | ----                                                | SAE15W50 or SAE20W-50                                          |
| Above 80°F                         | SAE60                                               | SAE60                                                          |
| Above 60°F                         | SAE50                                               | SAE40 or SAE50                                                 |
| 30°F to 90°F                       | SAE40                                               | SAE40                                                          |
| 0°F to 70°F                        | SAE30                                               | SAE40, SAE30, SAE20W40                                         |
| Below 10°F                         | SAE20                                               | SAE30 or SAE20W30                                              |

For additional info, refer to “(L)IO-360-M1A Operation and Installation Manual”, latest issue, “Operating instruction” Section.

INTENTIONALLY LEFT BLANK

Supplement D04: pages replacement instructions

## **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

According to A/C configuration refer to the basic AFM, Section 3 – Emergency Procedures

INTENTIONALLY LEFT BLANK

Supplement D04: pages replacement instructions

## **SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures**

According to A/C configuration refer to the basic AFM, Section4 – Normal Procedures

INTENTIONALLY LEFT BLANK

Supplement D04: pages replacement instructions

## **SECTION 5 – PERFORMANCE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 5 Performance**

According to A/C configuration refer to the basic AFM, Section 5 – Performance



INTENTIONALLY LEFT BLANK

Supplement D04: pages replacement instructions

## SECTION 6 – WEIGHT AND BALANCE

Make sure you first applied instructions reported on the basic AFM,  
Section 6 Weight and Balance

According to A/C configuration apply following pages replacement:

| Supplement D04<br>LIMITATIONS<br>page |          | AFM<br>Section 6<br>page    |
|---------------------------------------|----------|-----------------------------|
| 6AF-8                                 | REPLACES | 6-8 of basic AFM, Section 6 |

INTENTIONALLY LEFT BLANK

### 3.1 C.G. CALCULATION SAMPLES

#### 3.1.1 FULL FUEL

|                       | [kg]       | Arm [mm]   | Moment [kg*mm] |
|-----------------------|------------|------------|----------------|
| Empty weight          | 729        | 273        | 199017         |
| CoG pos.              | 21,9%      |            |                |
| <b>USEFUL LOAD</b>    |            |            |                |
| Pilot                 | 80         | 117        | 9360           |
| Pilot                 | 0          | 117        | 0              |
| PAX                   | 0          | 1041       | 0              |
| PAX                   | 0          | 1041       | 0              |
| Baggages              | 0          | 1583       | 0              |
| Fuel (liters)         | 240        | 576        | 103680         |
| Useful load           | 260        | 435        | 113100         |
|                       |            |            |                |
| <b>W<sub>TO</sub></b> | <b>989</b> | <b>316</b> | <b>312524</b>  |
| CoG pos.              | 25,0%      |            |                |

#### 3.1.2 FULL PAYLOAD

|                       | [kg]        | Arm [mm]   | Moment [kg*mm] |
|-----------------------|-------------|------------|----------------|
| Empty weight          | 729         | 273        | 199017         |
| CoG pos.              | 21,9%       |            |                |
| <b>USEFUL LOAD</b>    |             |            |                |
| Pilot                 | 80          | 117        | 9360           |
| Pilot                 | 80          | 117        | 9360           |
| PAX                   | 80          | 1041       | 83280          |
| PAX                   | 80          | 1041       | 83280          |
| Baggages              | 0           | 1583       | 0              |
| Fuel (liters)         | 148         | 576        | 63936          |
| Useful load           | 431         | 578        | 249118         |
|                       |             |            |                |
| <b>W<sub>TO</sub></b> | <b>1160</b> | <b>381</b> | <b>441960</b>  |
| CoG pos.              | 29,8%       |            |                |

**NOTE:**

All data are referred to the P2010 S/N 003.

INTENTIONALLY LEFT BLANK

**Supplement D04: pages replacement instructions**

## **SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**

**Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems Description**


According to A/C configuration apply following pages replacement:

| <b>Supplement D04<br/>AIRFRAME AND SYSTEMS DESCRIPTION<br/>page</b> |                 | <b>AFM<br/>Section 7<br/>page</b> |
|---------------------------------------------------------------------|-----------------|-----------------------------------|
| 7AF-30                                                              | <b>REPLACES</b> | 7-30 of basic AFM, Section 7      |

INTENTIONALLY LEFT BLANK

# P2010 - Aircraft Flight Manual

## Allowed Fuel Placard:

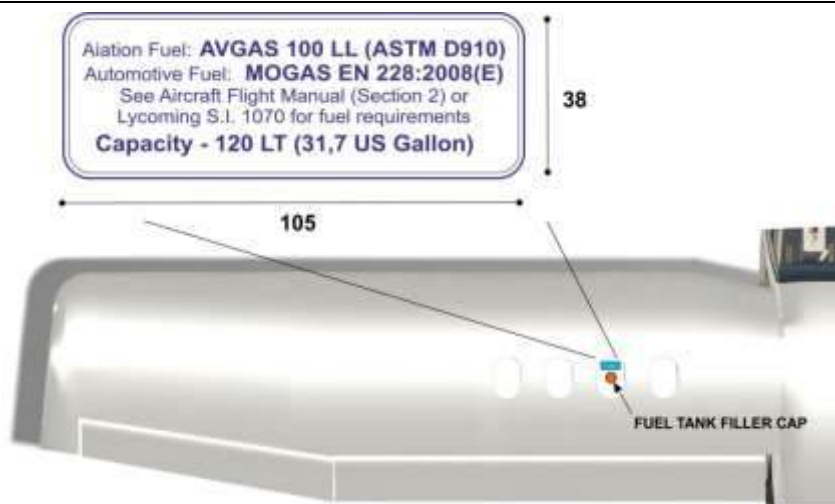

## Tire Pressure placard:



## Stabilator degrees placard:





INTENTIONALLY LEFT BLANK

Supplement D04: pages replacement instructions

## **SECTION 8 – GROUND HANDLING & SERVICE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 8 Ground Handling & Service**

According to A/C configuration refer to the basic AFM, Section 8 – Ground Handling  
& Service

INTENTIONALLY LEFT BLANK

**SUPPLEMENT NO. D5****ARGENTINE AIRCRAFT FLIGHT MANUAL SUPPLEMENT****Record of Revisions**

| Rev | Revised page | Description of Revision | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges |
|-----|--------------|-------------------------|-----------------|-----------|----------|---------------------------------------|
|     |              |                         | DO              | OoA       | HDO      |                                       |
| 0   | -            | Editorial revision.     | A. Sabino       | C. Caruso | M. Oliva | DOA                                   |
|     |              |                         |                 |           |          |                                       |
|     |              |                         |                 |           |          |                                       |
|     |              |                         |                 |           |          |                                       |

**List of Effective Pages**

| Page        | Revision | Page        | Revision |
|-------------|----------|-------------|----------|
| <b>D5-1</b> | Rev 0    | <b>D5-4</b> | Rev 0    |
| <b>D5-2</b> | Rev 0    | <b>D5-5</b> | Rev 0    |
| <b>D5-3</b> | Rev 0    | <b>D5-6</b> | Rev 0    |

## INTRODUCTION

This supplement contains supplementary information for a safe and efficient operation of the aircraft delivered in the Argentina

For limitations, procedures, and performance information not contained in this supplement, refer to the EASA Approved Aircraft Flight Manual.

## LIMITATIONS

The information contained herein complements or supersedes the basic information in the EASA Approved Aircraft Flight Manual.

### LIMITATIONS PLACARDS

On the right side of the instrument panel the following placard is placed reminding the observance for “NO FUMAR”:



Behind the baggage compartment door the following placard is placed:




## OTHER PLACARDS


### Door Placard



### Baggage Door

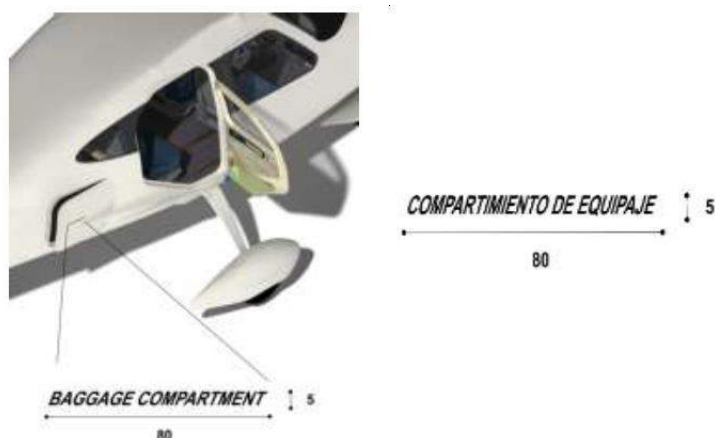


### Internal door Placard

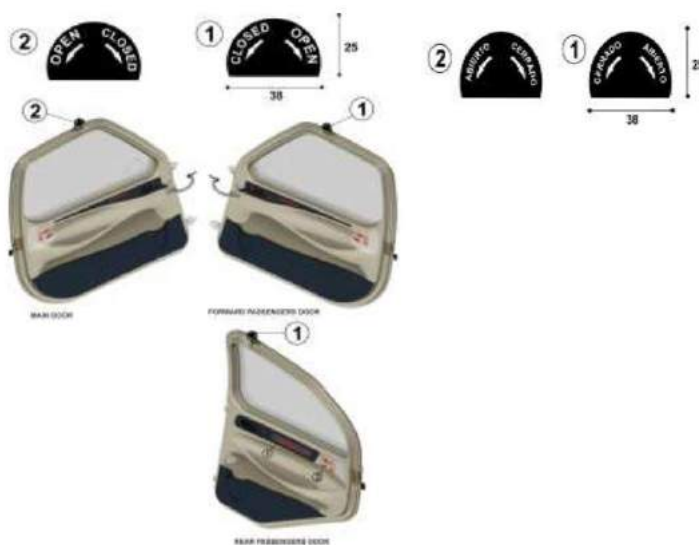


### Emergency Exit internal placard




### Open baggage placard

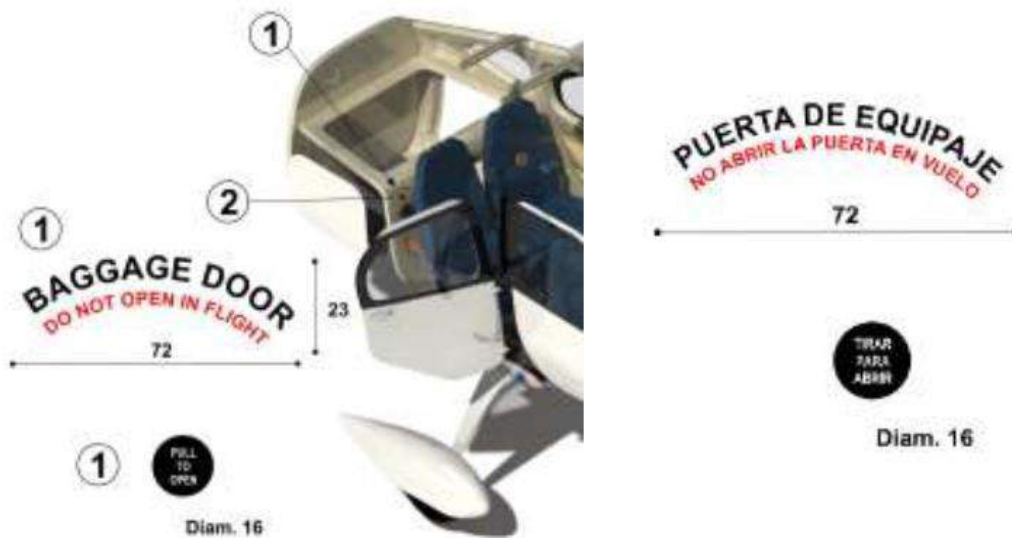

### Door Handle locking

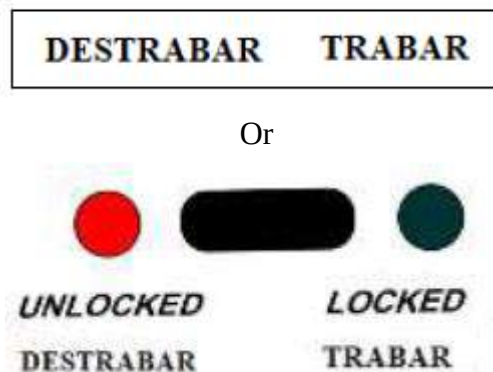

## External Power Socket and baggage compartment placards

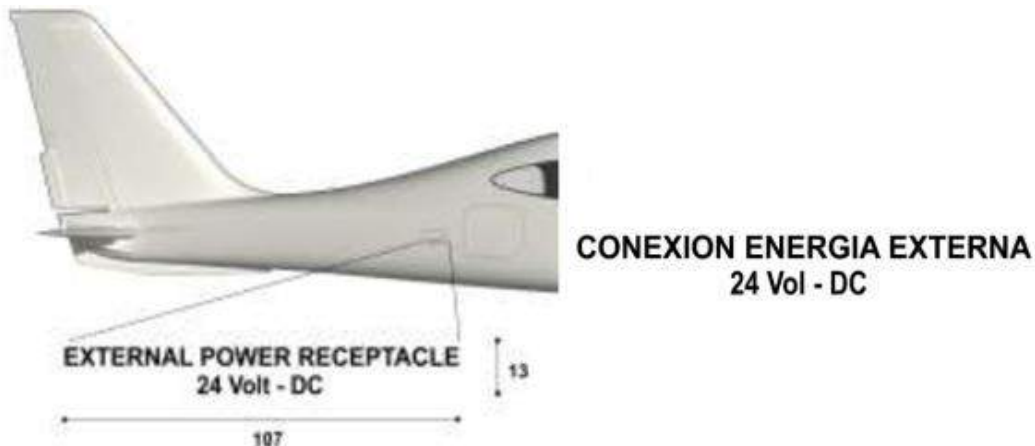

## Static source placards



## No Step placard




## Fuel Limitation placard






### Safety equipment location placard

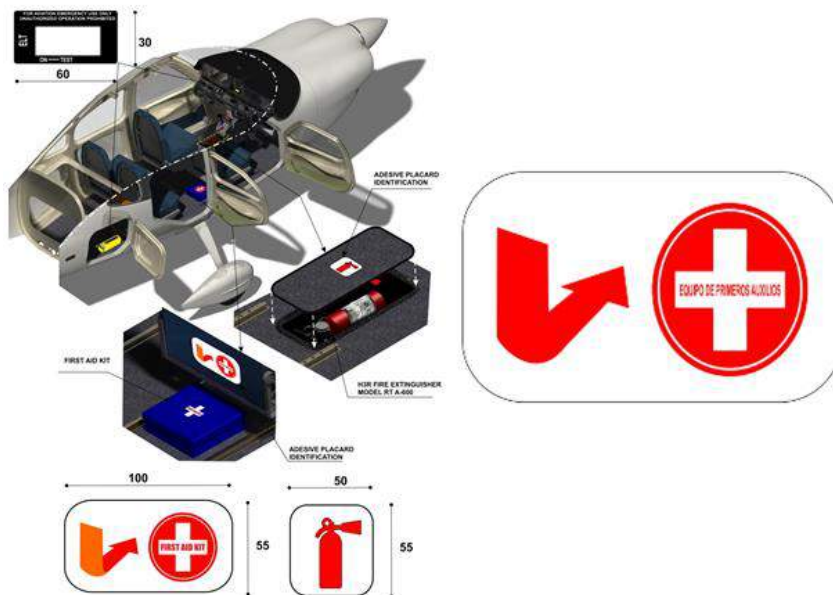

### ELT placard

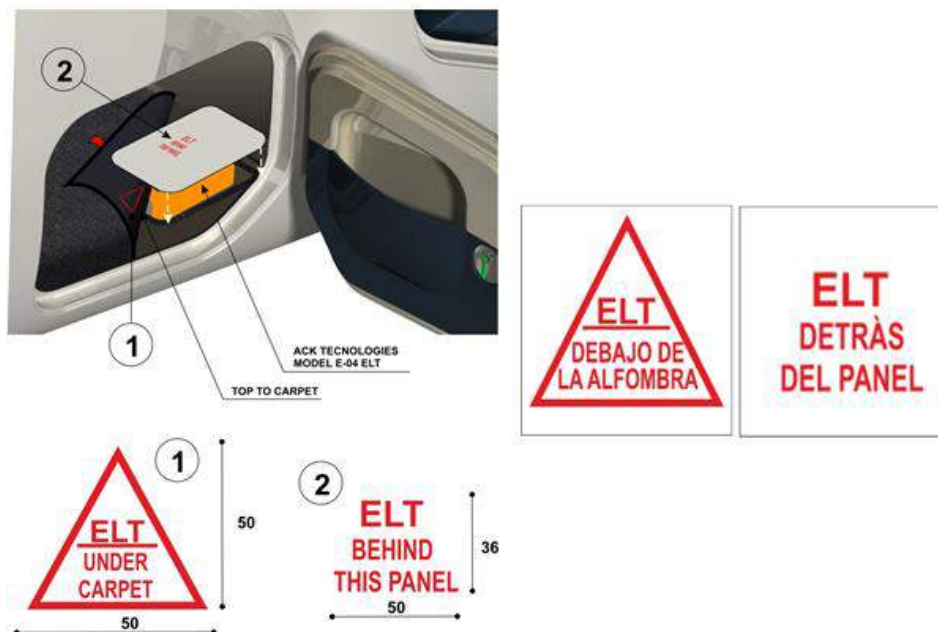

## Supplement no. D07

### AFMS FOR GARMIN GFC700 AUTOPILOT AND VARIABLE PITCH PROPELLER EQUIPPED AEROPLANES

#### Record of Revisions

| Rev | Revised page | Description of Revision | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                      |
|-----|--------------|-------------------------|-----------------|-----------|----------|----------------------------------------------------------------------------|
|     |              |                         | DO              | OoA       | HDO      |                                                                            |
| 0   | All          | Editorial Change        | F. Auricchio    | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/131.180403) |

#### List of Effective Pages

|                    | Page                                                                      | Revision |
|--------------------|---------------------------------------------------------------------------|----------|
| <b>Cover Pages</b> | D07-1 thru 20                                                             | Rev. 0   |
| <b>Section 1</b>   | APV 1-6, APV 1-13, APV 1-16 thru 31                                       | Rev. 0   |
| <b>Section 2</b>   | APV 2-7, APV 2-9 thru 10, APV 2-15, APV 2-17 thru 20                      | Rev. 0   |
| <b>Section 3</b>   | APV 3-4, APV 3-14, APV 3-18 thru 19, APV 3-31 thru 35                     | Rev. 0   |
| <b>Section 4</b>   | APV 4-7, APV 4-15, APV 4-19 thru 26, APV 4-27 thru 38                     | Rev. 0   |
| <b>Section 5</b>   | APV 5-1 thru 12, APV 5-17 thru 20                                         | Rev. 0   |
| <b>Section 5</b>   | APV 5-13 thru 16                                                          | Rev. 0   |
| <b>Section 7</b>   | APV 7-8 thru 11, APV 7-16, APV 7-20 thru 21, APV 7-27, APV 7-33, APV 7-36 | Rev. 0   |

## INDEX

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>INDEX .....</b>                                        | <b>2</b>  |
| <b>INTRODUCTION .....</b>                                 | <b>3</b>  |
| <b>Section 1 – GENERAL .....</b>                          | <b>5</b>  |
| <b>Section 2 – LIMITATIONS .....</b>                      | <b>7</b>  |
| <b>Section 3 – EMERGENCY PROCEDURES.....</b>              | <b>9</b>  |
| <b>Section 4 – NORMAL PROCEDURES.....</b>                 | <b>11</b> |
| <b>Section 5 – PERFORMANCE .....</b>                      | <b>13</b> |
| <b>Section 6 – WEIGHT AND BALANCE .....</b>               | <b>13</b> |
| <b>Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION .....</b> | <b>15</b> |
| <b>Section 8 – GROUND HANDLING &amp; SERVICE .....</b>    | <b>37</b> |

## INTRODUCTION

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when equipped with Garmin GFC 700 autopilot device interfacing Garmin G1000 and MT variable pitch propeller.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

INTENTIONALLY LEFT BLANK

**Supplement D07: pages replacement instructions**

## **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

According to A/C configuration apply following pages replacement:

| <b>Supplement<br/>GENERAL<br/>page</b> |                 | <b>AFM<br/>Section 1<br/>page</b>    |
|----------------------------------------|-----------------|--------------------------------------|
| APV1-6                                 | <b>REPLACES</b> | 1-6 of basic AFM, Section 1          |
| APV1-13                                | <b>REPLACES</b> | 1-13 of basic AFM, Section 1         |
| APV1-16 thru 31                        | <b>REPLACES</b> | 1-16 thru 31 of basic AFM, Section 1 |

INTENTIONALLY LEFT BLANK

## 5. ENGINE

Manufacturer .....Lycoming Engines  
 Model .....IO-360-M1A  
 Type Certificate .....EASA TCDS no. IM.E.032  
 Engine type ..... Fuel injected (IO), direct drive, four  
 cylinder horizontally opposed, air  
 cooled with down exhaust outlets.  
 Maximum power ..... 134.0 kW (180hp) @ 2700 rpm  
 Maximum continuous power .....129.2 kW (173.3hp) @ 2600 rpm

## 6. PROPELLER

Manufacturer .....MT Propeller  
 Model .....MTV-15-B/193-52  
 Type Certificate .....EASA TCDS no. P.098  
 Blades/hub .....wood/composite 2-blades – aluminum hub  
 Diameter .....1930 mm (76 in) (no reduction is permitted)  
 Type ..... Variable pitch

## GOVERNOR

Manufacturer ..... MT Propeller  
 Model ..... P-860-23:  
 Type ..... Hydraulic



**Autopilot acronyms**

|             |                                     |             |                                    |
|-------------|-------------------------------------|-------------|------------------------------------|
| <i>AC</i>   | Advisory Circular                   | <i>GNSS</i> | Global Navigation Satellite System |
| <i>A/C</i>  | Aircraft                            | <i>GP</i>   | Glide Path                         |
| <i>ADC</i>  | Air Data Computer                   | <i>GPS</i>  | Global Position System             |
| <i>ADF</i>  | Automatic Direction Finder          | <i>GS</i>   | Glide Slope                        |
| <i>ADI</i>  | Attitude Directional Indicator      | <i>GSA</i>  | Garmin Servo Actuator              |
| <i>AFCS</i> | Automatic Flight Control System     | <i>GSM</i>  | Garmin Servo Mount                 |
| <i>AHRS</i> | Attitude Heading Reference System   | <i>HDG</i>  | Heading                            |
| <i>ALT</i>  | Altitude                            | <i>HSDB</i> | High Speed Data Bus                |
| <i>ALTS</i> | Altitude Selector                   | <i>IAU</i>  | Integrated Avionic Unit            |
| <i>AMPS</i> | Ampere                              | <i>LOC</i>  | Localizer                          |
| <i>A/P</i>  | Autopilot                           | <i>LRU</i>  | Line Replaceable Unit              |
| <i>APR</i>  | Approach                            | <i>LVL</i>  | Level                              |
| <i>ARP</i>  | Aerospace Recommended Practice      | <i>MAG</i>  | Magnetometer                       |
| <i>ASI</i>  | Air Speed Indicator                 | <i>MET</i>  | Manual Electric Trim               |
| <i>BC</i>   | Back Course                         | <i>MFD</i>  | Multi-Function Display             |
| <i>CAS</i>  | Caution Advisory System             | <i>NAV</i>  | Navigation                         |
| <i>CDI</i>  | Course Deviation Indicator          | <i>OAT</i>  | Outside Air Temperature            |
| <i>CS</i>   | Certification Specifications        | <i>PFD</i>  | Primary Flight Display             |
| <i>CWS</i>  | Control Wheel steering              | <i>PFI</i>  | Primary Flight Information         |
| <i>DC</i>   | Direct Current                      | <i>PFT</i>  | Pre Flight Test                    |
| <i>DME</i>  | Distance Measuring Equipment        | <i>PWM</i>  | Pulse Width Modulation             |
| <i>EIS</i>  | Engine Indication System            | <i>SAE</i>  | SAE International                  |
| <i>ESP</i>  | Electronic Stability and Protection | <i>TDM</i>  | Time Division Multiplexing         |
| <i>FD</i>   | Flight Director                     | <i>USP</i>  | Under Speed Protection             |
| <i>FLC</i>  | Flight Level Change                 | <i>VHF</i>  | Very-High Frequency                |
| <i>GA</i>   | Go Around                           | <i>VNV</i>  | Vertical Navigation                |
| <i>GDU</i>  | Garmin Display Unit                 | <i>VS</i>   | Vertical Speed                     |
| <i>GIA</i>  | Garmin Integrated Avionics          | <i>XPDR</i> | Transponder                        |

## 12. AUTOPILOT DESCRIPTION

P2010 aircraft is equipped, as an optional equipment, with an integrated 2-axis autopilot suite manufactured by Garmin and identified as GFC 700. This autopilot suite was designed as an option for the G1000 integrated flight deck. The autopilot is controlled via dedicated keys grouped in a control panel located on the MFD. The installed MFD display is different with respect to standard P2010 configuration since it is GDU 1044.

The autopilot suite installed on P2010 is based on the following configuration:

- 1 Roll servo
- 1 Pitch servo
- 1 Pitch Trim servo

Neither yaw axis nor rudder trim tab control is provided.


The autopilot is connected to electric system through the below listed circuit breakers connected to the avionics bus:

- 1) A/P (5A)
- 2) PITCH TRIM (3A)

The installed servos are capstan type and are composed of two main components:

- A servo motor
- A servo capstan including the servo clutch

The following block diagram describes the avionic system installed on P2010 and its interconnections with the autopilot servos:

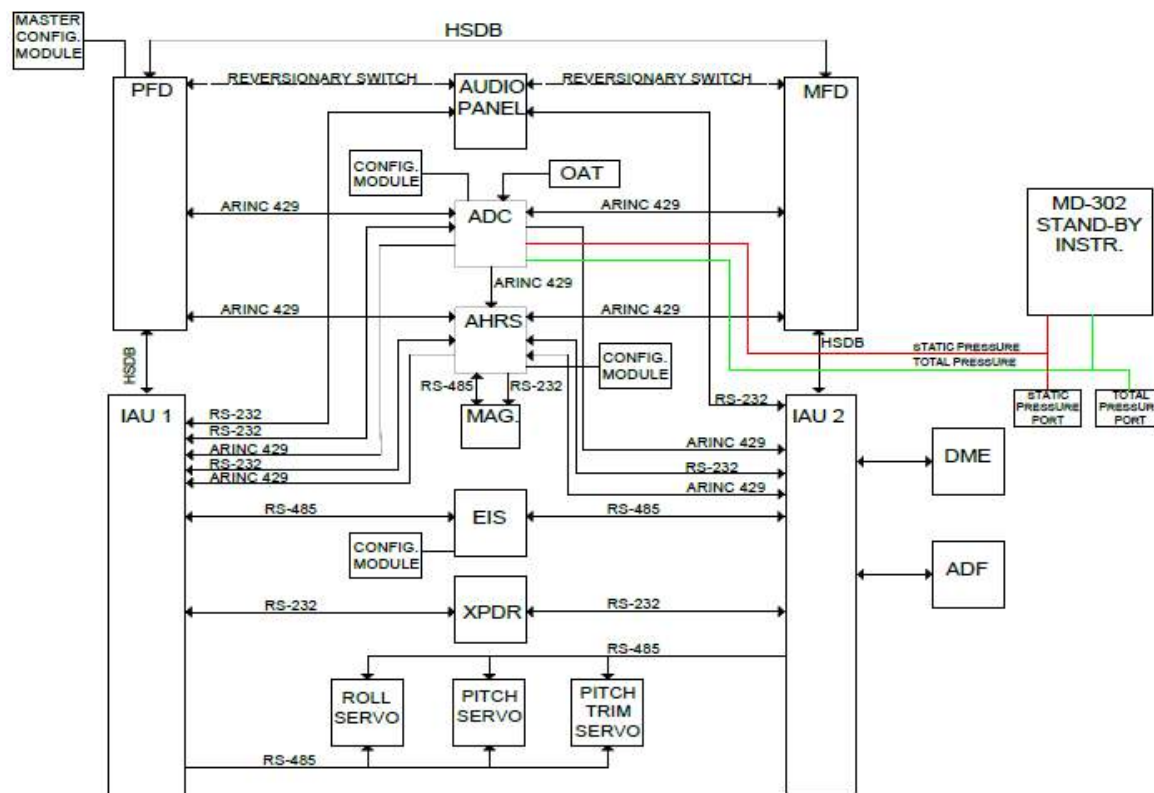

The multifunction display (MFD) provides the pilot with a dedicated set of keys for autopilot control (see red frame in the below picture).



The roll servo is located under the pilot seat and is fixed to a/c structure using a dedicated mount. Pitch and pitch trim servos are located in the tail cone and are installed on a dedicated mount which hosts both the servos.

GFC 700 is an integrated autopilot since it uses several information provided by other units embodied in the G1000 avionics suite in order to compute the maneuvers to be performed by the aeroplane and actuate them. The below table lists the functions which are required in order to have the GFC 700 operational and the G1000 LRUs responsible for providing it:

| LRU<br>Function                                                          | PFD/MFD<br>(GDU 104X)                        | ADC<br>(GDC<br>74X) | AHRS<br>(GRS<br>77) | MAG.<br>(GMU<br>44) | IAU1/2<br>(GIA<br>63W) | ACTUA-<br>TOR<br>(GSA 8X) | CAP-<br>STAN<br>(GSM 8X) |
|--------------------------------------------------------------------------|----------------------------------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|--------------------------|
| AFCS mode select buttons                                                 | ✓                                            |                     |                     |                     |                        |                           |                          |
| Display of the AFCS mode annunciations and flight director command bars. | ✓<br>(PFD NORMAL)<br>(MFD REVER-<br>SIONARY) |                     |                     |                     |                        |                           |                          |
| Attitude/Heading information                                             |                                              |                     | ✓                   | ✓                   |                        |                           |                          |
| Air data information                                                     |                                              | ✓                   |                     |                     |                        |                           |                          |
| Navigational database Parameters                                         | ✓                                            |                     |                     |                     |                        |                           |                          |
| GPS/WAAS, VOR, and ILS navigational data                                 |                                              |                     |                     |                     | ✓                      |                           |                          |
| Mode logic, flight director computations, and servo management           |                                              |                     |                     |                     | ✓                      |                           |                          |
| Autopilot computations and monitoring                                    |                                              |                     |                     |                     |                        | ✓                         |                          |
| Aircraft control surface Actuation                                       |                                              |                     |                     |                     |                        |                           | ✓                        |
| Trim functionality                                                       |                                              |                     |                     |                     |                        | ✓                         |                          |

In control of the roll axis, the autopilot senses turn rate, as well as closure rate to the selected course, along with the non-rate quantities of heading error, course error and course deviation indication.

In control of the pitch axis, the autopilot senses vertical speed, acceleration, and closure rate to the selected glideslope, along with the non-rate quantities of altitude and glideslope deviation indication.

The “autotrim” function senses when the aircraft needs to be trimmed about the pitch axis, and responds by driving the trim servo in the proper direction to provide trim.

## 12.1 GDU 1044 (MFD)


GDU 1044 MFD unit can display as default engine parameters and moving map information, along with other information that can be selected by the pilot (see the first figure below); when reversionary mode is active it will display flight parameters (in the form of PFD with the left strip engine information, as can be seen in the second figure below). It is the user interface for P2010 avionics suite. GDU 1044 unit replaces the GDU 1040 unit on instrument panel RH side (MFD).



GDU 1044 (MFD)

Reversionary mode:

- In the event of a single display failure the system is able to automatically switch the critical information including flight and engine parameters on the remaining display presenting them in a compact view. In the event of a failure of the automatic switch logic, the pilot can easily force the reversionary mode by pressing the red button on the bottom of the audio panel thus getting both flight and engine parameters information, necessary for continued safe flight, on the remaining display.

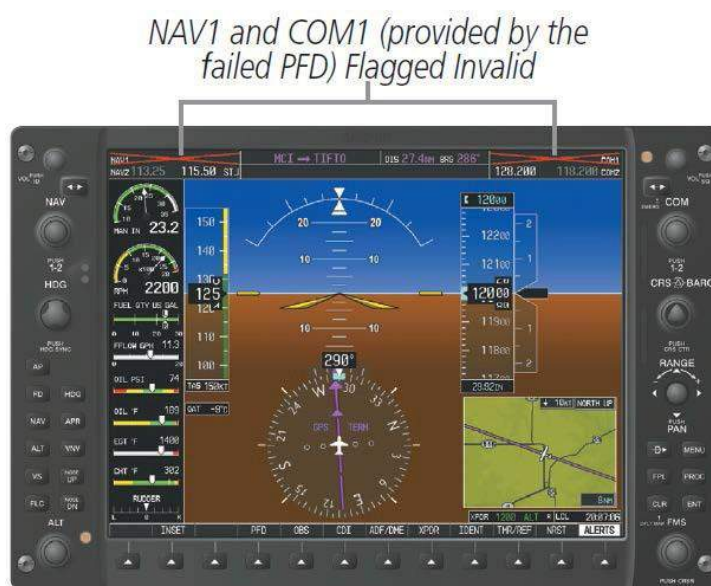


GDU 1044 (MFD) in reversionary mode

### Autopilot control panel

The GDU1044 includes a set of additional softkeys dedicated to the control of Autopilot system.

The following dedicated AFCS keys are located on the bezel of the MFD (refer picture below):

- 1) **AP Key:** Engages/ disengages the autopilot
- 2) **FD Key:** Activates/deactivates the flight director only
- 3) **NAV Key:** Selects/deselects Navigation Mode
- 4) **ALT Key:** Selects/deselects Altitude Hold Mode
- 5) **VS Key:** Selects/deselects Vertical Speed Mode
- 6) **FLC Key:** Selects/deselects Flight Level Change Mode
- 7) **HDG Key:** Selects/deselects Heading Select Mode
- 8) **APR Key:** Selects/deselects Approach Mode
- 9) **VNV Key:** Selects/deselects Vertical Path Tracking Mode for Vertical Navigation flight control
- 10) **NOSE UP/ NOSE DN Keys:** Control the mode reference in Pitch Hold, Vertical Speed and Flight Level Change modes

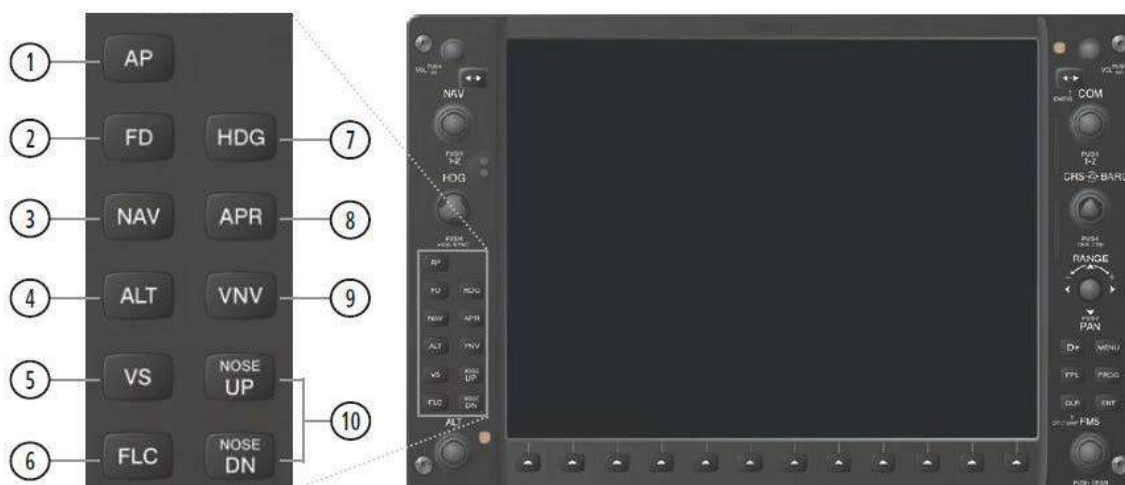

Autopilot control panel




## **12.2 PILOT CONTROL WHEEL AND THROTTLE BUTTONS**

On the left side of pilot's and copilot's control wheels there are two PTT switches (the one on pilot control wheel is shown below as **(1)**) that, when pushed, allow radio transmission. These switches are momentaneous ones thus acting in such a way that when they are released the active COM device returns to the non-transmitting state. These switches are already installed in the basic aircraft which is not equipped with the autopilot. The following additional dedicated AFCS controls are located on the pilot control wheel, separately from the MFD, and on the throttle handle:

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AP DISC Switch:</b> | Disengages the autopilot and interrupts pitch trim operation<br>This switch may be used to mute the aural autopilot disconnect alert.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>AP Trim Switch:</b> | Used to command manual electric trim. This composite switch is split into left and right sides. The left switch is the ARM contact and the right switch controls the DN (forward) and UP (rearward) contacts. The AP TRIM ARM switch can be used to disengage the autopilot and to acknowledge an autopilot disconnect alert and mute the associated aural tone. Manual trim commands are generated only when both sides of the switch are operated simultaneously. If either side of the switch is active separately for more than three seconds, MET function is disabled and 'PTRM' is displayed as the AFCS Status Annunciation on the PFD. The function remains disabled until both sides of the switch are inactivated. |
| <b>CWS Button:</b>     | While pressed, the Control Wheel Steering allows manual control of the aircraft while the autopilot is engaged and synchronizes the flight director's Command Bars with the current aircraft pitch (if not in Glideslope Mode) and roll (if in Roll Hold Mode). Upon release of the CWS Button, the flight director may establish new reference points, depending on the current pitch and roll modes. CWS operation details are discussed in the flight director modes section.                                                                                                                                                                                                                                              |
| <b>TO/GA Switch:</b>   | The GA Switch is located on the throttle handle.<br><br>Go Around and Takeoff modes are coupled pitch and roll modes and are annunciated as both the vertical and lateral modes when active. In these modes, the flight director commands a constant set pitch attitude and keeps the wings level. The GA Switch is used to select both modes. The mode entered by the flight director depends on whether the aircraft is on the ground                                                                                                                                                                                                                                                                                       |


The above mentioned AFCS controls are depicted in the below figures.

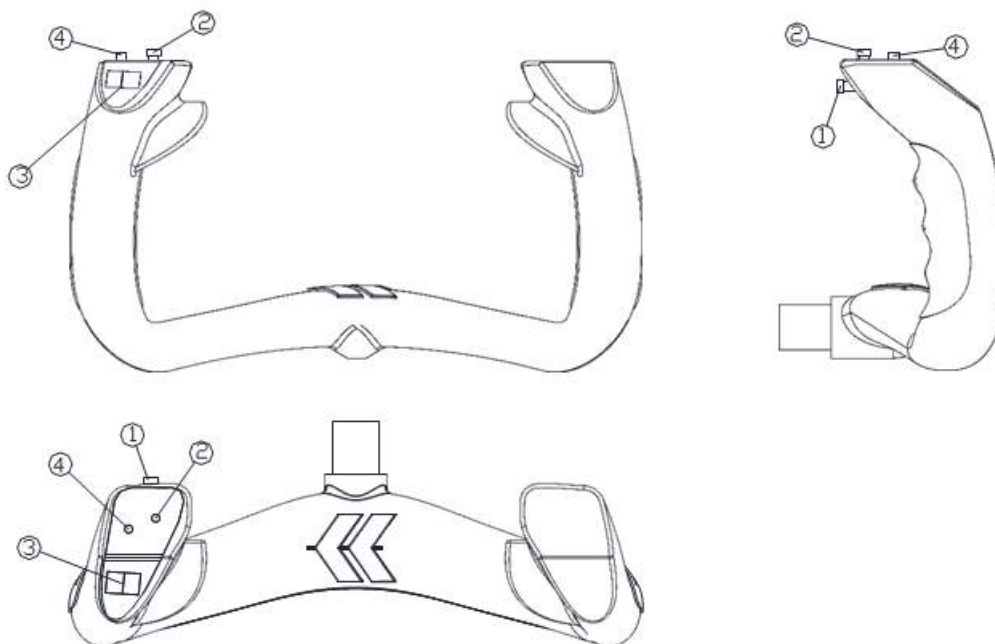

Where:

- 1) PTT switch
- 2) AP DISC Switch
- 3) AP Trim Switch
- 4) CWS Button





## 13. AUTOPILOT FUNCTIONS AND FEATURES

GFC 700 autopilot suite is deeply integrated with Garmin G1000 avionics suite which integrates both the a/p controls and the sensors providing the required data to the servos.

The GFC 700 AFCS is equipped with the following main operating functions:

- **Flight Director (FD)** — Flight director commands are displayed on the PFD. The flight director provides:
  - ✓ Command Bars showing pitch/roll guidance
  - ✓ Pitch/roll mode selection and processing
  - ✓ Autopilot communication
- **Autopilot (AP)** — Autopilot operation occurs within the pitch, roll, and pitch trim servo and provides servo monitoring and automatic flight control in response to flight director steering commands, AHRS attitude and rate information, and airspeed.
- **Manual Electric Trim (MET)** — The pitch trim servo provides manual electric trim capability when the autopilot is not engaged.
- **ESP** (Electronic Stability & Protection) keeps the aircraft within well defined operational limits thus preventing the pilot to operate the aircraft outside a specific envelope when it is being hand flown. This feature only operates when autopilot is not engaged and its operation is mutually exclusive with autopilot operation.
- **USP** (Underspeed Protection) is a flight director function that reacts to underspeed conditions in a way that allows the autopilot to remain engaged but prevents the airplane from stalling.

### **13.1 ESP**

Garmin GFC 700 is equipped with an envelope protection feature referred as ESP (Electronic Stability & Protection). Electronic Stability and Protection continuously monitors the aircraft. The system works by applying a correcting force to the controls in order to nudge pilot to avoid extreme attitudes that may bring the aircraft, if not corrected, to exceed normal flying envelope.

This software feature aims to provide protection against aircraft operation outside a desired flight envelope. ESP will maintain the desired operating envelope, defined at autopilot development time, by automatically engaging one or more servos when the aircraft is near the operating limit and nudging pilot to come back to nominal operating envelope. While ESP utilizes the same sensors, processors, and actuators as the GFC 700 autopilot, it is basically a separate function. ESP can be overpowered by the pilot and can be temporarily disabled using the AP disconnect or CWS switches. It functions independently of the aircraft's autopilot system (although it uses the same control servos), so it basically operates "in background" whenever the pilot is hand-flying the airplane.

**The ESP feature will only function with GPS available, A/P MASTER SWITCH ON (but autopilot not engaged) and aircraft above 200ft AGL.**

#### **ESP enabling:**

As a standard, ESP will automatically set to enable at power-up.

The system is configured in order to allow the pilot to disable ESP (or re-enable it if previously disabled after power up) via the AUX – SYSTEM SETTINGS page on MFD.

If ESP has been disabled via MFD, it will automatically be set to ON upon any battery/power reset.

ESP function uses the same servos that provide autopilot functionality while autopilot is not engaged, as such, if power is cut from these servos both autopilot and ESP functions will be unavailable.

Based on the above if "AUTOPILOT MASTER" is set to OFF, power to servos is cut irrespective of their mode of operation (autopilot or ESP).

The pilot can interrupt ESP by pressing and holding either the Control Wheel Steering (CWS) or Autopilot Disconnect (AP DISC TRIM INTRPT) switch. Upon releasing the CWS or AP DISC TRIM INTRPT switch, ESP force will again be applied, provided aircraft attitude and/or airspeed are within their respective engagement limits.

ESP can be enabled or disabled on the AUX-SYSTEM SETUP 2 Page on the MFD.

To enable or disable ESP:

- 1) Turn the large FMS Knob to select the AUX Page Group.
- 2) Turn the small FMS Knob to select the System Setup Page.
- 3) If necessary, select the SETUP 2 Softkey to display the AUX-SYSTEM SETUP 2 Page. If the AUX-SYSTEM SETUP 2 is already displayed, proceed to step 4.
- 4) Press the FMS Knob to activate the cursor.
- 5) Turn the large FMS Knob to place cursor in the STABILITY & PROTECTION field.
- 6) Turn the small FMS Knob to select 'ENABLE' or 'DISABLE'.
- 7) Press the FMS Knob to remove the cursor.

### ESP engagement and operation:

ESP is automatically enabled on system power up.

#### NOTE

*ESP unavailability and/or failure is indicated to the pilot on PFD by the advisory "ESP not available" on alert window.*

#### NOTE

*ESP will turn OFF upon loss of both GPS. The ADVSY "ESP OFF" will appear on the alert window in case of loss of both GPS*

## 13.1.1 PITCH MODE

Pitch attitude boundaries are set based on P2010 aircraft performances. Since pitch ESP augments the natural aircraft longitudinal stability, no special symbology is required.

Value that have been set-up for the P2010 are as follows:

Nose above the horizon:

- Engagement low threshold: + 15°
- Engagement upper threshold: + 18°
- Lower disengage threshold: + 12°

Nose below the horizon:

- Engagement low threshold: -15°
- Engagement upper threshold: -20°
- Lower disengage threshold: -13°

ESP utilizes electronic torque and speed commands to augment the aircraft's stability: it uses an Electronic Torque Limit (ETL) and an Electronic Speed Limit (ESL) to limit the maximum authority of the ESP function. ESP is inactive when the pitch attitude is within the positive and negative engagement limits defined in the certification gain file

When the aircraft reaches the engagement limit, ESP ramps up the servo torque command to adjust the aircraft back toward zero pitch attitude. ESP uses a rate command to drive the attitude back to the nominal range and does not try to control to a specific attitude. As the pitch attitude returns to the nominal range, the torque and pitch rate are reduced until the aircraft reaches the disengagement limit at which time ESP turns off. The disengagement threshold is sized so that the transition from ESP being active to being inactive is transparent to the pilot (no transient when ESP turns off).

If, when ESP engages, the aircraft continues to pitch away from the nominal attitude range the torque command will increase with increasing pitch deviation. Above the upper disengagement limit specified in the certification gain file ESP will be disabled.

### 13.1.2 ROLL MODE

Roll mode is similar to pitch mode and also utilizes configurable gain file parameters to define engagement and disengagement limits as well as the speed and torque curves.

The engagement and disengagement attitude limits are displayed with double hash marks on the roll indicator when ESP is available and /or active. The lack of double hash marks above 200 ft AGL (when autopilot is not connected) is a clear indication that ESP is not available.

Values for the symmetric roll attitude limits are as follows:

Engagement low threshold:  $\pm 45^\circ$

Engagement upper threshold:  $\pm 75^\circ$

Lower disengage threshold:  $\pm 30^\circ$


Electronic stability and protection action starts at the predetermined bank angle. Since crossing this bank angle results in a change in aircraft stability (and therefore handling characteristics) indications of this boundary are provided to the pilot.



When ESP is inactive (roll attitude within nominal limits) only the engagement limits are displayed in order to reduce clutter on the roll indicator. As the bank.

angle is increased, a region of an increasing force as a function of bank angle is entered. The envelope protection system adds bank stability in this region. As the bank angle is increased further, a constant force is applied to right the airplane.

See the below figure for an example of the ESP engagement limits.

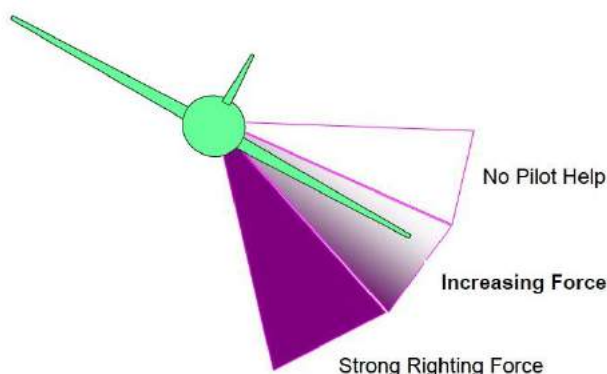

### VMO

Exceeding VMO will result in ESP applying force to raise the nose; when the high speed condition is remedied, ESP force is no longer applied.

Engage Limit: 165 KIAS

Upper Limit: 168 KIAS

Lower disengage Limit: 160 KIAS

## 13.2 USP

Underspeed Protection (USP) is a flight director function that reacts to underspeed conditions, designed to discourage aircraft operation below minimum established airspeeds.

Pilot will be warned of impending low speed conditions, and if no action will be taken FD will directly react in a way that allows the A/P to remain engaged but prevents the airplane from stalling.



**WARNING**

*USP function has been developed in order to warn pilot of impending low speed conditions, and if no action will be taken FD will directly react in a way that allows the Autopilot to remain engaged but prevents the airplane from stalling.*

*Pilot action is still expected at first warning of low airspeed conditions in order to prevent a low speed conditions, so to maintain normal flight.*



**CAUTION**

*When autopilot is engaged USP will provide the pilot with aural/visual cues to make him aware of an impending stall and will drive the servos in order to prevent stall.*

*When autopilot is not engaged and only Flight director is active, USP will provide the pilot with aural/visual cues to make him aware of an impending stall but servos will not be driven.*



How Underspeed Protection functions depends on which vertical flight director mode is selected.

For the purpose of this discussion, the vertical flight director modes can be divided into two categories:

- It is important to maintain altitude for as long as possible (altitude- critical modes).
- Maintaining altitude is less crucial (non-altitude critical modes).



*If USP engages while Autopilot is in PIT or VS mode, and power is abruptly set to full throttle, pilot may expect a slight nose up tendency that will be quickly counteracted by autopilot. This is a normal behaviour, the slight nose up tendency in this case will be due to abrupt power advance, but will be immediately damped by Autopilot (with PIT or VS turning green on the annunciation panel).*



*USP engagement is a consequence of autopilot failing to properly monitoring A/P and aircraft behaviour. This is mainly caused by a pilot request that cannot be fulfilled due to lack of power coupled with unattainable pitch input.*

*Pilot need to continuously monitor autopilot performance, while checking that mode selections are compatible with aircraft performance.*



*If Autopilot is engaged in FLC mode, FLC mode will downgrade to PIT mode when in USP for more than 10 seconds.*



*If USP engages while in ALT mode, upon USP disengagement FD will command bars to regain pre-selected altitude (altitude selected before USP engagement). Pilot must monitor A/P to check if previous pre-selected altitude is still attainable with energy available. It is recommended in this case to preselect a new altitude in order to speed-up energy management and recover from slow speed conditions.*



*When USP becomes active, expect a small FD adjustment due to reaction to very low speed condition.*



### 13.2.1 ALTITUDE CRITICAL MODES (ALT, GS, GP, TO, GA, FLC)

When the airspeed trend vector (dedicated algorithm) reaches 65 +/- 2 KIAS a single aural “AIRSPEED” will sound, alerting the pilot to the impending underspeed condition, which requires pilot action.

If the aircraft decelerates to stall warning and a speed of 65 KIAS is reached, the lateral and vertical flight director modes will change from active to armed and the autopilot will provide input causing the aircraft to pitch down and the wings to level.



The aural “AIRSPEED” alert will sound every five seconds.

If aircraft is unintentionally decelerated to 65 KIAS, a MINSPD annunciation posts above the airspeed tape on PFD in alternating amber and black text. A red “UNDERSPEED PROTECT ACTIVE” annunciation will appear to the right of the vertical speed indicator. USP will drive the pitch down until the indicated airspeed increases above 70 KIAS or stall warning turns off, plus two knots (whichever comes first).

When USP disengages, autopilot will cause the aircraft to pitch up until recapturing the vertical reference (vertical and lateral flight director modes will change from white armed to green active).



### 13.2.2 NON ALTITUDE CRITICAL MODES (VS, VNAV, IAS)

When the **airspeed trend vector** (dedicated algorithm) reaches 65 +/- 2 KIAS a single aural “AIRSPEED” will sound, alerting the pilot to the impending under-speed condition, which requires pilot action.

If the aircraft is allowed to decelerate to an IAS below the minimum commandable autopilot airspeed (65 Kts for P2010), a red “UNDERSPEED PROTECT ACTIVE” annunciation appear to the right of the vertical speed indicator

Vertical flight director mode will change from active to armed, Flight Director and autopilot will command the aircraft to pitch down until reaching a pitch attitude at which IAS equals at least the minimum commandable autopilot airspeed, avoiding the development of a stall condition.



When airspeed increases (as a result of adding power/thrust) to an IAS above 70 KIAS, USP will then disengage and the autopilot will command the aircraft to pitch up until recapturing the vertical reference (vertical vertical flight director mode will switch from white armed to green active).

**Supplement D07: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

According to A/C configuration apply following pages replacement:

| <b>Supplement D07<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 2<br/>page</b>    |
|------------------------------------------------|-----------------|--------------------------------------|
| APV 2-7                                        | <b>REPLACES</b> | 2-7 of basic AFM, Section 2          |
| APV 2-9 thru 10                                | <b>REPLACES</b> | 2-9 thru 10 of basic AFM, Section 2  |
| APV 2-15                                       | <b>REPLACES</b> | 2-15 of basic AFM, Section 2         |
| APV 2-17 thru 20                               | <b>REPLACES</b> | 2-17 thru 20 of basic AFM, Section 2 |

INTENTIONALLY LEFT BLANK

#### 4. POWERPLANT LIMITATIONS

Following table reports the operating limitations the installed engine:

**ENGINE MANUFACTURER:** Lycoming Engines

**ENGINE MODEL:** IO-360-M1A

**MAXIMUM POWER:**

|            | Max Power<br>(hp) | Max rpm.<br>Prop. rpm |
|------------|-------------------|-----------------------|
| Max. T.O.  | 180               | 2700                  |
| Max. Cont. | 173.3             | 2600                  |

#### Temperatures:

Max CHT ..... 500° F (260° C)

Max Oil ..... 245° F (118° C)

#### Oil Pressure:

Minimum Idling ..... 25 psi (1.7 Bar)

Minimum Normal ..... 55 psi (3.8 Bar)

Maximum Normal ..... 95 psi (6.5 Bar)

Starting, Warm-up, taxi and take-off (Max) ..... 115 psi (7.9 Bar)

#### Fuel pressure:

- At Inlet to fuel injector:

Minimum ..... 14 psi (0.96 Bar)

Maximum ..... 35 psi (2.41 Bar)

## 7. PAINT

To ensure that the temperature of the composite structure does not exceed limits, the outer surface of the aeroplane must be painted with white paint, except for areas of registration marks, placards, and ornament.

Refer to Aircraft Maintenance Manual (AMM), ATA Chapter 4 and 51, for specific paint requirements.

## 8. PROPELLER

**MANUFACTURER:** ..... MT Propeller

**MODEL:** ..... MTV 15B/193-52

**TYPE:** ..... wood/composite 2-blade, variable pitch

**DIAMETER:** ..... 1930 mm (76 in) (no reduction is permitted)

## 9. MAXIMUM OPERATING ALTITUDE

Maximum operating altitude is 12000 ft (3658 m) MSL.



*At altitudes above 10000 ft (3048 m) up to and including 12000 ft (3658 m), flight crew is recommended to use supplemental oxygen.*

## 10. AMBIENT TEMPERATURE

Ambient temperature: from -25°C to +50°C.



*Flight in expected and/or known icing conditions is forbidden*

## 11. POWERPLANT INSTRUMENT MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

| INSTRUMENT |        | RED ARC<br>Minimum<br>limit | WHITE ARC<br>Advisory | GREEN ARC<br>Safe operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum<br>limit |
|------------|--------|-----------------------------|-----------------------|-----------------------------|-----------------------|-----------------------------|
| PROPELLER  | RPM    | /                           | /                     | 950-2600                    | 0-950<br>2600-2700    | 2700 (line)                 |
| OIL TEMP.  | °F     | /                           | /                     | 140-245                     | 0 - 140               | 245 - 255                   |
| CHT        | °F     | /                           | 435 (line)            | 150-475                     | 0 – 150<br>475-500    | 500-510                     |
| EGT        | °F     | /                           | 1000-1500             | /                           | 1375 (line)           | 1500-1550                   |
| OIL PRESS  | psi    | 0-25                        | /                     | 55-95                       | 25 - 55<br>95-115     | 115 - 125                   |
| FUEL PRESS | psi    | 0-14                        | /                     | 14-35                       | /                     | 35 - 40                     |
| FUEL QTY   | litres | 0                           | /                     | 0-115                       | /                     | /                           |
|            | gal    | 0                           |                       | 0-30,4                      |                       |                             |
| FUEL FLOW  | l/hr   | /                           | 0-75                  | /                           | /                     | /                           |
|            | gal/hr |                             | 0-20                  |                             |                       |                             |

## 12. OTHER INSTRUMENT MARKINGS

| INSTRUMENT | RED ARC<br>Minimum limit | GREEN ARC<br>Safe operation | YELLOW<br>ARC | RED ARC<br>Maximum limit |
|------------|--------------------------|-----------------------------|---------------|--------------------------|
| Voltmeter  | 20-21 Volt               | 24-30 Volt                  | 21-24 Volt    | 30-31                    |

## 19 LIMITATIONS PLACARDS

Hereinafter limitation placards, related to the operating limitations, are placed in plain view on the pilot.

### 19.1 SPEED LIMITATIONS

On the left side instrument panel, above on the left, it is placed the following placard reporting the speed limitations:

Operating Manoeuvring speed  
 **$V_o = 120 \text{ KIAS}$**

### 19.2 OPERATING LIMITATIONS

On the central side of the instrument panel, the following placard is placed reminding the observance of aircraft operating limitations according to installed equipment configuration, see KOEL paragraph 18.

**THIS A/C CAN BE OPERATED ONLY IN NORMAL CATEGORY  
DAY-NIGHT-VFR-IFR (WITH REQUIRED EQUIPMENT) IN NON-ICING CONDITIONS.  
NO AEROBATICS MANOEUVRES, INCLUDING SPINNING, APPROVED.  
FOR OPERATIONAL LIMITATIONS REFER TO FLIGHT MANUAL**

When the Autopilot is installed, next placard is added on the instrument panel to the right of the preceding one:

**OPERATING LIMITATIONS FOR P2010 GARMIN GFC700 AUTOPILOT**

- Pilot with seat belt fastened must be seated at the left pilot position during A/P Ops
- Do not use A/P during take-off and landing
- For RNAV/RNP departures, navigation and approaches pilot must confirm GPS, RAIM and SBAS system availability, in order to comply with appropriate minimum requirements.
- Min. alt. AGL for A/P Operations are:
  - Cruise and descent: 800 ft AGL
  - Climb after T/O and during non-precision approaches: 400 ft AGL
  - Cat.1 ILS Approaches only (200ft AGL)

### 19.3 NO SMOKING PLACARD

On the right hand side of the instrument panel the following placard is placed reminding the observance for “no smoking”:

**NO SMOKING**

## 20 AUTOPILOT LIMITATIONS

**NOTE**

*The “Garmin G1000 Pilot’s Guide for the Tecnam P2010” (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version) must be carried in the aircraft and made available to the pilot at all time.*

Following operating limitations shall apply when the aircraft is equipped with Garmin GFC700 Autopilot:

- The Autopilot is certified for Category I – ILS Approaches [with a decision height not lower than 200 ft AGL (61 m)]
- During Autopilot operation, a pilot with seat belt fastened must be seated at the left pilot position
- Maximum speed for Autopilot operation is 150 KIAS
- Do not use autopilot for airspeed below 70 KIAS
- Minimum approach speed is 70 KIAS
- The autopilot must be OFF during takeoff and landing
- Minimum altitude AGL for Autopilot operation is:
  - b. Cruise and Descent: 800 ft (244 m) AGL
  - c. Climb after Take-off: 400 ft (122 m) AGL
  - d. ILS CAT I precision approach: 200 ft (61 m) AGL
- Use of the autopilot or manual electric trim system is prohibited before the satisfactory completion of the Pre-flight procedure.
- Autopilot USP function requires flaps indicators lights in the cockpit to be efficient for correct operation. If one flap indicator light gets in-operative during flight, USP function is not assured.



## **21 PBN (RNAV & RNP) OPERATIONAL ELIGIBILITY**

### **21.1 GENERAL GNSS NAVIGATION EQUIPMENT APPROVALS**

The GPS/GNSS receivers in the G1000 System are certified to TSO C129a Class A1 and ETSO C129a Class A1 or TSO C145a and ETSO 2C145a.

The Garmin GNSS navigation system as installed in this airplane complies with the requirements of AC 20-138A, JAA TGL-10 and AMCs 20-4A, 20-27A and 20-28.

It's approved for navigation using GPS and SBAS (within the coverage of a Satellite Based Augmentation System complying with ICAO Annex 10) for IFR en route, terminal area, precision and non-precision approach operations.

The G1000 System meets the requirements for GPS/GNSS as a Primary Means of Navigation for Oceanic/Remote Operations (RNP-10) per AC 20-138C, FAA Notice N8110.60, FAA Order 8400-12C and FAA Order 8700-1. Both GPS/GNSS receivers are required to be operating and receiving usable signals except for routes requiring only one Long Range Navigation sensor.

In accordance to ICAO doc 9613 (Fourth Edition – 2013), the G1000 System has been shown to be eligible for:

- B-RNAV (RNAV-5) per AMC 20-4A.
- RNAV1 / P-RNAV (RNP-1) Enroute and Terminal navigation per JAA TGL-10 Rev.1.
- RNP APCH LNAV/VNAV per EASA AMC 20-27. This does not include APV BARO-VNAV operation which is not cleared.
- LPV with SBAS per EASA AMC 20-28.

provided that the G1000 is receiving usable navigation information from at least one GPS receiver.

## 21.2 G1000 GNSS (GPS/SBAS) NAVIGATION SYSTEM LIMITATIONS

The pilot must confirm at system initialization that the Navigation database is current. Navigation database is expected to be current for the duration of the flight.

If the AIRAC cycle will change during flight, the pilot must ensure the accuracy of navigation data, including suitability of navigation facilities used to define the routes and procedures for flight. If an amended chart affecting navigation data is published for the procedure, the database must not be used to conduct the procedure.

GPS/SBAS based IFR enroute, oceanic, and terminal navigation is prohibited unless the pilot verifies and uses a valid, compatible, and current Navigation database or verifies each waypoint for accuracy by reference to current approved data.

Discrepancies that invalidate a procedure must be reported to Garmin International. The affected procedure is prohibited from being flown using data from the Navigation database until a new Navigation database is installed in the airplane and verified that the discrepancy has been corrected.

Contact information to report Navigation database discrepancies can be found at [www.Garmin.com](http://www.Garmin.com)>Support>Contact Garmin Support>Aviation. Pilots and operators can view navigation data base alerts at [www.Garmin.com](http://www.Garmin.com) > In the Air> NavData Alerts.

For flight planning purposes, in areas where SBAS coverage is not available, the pilot must check RAIM availability.

Within Europe, RAIM availability can be determined using the G1000 WFDE Prediction program or Europe's AUGER GPS RAIM Prediction Tool at <http://augur.ecacnav.com/augur/app/home>.

This requirement is not necessary if SBAS coverage is confirmed to be available along the entire route of flight.

The route planning and WFDE prediction program may be downloaded from the GARMIN G1000 website on the internet. For information on using the WFDE Prediction Program, refer to GARMIN WAAS FDE Prediction Program, part number 190-00643-01, 'WFDE Prediction Program instructions'.

For flight planning purposes for operations within European B-RNAV and P-RNAV airspace, if more than one satellite is scheduled to be out of service, then the availability of GPS integrity RAIM shall be confirmed for the intended flight (route and time).

In the event of a predicted continuous loss of RAIM of more than five minutes for any part of the intended flight, the flight should be delayed, cancelled, or rerouted on a track where RAIM requirements can be met.

Both GPS navigation receivers must be operating and providing GPS navigation guidance to the PFD for operations requiring RNP-4 performance.

Whenever possible, RNP and RNAV routes including Standard Instrument Departures (SIDs) and Obstacle Departure Procedures (ODPs), Standard Terminal Arrival (STAR), and enroute RNAV "Q" and RNAV "T" routes should be loaded into the

flight plan from the database in their entirety, rather than loading route waypoints from the data

base into the flight plan individually. Selecting and inserting individual named fixes from the database is permitted, provided all fixes along the published route to be flown are inserted. "GPS", "or GPS", and "RNAV (GPS)" instrument approaches using the G1000 System are prohibited unless the pilot verifies and uses the current Navigation database. GPS based instrument approaches must be flown in accordance with an approved instrument approach procedure that is loaded from the Navigation database.

Not all published Instrument Approach Procedures (IAP) are in the Navigation database.

Pilots planning on flying an RNAV instrument approach must ensure that the Navigation database contains the planned RNAV Instrument Approach Procedure and that approach procedure must be loaded from the Navigation database into the FMS flight plan by its name.

The navigation equipment required to join and fly an instrument approach procedure is indicated by the title of the procedure and notes on the IAP chart.

Use of the GARMIN G1000 GPS/SBAS receivers to provide navigation guidance during the final approach segment of an ILS, LOC, LOC-BC, LDA, SDF,MLS or any other type of approach not approved for "or GPS" navigation is prohibited. When using the G1000 VOR/LOC/GS receivers to fly the final approach segment, VOR/LOC/GS navigation data must be selected and presented on the CDI.

## **SID/STAR**

The use of SIDs and STARs stored in GPS data base is only authorized, if the pilot has checked that GPS procedure corresponds to the one given in the official documentation (coordinates of various points and paths between points).

**Supplement D07: pages replacement instructions**

### **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

According to A/C configuration apply following pages replacement:

| <b>Supplement D07<br/>EMERGENCY PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section<br/>3 page</b>          |
|---------------------------------------------------------|-----------------|--------------------------------------------|
| APV 3-4                                                 | <b>REPLACES</b> | 3-4 of basic AFM, Section 3                |
| APV 3-14                                                | <b>REPLACES</b> | 3-14 of basic AFM, Section 3               |
| APV 3-18 thru 19                                        | <b>REPLACES</b> | 3-18 thru 19 of basic AFM, Section 3       |
| APV 3A-31 thru 35                                       | <b>REPLACES</b> | Added at the end of Section 3 of basic AFM |

INTENTIONALLY LEFT BLANK

**1.1. REFERENCE AIRSPEEDS FOR EMERGENCY PROCEDURES**

|                                  |                |
|----------------------------------|----------------|
| Best glide speed ( $V_{GLIDE}$ ) | <b>84 KIAS</b> |
| No-flaps Approach Speed          | <b>80 KIAS</b> |

### 6.3 PROPELLER OVERSPEED

In case of propeller overspeed in flight, apply following procedure:

- |                          |              |
|--------------------------|--------------|
| 1. Throttle Lever .....  | REDUCE power |
| 2. Propeller Lever ..... | Decrease RPM |
| 3. Mixture Lever .....   | As required  |
| 4. RPM indicator .....   | CHECK        |

If it is not possible to decrease propeller rpm, **land as soon as possible** applying

*Forced landing procedure. (See Para 11)*



*Maximum propeller rpm exceedance may cause engine components damage.*

*Monitor engine RPM; overspeed shall be prevented by retarding propeller lever.*

### 6.4 IRREGULAR RPM

1. Fuel pump: .....ON
2. Fuel quantity and pressure indicators: .....CHECK
3. If necessary: ..... SWITCH TANK

**If engine continues to run irregularly**

- **Land as soon as possible.**

## **6.10. DEFECTIVE ENGINE CONTROLS**

### **Defective Mixture Control Cable**

1. Maintain altitude to the nearest airfield
2. During descent, check engine behaviour to a higher power setting.  
A lean mixture can lead to engine roughness and loss of power.  
Landing approach must be planned accordingly.

**WARNING**

Go-around may then be impossible.

### **Defective Throttle Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with Propeller lever
2. Perform landing with shut-down engine applying  
*Forced landing procedure. (See Para 11)*

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure. (See Para 11)*

### **Defective Propeller Lever Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with throttle
2. Perform normal landing.

**WARNING**

Go-around may then be impossible.

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure. (See Para 11)*



## 7. INFLIGHT ENGINE RESTART

### 7.1. PROPELLER WINDMILLING

**WARNING**

*In case of engine shutdown, propeller will keep windmilling and will not stop, preventing the use of ignition key. Engine inflight restart must be performed without using ignition key with propeller windmilling in order to avoid possible engine damages.*

*Typical indication of a potential engine shutdown, with windmilling propeller, will be RPM running sub-idle below 600-500 RPM, to be confirmed by other engine instrument (OIL Pressure, CHT, EGT running down abnormally).*

*Inflight engine restart may be performed during 1g flight anywhere within the normal operating envelope of the airplane.*

- |                                  |                         |
|----------------------------------|-------------------------|
| 1. Master switch .....           | Check ON                |
| 2. Fuel pump .....               | ON                      |
| 3. Fuel quantity indicator ..... | CHECK                   |
| 4. Fuel Selector .....           | SWITCH TANK             |
| 5. Throttle Lever .....          | Minimum 1cm. above IDLE |
| 6. Propeller Lever.....          | Full forward            |
| 7. Mixture .....                 | FULL rich               |
| 8. Throttle lever .....          | SET as required         |

#### **In case of unsuccessful engine restart:**

- **Land as soon as possible** applying *Forced landing procedure.*  
(See Para 11)

#### **In case of successful engine restart:**

- **Land as soon as possible**

**CAUTION**

*After engine restart, if practical, moderate propeller rpm to allow the temperatures for stabilizing in the green arcs.*

## 12. AUTOPILOT EMERGENCY PROCEDURES

**NOTE**

*In the event of autopilot malfunction, or when the system is not performing as expected or commanded, take immediately the aircraft control disconnecting the autopilot which must be set inoperative until the failure has been identified and corrected.*

### 12.1 AUTOPILOT HARDOVER OR FAILURE TO HOLD THE SELECTED HEADING

In case of A/P hardover or failure to hold selected heading, apply following procedure:

**Accomplish items 1 and 2 simultaneously:**

- |                             |                                                                            |
|-----------------------------|----------------------------------------------------------------------------|
| 1. Airplane control wheel   | <i>GRASP FIRMLY and OVER-POWER if necessary to regain aircraft control</i> |
| 2. AP DISC/TRIM INTR switch | <i>PRESS</i>                                                               |
| 3. AP MASTER SWITCH         | <i>OFF</i>                                                                 |
| 4. AP Circuit Breaker       | <i>PULL</i>                                                                |



*Following an A/P or MET system malfunction, do not engage the autopilot until the cause of the malfunction has been corrected.*

**NOTE**

*When Autopilot is disconnected, it may be necessary operate the pitch trim through either the Manual Electric Trim Switch or the Trim Wheel.*

## 12.2 ALTITUDE LOST DURING A PITCH AXIS AUTOPILOT MALFUNCTION AND RECOVERY

Following table addresses the altitude lost during a pitch axis malfunction and recovery for each reported flight phase:

| Flight phase | Altitude loss |
|--------------|---------------|
| Climb        | 90 ft         |
| Cruise       | 200 ft        |
| Descent      | 170 ft        |
| Maneuvering  | 210 ft        |
| Approach     | 70 ft         |

## 12.3 ELECTRIC TRIM MALFUNCTION

In case of Electric Trim malfunction (either in AP Autotrim mode or when manually operated through the Manual Electric Trim Switch), apply following procedure:

- |                             |                       |
|-----------------------------|-----------------------|
| 1. AP DISC/TRIM INTR switch | <i>PRESS and HOLD</i> |
| 2. TRIM MASTER SWITCH       | <i>OFF</i>            |
| 3. TRIM Circuit Breaker     | <i>PULL</i>           |
| 4. AP DISC/TRIM INTR switch | <i>RELEASE</i>        |



*When Autopilot is disconnected because of a pitch trim malfunction, hold the control wheel firmly.*

### NOTE

*When electric trim is disconnected, it is necessary operate the pitch trim through the Trim Wheel.*

### NOTE

*When electric trim is disconnected, Autopilot system can be operated both in pitch and roll modes; nevertheless, when a pitch mode (ALT HOLD, VS, GS) is engaged, the Autopilot will provide an annunciation whenever it is necessary to manually trim the aircraft about the pitch axis using the Trim Wheel. Make reference to “Garmin G1000 Integrated Avionic System Pilot’s Guide” for Tecnam P2010 (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version).*

**12.4 AMPLIFIED EMERGENCY PROCEDURES**

The following observations provide additional information for more complete understanding of the recommended course(s) of action in emergency situations.

1. An autopilot or autotrim malfunction occurs when there is an uncommanded deviation in the airplane flight path or when there is abnormal control wheel or trim wheel motion. In some cases, (especially for autopilot trim), there may be little to no airplane motion, but the PITCH TRIM annunciator (LH side of PDF) may come on.
2. The primary concern in reacting to an autopilot or autopilot trim system malfunction, or to an automatic disconnect of the autopilot, is to keep control of the airplane. Immediately grasp the control wheel and push and hold the A/P DISC/TRIM INT switch throughout the recovery. Manipulate the controls as required to safely keep the airplane within all of its operating limitations. Elevator trim should be used manually as needed to relieve control forces.  
  
Switch the AP MASTER SWITCH to OFF and, when time is available after aircraft recovery, open (pull) the AUTOPILOT circuit breaker on the lower right hand corner of the circuit breaker panel to completely disable the autopilot system.
3. A MET (Manual Electric Trim) system malfunction (without pilot actuation of the manual electric trim switches) may be recognized by the PITCH TRIM annunciator coming on or by unusual trim wheel motions with the autopilot not engaged. As with an autopilot malfunction, the first concern following a manual electric trim system malfunction is to keep the airplane in control. Grasp the control wheel firmly and push and hold down the A/P DISC/TRIM INT switch. Switch the trim cut-out switch to OFF.

## 12.5 ABNORMAL PROCEDURES

This table is a quick access table that provide additional information regarding residual A/P capabilities in case loss of autopilot servos and/or pitch trim servo

**NOTE**

*With A/P engaged, in case of loss of both A/P servos and pitch trim servo, the disconnect tone will play continuously, until acknowledged through A/P button on MFD or trim switch on control wheel.*

| LOSS OF A/P SERVO | LOSS OF PITCH TRIM SERVO | A/P STATUS | NOTES                                                                                                                                                                                                                                                                                                                                                                                          | A/P FUNCTIONALITY                                                                                                     | ESP STATUS |     | USP STATUS                                            |                            |
|-------------------|--------------------------|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|------------|-----|-------------------------------------------------------|----------------------------|
|                   |                          |            |                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                                                       | ON         | OFF | ON                                                    | OFF                        |
| X                 | X                        | DISENGAGED | <u>MEPT Unavailable</u><br>PTRM red on PFD<br>NO VERT MODES on PFD<br>PTRM C&M red cross on MFD SYS page                                                                                                                                                                                                                                                                                       | A/P can be engaged, but only lateral modes will be correctly flown (lack of pitch trim). FD is operative in all modes | X          |     | X<br>(can't hold 65 kts without pitch trim available) |                            |
|                   |                          |            | <u>A/P disconnect</u><br>PTCH red annunciation on PFD NO VERT MODES on PFD<br>ESP Fail on alert window<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page                                                                                                                                                                                                             | A/P can be engaged, but only lateral modes will be correctly flown (lack of pitch trim). FD is operative in all modes |            | X   |                                                       | X<br>(only MINSPD warning) |
|                   |                          |            | <u>A/P disconnect &amp; MEPT Unavailable</u><br>AFCS red annunciation on PFD (1'')<br>ESP Fail on alert window<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page<br>PTRM C&M red cross on MFD SYS page                                                                                                                                                               | A/P can't be engaged FD is operative in all modes                                                                     |            | X   |                                                       | X<br>(only MINSPD Warning) |
|                   |                          |            | <u>MEPT Unavailable</u><br>PTRM red annunciation on PFD<br>NO VERT MODES on PFD<br>PTRM C&M red cross on MFD SYS page                                                                                                                                                                                                                                                                          | A/P can't be engaged FD is operative in all modes                                                                     | X          |     | X<br>(can't hold 65 kts without pitch trim available) |                            |
| X                 | X                        | ENGAGED    | <u>A/P disconnect</u><br>PTCH red annunciation on PFD<br>NO VERT MODES on PFD<br>ESP Fail on window alert<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page                                                                                                                                                                                                          | A/P can't be engaged FD is operative in all modes                                                                     |            | X   |                                                       | X<br>(only MINSPD Warning) |
|                   |                          |            | <b><i>A/P continuous disconnect tone can be silenced through the AP button on MFD and by the trim switch on control wheel.</i></b><br><u>A/P disconnect &amp; MEPT Unavailable</u><br>AFCS red annunciation on PFD (1'')<br>NO VERT MODES on PFD<br>ESP Fail on alert window<br>PTCH C&M red cross on MFD SYS page<br>ROLL C&M red cross on MFD SYS page<br>PTRM C&M red cross on MFD SYS page | A/P can't be engaged FD is operative in all modes                                                                     |            | X   |                                                       | X<br>(only MINSPD warning) |
|                   |                          |            |                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                                                       |            |     |                                                       |                            |

This table is a quick access table that provide additional information regarding residual A/P capabilities in case of loss of PFD or MFD.

| PFD      | MFD      | NOTES                                                                                                                                                                                                      |
|----------|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ON → OFF | ON       | A/P reverts to PIT & ROLL (from any mode selected) No aural from A/P (both A/P DISC & USP)                                                                                                                 |
| ON       | ON → OFF | A/P stays in the selected mode<br>A/P control keyboard unavailable<br>A/P can be disconnected with A/P DISC button on control wheel<br>FD command bars cannot be eliminated ESP Off on alert window on PFD |
| ON → OFF | ON → OFF | A/P automatically disconnects after ~ 4 to 5 seconds<br>A/P disconnection tone plays endlessly until A/P DISC                                                                                              |

Supplement D07: pages replacement instructions

## SECTION 4 – NORMAL PROCEDURES

Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures

According to A/C configuration apply following pages replacement:

| Supplement D07<br>NORMAL PROCEDURES<br>page |          | AFM<br>Section 4<br>page                   |
|---------------------------------------------|----------|--------------------------------------------|
| APV 4-7                                     | REPLACES | 4-7 of basic AFM, Section 4                |
| APV 4-15                                    | REPLACES | 4-15 of basic AFM, Section 4               |
| APV 4-19 thru 26                            | REPLACES | 4-19 thru 26 of basic AFM, Section 4       |
| APV 4-27 thru 38                            | REPLACES | Added at the end of Section 4 of basic AFM |

INTENTIONALLY LEFT BLANK



### 3. AIRSPEEDS FOR NORMAL OPERATIONS

The following airspeeds are those which are significant for normal operations.

|                                     | <b>FLAPS</b> | <b>1160kg<br/>(2557lbs)</b> |
|-------------------------------------|--------------|-----------------------------|
| Rotation Speed ( $V_R$ )            | T/O          | <b>60 KIAS</b>              |
| Best Angle-of-Climb Speed ( $V_X$ ) | 0°           | <b>75 KIAS</b>              |
| Best Rate-of-Climb speed ( $V_Y$ )  | 0°           | <b>82 KIAS</b>              |
| Flaps ( $V_{FE}$ )                  | T/O & LAND   | <b>91 KIAS</b>              |
| No flaps approach                   | 0°           | <b>80 KIAS</b>              |
| Approach speed                      | T/O          | <b>75 KIAS</b>              |
| Final Approach Speed                | FULL         | <b>70 KIAS</b>              |
| Manoeuvring speed ( $V_A$ )         | 0°           | <b>120 KIAS</b>             |
| Vglide                              | 0°           | <b>84 KIAS</b>              |
| Never Exceed Speed ( $V_{NE}$ )     | 0°           | <b>166 KIAS</b>             |

## 5. CHECKLISTS

### 5.1. BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*
2. Flight controls: operate full stroke checking for movement smoothness, free of play and friction.
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Throttle: *IDLE*
6. Propeller Lever: *HIGH RPM*
7. Mixture control Lever: *LEAN*
8. Circuit Breakers: *check all IN*
9. Master switch: *ON, wait PFD turn on, Check ALT OUT caution ON, Check LOW FP and LOW OP warning ON*
10. Only before the first flight of the day:  
Standby Instrument: Check no red crosses displayed.
  - a. Press and hold the control knob (approx. 2 sec)
  - b. Rotate the knob selecting "INFO>" page then press it
  - c. Select "BATTERY INFO" page then press the knob
  - d. Check "CHARGE (%)" to be more than 80%, then exit menu
11. Avionic Master switch: *ON, wait MFD turn on, check instruments, check Voltage on Main and Essential Buses.*
12. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection), then update the Garmin fuel content in the totalizer accordingly*

#### NOTE

The totalizer function available on Garmin Engine page allows input only up to 230lbs (maximum usable fuel). Initial Fuel indication on totalizer must be corrected manually (as it does not use the aircraft fuel quantity indicators as input). Once correctly initialized, fuel consumption on totalizer is very precise as it takes instantaneous fuel flow for computation

13. Electric fuel pump: *ON (check for audible pump noise and increase of fuel pressure)*
14. Warning "LOW FUEL PRESSURE": *extinguished*
15. Electric fuel pump: *OFF*
16. Flap control: *cycle fully extended and then set to T/O*
17. Pitch Trim: *cycle fully up and down, then set to NEUTRAL*
18. Rudder trim: *cycle full right and left, then set to NEUTRAL*



Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct VR.

19. Nav & Strobe lights: *ON*

#### NOTE

In absence of RH seat occupant: fasten seat belts around the seat in order to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency

20. Doors: *Closed and locked*

## 5.5. BEFORE TAKEOFF

1. Parking brake: *brake pedal press, ON*
2. Engine instruments: *Check within limits*
3. ALT OUT caution: *OFF (check)*
4. Electric Fuel pump: *ON*
5. Fuel selector valve: *select the fullest tank*
6. Fuel pressure: *check*
7. Mixture: *FULL RICH*

### NOTE

For 5000ft density altitude and above, or high ambient temperatures, a *FULL RICH* mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operations

8. Throttle: *set 1500 RPM*
  - a. Alternate Air check:
    - Alternate Air: *PULL (Check drop 50-100 RPM)*
  - b. Mixture check:
    - Mixture: *reduce*
    - EGT: *check increase*
    - FF: *check decrease*
    - Mixture: *FULL RICH*
9. Throttle: *2100 RPM*
10. Propeller Lever:
  - *Pull back until a drop of max. 500 RPM is reached then high RPM*
  - *Cycle 3 times*
11. Magneto Check: *L – BOTH – R – BOTH*
  - *Max RPM drop: 175 RPM*
  - *Max. difference: 50 RPM*
12. Throttle: *Idle*
13. Flaps: *check T/O*
14. Pitch and Rudder trim: *check neutral*
15. Flight controls: *check free*
16. Seat belts: *check fastened*
17. Doors: *check closed and locked*
18. Parking brake: *Release*
19. Landing light: *ON as required*
20. XPDR: *ON*

## 5.6. TAKEOFF

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixt may cause rough running of the engine or a loss of performance. The mixture may be justed to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft den altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark*

1. Pitot HEAT: *ON if required*
2. Fuel pump: *ON*
3. Brakes: *apply*
4. Throttle: *FULL and check approximately 2680 ± 20 RPM*



*Engine proper performance at full throttle shall be checked early in the ground roll in order to abandon take-off if necessary.*

*A rough engine, sluggish RPM increase or failure to reach take-off RPM are reasons for abandoning the take-off. If the engine oil is cold, an oil pressure in the yellow sector is permissible*

5. Engine instruments: *check parameters within the limits*
6. Brakes: *Release*
7. Rotation speed VR: *60 KIAS*
8. Airspeed: *67 KIAS*

*Above a safe height:*

1. Propeller lever: *2600 RPM*
2. Landing lights: *OFF*

## 5.7. CLIMB

**NOTE**

*Due to position of fuel sensors, during climb fuel gauges in cockpit will indicate a fuel quantity slightly lower than the real amount. Regaining level flight will immediately restore correct indications.*

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance.*

*The mixture may be adjusted to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft density altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until an increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Flaps: *UP* (minimum speed 73 KIAS)

**NOTE**

*Expect to adjust pitch trim (pitch up) when retracting flaps after take-off*

2. Establish climb  $V_y$ : 82 KIAS
3. Electrical fuel pump: *OFF*
4. Fuel pressure: *check within limits*
5. Throttle: *FULL*
6. MIXTURE: *RICH*, above 5000ft keep EGT constant
7. Engine instruments: *in the GREEN*

**NOTE**

*If the fuel pressure warning light illuminates, or the fuel pressure indication is below green arc, the electrical fuel pump must be switched ON.*

## 5.8. CRUISE

1. Power: set performance as required, refer to table in section 5 of AFM
2. Propeller lever: 1800-2400 RPM
3. Fuel tank selector: as required to maintain symmetric balance
4. Mixture: set in accordance with following para 5.9

**NOTE**

To optimize engine life, the cylinder head temperature (CHT) should lie between 150°F and 400°F in continuous operation, and not rise above 435°F in fast cruise.

**NOTE**

Monitor and manually compensate asymmetrical fuel consumption by switching fuel selector valve. Switch ON the electric fuel pump prior to swap the fuel feeding from one tank to another.

## 5.9. MIXTURE ADJUSTMENT RECOMMENDATION


**CAUTION**

The maximum permissible cylinder head temperature (500 °F) must never be exceeded. The mixture control lever should always be moved slowly.

Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH before throttle adjustment.

Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.

**NOTE**

For maximum service life cylinder head temperature should be kept below 475 °F (high performance cruise) and below 435 °F (for economy cruise).

### Best Cruise Economy Mixture

The best economy mixture setting may only be used up to a power setting of 75 %. In order to obtain the lowest specific fuel consumption at a particular power setting, proceed as follows:

- Slowly pull the mixture control lever back towards LEAN until the engine starts to run roughly.
- Then push the mixture control lever forward just far enough to restore smooth running. At the same time the exhaust gas temperature (EGT) should reach a maximum.

### Best Cruise Power Mixture

The mixture can be set for maximum performance at all power settings:

- The mixture should first be set as for best economy.
- The mixture should then be enriched until the exhaust gas temperature is approximately 100°F lower.

This mixture setting produces the maximum performance for a given manifold pressure and is mainly used for high power settings (approximately 75 %).

## 5.10. DESCENT

**NOTE**

Due to position of fuel sensors, during descent fuel gauges in cockpit will indicate a fuel quantity slightly higher than the real amount. Regaining level flight will immediately restore correct indications

1. Mixture control: *slowly full rich*
2. Propeller lever: *as required*
3. Throttle: *reduce as required*

*Shock cooling shortens engine life.*

**NOTE**

*When reducing power, the change in cylinder head temperature should not exceed 50°F per minute. In order to ensure best practice and avoid potential illumination of ALT FAIL (due to low propeller speed), the following best practice should be observed:*

- *Reducing power to maintain a minimum descent speed of 84 KIAS (best glide) and / or a blade angle to maintain 850 RPM;*
- *Opening the ALTER AIR command to full open (to avoid ice accretion).*

**CAUTION**

*The maximum permissible cylinder head temperature (500 °F) must never be exceeded. The mixture control lever should always be moved slowly.*

*Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH.*

*Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.*

## 5.11. BEFORE LANDING

1. Electric fuel pump: *ON*
2. Fuel valve: *select the fullest tank*
3. Landing Light: *ON*

*On downwind, leg abeam touch down point:*

4. Flaps: *set T/O (below 90KIAS)*

### NOTE

*Expect to adjust pitch trim (pitch down) when extending flaps to T/O or LAND*

5. Approach speed: *set On final leg, before landing:*
6. Mixture control lever: *RICH*
7. Propeller Lever: *HIGH RPM*
8. Flaps: *LAND*
9. Final Approach Speed: *set*
10. ptimal touchdown speed: *60 KIAS*



*In conditions such as (e.g.) strong wind, danger of windshear or turbulence a higher approach speed shall be selected..*

## 5.12. BALKED LANDING/MISSED APPROACH

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to V<sub>Y</sub> or V<sub>X</sub> as applicable*
3. Flaps position: *T/O*

*Above a safe height:*

4. Propeller lever: *2600 RPM*
5. Landing lights: *OFF*

## 5.13. GO-AROUND

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to V<sub>Y</sub> or V<sub>X</sub> as applicable*
3. Flaps position: *T/O*

## 5.14. AFTER LANDING

1. Throttle: *Idle*
2. Brakes: *apply*
3. Pitot heat: *OFF (if ON)*
4. Flaps: *UP*
5. Electric Fuel Pump: *OFF*
6. XPDR: *OFF*
7. Landing light: *OFF*



**5.15. ENGINE SHUT DOWN**

1. Parking brake: *set*
2. Keep engine running at 1200 propeller rpm for about one minute in order to reduce latent heat.
3. Avionic equipment: *OFF*
4. Throttle: *idle*
5. Magnetos: *Check OFF – BOTH*
6. Mixture: *closed*
7. Ignition key: *OFF, key extracted*
8. Strobe light: *OFF*
9. Avionic Master: *OFF*
10. Master & Generator switches: *OFF*
11. Fuel selector valve: *OFF*

**WARNING**

*For safety, verify propeller is fully stopped before any other action.*

**CAUTION**

*Instruct passenger to fully open RH door and depart, avoiding contact with wheels and sharp wing control surfaces edges.*

**5.16. POSTFLIGHT CHECKS**

1. Flight controls: *lock by means of seat belts*
2. Wheel chocks and wing mooring lines: *Set*
3. Parking brake: *Release*
4. Doors: *Close and lock*
5. Protection plugs: *set over pitot tube, stall warning, static ports*

### **5.17. FLIGHT IN RAIN**

Performance deteriorates in rain; this applies particularly to take-off distance and maximum Horizontal speed. The effect on flight characteristics is minimal.

### **5.18. REFUELLING**

Before refuelling, the airplane must be connected to electrical ground.

### **5.19. FLIGHT AT HIGH ALTITUDE**

At high altitudes the provision of oxygen for the occupant is necessary. Legal requirements for the provision of oxygen should be adhered to (see para 2.9).

## 6 AUTOPILOT NORMAL PROCEDURES

**NOTE**

*For detailed description of A/P selections, behaviour and display outlook, refer to the “Garmin G1000 Pilot’s Guide for the Tecnam P2010” (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version); it must be always carried in the aircraft and made available to the pilot at all time*

**NOTE**

*If A/P Master switch and /or Trim disconnect switch are inadvertently switched OFF, it will be necessary to reset both switches to allow A/P and pitch trim functionality. In this case pilot will make sure A/P is disengaged before reset. The single reset of only one of the switches will not permit to reset the single functionality.*

PREFLIGHT:

AIRCRAFT PRE-FLIGHT CHECKS:

- 1) MASTER SWITCH (BAT): ON.
- 2) AVIONICS MASTER SWITCH: ON.
- 3) AUTOPILOT MASTER SWITCH: ON.
- 4) POWER APPLICATION and SELFTEST - The autopilot tests itself when power is first made available. The test is a sequence of internal checks before starting normal system operation. The test sequence is shown on PFD left upper corner by the red AFCS label followed by the white PFT label, ending with double AP disengagement tone (which indicates a successful completion).

Autopilot system availability is shown under system page on MFD.



*If the red AFCS stays ON, the A/P has failed the preflight test. Put the A/P MASTER SWITCH OFF to make sure that the A/P will not operate.*

- 5) MANUAL ELECTRIC TRIM (MET) SYSTEM - TEST

Pitch Trim: cycle fully up and down, then set to NEUTRAL

**NOTE**

*Both pitch trim halves must be actuated to move pitch trim.*

*Any movement of the elevator trim wheel during the check of either the LH or RH Switch only means that the Manual Electric Trim System has failed.*

- 6) ELEVATOR TRIM WHEEL - SET pointer to takeoff position.
- 7) AVIONICS MASTER SWITCH: OFF
- 8) MASTER SWITCH (BAT): OFF

## 7 AUTOPILOT MODES



*When the A/P is engaged, the pilot must continuously monitor and be ready to disengage the A/P. Do the Emergency Recovery procedure if A/P operation is erratic or does not correctly control the airplane.*

### NOTE

*The “Garmin G1000 Pilot’s Guide for the Tecnam P2010” (Part No. 190-01830-00 Revision A dated September 25, 2014 or a more updated version) must be carried in the aircraft and made available to the pilot at all time.*

### NOTE

*Autopilot tracking performance will not be as good as usual in turbulence.*

### NOTE

*Autopilot engagement / disengagement is not equivalent to servo engagement/disengagement. Use the CWS Button to disengage the pitch and roll while the autopilot remains active*

### HDG

### NOTE

*Pressing the HDG knob synchronizes the Selected Heading to the current heading*

*In this case expect a small heading overshoot that will be subsequently corrected*

### VS MODE



*Selection of a vertical speed beyond the capability of the aircraft can create a condition of reduced airspeed, and possibly lead to USP activation.*

*During A/P operation, pilot must set the A/P Vs rate and engine power to make sure that airspeed remains within autopilot envelope and does not exceed any other airplane operating limitation.*



*VS is an open mode, which will engage irrespective of Selected Altitude. Pilot monitoring is always required to make sure that a correct Selected Altitude is shown on PFD*

### SELECTED ALTITUDE CAPTURE MODE (ALTS)

### NOTE

*Pressing the CWS Button while in Selected Altitude Capture Mode does not cancel the mode.*

## ALTITUDE HOLD MODE (ALT)

**NOTE**

*Turning the ALT knob while in Altitude Hold Mode changes the Selected Altitude, but not the FD Altitude Reference, and does not cancel the mode*

## FLC MODE


**CAUTION**

*The Selected Altitude MUST be set before selecting Flight Level Change Mode. FLC IAS selection is directly linked to actual IAS, pilot will need to monitor airspeed after selection of FLC mode.*

## VERTICAL NAVIGATION MODES (VPTH, ALTV)

**NOTE**

*VNV is disabled when parallel or dead reckoning mode is active*

**NOTE**

*The selected altitude takes precedence over any other vertical constraints.*

**NOTE**

*If another pitch mode key is pressed while Vertical Path Tracking Mode is selected, VPTH mode reverts to armed.*

*If the selected altitude is not at least 75 ft below the VNV Target Altitude, the FD captures the Selected Altitude once Vertical Path Tracking Mode become active (ALTS is armed rather than ALTV).*

**NOTE**

*Altitude preselect must show an altitude below the flight plan's Target Altitude.*

*If the selected altitude is not at least 75 ft below the VNV Target Altitude, the FD captures the Selected Altitude once Vertical Path Tracking Mode become active (ALTS is armed rather than ALTV).*

*If VPTH is armed more than 5 minutes prior to descent path capture, acknowledgement is required for the FD to transition from Altitude Hold to VPTH*

**NOTE**

*To proceed with descent path capture if the white "VPTH" flashes, do the following:*

- Press VNV Key
- Turn ALT knob to adjust the Selected Altitude.

*If the selected altitude is not at least 75 ft below the VNV Target Altitude, the FD captures the Selected Altitude once Vertical Path Tracking Mode become active (ALTS is armed rather than ALTV).*

**NOTE**

*Armed VNV Target Altitude and Selected Altitude capture modes are mutually exclusive. Selected Altitude Capture Mode is armed also (not annunciated) whenever VNV Target Altitude Capture Mode is armed*

## APPROACH MODES

**NOTE**

*The selected navigation receiver must have a valid VOR or LOC signal or active GPS course for the flight director to enter Approach Mode*

## 8 AUTOPILOT ABNORMAL PROCEDURES

### Loss of a single GPS:

In case of loss of a single GPS, RNAV guidance will still be available as the system will automatically revert to the other available GPS without losing any autopilot / FD guidance.

The ALERT window will switch to ADVSY and start to flash; when selected a “AHRS1 GPS – AHRS1 using backup GPS source” CAS message will appear inside the alert window.

### Loss of both GPS:

In case of loss of both GPS, RNAV guidance will not be available anymore.

The ALERT window will switch to ADVSY and start to flash; when selected a “GPS NAV LOST – Loss of GPS navigation. Insufficient satellites” CAS message will appear inside the alert window. In this case also ESP will be lost and the “ESP OFF” CAS message will also appear inside the alert window.

Further to that, a yellow “LOI” (loss of integrity) CAS message will be displayed on the HIS and all other GPS related information (e.g. wind) will turn to yellow.

If GPS nava mode is being selected, the HSI on the PFD will not display the deviation bar. If GPS is selected as navigation source a “*AHRS1 GPS – AHRS1 operating exclusively in no-GPS mode*” CAS message will appear inside the alert window.

#### **NOTE**

*Dead Reckoning Mode only functions in Enroute (ENR) or Oceanic (OCN) phase of flight. In all other phases, an invalid GPS solution produces a “NO GPS POSITION” annunciation on the map and the G1000 stops using GPS*

It is important to note that estimated navigation data supplied by the G1000 in DR Mode may become increasingly unreliable and must not be used as a sole means of navigation. If while in DR Mode airspeed and/or heading data is also lost or not available, the DR function may not be capable of accurately tracking estimated position and, consequently, the system may display a path that is different than the actual movement of the aircraft. Estimated position information displayed by the G1000 through DR while there is no heading and/or airspeed data available shall not be used for navigation.

DR Mode is inherently less accurate than the standard GPS/SBAS Mode due to the lack of satellite measurements needed to determine a position.

**NOTE**

*Changes in wind speed and/or wind direction compound the relative inaccuracy of DR Mode. Because of this degraded accuracy, other navigation equipment must be relied upon for position awareness until GPS derived position data is restored.*

DR Mode is indicated on the G1000 by the appearance of the letters 'DR' superimposed in yellow over the 'own aircraft' symbol.

In addition, 'DR' is prominently displayed in yellow on the HSI slightly above and to the right of the aircraft symbol on the CDI. Also, the CDI deviation bar is removed from the display. Lastly, but at the same time, a 'GPS NAV LOST' alert message appears on the PFD.

Normal navigation using GPS/SBAS source data resumes automatically once a valid GPS solution is restored. As a result of operating in DR Mode, all GPS derived data is computed based upon an estimated position and is displayed as yellow text on the display to denote degraded navigation source information.

Also, while the G1000 is in DR Mode, some terrain functions are not available. Additionally, the accuracy of all nearest information (airports, airspaces, and waypoints) is questionable. Finally, airspace alerts continue to function, but with degraded accuracy.

**RAIM AVAILABILITY:**

Because of tighter protection limit on approaches, there may be times when RAIM is not available. The G1000 automatically monitors RAIM and warns with an alert message when it is not available. If RAIM is not predicted to be available for the final approach course, the approach does not become active, as indicated by the message "Approach is not active".

If RAIM is not available when crossing the FAF, the missed approach procedure must be flown.

## 9 ADDITIONAL GUIDANCE FOR RNAV GPS

Experience of RNAV systems, and Flight FMS in general, has identified the pitfalls of waypoint entry error at the receiver as well as inaccuracies and errors in the database itself.

Research and experience have both shown that human error, often the result of a lack of familiarity with the airborne equipment, represents the major hazard in operations using RNAV systems. Therefore, it is imperative that pilots understand their system thoroughly and are able to determine whether it is safe to proceed.

This requires robust procedures, which check for possible errors in the computer database, monitor continued performance of the RNAV systems and enable pilots to identify and avoid not only their own mistakes but also errors in the information presented to them.

Flight planning on RNAV routes should include the following recommendation.

- During the pre-flight planning phase, given a GPS constellation of 23 satellites or less (22 or less for GPS stand-alone equipment that incorporate pressure altitude aiding), the availability of GPS integrity (RAIM) should be confirmed for the intended flight (route and time). This should be obtained from a prediction program either ground-based, or provided as an equipment function, or from an alternative method acceptable to the Authority;
- Where a navigation data base is installed, the data base validity (current AIRAC cycle) should be checked before flight;
- Traditional navigation equipment (e.g. VOR, DME and ADF) should be selected to available aids so as to allow immediate cross-checking or reversion in the event of loss of GPS navigation capability.

### 1) Pre-flight Planning

During the pre-flight planning phase, the availability of the navigation infrastructure, required for the intended operation, including any non-RNAV contingencies, must be confirmed for the period of intended operation. Availability of the onboard navigation equipment necessary for the route to be flown must be confirmed. The onboard navigation database must be appropriate for the region of intended operation and must include the navigation aids, waypoints, and coded terminal airspace procedures for the departure, arrival and alternate airfields.

Where the responsible airspace authority has specified in the AIP that dual P-RNAV systems are required for specific terminal P-RNAV procedure, the availability of dual P-RNAV systems must be confirmed. This typically will apply where procedures are effective below the applicable minimum obstacle clearance altitude or where radar coverage is inadequate for the purposes of supporting P-RNAV. This will also take into account the particular hazards of a terminal area and the feasibility of contingency procedures following loss of P-RNAV capability.

RAIM availability must be confirmed with account taken of the latest information



## 2) Departure

At system initialisation, the flight crew must confirm that the navigation database is current and verify that the aircraft position has been entered correctly. The active flight plan should be checked by comparing the charts, SID or other applicable documents, with the map display. This includes confirmation of the waypoint sequence, reasonableness of track angles and distances, any altitude or speed constraints, and, where possible, which waypoints are fly-by and which are fly-over. If required by a procedure, a check will need to be made to confirm that updating will use a specific navigation aid(s), or to confirm exclusion of a specific navigation aid. A procedure shall not be used if doubt exists as to the validity of the procedure in the navigation database

**The creation of new waypoints by manual entry into the RNAV system by the flight crew is not permitted as it would invalidate the affected P-RNAV procedure.**

Route modifications in the terminal area may take the form of radar headings or 'direct to' clearances and the flight crew must be capable of reacting in a timely fashion. This may include the insertion in the flight plan of waypoints loaded from the database.

During the procedure and where feasible, flight progress should be monitored for navigational reasonableness, by cross-checks, with conventional navigation aids using the primary display

## 3) Arrival

Prior to the arrival phase, the flight crew should verify that the correct terminal procedure has been loaded. The active flight plan should be checked by comparing the charts with the map display. This includes confirmation of the waypoint sequence, reasonableness of track angles and distances, any altitude or speed constraints, and, where possible, which waypoints are fly-by and which are fly-over. If required by a procedure, a check will need to be made to confirm that updating will exclude a particular navigation aid. A procedure shall not be used if doubt exists as to the validity of the procedure in the navigation database.

Note: as a minimum, the arrival checks could be a simple inspection of a suitable map display that achieves the objectives of this paragraph.

**The creation of new waypoints by manual entry into the RNAV system by the flight crew would invalidate the P-RNAV procedure and is not permitted.**

Where the contingency to revert to a conventional arrival procedure is required, the flight crew must make the necessary preparation.

During the procedure and where feasible, flight progress should be monitored for navigational reasonableness by cross-checks with conventional navigation aids using the primary display

Route modifications in the terminal area may take the form of radar headings or ‘direct to’ clearances and the flight crew must be capable of reacting in a timely fashion.

Although a particular method is not mandated, any published altitude and speed constraints must be observed.

In the event that either the GPS or the EGNOS signal is not available at the destination, by the nature of the system, and its susceptibility to interference, there exists the possibility that it will also be unavailable over a wide area. Therefore it is probable that the signal will also be unavailable at a nearby diversion aerodrome.

Notwithstanding any normal operational requirements for the identification of an alternate aerodrome, where a RNAV approach is to be flown in conditions where a visual approach will not be possible; pilots should always ensure that either:

- 1) A different type of approach system is available at the destination, not dependent on GPS data and for which the weather is forecast to be suitable to enable a landing to be made from that approach, or;
- 2) There is at least one alternate destination within range, where a different type of approach system is available, which is not dependent on GPS data and for which the weather is forecast to be suitable to enable a landing to be made from that approach.

## 9.1 APPROACH APPLICATIONS

### NOTE

*When GPS is not approved for the selected final approach course, the message “NOT APPROVED FOR GPS” is displayed. GPS provides guidance for the approach, but the HIS must be switched to a NAV receiver to fly the final course of the approach*

### NOTE

*f certain GPS parameters (SBAS, RAIM, etc.) are not available, some published approach procedures for the desired airport may not be displayed in the list of available approaches.*

An Approach Procedure (APPR) can be loaded at any airport that has one available, and provides guidance for non-precision and precision approaches to airports with published instrument approach procedures.

### NOTE

*Only one approach can be loaded at a time in a flight plan. If an approach is loaded when another approach is already in the active flight plan, the new approach replaces the previous approach. The route is defined by selection of an approach and the transition waypoints.*

Whenever an approach is selected, the choice to either “load” or “activate” is given. “Loading” adds the approach to the end of the flight plan without immediately using it for navigation guidance. This allows continued navigation via the intermediate waypoints in the original flight plan, but keeps the procedure available on the Active Flight Plan Page for quick activation when needed. “Activating” also adds the procedure to the end of the flight plan but immediately begins to provide guidance to the first waypoint in the approach.

When selecting an approach, a “GPS” designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. Some procedures do not have this designation, meaning the GPS receiver can be used for supplemental navigation guidance only.

**NOTE**

*If the GPS receiver cannot be used for primary guidance, the appropriate navigation receiver must be used for the selected approach (e.g., VOR or ILS). The final course segment of ILS approaches, for example, must be flown by tuning the NAV receiver to the proper frequency and selecting that NAV receiver on the CDI*

The G1000 SBAS GPS allows for flying LNAV, LP, LP+V and LPV approach service levels according to the published chart. The ‘+V’ designation adds advisory vertical guidance for assistance in maintaining a constant vertical glidepath similar to an ILS glideslope on approach. This guidance is displayed on the system PFD in the same location as the ILS glideslope using a magenta diamond. A sample of how the active approach service level is annunciated on the HSI is shown in the following table:

| HSI Annunciation                           | Description                                                                                                                  | Example on HSI                                                                                                                                      |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| LNAV                                       | RNAV GPS approach using published LNAV minima                                                                                |  <p><b>Approach Service Level</b><br/>- LNAV, LP, LP+V, LPV</p> |
| LP<br>(available only if SBAS available)   | RNAV GPS approach using published LP minima (downgrades to LNAV if SBAS unavailable)                                         |                                                                                                                                                     |
| LP+V<br>(available only if SBAS available) | RNAV GPS approach using published LP minima. Advisory vertical guidance is provided (downgrades to LNAV if SBAS unavailable) |                                                                                                                                                     |
| LPV<br>(available only if SBAS available)  | RNAV GPS approach using published LPV minima                                                                                 |                                                                                                                                                     |

Before reaching the IAF, the flight crew should verify that the correct procedure has been loaded into the receiver's route or flight plan. A comparison with the approach chart should be made including the following:

- The waypoint sequence.
- Reasonableness of the tracks and distances of the approach legs, accuracy of the inbound course and mileage of the FAS.
- Verify from the charts, map display or CDU, which waypoints are fly-by and which are fly-over.
- Check any map display to ensure the track lines actually 'fly-over' or 'fly-by' the respective waypoints in the procedure.

By the time the aircraft reaches the IAF the pilot should have completed the above and been cleared for the approach. Also, the approach must have been activated in the receiver at least by this time.

Approach Applications which are classified as RNP Approach (APCH) in accordance with ICAO Doc 9613 Performance Based Navigation (PBN) Manual (and ICAO state Letter SP65/4-10/53) give access to minima (on an instrument approach procedure) designated as:

#### **LNAV (Lateral Navigation)**

This is a Non-Precision or 2D Approach with Lateral only navigation guidance provided by GNSS and an Aircraft Based Augmentation System (ABAS). Receiver Autonomous Integrity Monitoring (RAIM) is a form of ABAS. Lateral guidance is linear with accuracy to within +/- 0.3 NM parallel to either side of the final approach track.

#### **LP (Localiser Performance)**

This is a Non-Precision or 2D Approach with Lateral only navigation guidance provided by GNSS and SBAS. The EGNOS is a form of SBAS in Europe. The lateral guidance is angular with increasing sensitivity as the aircraft continues along the final approach track; much like a localiser indication.

#### **LPV (Localiser Performance with Vertical Guidance)**

This is an Approach Procedure with Vertical Guidance. The Lateral and Vertical guidance is provided by GPS and SBAS. Lateral and vertical guidance are angular with increasing sensitivity as the aircraft progresses down the final approach track; much like an ILS indication. LPV approach and annunciation on HSI is available only if SBAS is available.



*Before selecting a LPV approach, make sure SBAS is indicated ACTIVE in the GPS status box on AUX-GPS STATUS page on MFD.*

*If DISABLED highlight the appropriate SBAS SELECTION Box under SBAS softkey under AUX-GPS Status Page on MFD*



*Should SBAS signal be lost, augmentation is lost. It may be possible to continue with LNAV only but this is reliant on the availability of RAIM.*

**NOTE:** The instrument approach procedures associated with RNP APCH are entitled RNAV (GNSS) to reflect that GNSS is the primary navigation system. With the inherent onboard performance monitoring and alerting provided by GNSS, the navigation specification qualifies as RNP, however these procedures pre-date PBN, so the chart name has remained as RNAV.

### **Missed approach procedures**

Before commencing an RNAV (GNSS) missed approach, a MAP should be possible without reference to GPS derived navigation so that, in the event of a loss of GPS accuracy or loss of integrity during the approach, a safe return to above Minimum Sector Altitude can be made.

This may be possible by dead reckoning (DR) navigation but where this is not possible and the MAP requires reference to terrestrial navigation aids, these must be available, tuned and correctly identified before passing the IAF and remain available throughout the approach.

Reasons for a missed approach are many and if GPS information remains available for the MAP, the pilot must be able to sequence the system correctly past the MAP, in order to follow the published MAP correctly.

Pilots should be fully competent in the necessary selection routines required by their own equipment, in order to transition to the MAP and preserve accurate navigation throughout.

When GPS navigation is NOT available for the MAP, it may be necessary to reset the display function of the HSI/CDI to disengage GPS information and regain VOR/LOC display. Pilots must be fully conversant with navigation display selections in order safely to follow the MAP.

### **Abnormal procedures for approaches**

As the aircraft approaches the FAF (LNAV Only, without SBAS), the receiver automatically perform a final RAIM prediction for the approach. The receiver will not enter the approach mode if this RAIM prediction is negative. In this case, the approach should be discontinued.

However, this RAIM check assumes availability of the full constellation and will not take account of scheduled interruptions or failures. This can lead to a successful RAIM prediction at this point when the RAIM function itself is not available.

If RAIM is lost after passing the FAF the equipment should continue to provide navigation, where possible for five minutes, before giving a RAIM loss indication and this should be enough to complete the approach.

Should RAIM detect an out of tolerance situation, a warning will be given and a missed approach should be initiated immediately

The approach should always be discontinued:

- (a) If the receiver fails to engage the correct approach mode or;
- (b) In case of Loss Of Integrity (LOI) monitoring or;
- (c) Whenever the HSI/CDI indication (or GP indication where applicable) exceeds half scale displacement or;
- (d) If a RAIM (or equivalent) warning is activated or;
- (e) If RAIM (or equivalent) function is not available and annunciated before passing the FAF.

**Supplement D07: pages replacement instructions**

## **SECTION 5 – PERFORMANCE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 5 Performance**

According to A/C configuration,  
Supplement D02- Performances pages replace basic AFM Section 5 as whole

INTENTIONALLY LEFT BLANK



## **SECTION 5 – PERFORMANCE**

### **INDEX**

|            |                                                    |           |
|------------|----------------------------------------------------|-----------|
| <b>1.</b>  | <b>Introduction .....</b>                          | <b>2</b>  |
| <b>2.</b>  | <b>Use of Performance Charts .....</b>             | <b>2</b>  |
| <b>3.</b>  | <b>Airspeed Indicator System Calibration .....</b> | <b>3</b>  |
| <b>4.</b>  | <b>ICAO Standard Atmosphere .....</b>              | <b>5</b>  |
| <b>5.</b>  | <b>Stall speed .....</b>                           | <b>6</b>  |
| <b>6.</b>  | <b>Crosswind .....</b>                             | <b>7</b>  |
| <b>7.</b>  | <b>Take-Off performances.....</b>                  | <b>8</b>  |
| <b>8.</b>  | <b>Take-off Rate of Climb .....</b>                | <b>11</b> |
| <b>9.</b>  | <b>En-Route Rate of Climb.....</b>                 | <b>12</b> |
| <b>10.</b> | <b>Cruise Performance.....</b>                     | <b>13</b> |
| <b>11.</b> | <b>Landing performances.....</b>                   | <b>17</b> |
| <b>12.</b> | <b>Balked Landing Performance .....</b>            | <b>18</b> |
| <b>13.</b> | <b>Noise Data.....</b>                             | <b>19</b> |

## **1. INTRODUCTION**

This section provides all necessary data for an accurate and comprehensive planning of flight activity from takeoff to landing.

Data reported in graphs and/or in tables were determined using:

- ✓ “Flight Test Data” under conditions prescribed by EASA CS-23 regulation
- ✓ aircraft and engine in good condition
- ✓ average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performances were carried out by theoretical means for:

- ✓ Airspeed
- ✓ External temperature
- ✓ Altitude
- ✓ Weight
- ✓ Runway type and condition

## **2. USE OF PERFORMANCE CHARTS**

Performances data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.

### 3. AIRSPEED INDICATOR SYSTEM CALIBRATION

#### Normal Static Source

Graph shows calibrated airspeed  $V_{IAS}$  as a function of indicated airspeed  $V_{CAS}$ .

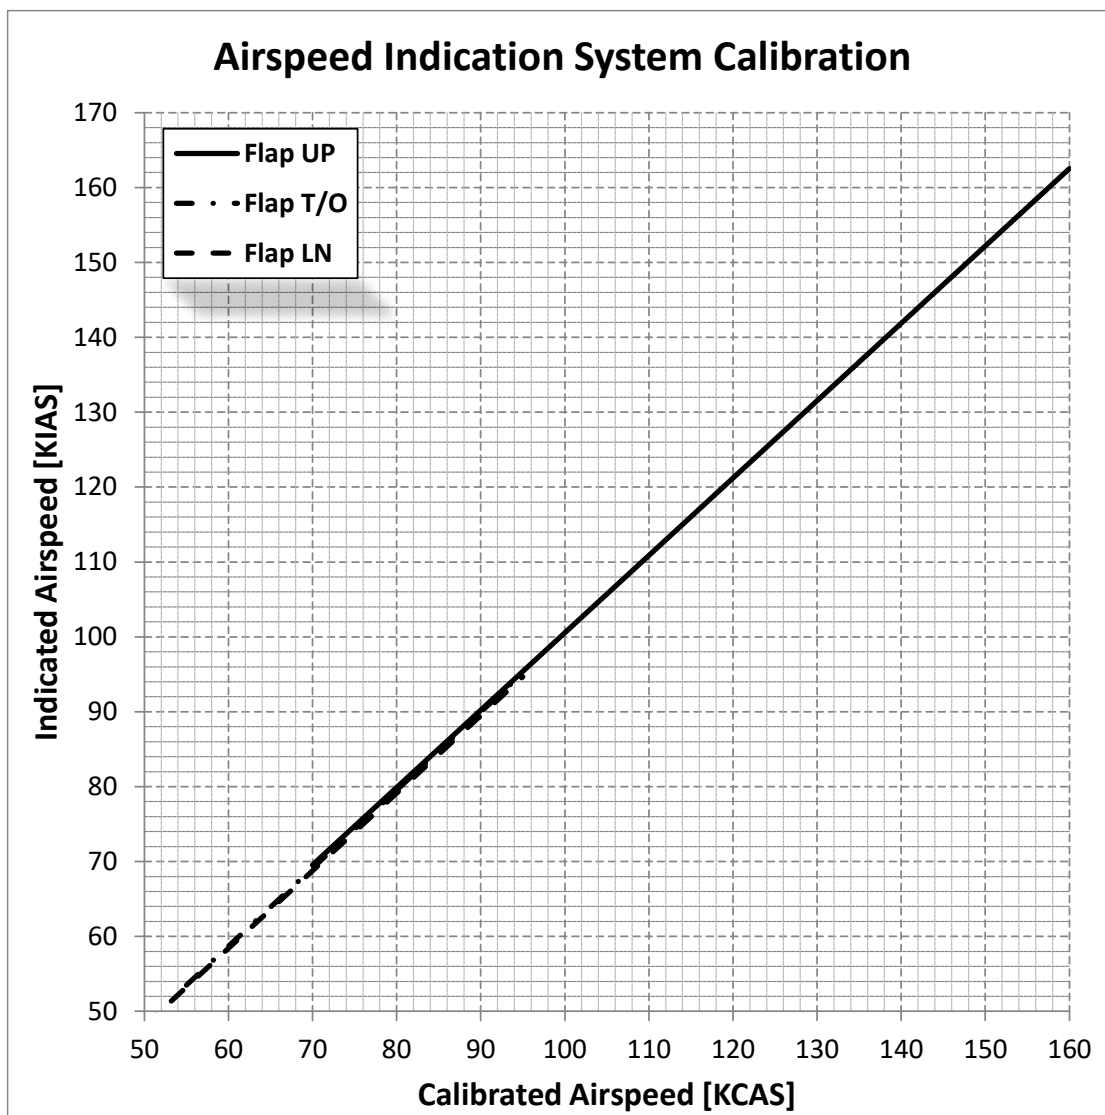


Fig. 5-1. Calibrated vs Indicated Airspeed

Example:

**Given**

KIAS 75.0

Flap: UP

**Find**

KCAS 74.7


**NOTE**

Indicated airspeed assumes 0 as an instrument error

**Alternate Static Source**

|                           |             | Alternate Static Air Open |                        | Vents Open  |                        | Vents and Hot Air Open |                        |
|---------------------------|-------------|---------------------------|------------------------|-------------|------------------------|------------------------|------------------------|
|                           |             | IAS<br>[kn]               | H <sub>P</sub><br>[ft] | IAS<br>[kn] | H <sub>P</sub><br>[ft] | IAS<br>[kn]            | H <sub>P</sub><br>[ft] |
| Pressure Altitude<br>[ft] | IAS<br>[kn] | FLAP UP                   |                        |             |                        |                        |                        |
| 1000                      | 70          | 75                        | 1020                   | 72          | 1010                   | 72                     | 1020                   |
|                           | 90          | 95                        | 1020                   | 92          | 1030                   | 93                     | 1020                   |
|                           | 110         | 115                       | 1030                   | 113         | 1020                   | 112                    | 1020                   |
|                           | 135         | 140                       | 1040                   | 139         | 1030                   | 137                    | 1030                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 1020                   | 63          | 1020                   | 62                     | 1010                   |
|                           | 70          | 75                        | 1020                   | 73          | 1020                   | 72                     | 1020                   |
|                           | 90          | 94                        | 1020                   | 92          | 1020                   | 92                     | 1020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 1020                   | 61          | 1020                   | 61                     | 1020                   |
|                           | 70          | 72                        | 1020                   | 72          | 1020                   | 71                     | 1020                   |
|                           | 90          | 92                        | 1020                   | 91          | 1020                   | 91                     | 1020                   |
| 5000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 5020                   | 72          | 5020                   | 71                     | 5020                   |
|                           | 90          | 94                        | 5030                   | 93          | 5020                   | 92                     | 5020                   |
|                           | 110         | 114                       | 5030                   | 113         | 5020                   | 112                    | 5020                   |
|                           | 133         | 137                       | 5040                   | 136         | 5030                   | 135                    | 5020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 5010                   | 62          | 5020                   | 61                     | 5010                   |
|                           | 70          | 74                        | 5020                   | 73          | 5020                   | 72                     | 5020                   |
|                           | 90          | 93                        | 5030                   | 93          | 5020                   | 93                     | 5020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 5030                   | 62          | 5020                   | 61                     | 5000                   |
|                           | 70          | 72                        | 5020                   | 72          | 5010                   | 71                     | 5010                   |
|                           | 90          | 92                        | 5020                   | 92          | 5020                   | 91                     | 5010                   |
| 8000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 8020                   | 72          | 8020                   | 71                     | 8020                   |
|                           | 90          | 93                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           | 110         | 113                       | 8030                   | 112         | 8020                   | 112                    | 8020                   |
|                           | 128         | 131                       | 8040                   | 130         | 8030                   | 130                    | 8020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 8010                   | 62          | 8020                   | 61                     | 8010                   |
|                           | 70          | 73                        | 8020                   | 72          | 8020                   | 72                     | 8020                   |
|                           | 90          | 92                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 61                        | 8020                   | 61          | 8020                   | 61                     | 8000                   |
|                           | 70          | 72                        | 8010                   | 71          | 8010                   | 71                     | 8010                   |
|                           | 90          | 92                        | 8010                   | 91          | 8010                   | 91                     | 8010                   |

## 4. ICAO STANDARD ATMOSPHERE

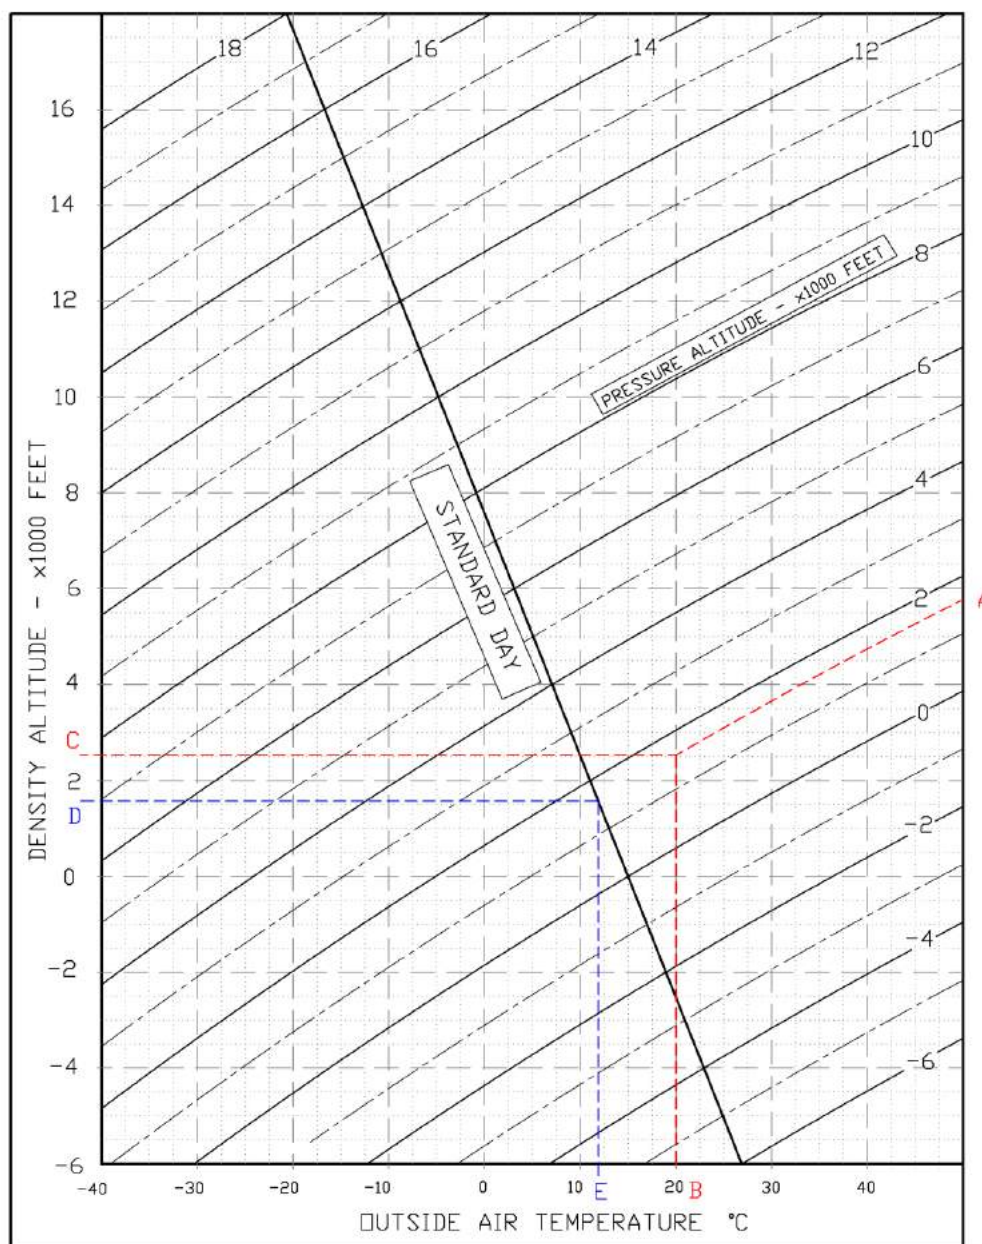

Examples:

| <u>Scope</u>             | <u>Given</u>                                           | <u>Find</u>                     |
|--------------------------|--------------------------------------------------------|---------------------------------|
| <u>Density Altitude:</u> | A: Pressure altitude = 1600ft<br>B: Temperature = 20°C | → C: Density Altitude = 2550ft  |
| <u>ISA Temperature:</u>  | D: Pressure altitude = 1600ft                          | → E: ISA Air Temperature = 12°C |

## 5. STALL SPEED

**Weight:** 1160 kg (2557 lb)

**Throttle Lever:** IDLE

**CG:** Most Forward (19%)

**No ground effect**

| WEIGHT                               | BANK<br>ANGLE | STALL SPEED |      |           |      |            |      |
|--------------------------------------|---------------|-------------|------|-----------|------|------------|------|
|                                      |               | FLAPS 0°    |      | FLAPS T/O |      | FLAPS FULL |      |
|                                      |               | KIAS        | KCAS | KIAS      | KCAS | KIAS       | KCAS |
| [kg]<br>([lb])                       | [deg]         |             |      |           |      |            |      |
| <b>1160<br/>(2557)</b><br>(FWD C.G.) | <b>0</b>      | 59          | 60   | 53        | 55   | 50         | 52   |
|                                      | <b>15</b>     | 60          | 61   | 54        | 56   | 51         | 53   |
|                                      | <b>30</b>     | 64          | 65   | 58        | 59   | 54         | 56   |
|                                      | <b>45</b>     | 71          | 71   | 64        | 65   | 61         | 62   |
|                                      | <b>60</b>     | 85          | 85   | 77        | 78   | 73         | 74   |

### NOTE

*Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 350 ft with banking below 15°.*

## 6. CROSSWIND

Maximum demonstrated crosswind is 12 kts

⇒ Example:

### Given

Wind direction (with respect to aircraft longitudinal axis) =  $30^\circ$

Wind speed = 20 kts

### Find

Headwind = 17.5 kts

Crosswind = 10 kts

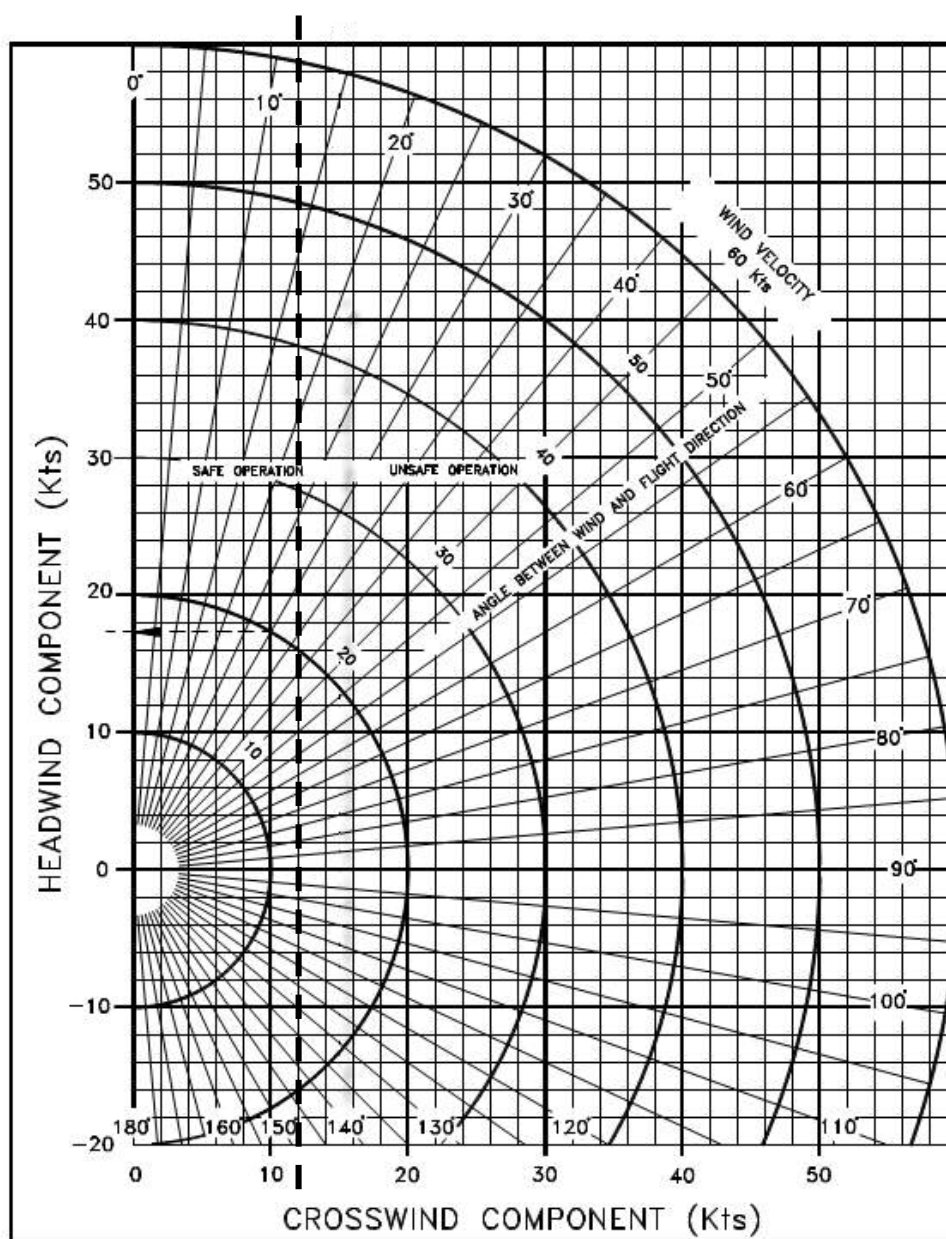


FIG. 5-3. CROSSWIND CHART



## 7. TAKE-OFF PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factor to distances of 1.10

| <b>Weight = 1160 kg (2557 lb)</b>                 |              |                                                       |               |                |                |                       |
|---------------------------------------------------|--------------|-------------------------------------------------------|---------------|----------------|----------------|-----------------------|
| <b>Flaps: T/O</b>                                 |              | <b>Corrections</b>                                    |               |                |                |                       |
| <b>Speed at Lift-Off = 60 KIAS</b>                |              | <b>Headwind: -10 m for each kn</b>                    |               |                |                |                       |
| <b>Speed Over 50ft Obstacle = 65 KIAS</b>         |              | <b>Tailwind: +20 m for each kn</b>                    |               |                |                |                       |
| <b>Throttle and Propeller Lever: Full Forward</b> |              | <b>Grass Runway: +10% to Ground Roll</b>              |               |                |                |                       |
| <b>Runway: Paved</b>                              |              | <b>Runway slope: +10% to Ground Roll for each +1%</b> |               |                |                |                       |
| Pressure<br>Altitude<br><br>[ft]                  |              | Distance [m]<br>(Distance [ft])                       |               |                |                |                       |
|                                                   |              | Temperature [°C]                                      |               |                |                | ISA                   |
|                                                   |              | -25                                                   | 0             | 25             | 50             |                       |
| S.L.                                              | Ground Roll  | 234<br>(768)                                          | 295<br>(968)  | 364<br>(1194)  | 442<br>(1450)  | <b>336<br/>(1102)</b> |
|                                                   | At 50 ft AGL | 421<br>(1381)                                         | 526<br>(1726) | 644<br>(2113)  | 776<br>(2546)  | <b>595<br/>(1952)</b> |
| 1000                                              | Ground Roll  | 256<br>(840)                                          | 322<br>(1056) | 397<br>(1302)  | 482<br>(1581)  | <b>360<br/>(1181)</b> |
|                                                   | At 50 ft AGL | 458<br>(1503)                                         | 572<br>(1877) | 701<br>(2300)  | 844<br>(2769)  | <b>637<br/>(2090)</b> |
| 2000                                              | Ground Roll  | 279<br>(915)                                          | 352<br>(1155) | 434<br>(1424)  | 526<br>(1726)  | <b>387<br/>(1270)</b> |
|                                                   | At 50 ft AGL | 499<br>(1637)                                         | 622<br>(2041) | 762<br>(2500)  | 918<br>(3012)  | <b>682<br/>(2238)</b> |
| 3000                                              | Ground Roll  | 305<br>(1001)                                         | 384<br>(1260) | 474<br>(1555)  | 575<br>(1886)  | <b>415<br/>(1362)</b> |
|                                                   | At 50 ft AGL | 543<br>(1781)                                         | 678<br>(2224) | 830<br>(2723)  | 1000<br>(3281) | <b>731<br/>(2398)</b> |
| 4000                                              | Ground Roll  | 333<br>(1093)                                         | 420<br>(1378) | 518<br>(1699)  | 628<br>(2060)  | <b>446<br/>(1463)</b> |
|                                                   | At 50 ft AGL | 591<br>(1939)                                         | 738<br>(2421) | 904<br>(2966)  | 1089<br>(3573) | <b>783<br/>(2569)</b> |
| 5000                                              | Ground Roll  | 364<br>(1194)                                         | 459<br>(1506) | 566<br>(1857)  | 687<br>(2254)  | <b>480<br/>(1575)</b> |
|                                                   | At 50 ft AGL | 645<br>(2116)                                         | 805<br>(2641) | 986<br>(3235)  | 1188<br>(3898) | <b>840<br/>(2756)</b> |
| 6000                                              | Ground Roll  | 399<br>(1309)                                         | 502<br>(1647) | 620<br>(2034)  | 752<br>(2467)  | <b>516<br/>(1693)</b> |
|                                                   | At 50 ft AGL | 703<br>(2306)                                         | 878<br>(2881) | 1075<br>(3527) | 1296<br>(4252) | <b>901<br/>(2956)</b> |



**Weight = 1060 kg (2337 lb)****Flaps: T/O****Speed at Lift-Off = 60 KIAS****Speed Over 50ft Obstacle = 65 KIAS****Throttle and Propeller Lever: Full Forward****Runway: Paved****Corrections****Headwind: -10 m for each kn****Tailwind: +20 m for each kn****Grass Runway: +10% to Ground Roll****Runway slope: +10% to Ground Roll for each +1%**

| Pressure<br>Altitude<br><br>[ft] |                     | Distance [m]<br>(Distance [ft]) |               |               |                |                       |
|----------------------------------|---------------------|---------------------------------|---------------|---------------|----------------|-----------------------|
|                                  |                     | Temperature [°C]                |               |               |                | ISA                   |
|                                  |                     | -25                             | 0             | 25            | 50             |                       |
| <b>S.L.</b>                      | <b>Ground Roll</b>  | 189<br>(620)                    | 238<br>(781)  | 293<br>(961)  | 356<br>(1168)  | <b>270<br/>(886)</b>  |
|                                  | <b>At 50 ft AGL</b> | 342<br>(1122)                   | 427<br>(1401) | 523<br>(1716) | 630<br>(2067)  | <b>483<br/>(1585)</b> |
| <b>1000</b>                      | <b>Ground Roll</b>  | 206<br>(676)                    | 259<br>(850)  | 320<br>(1050) | 388<br>(1273)  | <b>290<br/>(951)</b>  |
|                                  | <b>At 50 ft AGL</b> | 372<br>(1220)                   | 464<br>(1522) | 569<br>(1867) | 685<br>(2247)  | <b>517<br/>(1696)</b> |
| <b>2000</b>                      | <b>Ground Roll</b>  | 225<br>(738)                    | 283<br>(928)  | 349<br>(1145) | 424<br>(1391)  | <b>311<br/>(1020)</b> |
|                                  | <b>At 50 ft AGL</b> | 405<br>(1329)                   | 505<br>(1657) | 619<br>(2031) | 745<br>(2444)  | <b>554<br/>(1818)</b> |
| <b>3000</b>                      | <b>Ground Roll</b>  | 246<br>(807)                    | 309<br>(1014) | 382<br>(1253) | 463<br>(1519)  | <b>334<br/>(1096)</b> |
|                                  | <b>At 50 ft AGL</b> | 441<br>(1447)                   | 550<br>(1804) | 674<br>(2211) | 812<br>(2664)  | <b>593<br/>(1946)</b> |
| <b>4000</b>                      | <b>Ground Roll</b>  | 268<br>(879)                    | 338<br>(1109) | 417<br>(1368) | 506<br>(1660)  | <b>359<br/>(1178)</b> |
|                                  | <b>At 50 ft AGL</b> | 480<br>(1575)                   | 599<br>(1965) | 734<br>(2408) | 884<br>(2900)  | <b>636<br/>(2087)</b> |
| <b>5000</b>                      | <b>Ground Roll</b>  | 294<br>(965)                    | 370<br>(1214) | 456<br>(1496) | 553<br>(1814)  | <b>386<br/>(1266)</b> |
|                                  | <b>At 50 ft AGL</b> | 523<br>(1716)                   | 653<br>(2142) | 800<br>(2625) | 964<br>(3163)  | <b>682<br/>(2238)</b> |
| <b>6000</b>                      | <b>Ground Roll</b>  | 321<br>(1053)                   | 404<br>(1325) | 499<br>(1637) | 605<br>(1985)  | <b>416<br/>(1365)</b> |
|                                  | <b>At 50 ft AGL</b> | 571<br>(1873)                   | 713<br>(2339) | 873<br>(2864) | 1052<br>(3451) | <b>732<br/>(2402)</b> |

**Section 5 – Performance**

Ed. 2, Rev.0

**TAKE-OFF PERFORMANCES**

**Weight = 960 kg (2116 lb)****Flaps: T/O****Speed at Lift-Off = 60 KIAS****Speed Over 50ft Obstacle = 65 KIAS****Throttle and Propeller Lever: Full Forward****Runway: Paved****Corrections****Headwind: -10 m for each kn****Tailwind: +20 m for each kn****Grass Runway: +10% to Ground Roll****Runway slope: +10% to Ground Roll for each +1%**

| Pressure<br>Altitude<br>[ft] |              | Distance [m]<br>(Distance [ft]) |               |               |               |                       |
|------------------------------|--------------|---------------------------------|---------------|---------------|---------------|-----------------------|
|                              |              | Temperature [°C]                |               |               |               | ISA                   |
|                              |              | -25                             | 0             | 25            | 50            |                       |
| S.L.                         | Ground Roll  | 149<br>(489)                    | 187<br>(614)  | 231<br>(758)  | 281<br>(922)  | <b>213<br/>(699)</b>  |
|                              | At 50 ft AGL | 272<br>(892)                    | 340<br>(1115) | 416<br>(1365) | 501<br>(1644) | <b>384<br/>(1260)</b> |
| 1000                         | Ground Roll  | 162<br>(531)                    | 204<br>(669)  | 252<br>(827)  | 306<br>(1004) | <b>229<br/>(751)</b>  |
|                              | At 50 ft AGL | 296<br>(971)                    | 369<br>(1211) | 452<br>(1483) | 545<br>(1788) | <b>411<br/>(1348)</b> |
| 2000                         | Ground Roll  | 177<br>(581)                    | 223<br>(732)  | 275<br>(902)  | 334<br>(1096) | <b>245<br/>(804)</b>  |
|                              | At 50 ft AGL | 322<br>(1056)                   | 402<br>(1319) | 492<br>(1614) | 593<br>(1946) | <b>440<br/>(1444)</b> |
| 3000                         | Ground Roll  | 194<br>(636)                    | 244<br>(801)  | 301<br>(988)  | 365<br>(1198) | <b>264<br/>(866)</b>  |
|                              | At 50 ft AGL | 350<br>(1148)                   | 438<br>(1437) | 536<br>(1759) | 645<br>(2116) | <b>472<br/>(1549)</b> |
| 4000                         | Ground Roll  | 212<br>(696)                    | 266<br>(873)  | 329<br>(1079) | 399<br>(1309) | <b>283<br/>(928)</b>  |
|                              | At 50 ft AGL | 382<br>(1253)                   | 477<br>(1565) | 584<br>(1916) | 703<br>(2306) | <b>506<br/>(1660)</b> |
| 5000                         | Ground Roll  | 231<br>(758)                    | 291<br>(955)  | 360<br>(1181) | 436<br>(1430) | <b>305<br/>(1001)</b> |
|                              | At 50 ft AGL | 416<br>(1365)                   | 520<br>(1706) | 636<br>(2087) | 766<br>(2513) | <b>542<br/>(1778)</b> |
| 6000                         | Ground Roll  | 253<br>(830)                    | 319<br>(1047) | 393<br>(1289) | 477<br>(1565) | <b>328<br/>(1076)</b> |
|                              | At 50 ft AGL | 454<br>(1489)                   | 567<br>(1860) | 694<br>(2277) | 836<br>(2743) | <b>582<br/>(1909)</b> |

**Section 5 – Performance**

Ed. 2, Rev.0

**TAKE-OFF PERFORMANCES**

## 8. TAKE-OFF RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2600 RPM<br>Flaps: Take-Off |                              |                                            |                        |      |      |      |             |
|------------------------------------------------------------------------|------------------------------|--------------------------------------------|------------------------|------|------|------|-------------|
| Weight<br>[kg]<br>([lb])                                               | Pressure<br>Altitude<br>[ft] | Climb<br>Speed<br>V <sub>y</sub><br>[KIAS] | Rate of Climb [ft/min] |      |      |      |             |
|                                                                        |                              |                                            | Temperature [°C]       |      |      |      | ISA         |
|                                                                        |                              |                                            | -25                    | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                                                 | S.L.                         | 72                                         | 974                    | 808  | 659  | 525  | <b>717</b>  |
|                                                                        | <b>2000</b>                  | 71                                         | 848                    | 684  | 538  | 406  | <b>617</b>  |
|                                                                        | <b>4000</b>                  | 70                                         | 721                    | 560  | 417  | 287  | <b>518</b>  |
|                                                                        | <b>6000</b>                  | 69                                         | 596                    | 437  | 296  | 169  | <b>419</b>  |
|                                                                        | <b>8000</b>                  | 68                                         | 470                    | 315  | 176  | 51   | <b>320</b>  |
|                                                                        | <b>10000</b>                 | 67                                         | 345                    | 193  | 56   | -67  | <b>221</b>  |
|                                                                        | <b>12000</b>                 | 67                                         | 221                    | 71   | -63  | -184 | <b>122</b>  |
|                                                                        | <b>14000</b>                 | 66                                         | 96                     | -51  | -182 | -300 | <b>23</b>   |
| <b>1060<br/>(2337)</b>                                                 | S.L.                         | 70                                         | 1118                   | 943  | 787  | 647  | <b>848</b>  |
|                                                                        | <b>2000</b>                  | 69                                         | 985                    | 813  | 660  | 522  | <b>744</b>  |
|                                                                        | <b>4000</b>                  | 69                                         | 853                    | 684  | 533  | 397  | <b>640</b>  |
|                                                                        | <b>6000</b>                  | 68                                         | 721                    | 555  | 406  | 273  | <b>536</b>  |
|                                                                        | <b>8000</b>                  | 68                                         | 589                    | 426  | 280  | 149  | <b>431</b>  |
|                                                                        | <b>10000</b>                 | 67                                         | 458                    | 298  | 155  | 26   | <b>327</b>  |
|                                                                        | <b>12000</b>                 | 66                                         | 327                    | 170  | 29   | -97  | <b>223</b>  |
|                                                                        | <b>14000</b>                 | 66                                         | 197                    | 43   | -95  | -220 | <b>119</b>  |
| <b>960<br/>(2116)</b>                                                  | S.L.                         | 69                                         | 1288                   | 1103 | 937  | 787  | <b>1001</b> |
|                                                                        | <b>2000</b>                  | 69                                         | 1147                   | 964  | 801  | 654  | <b>890</b>  |
|                                                                        | <b>4000</b>                  | 68                                         | 1006                   | 827  | 666  | 522  | <b>780</b>  |
|                                                                        | <b>6000</b>                  | 68                                         | 866                    | 689  | 532  | 390  | <b>669</b>  |
|                                                                        | <b>8000</b>                  | 67                                         | 726                    | 553  | 398  | 258  | <b>558</b>  |
|                                                                        | <b>10000</b>                 | 66                                         | 586                    | 416  | 264  | 127  | <b>448</b>  |
|                                                                        | <b>12000</b>                 | 66                                         | 447                    | 280  | 131  | -3   | <b>337</b>  |
|                                                                        | <b>14000</b>                 | 65                                         | 309                    | 145  | -2   | -134 | <b>226</b>  |

## 9. EN-ROUTE RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2600 RPM<br>Flaps: UP |                              |                                            |                        |            |             |             |             |
|------------------------------------------------------------------|------------------------------|--------------------------------------------|------------------------|------------|-------------|-------------|-------------|
| Weight<br>[kg]<br>([lb])                                         | Pressure<br>Altitude<br>[ft] | Climb<br>Speed<br>V <sub>Y</sub><br>[KIAS] | Rate of Climb [ft/min] |            |             |             |             |
|                                                                  |                              |                                            | Temperature [°C]       |            |             |             | ISA         |
|                                                                  |                              |                                            | -25                    | 0          | 25          | 50          |             |
| <b>1160<br/>(2557)</b>                                           | S.L.                         | 82                                         | 1131                   | 944        | 776         | 625         | <b>841</b>  |
|                                                                  | <b>2000</b>                  | 81                                         | 989                    | 804        | 639         | 491         | <b>729</b>  |
|                                                                  | <b>4000</b>                  | 80                                         | 846                    | 665        | 503         | 357         | <b>618</b>  |
|                                                                  | <b>6000</b>                  | 79                                         | 705                    | 526        | 367         | 224         | <b>506</b>  |
|                                                                  | <b>8000</b>                  | 78                                         | 563                    | 388        | 232         | 91          | <b>394</b>  |
|                                                                  | <b>10000</b>                 | 77                                         | 423                    | 251        | 97          | <b>-41</b>  | <b>282</b>  |
|                                                                  | <b>12000</b>                 | 76                                         | 282                    | 113        | <b>-37</b>  | <b>-173</b> | <b>171</b>  |
|                                                                  | <b>14000</b>                 | 76                                         | 142                    | <b>-23</b> | <b>-171</b> | <b>-305</b> | <b>59</b>   |
| <b>1060<br/>(2337)</b>                                           | S.L.                         | 82                                         | 1284                   | 1085       | 907         | 747         | <b>976</b>  |
|                                                                  | <b>2000</b>                  | 81                                         | 1133                   | 937        | 762         | 605         | <b>857</b>  |
|                                                                  | <b>4000</b>                  | 80                                         | 982                    | 789        | 618         | 463         | <b>739</b>  |
|                                                                  | <b>6000</b>                  | 79                                         | 831                    | 642        | 474         | 322         | <b>621</b>  |
|                                                                  | <b>8000</b>                  | 78                                         | 682                    | 496        | 330         | 181         | <b>502</b>  |
|                                                                  | <b>10000</b>                 | 77                                         | 532                    | 350        | 187         | 40          | <b>384</b>  |
|                                                                  | <b>12000</b>                 | 76                                         | 383                    | 204        | 45          | <b>-99</b>  | <b>265</b>  |
|                                                                  | <b>14000</b>                 | 75                                         | 235                    | 59         | <b>-97</b>  | <b>-239</b> | <b>147</b>  |
| <b>960<br/>(2116)</b>                                            | S.L.                         | 81                                         | 1465                   | 1251       | 1060        | 888         | <b>1134</b> |
|                                                                  | <b>2000</b>                  | 80                                         | 1302                   | 1092       | 905         | 735         | <b>1007</b> |
|                                                                  | <b>4000</b>                  | 79                                         | 1140                   | 934        | 749         | 583         | <b>880</b>  |
|                                                                  | <b>6000</b>                  | 78                                         | 979                    | 776        | 595         | 432         | <b>753</b>  |
|                                                                  | <b>8000</b>                  | 77                                         | 818                    | 619        | 441         | 281         | <b>625</b>  |
|                                                                  | <b>10000</b>                 | 76                                         | 658                    | 462        | 287         | 130         | <b>498</b>  |
|                                                                  | <b>12000</b>                 | 75                                         | 498                    | 306        | 134         | <b>-20</b>  | <b>371</b>  |
|                                                                  | <b>14000</b>                 | 74                                         | 339                    | 150        | <b>-18</b>  | <b>-170</b> | <b>244</b>  |

## 10. CRUISE PERFORMANCE

| <b>Weight:</b> 1160 kg         |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|--------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH      |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 0 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                            | MAP<br>[inHg] | ISA – 30°C (-15°C) |             |                            | ISA (15°C)                                  |             |                            | ISA + 30°C (45°C) |             |                            |
|                                |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                    | <b>29.9</b>   | <b>113</b>         | <b>138</b>  | <b>19.2 (72.7)</b>         | <b>107</b>                                  | <b>139</b>  | <b>18.4 (69.7)</b>         | <b>102</b>        | <b>141</b>  | <b>17.7 (67)</b>           |
| <b>2600</b>                    | 29.9          | 109                | 136         | 18.7 (70.8)                | 103                                         | 138         | 17.9 (67.8)                | 98                | 139         | 17.2 (65.1)                |
|                                | 28            | 101                | 132         | 17.6 (66.6)                | 96                                          | 134         | 16.9 (64)                  | 91                | 135         | 16.3 (61.7)                |
|                                | 26            | 90                 | 126         | 16.1 (60.9)                | 85                                          | 127         | 15.4 (58.3)                | 81                | 128         | 14.9 (56.4)                |
|                                | 24            | 79                 | 120         | 14.7 (55.6)                | 75                                          | 121         | 14.1 (53.4)                | 71                | 121         | 13.6 (51.5)                |
|                                | 22            | 69                 | 113         | 13.3 (50.3)                | 65                                          | 113         | 12.8 (48.5)                | 62                | 113         | 12.4 (46.9)                |
|                                | 20            | 59                 | 105         | 11.9 (45)                  | 56                                          | 104         | 11.5 (43.5)                | 53                | 103         | 11.1 (42)                  |
| <b>2450</b>                    | 29.9          | 103                | 133         | 17.9 (67.8)                | 98                                          | 135         | 17.1 (64.7)                | 93                | 136         | 16.5 (62.5)                |
|                                | 28            | 95                 | 129         | 16.8 (63.6)                | 90                                          | 130         | 16.1 (60.9)                | 85                | 131         | 15.5 (58.7)                |
|                                | 26            | 85                 | 123         | 15.4 (58.3)                | 80                                          | 124         | 14.8 (56)                  | 76                | 125         | 14.3 (54.1)                |
|                                | 24            | 75                 | 117         | 14.1 (53.4)                | 71                                          | 117         | 13.5 (51.1)                | 67                | 118         | 13.1 (49.6)                |
|                                | 22            | 65                 | 110         | 12.8 (48.5)                | 62                                          | 110         | 12.3 (46.6)                | 59                | 110         | 11.9 (45)                  |
|                                | 20            | 55                 | 102         | 11.5 (43.5)                | 52                                          | 101         | 11.1 (42)                  | 50                | 100         | 10.7 (40.5)                |
| <b>2350</b>                    | 29.9          | 100                | 131         | 17.4 (65.9)                | 94                                          | 133         | 16.7 (63.2)                | 90                | 134         | 16.1 (60.9)                |
|                                | 28            | 91                 | 127         | 16.2 (61.3)                | 86                                          | 128         | 15.6 (59.1)                | 82                | 129         | 15 (56.8)                  |
|                                | 26            | 81                 | 121         | 15 (56.8)                  | 77                                          | 122         | 14.4 (54.5)                | 73                | 123         | 13.9 (52.6)                |
|                                | 24            | 72                 | 115         | 13.7 (51.9)                | 68                                          | 115         | 13.1 (49.6)                | 65                | 115         | 12.7 (48.1)                |
|                                | 22            | 62                 | 108         | 12.4 (46.9)                | 59                                          | 108         | 12 (45.4)                  | 56                | 107         | 11.6 (43.9)                |
|                                | 20            | 53                 | 99          | 11.1 (42)                  | 50                                          | 98          | 10.7 (40.5)                | 48                | 96          | 10.4 (39.4)                |

| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 3000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-21°C) |             |                            | ISA (9°C)                                   |             |                            | ISA + 30°C (39°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>26.8</b>   | <b>104</b>         | <b>137</b>  | <b>17.9 (67.8)</b>         | <b>98</b>                                   | <b>138</b>  | <b>17.2 (65.1)</b>         | <b>93</b>         | <b>139</b>  | <b>16.5 (62.5)</b>         |
| <b>2600</b>                       | 26.8          | 100                | 135         | 17.4 (65.9)                | 94                                          | 136         | 16.7 (63.2)                | 90                | 137         | 16.1 (60.9)                |
| <b>2600</b>                       | 26            | 96                 | 133         | 16.9 (64)                  | 90                                          | 134         | 16.2 (61.3)                | 86                | 135         | 15.6 (59.1)                |
| <b>2600</b>                       | 24            | 85                 | 126         | 15.4 (58.3)                | 80                                          | 127         | 14.8 (56)                  | 76                | 128         | 14.3 (54.1)                |
| <b>2600</b>                       | 22            | 76                 | 128         | 14.3 (54.1)                | 70                                          | 120         | 13.5 (51.1)                | 67                | 120         | 13 (49.2)                  |
| <b>2600</b>                       | 20            | 63                 | 111         | 12.6 (47.7)                | 60                                          | 111         | 12.1 (45.8)                | 57                | 110         | 11.7 (44.3)                |
| <b>2600</b>                       | 18            | 53                 | 101         | 11.1 (42)                  | 50                                          | 99          | 10.7 (40.5)                | 47                | 97          | 10.4 (39.4)                |
| <b>2450</b>                       | 26.8          | 94                 | 132         | 16.6 (62.8)                | 89                                          | 132         | 15.9 (60.2)                | 84                | 133         | 15.3 (57.9)                |
| <b>2450</b>                       | 26            | 90                 | 129         | 16.1 (60.9)                | 85                                          | 129         | 15.4 (58.3)                | 81                | 130         | 14.8 (56)                  |
| <b>2450</b>                       | 24            | 80                 | 123         | 14.7 (55.6)                | 75                                          | 123         | 14.2 (53.8)                | 72                | 124         | 13.7 (51.9)                |
| <b>2450</b>                       | 22            | 70                 | 116         | 13.5 (51.1)                | 66                                          | 116         | 12.9 (48.8)                | 63                | 117         | 12.5 (47.3)                |
| <b>2450</b>                       | 20            | 60                 | 108         | 12.1 (45.8)                | 57                                          | 108         | 11.6 (43.9)                | 54                | 107         | 11.3 (42.8)                |
| <b>2450</b>                       | 18            | 50                 | 97          | 10.7 (40.5)                | 47                                          | 97          | 10.4 (39.4)                | 45                | 95          | 10.1 (38.2)                |
| <b>2350</b>                       | 26.8          | 90                 | 130         | 16.1 (60.9)                | 85                                          | 131         | 15.5 (58.7)                | 81                | 131         | 14.9 (56.4)                |
| <b>2350</b>                       | 26            | 86                 | 127         | 15.6 (59.1)                | 81                                          | 128         | 15 (56.8)                  | 77                | 129         | 14.4 (54.5)                |
| <b>2350</b>                       | 24            | 77                 | 121         | 14.3 (54.1)                | 72                                          | 122         | 13.8 (52.2)                | 69                | 122         | 13.3 (50.3)                |
| <b>2350</b>                       | 22            | 67                 | 114         | 13.1 (49.6)                | 64                                          | 114         | 12.6 (47.7)                | 60                | 114         | 12.2 (46.2)                |
| <b>2350</b>                       | 20            | 57                 | 105         | 11.7 (44.3)                | 54                                          | 105         | 11.3 (42.8)                | 51                | 103         | 11 (41.6)                  |
| <b>2350</b>                       | 18.5          | 50                 | 98          | 10.7 (40.5)                | 47                                          | 95          | 10.4 (39.4)                | 45                | 92          | 10.1 (38.2)                |

| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 6000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-27°C) |             |                            | ISA (3°C)                                   |             |                            | ISA + 30°C (33°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>23.9</b>   | <b>94</b>          | <b>135</b>  | <b>16.6 (62.8)</b>         | <b>89</b>                                   | <b>136</b>  | <b>15.9 (60.2)</b>         | <b>84</b>         | <b>137</b>  | <b>15.3 (57.9)</b>         |
| <b>2600</b>                       | 23.9          | 90                 | 133         | 16.1 (60.9)                | 85                                          | 134         | 15.5 (58.7)                | 81                | 134         | 14.9 (56.4)                |
| <b>2600</b>                       | 23            | 85                 | 130         | 15.5 (58.7)                | 80                                          | 130         | 14.8 (56)                  | 76                | 131         | 14.3 (54.1)                |
| <b>2600</b>                       | 22            | 80                 | 126         | 14.8 (56)                  | 75                                          | 127         | 14.2 (53.8)                | 72                | 127         | 13.6 (51.5)                |
| <b>2600</b>                       | 20            | 68                 | 117         | 13.2 (50)                  | 64                                          | 117         | 12.7 (48.1)                | 61                | 117         | 12.3 (46.6)                |
| <b>2600</b>                       | 19            | 63                 | 113         | 12.5 (47.3)                | 59                                          | 112         | 12 (45.4)                  | 56                | 111         | 11.6 (43.9)                |
| <b>2600</b>                       | 18            | 57                 | 108         | 11.7 (44.3)                | 54                                          | 106         | 11.3 (42.8)                | 51                | 104         | 10.9 (41.3)                |
| <b>2450</b>                       | 23.9          | 85                 | 129         | 15.4 (58.3)                | 80                                          | 130         | 14.8 (56)                  | 76                | 131         | 14.2 (53.8)                |
| <b>2450</b>                       | 23            | 80                 | 126         | 14.8 (56)                  | 75                                          | 127         | 14.2 (53.8)                | 72                | 127         | 13.7 (51.9)                |
| <b>2450</b>                       | 22            | 75                 | 123         | 14.1 (53.4)                | 71                                          | 123         | 13.6 (51.5)                | 67                | 123         | 13.1 (49.6)                |
| <b>2450</b>                       | 20            | 64                 | 114         | 12.7 (48.1)                | 61                                          | 114         | 12.2 (46.2)                | 58                | 113         | 11.8 (44.7)                |
| <b>2450</b>                       | 19            | 59                 | 110         | 12 (45.4)                  | 56                                          | 109         | 11.6 (43.9)                | 53                | 107         | 11.2 (42.4)                |
| <b>2450</b>                       | 18            | 54                 | 104         | 11.3 (42.8)                | 51                                          | 102         | 10.9 (41.3)                | 49                | 99          | 10.6 (40.1)                |
| <b>2350</b>                       | 23.9          | 81                 | 127         | 15 (56.8)                  | 77                                          | 128         | 14.4 (54.5)                | 73                | 128         | 13.8 (52.2)                |
| <b>2350</b>                       | 23            | 77                 | 124         | 14.3 (54.1)                | 73                                          | 124         | 13.8 (52.2)                | 69                | 124         | 13.3 (50.3)                |
| <b>2350</b>                       | 22            | 72                 | 121         | 13.7 (51.9)                | 68                                          | 121         | 13.2 (50)                  | 65                | 120         | 12.7 (48.1)                |
| <b>2350</b>                       | 20            | 62                 | 112         | 12.3 (46.6)                | 58                                          | 111         | 11.9 (45)                  | 55                | 110         | 11.5 (43.5)                |
| <b>2350</b>                       | 19            | 57                 | 107         | 11.7 (44.3)                | 54                                          | 106         | 11.2 (42.4)                | 51                | 103         | 10.9 (41.3)                |
| <b>2350</b>                       | 18.5          | 54                 | 104         | 11.3 (42.8)                | 51                                          | 102         | 10.9 (41.3)                | 49                | 99          | 10.6 (40.1)                |

| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 9000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-33°C) |             |                            | ISA (-3°C)                                  |             |                            | ISA + 30°C (27°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>21.3</b>   | <b>85</b>          | <b>133</b>  | <b>15.4 (58.3)</b>         | <b>80</b>                                   | <b>133</b>  | <b>14.7 (55.6)</b>         | <b>76</b>         | <b>133</b>  | <b>14.2 (53.8)</b>         |
| <b>2600</b>                       | 21.3          | 81                 | 130         | 15 (56.8)                  | 77                                          | 131         | 14.3 (54.1)                | 73                | 131         | 13.8 (52.2)                |
| <b>2600</b>                       | 20            | 73                 | 124         | 13.8 (52.2)                | 69                                          | 124         | 13.3 (50.3)                | 65                | 123         | 12.8 (48.5)                |
| <b>2600</b>                       | 19            | 67                 | 119         | 13.1 (49.6)                | 64                                          | 119         | 12.6 (47.7)                | 60                | 118         | 12.1 (45.8)                |
| <b>2600</b>                       | 18            | 62                 | 114         | 12.3 (46.6)                | 58                                          | 113         | 11.9 (45)                  | 55                | 111         | 11.5 (43.5)                |
| <b>2450</b>                       | 21.3          | 77                 | 127         | 14.3 (54.1)                | 72                                          | 127         | 13.7 (51.9)                | 69                | 127         | 13.2 (50)                  |
| <b>2450</b>                       | 20            | 69                 | 121         | 13.3 (50.3)                | 65                                          | 121         | 12.8 (48.5)                | 62                | 119         | 12.3 (46.6)                |
| <b>2450</b>                       | 19            | 64                 | 116         | 12.6 (47.7)                | 60                                          | 115         | 12.1 (45.8)                | 57                | 114         | 11.7 (44.3)                |
| <b>2450</b>                       | 18            | 59                 | 111         | 11.9 (45)                  | 55                                          | 109         | 11.4 (43.2)                | 52                | 106         | 11.1 (42)                  |
| <b>2350</b>                       | 19            | 66                 | 121         | 12.9 (48.8)                | 62                                          | 120         | 12.4 (46.9)                | 59                | 117         | 11.9 (45)                  |
| <b>2350</b>                       | 18            | 60                 | 115         | 12.2 (46.2)                | 57                                          | 113         | 11.7 (44.3)                | 54                | 110         | 11.3 (42.8)                |

| <b>Weight:</b> 1160 kg             |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|------------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH          |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 12000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                                | MAP<br>[inHg] | ISA – 30°C (-39°C) |             |                            | ISA (-9°C)                                  |             |                            | ISA + 30°C (21°C) |             |                            |
|                                    |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                        | <b>19</b>     | <b>75</b>          | <b>128</b>  | <b>14.1 (53.4)</b>         | <b>70</b>                                   | <b>128</b>  | <b>13.5 (51.1)</b>         | <b>67</b>         | <b>128</b>  | <b>13 (49.2)</b>           |
| <b>2600</b>                        | 19            | 72                 | 126         | 13.7 (51.9)                | 68                                          | 126         | 13.2 (50)                  | 64                | 125         | 12.7 (48.1)                |
| <b>2600</b>                        | 18            | 66                 | 121         | 13 (49.2)                  | 63                                          | 120         | 12.4 (46.9)                | 59                | 118         | 12 (45.4)                  |
| <b>2450</b>                        | 19            | 68                 | 123         | 13.2 (50)                  | 64                                          | 122         | 12.7 (48.1)                | 61                | 121         | 12.2 (46.2)                |
| <b>2450</b>                        | 18            | 63                 | 118         | 12.5 (47.3)                | 59                                          | 116         | 12 (45.4)                  | 56                | 113         | 11.6 (43.9)                |
| <b>2350</b>                        | 19            | 66                 | 121         | 12.9 (48.8)                | 62                                          | 120         | 12.4 (46.9)                | 59                | 117         | 11.9 (45)                  |
| <b>2350</b>                        | 18            | 60                 | 115         | 12.2 (46.2)                | 57                                          | 113         | 11.7 (44.3)                | 54                | 110         | 11.3 (42.8)                |



## 11. LANDING PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factored to distances of 1.67

| <b>Weight = 1160 kg (2557 lb)</b>                                                                                                                                                                                                                                                                                                                                               |              |                                 |               |               |               |                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------------|---------------|---------------|-----------------------|
| <div> <div> <b>Flaps: LAND</b><br/> <b>Short Final Approach Speed = 66 KIAS</b><br/> <b>Throttle Lever: Idle</b><br/> <b>Runway: Paved</b> </div> <div> <b>Corrections</b><br/> <b>Headwind: -4 m for each kn</b><br/> <b>Tailwind: +13 m for each kn</b><br/> <b>Grass Runway: +10% to Ground Roll</b><br/> <b>Runway slope: -3% to Ground Roll for each +1%</b> </div> </div> |              |                                 |               |               |               |                       |
| Pressure<br>Altitude<br>[ft]                                                                                                                                                                                                                                                                                                                                                    |              | Distance [m]<br>(Distance [ft]) |               |               |               |                       |
|                                                                                                                                                                                                                                                                                                                                                                                 |              | Temperature [°C]                |               |               |               | ISA                   |
|                                                                                                                                                                                                                                                                                                                                                                                 |              | -25                             | 0             | 25            | 50            |                       |
| S.L.                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 204<br>(669)                    | 225<br>(738)  | 245<br>(804)  | 266<br>(873)  | <b>237<br/>(778)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 488<br>(1601)                   | 509<br>(1670) | 529<br>(1736) | 550<br>(1804) | <b>521<br/>(1709)</b> |
| 1000                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 212<br>(696)                    | 233<br>(764)  | 254<br>(833)  | 276<br>(906)  | <b>244<br/>(801)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 496<br>(1627)                   | 517<br>(1696) | 538<br>(1765) | 560<br>(1837) | <b>528<br/>(1732)</b> |
| 2000                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 220<br>(722)                    | 242<br>(794)  | 264<br>(866)  | 286<br>(938)  | <b>251<br/>(823)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 504<br>(1654)                   | 526<br>(1726) | 548<br>(1798) | 570<br>(1870) | <b>535<br/>(1755)</b> |
| 3000                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 228<br>(748)                    | 251<br>(823)  | 274<br>(899)  | 297<br>(974)  | <b>259<br/>(850)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 512<br>(1680)                   | 535<br>(1755) | 558<br>(1831) | 581<br>(1906) | <b>543<br/>(1781)</b> |
| 4000                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 236<br>(774)                    | 260<br>(853)  | 284<br>(932)  | 308<br>(1010) | <b>267<br/>(876)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 520<br>(1706)                   | 544<br>(1785) | 568<br>(1864) | 592<br>(1942) | <b>551<br/>(1808)</b> |
| 5000                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 245<br>(804)                    | 270<br>(886)  | 295<br>(968)  | 320<br>(1050) | <b>275<br/>(902)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 529<br>(1736)                   | 554<br>(1818) | 579<br>(1900) | 604<br>(1982) | <b>559<br/>(1834)</b> |
| 6000                                                                                                                                                                                                                                                                                                                                                                            | Ground Roll  | 255<br>(837)                    | 280<br>(919)  | 306<br>(1004) | 332<br>(1089) | <b>284<br/>(932)</b>  |
|                                                                                                                                                                                                                                                                                                                                                                                 | At 50 ft AGL | 539<br>(1768)                   | 564<br>(1850) | 590<br>(1936) | 616<br>(2021) | <b>568<br/>(1864)</b> |

## 12. BALKED LANDING PERFORMANCE

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb and to angle of climb of 0.90

| Throttle and Propeller Lever: Full Forward |                              |                              |      |     |      |             |
|--------------------------------------------|------------------------------|------------------------------|------|-----|------|-------------|
| Flaps: LAND                                |                              |                              |      |     |      |             |
| Speed: 67 KIAS                             |                              |                              |      |     |      |             |
| Weight<br>[kg]<br>([lb])                   | Pressure<br>Altitude<br>[ft] | Steady Gradient of Climb [%] |      |     |      |             |
|                                            |                              | Temperature [°C]             |      |     |      | ISA         |
|                                            |                              | -25                          | 0    | 25  | 50   |             |
| <b>1160<br/>(2557)</b>                     | S.L.                         | 10.9                         | 8.6  | 6.6 | 4.7  | <b>7.4</b>  |
|                                            | <b>1000</b>                  | 10.0                         | 7.8  | 5.7 | 3.9  | <b>6.7</b>  |
|                                            | <b>2000</b>                  | 9.2                          | 6.9  | 4.9 | 3.1  | <b>6.0</b>  |
|                                            | <b>3000</b>                  | 8.3                          | 6.1  | 4.1 | 2.3  | <b>5.3</b>  |
|                                            | <b>4000</b>                  | 7.4                          | 5.2  | 3.2 | 1.4  | <b>4.6</b>  |
|                                            | <b>5000</b>                  | 6.6                          | 4.4  | 2.4 | 0.6  | <b>3.9</b>  |
|                                            | <b>6000</b>                  | 5.7                          | 3.5  | 1.6 | -0.2 | <b>3.3</b>  |
|                                            | <b>7000</b>                  | 4.8                          | 2.7  | 0.7 | -1.0 | <b>2.6</b>  |
| <b>1060<br/>(2337)</b>                     | S.L.                         | 12.9                         | 10.4 | 8.1 | 6.1  | <b>9.0</b>  |
|                                            | <b>1000</b>                  | 11.9                         | 9.4  | 7.2 | 5.2  | <b>8.3</b>  |
|                                            | <b>2000</b>                  | 11.0                         | 8.5  | 6.3 | 4.3  | <b>7.5</b>  |
|                                            | <b>3000</b>                  | 10.0                         | 7.6  | 5.4 | 3.4  | <b>6.8</b>  |
|                                            | <b>4000</b>                  | 9.1                          | 6.7  | 4.5 | 2.5  | <b>6.0</b>  |
|                                            | <b>5000</b>                  | 8.1                          | 5.7  | 3.6 | 1.7  | <b>5.3</b>  |
|                                            | <b>6000</b>                  | 7.2                          | 4.8  | 2.7 | 0.8  | <b>4.5</b>  |
|                                            | <b>7000</b>                  | 6.2                          | 3.9  | 1.8 | -0.1 | <b>3.8</b>  |
| <b>960<br/>(2116)</b>                      | S.L.                         | 15.2                         | 12.4 | 10  | 7.7  | <b>10.9</b> |
|                                            | <b>1000</b>                  | 14.1                         | 11.4 | 9.0 | 6.7  | <b>10.1</b> |
|                                            | <b>2000</b>                  | 13.1                         | 10.4 | 7.9 | 5.8  | <b>9.3</b>  |
|                                            | <b>3000</b>                  | 12.0                         | 9.3  | 6.9 | 4.8  | <b>8.4</b>  |
|                                            | <b>4000</b>                  | 11.0                         | 8.3  | 5.9 | 3.8  | <b>7.6</b>  |
|                                            | <b>5000</b>                  | 10.0                         | 7.3  | 4.9 | 2.8  | <b>6.8</b>  |
|                                            | <b>6000</b>                  | 8.9                          | 6.3  | 3.9 | 1.8  | <b>6.0</b>  |
|                                            | <b>7000</b>                  | 7.9                          | 5.3  | 2.9 | 0.9  | <b>5.2</b>  |

### 13. NOISE DATA

Noise level, determined in accordance with ICAO/Annex 16 6<sup>th</sup> Ed., July 2011, Vol. I°, Chapter 10 and 14 CFR 36.1581(c), is **80.58 dB(A)**.

**NOTE**

*No determination has been made by the Federal Aviation Administration that the noise levels of this aircraft are or should be acceptable or unacceptable for operation at, into, or out of, any airport.*

INTENTIONALLY LEFT BLANK

Supplement D07: pages replacement instructions

## **SECTION 6 – WEIGHT AND BALANCE**

Refer to the basic AFM, Section 6 Weight and Balance

INTENTIONALLY LEFT BLANK

Supplement D07: pages replacement instructions

## SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION

Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems Description

According to A/C configuration apply following pages replacement:

| Supplement D07<br>AIRFRAME AND SYSTEMS DESCRIPTION<br>page |          | AFM<br>Section 7<br>page             |
|------------------------------------------------------------|----------|--------------------------------------|
| APV 7-8 thru 11                                            | REPLACES | 7-8 thru 11 of basic AFM, Section 7  |
| APV 7-16                                                   | REPLACES | 7-16 of basic AFM, Section 7         |
| APV 7-20 thru 21                                           | REPLACES | 7-20 thru 21 of basic AFM, Section 7 |
| APV 7-27                                                   | REPLACES | 7-27 of basic AFM, Section 7         |
| APV 7-33                                                   | REPLACES | 7-33 of basic AFM, Section 7         |
| APV 7-36                                                   | REPLACES | 7-36 of basic AFM, Section 7         |

## Section 9 – Supplements

Ed. 2, Rev.0

### Supplement no. D07

**GARMIN GFC700 AUTOPILOT AND VARIABLE PITCH PROPELLER EQUIPPED AEROPLANES**

INTENTIONALLY LEFT BLANK

---

## **Section 9 – Supplements**

*Ed. 2, Rev.0*

**Supplement no. D07**

**GARMIN GFC700 AUTOPILOT AND VARIABLE PITCH PROPELLER EQUIPPED AEROPLANES**



### **3 FLIGHT CONTROLS**

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

The control of the stabilator trim is operated by means of both a control wheel, located between the two front seats that acts directly on the control cables, and an electrical actuator controlled by a switch located on the control wheel; stabilator trim position is displayed on a dedicated analogue indicator located on the LH area of the instrument panel.

Rudder Trimming device for lateral control is provided by means of an electrical actuator controlled by a rocker switch located near the pitch trim wheel; the surface is connected to a potentiometer linked to a rudder trim indicator included in the Garmin G1000 EIS (Engine Indication System).

## **4 INSTRUMENT PANEL**

The instrument panel is divided in three areas:

- The left area holds Garmin G1000 PFD, a chronometer and the pitch trim indicator;
- The Central area holds the standby unit for PFI parameters, MD 302 suite, and the ELT button;
- The right area holds Garmin G1000 MFD with dedicated AP control buttons and breaker panel;
- The lower-LH portion of the instrument panel holds:
  - Ignition key;
  - Master and Generator switches;
  - Emergency fuel pump;
  - Avionic Master switch;
  - AP Master switch
  - Trim Disconnect switch
- The lower-Central portion of the instrument panel holds:
  - Fuel selector valve.
  - Flap Control
- The lower-RH portion of the instrument panel holds:
  - Pocket



Fig. 7-8. INSTRUMENT PANEL

## 4.1 ENGINE CONTROL LEVER

Engine handling is via three levers: Throttle, RPM lever, Mixture control lever.

They're situated on the center control; the use of "front/forward" and "rear/backward" is defined in relation to the direction of flight (longitudinal).

### Mixture control lever

This lever (right hand lever with red handle) controls the fuel-air mixture, which is supplied to the engine.

With the lever full forward, extra fuel is being supplied to the engine which at higher performance setting contributes to engine cooling.

In cruise, the mixture should be made leaner in order to reach the appropriate fuel-air mixture. The leaning procedure is given in Chapter 4.

Lever forward (RICH) >> Mixture rich (in fuel)

Lever to rear (LEAN) >> Mixture lean (in fuel)

To shut off the engine the mixture control lever is pulled to the rear stop: air without fuel is drawn into the cylinders that shuts down.

### Throttle

This lever (left hand with large knob) is used to control manifold pressure (MAP).

High manifold pressure means a large quantity of fuel-air mixture is being supplied to engine, while low manifold pressure means a lesser quantity of fuel-air mixture is being supplied.

### Propeller lever

By means of this lever (central lever with blue handle) the propeller governor controls the propeller pitch, and consequently engine RPM. A selected RPM is held constant by the governor independent of the airspeed and the throttle setting.

Lever forward (HIGH RPM) = fine pitch

Lever rearward (LOW RPM) = coarse pitch

Following a defect in governor or oil system, the blades go to the finest possible pitch (maximum RPM), thus allowing continuation of the flight.



*Following failure of the governor or a serious drop in oil pressure, the RPM should be adjusted using the throttle. Every effort should be made not to exceed 2700 RPM.*



*The throttle and RPM lever should be moved slowly, in order to avoid over-speed and excessively rapid RPM changes.*

## 4.2 ALTERNATE AIR

Alternate Air knob is located on the central pedestal; when the knob is fully pulled outward from the instrument panel, injectors receive maximum hot air. During normal operation, the knob is set in OFF position.

## 4.3 DEFROST AND CABIN HEAT

Two knobs, located on the lower side of the central pedestal, allow Defrost and Cabin Heat function. The one marked as “Defrost and Cabin Heat” allows hot air to perform windshield defrost and partially cabin heat.

The cabin heat control knob, when fully outward, allows cabin to receive maximum hot air. When both cabin heat and defrost and cabin heat are pulled, air is partitioned.



Fig. 7-9. CENTRAL PEDESTAL

## 7. POWERPLANT

### 7.1 ENGINE

Manufacturer ..... Lycoming Textron  
 Model ..... IO-360-M1A  
 Type Certificate ..... EASA TCDS no. IM.E.032  
 Engine type ..... Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets.  
 Maximum power..... 134.0 kW (180hp) @ 2700 rpm  
 Maximum continuous power ..... 129.2 kW (173.3hp) @ 2600 rpm

| Oil Consumption            |      |     |                               |                             |
|----------------------------|------|-----|-------------------------------|-----------------------------|
| Operation                  | RPM  | HP  | Max.<br>Oil Cons.<br>Qts./Hr. | *Max.<br>Cyl. Head<br>Temp. |
| Normal Rated               | 2700 | 180 | .80                           | 500°F (260°C)               |
| Performance Cruise (75%)   | 2450 | 135 | .45                           | 500°F (260°C)               |
| Economy Cruise (60R Rated) | 2350 | 117 | .39                           | 500°F (260°C)               |

### 7.2 PROPELLER

Manufacturer ..... MT Propeller  
 Model ..... MTV-15-B/193-52  
 Type Certificate ..... EASA TCDS no. P.098  
 Blades/hub ..... wood/composite 2-blades – aluminium hub  
 Diameter ..... 1930 mm (6,33 ft) no reduction allowed  
 Type ..... Variable pitch

#### Governor

Manufacturer ..... MT Propeller  
 Model ..... P-860-23:  
 Type..... Hydraulic

## **9. ELECTRICAL SYSTEM**

Primary DC power is provided by an external alternator with a 28 VDC output, rated of 70 Amps @ 2700 rpm. During normal operations, it recharges the battery.

Secondary DC power is provided by a lead type battery (GILL G-247) which provides the energy necessary for feeding the essential electrical loads in the event of an alternator failure.

The switch between the energy sources is automatic and no action is required in order to activate the alternate energy source.

For ground maintenance and/or starting, an external power socket is provided.

The alternator and battery are connected to the battery bus in order to provide energy for the electric equipment.

Each electrically fed instrument is connected to a dedicated circuit breaker which protects the cable from the battery bus to the associated electric equipment.



**WARNING**

*If the Ignition is in the position L, R, or BOTH, an accidental movement of the propeller may start the engine with possible danger for bystanders.*

In the following figure is presented the electrical system architecture.

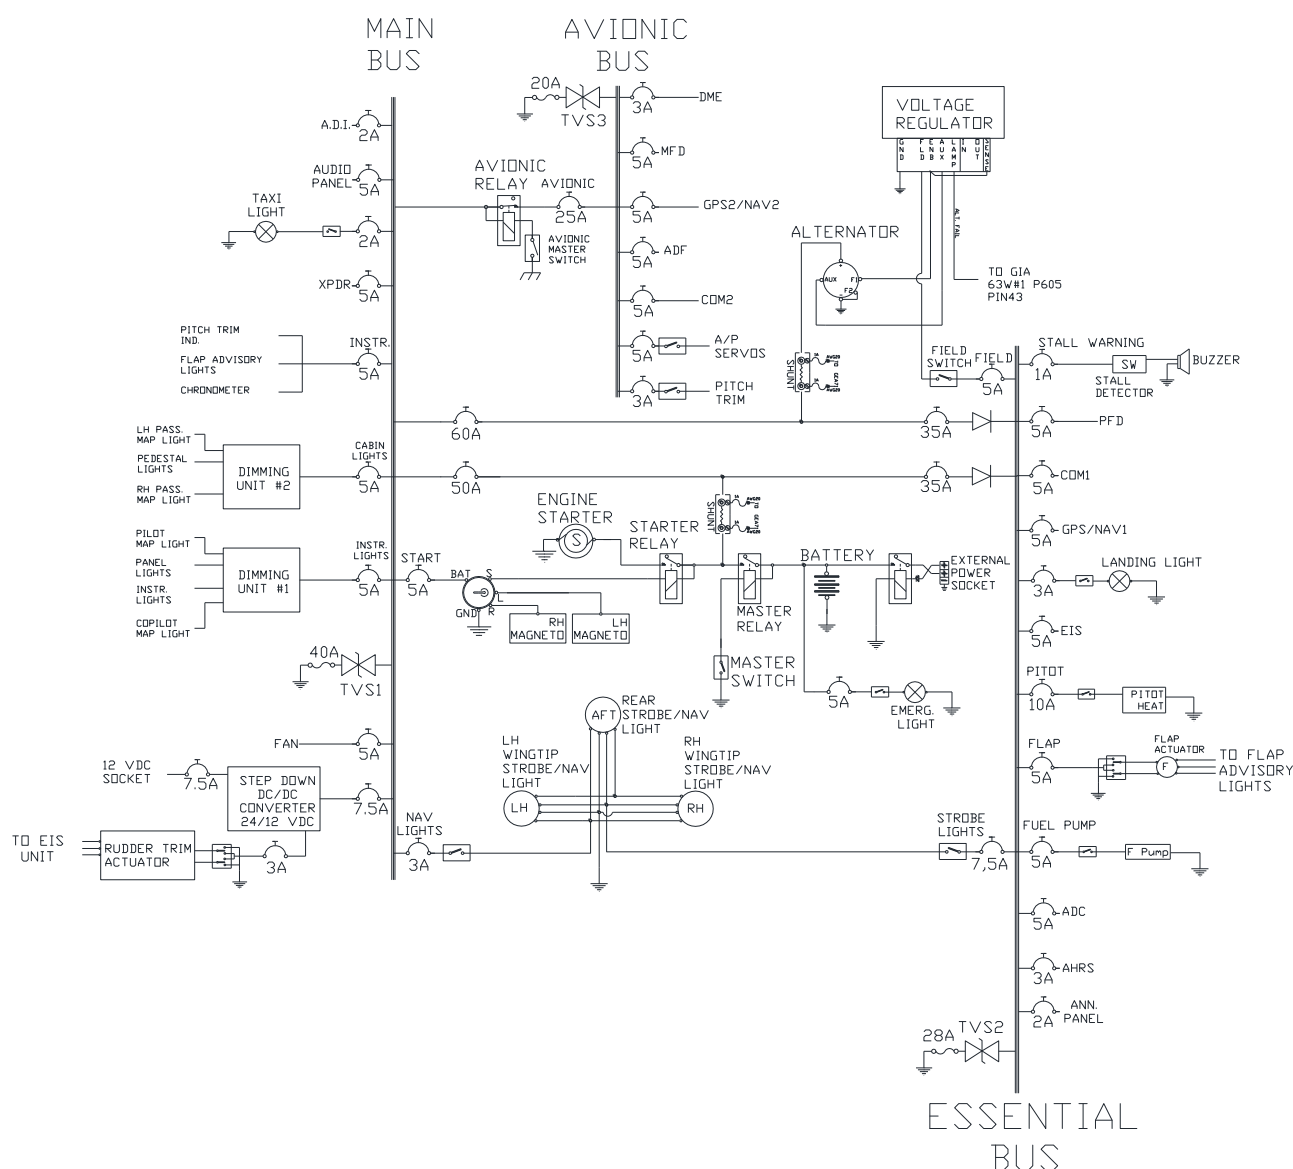


FIG.7-15. ELECTRICAL SYSTEM ARCHITECTURE

### 12.3 STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.

## 11.2 INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

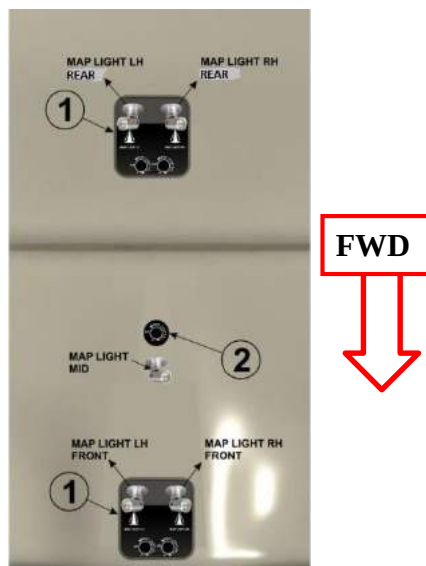


FIG.7-18. CABIN CEILING LIGHTS LAYOUT


The instrument panel can be illuminated by 8 incandescence light strips, all dimmable.




FIG.7-19. INSTRUMENT PANEL LIGHTS LAYOUT



ELT unit position placard:

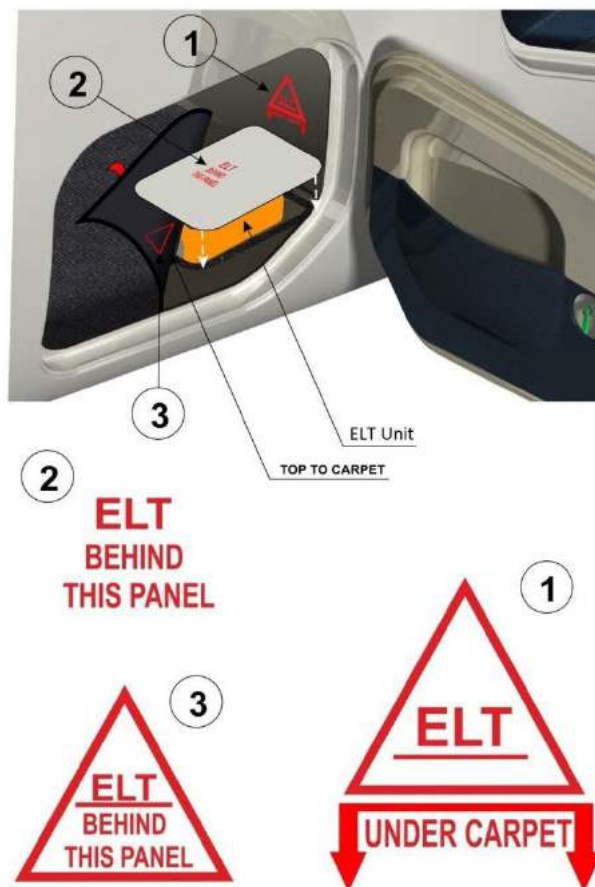

Breaker Panel placards:

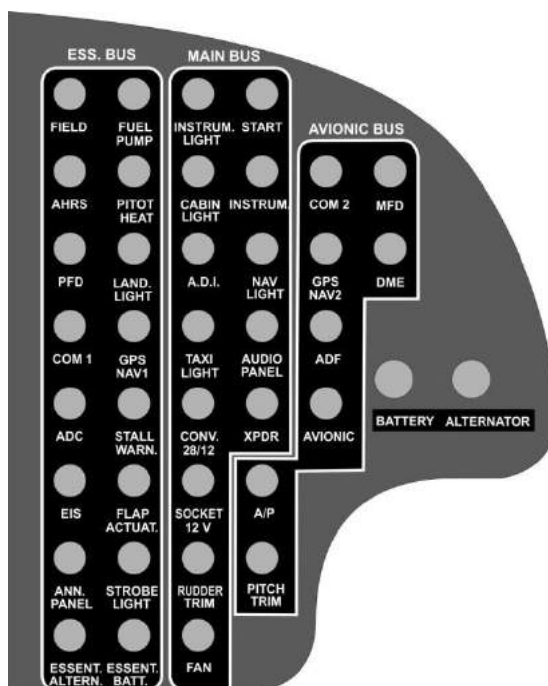

Pedestal placards:



Supplement D07: pages replacement instructions

## **SECTION 8 – GROUND HANDLING & SERVICE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 8 Ground Handling & Service**

According to A/C configuration refer to the basic AFM, Section 8 – Ground Handling & Service

INTENTIONALLY LEFT BLANK

**Supplement n° D08****AFMS FOR  
ALTERNATIVE AVIONICS CONFIGURATION AND  
VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES****Record of Revisions**

| Rev | Revised page | Description of Revision | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                      |
|-----|--------------|-------------------------|-----------------|-----------|----------|----------------------------------------------------------------------------|
|     |              |                         | DO              | OoA       | HDO      |                                                                            |
| 0   | All          | Editorial Change        | F.Auricchio     | C. Caruso | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/131.180403) |

**List of Effective Pages**

|                    | Page                                                       | Revision      |
|--------------------|------------------------------------------------------------|---------------|
| <b>Cover Pages</b> | D08-1 thru 22                                              | <i>Rev. 0</i> |
| <b>Section 1</b>   | GV 1-6                                                     | <i>Rev. 0</i> |
| <b>Section 2</b>   | GV 2-7, GV 2-9 thru 10, GV 2-13                            | <i>Rev. 0</i> |
| <b>Section 3</b>   | GV 3-4 thru 7, GV 3-10, GV 3-14, GV 3-16 thru 19, GV 3-25  | <i>Rev. 0</i> |
| <b>Section 4</b>   | GV 4-4 thru 5, GV 4-7, GV 4-9, GV 4-15 thru 26             | <i>Rev. 0</i> |
| <b>Section 5</b>   | GV 5-1 thru 19                                             | <i>Rev. 0</i> |
| <b>Section 7</b>   | GV 7-8 thru 11, GV 7-16, GV 7-20 thru 24, GV 7-27, GV 7-36 | <i>Rev. 0</i> |

---

## **INDEX**

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>INTRODUCTION .....</b>                                 | <b>3</b>  |
| <b>Section 1 – GENERAL .....</b>                          | <b>5</b>  |
| <b>Section 2 – LIMITATIONS .....</b>                      | <b>8</b>  |
| <b>Section 3 – EMERGENCY PROCEDURES.....</b>              | <b>10</b> |
| <b>Section 4 – NORMAL PROCEDURES.....</b>                 | <b>12</b> |
| <b>Section 5 – PERFORMANCES .....</b>                     | <b>14</b> |
| <b>Section 6 – WEIGHT AND BALANCE .....</b>               | <b>19</b> |
| <b>Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION .....</b> | <b>20</b> |
| <b>Section 8 – GROUND HANDLING &amp; SERVICE .....</b>    | <b>21</b> |

---

## **INTRODUCTION**

The information contained herein supplements or supersedes the basic Aircraft Flight Manual: detailed instructions are provided to allow the owner for replacing the AFM pages containing information amended as per Garmin G500 and variable pitch propeller in subject.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

INTENTIONALLY LEFT BLANK



**Supplement D08: pages replacement instructions**

### **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

According A/C configuration apply following pages replacement:

| <b>Supplement D08<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 1<br/>page</b> |
|------------------------------------------------|-----------------|-----------------------------------|
| GV 1-6                                         | <b>REPLACES</b> | Page 1-6 of basic AFM, Section 1  |

INTENTIONALLY LEFT BLANK

## **5. ENGINE**

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Manufacturer .....             | Lycoming Engines                                                                                            |
| Model .....                    | IO-360-M1A                                                                                                  |
| Type Certificate .....         | EASA TCDS no. IM.E.032                                                                                      |
| Engine type .....              | Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets. |
| Maximum power .....            | 134.0 kW (180 hp) @ 2700 rpm                                                                                |
| Maximum continuous power ..... | 129.2 kW (173.3 hp) @ 2600 rpm                                                                              |

## **6. PROPELLER**

|                        |                                             |
|------------------------|---------------------------------------------|
| Manufacturer .....     | MT Propeller                                |
| Model .....            | MTV-15-B/193-52                             |
| Type Certificate ..... | EASA TCDS no. P.098                         |
| Blades/hub .....       | wood/composite 2-blades – aluminum hub      |
| Diameter .....         | 1930 mm (76 in) (no reduction is permitted) |
| Type .....             | Variable pitch                              |

### **Governor**

|                    |              |
|--------------------|--------------|
| Manufacturer ..... | MT Propeller |
| Model .....        | P-860-23:    |
| Type .....         | Hydraulic    |

INTENTIONALLY LEFT BLANK

---

## **Section 9 - Supplements**

### **Supplement n° D08 - ALTERNATIVE AVIONICS CONFIGURATION AND VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES**

*Ed. 2, Rev. 0*

**Supplement D08: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

According A/C configuration apply following pages replacement:

| <b>Supplement D08<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 2<br/>page</b>         |
|------------------------------------------------|-----------------|-------------------------------------------|
| GV 2-7                                         | <b>REPLACES</b> | Page 2-7 of basic AFM, Section 2          |
| GV 2-9 thru 10                                 | <b>REPLACE</b>  | Pages 2-9 thru 10 of basic AFM, Section 2 |
| GV 2-13                                        | <b>REPLACES</b> | Page 2-13 of basic AFM, Section 2         |

---

## **Section 9 - Supplements**

**Supplement n° D08 - ALTERNATIVE AVIONICS CONFIGURATION AND  
VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES**

*Ed. 2, Rev. 0*

INTENTIONALLY LEFT BLANK

---

## **Section 9 - Supplements**

### **Supplement n° D08 - ALTERNATIVE AVIONICS CONFIGURATION AND VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES**

*Ed. 2, Rev. 0*

## 4. POWERPLANT LIMITATIONS

Following table reports the operating limitations the installed engine:

**ENGINE MANUFACTURER:** Lycoming Engines

**ENGINE MODEL:** IO-360-M1A

**MAXIMUM POWER:**

|            | Max Power<br>(hp) | Max rpm.<br>Prop. rpm |
|------------|-------------------|-----------------------|
| Max. T.O.  | 180               | 2700                  |
| Max. Cont. | 173.3             | 2600                  |

**Temperatures:**

Max CHT ..... 500° F (260° C)

Max Oil ..... 245° F (118° C)

**Oil Pressure:**

Minimum Idling ..... 25 psi (1.7 Bar)

Minimum Normal ..... 55 psi (3.8 Bar)

Maximum Normal ..... 95 psi (6.5 Bar)

Starting, Warm-up, taxi and take-off (Max) ..... 115 psi (7.9 Bar)

**Fuel pressure:**

- At Inlet to fuel injector:

Minimum ..... 14 psi (0.96 Bar)

Maximum ..... 35 psi (2.41 Bar)

## 7. PAINT

To ensure that the temperature of the composite structure does not exceed limits, the outer surface of the aeroplane must be painted with white paint, except for areas of registration marks, placards, and ornament.

Refer to Aircraft Maintenance Manual (AMM), ATA Chapter 4 and 51, for specific paint requirements.

## 8. PROPELLER

|                     |                                            |
|---------------------|--------------------------------------------|
| MANUFACTURER: ..... | MT Propeller                               |
| MODEL: .....        | MTV 15B/193-52                             |
| TYPE: .....         | wood/composite 2-blade, variable pitch     |
| DIAMETER: .....     | 1930 mm (76in) (no reduction is permitted) |

## 9. MAXIMUM OPERATING ALTITUDE

Maximum operating altitude is 12000 ft (3658 m) MSL.



**CAUTION**

*At altitudes above 10000 ft (3048 m) up to and including 12000 ft (3658 m), flight crew is recommended to use supplemental oxygen.*

## 10. AMBIENT TEMPERATURE

Ambient temperature: from -25°C to +50°C.



**WARNING**

*Flight in expected and/or known icing conditions is forbidden.*



## 11. POWERPLANT INSTRUMENT MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

| INSTRUMENT |        | RED ARC<br>Minimum<br>limit | WHITE ARC<br>Advisory | GREEN ARC<br>Safe<br>operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum<br>limit |
|------------|--------|-----------------------------|-----------------------|--------------------------------|-----------------------|-----------------------------|
| PROPELLER  | RPM    | /                           | /                     | 950-2600                       | 0-950<br>2600-2700    | 2700 (line)                 |
| OIL TEMP.  | °F     | /                           | /                     | 140-245                        | 0 - 140               | 245 - 255                   |
| CHT        | °F     | /                           | 435 (line)            | 150-475                        | 0 – 150<br>475-500    | 500-510                     |
| EGT        | °F     | /                           | 1000-1500             | /                              | 1375 (line)           | 1500-1550                   |
| OIL PRESS  | psi    | 0-25                        | /                     | 55-95                          | 25 - 55<br>95-115     | 115 - 125                   |
| FUEL PRESS | psi    | 0-14                        | /                     | 14-35                          | /                     | 35 - 40                     |
| FUEL QTY   | litres | 0                           | /                     | 0-115                          | /                     | /                           |
|            | gal    | 0                           |                       | 0-30,4                         |                       |                             |
| FUEL FLOW  | l/hr   | /                           | 0-75                  | /                              | /                     | /                           |
|            | gal/hr |                             | 0-20                  |                                |                       |                             |

## 12. OTHER INSTRUMENT MARKINGS

| INSTRUMENT | RED ARC<br>Minimum limit | GREEN ARC<br>Safe operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum limit |
|------------|--------------------------|-----------------------------|-----------------------|--------------------------|
| Voltmeter  | 20-21 Volt               | 24–30 Volt                  | 21–24 Volt            | 30-31                    |

**AFMS N° D08 FOR ALTERNATIVE AVIONICS CONFIGURATION AND  
VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES**



## 18. KINDS OF OPERATION EQUIPMENT LIST (KOEL)

This paragraph reports the KOEL table, concerning the equipment list required on board under CS-23 regulations to allow flight operations in VFR Day/Night and IFR Day/Night. Flight in VFR Day/Night and IFR is permitted only if the prescribed equipment is installed and operational. Additional equipment, or a different equipment list, for the intended operation may be required by national operational requirements and also depends on the airspace classification and route to be flown.

The owner is responsible for fulfilling these requirements.

| Equipment                                | VFR Day        | VFR Night        | IFR Day        | IFR Night        | Note                                                                                                                                                              |
|------------------------------------------|----------------|------------------|----------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>External Power</b>                    |                |                  |                |                  |                                                                                                                                                                   |
| Circuit Breakers                         | •              | •                | •              | •                | As Required                                                                                                                                                       |
| Battery                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| <b>Safety Equipment &amp; Furnishing</b> |                |                  |                |                  |                                                                                                                                                                   |
| First Aid kit                            | •              | •                | •              | •                |                                                                                                                                                                   |
| Fire extinguisher                        | •              | •                | •              | •                |                                                                                                                                                                   |
| ELT                                      | •              | •                | •              | •                |                                                                                                                                                                   |
| Torch (with spare batt.)                 |                | •                |                | •                |                                                                                                                                                                   |
| <b>Ice Protection</b>                    |                |                  |                |                  |                                                                                                                                                                   |
| Pitot heating system                     |                | •                | •              | •                |                                                                                                                                                                   |
| <b>Landing Gear</b>                      |                |                  |                |                  |                                                                                                                                                                   |
| Wheel pants                              |                |                  |                |                  | Removable                                                                                                                                                         |
| <b>Lights</b>                            |                |                  |                |                  |                                                                                                                                                                   |
| Landing/taxi lights                      | •              | •                | •              | •                |                                                                                                                                                                   |
| Strobe lights                            | •              | •                | •              | •                |                                                                                                                                                                   |
| NAV lights                               | •              | •                | •              | •                |                                                                                                                                                                   |
| Cabin lights                             |                | •                |                | •                |                                                                                                                                                                   |
| Instrument lights                        |                | •                |                | •                |                                                                                                                                                                   |
| Emergency light                          |                | •                |                | •                |                                                                                                                                                                   |
| Dimming Devices                          |                | •                |                | •                |                                                                                                                                                                   |
| Day/Night switch                         |                | •                |                | •                |                                                                                                                                                                   |
| <b>COM/Navigation/Engine parameters</b>  |                |                  |                |                  |                                                                                                                                                                   |
| Magnetic compass                         | •              | •                | •              | •                |                                                                                                                                                                   |
| GARMIN G500 Suite                        | •              | •                | •              | •                |                                                                                                                                                                   |
| GDU 620 (PFD/MFD)                        | •              | •                | •              | •                |                                                                                                                                                                   |
| MD 302 suite                             | •              | •                | •              | •                |                                                                                                                                                                   |
| GTN 650                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| GNC 255A                                 | •              | •                | •              | •                |                                                                                                                                                                   |
| GMA 340                                  | •              | •                | •              | •                |                                                                                                                                                                   |
| DME Indicator-KDI 572                    | •              | •                | •              | •                |                                                                                                                                                                   |
| ADF system - KR 87                       | •              | •                | •              | •                |                                                                                                                                                                   |
| JP Instruments EDM 930                   | •              | •                | •              | •                |                                                                                                                                                                   |
| Remote Alarm Display                     | •              | •                | •              | •                |                                                                                                                                                                   |
| Pitot system                             | •              | •                | •              | •                |                                                                                                                                                                   |
| Clock                                    | •              | •                | •              | •                |                                                                                                                                                                   |
| <b>Flight Controls</b>                   |                |                  |                |                  |                                                                                                                                                                   |
| Pitch trim indicator                     | •              | •                | •              | •                |                                                                                                                                                                   |
| Flap System                              | •              | •                | •              | •                |                                                                                                                                                                   |
| Flaps position lights                    | •              | •                | •              | •                |                                                                                                                                                                   |
| Rudder trim indicator                    | •              | •                | •              | •                |                                                                                                                                                                   |
| Rudder trim system                       | •              | •                | •              | •                | only for VFR operations, rudder trim system may be inoperative provided the trim tab is fixed in the streamlined position and the system is electrically disabled |
| Stall warning system                     | •              | •                | •              | •                |                                                                                                                                                                   |
|                                          | <b>VFR Day</b> | <b>VFR Night</b> | <b>IFR Day</b> | <b>IFR Night</b> |                                                                                                                                                                   |

Supplement D08: pages replacement instructions

### **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

According A/C configuration apply following pages replacement:

| <b>Supplement D08<br/>EMERGENCY PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section 3<br/>page</b>          |
|---------------------------------------------------------|-----------------|--------------------------------------------|
| GV 3-5 thru 7                                           | <b>REPLACE</b>  | Pages 3-5 thru 7 of basic AFM, Section 3   |
| GV 3-10                                                 | <b>REPLACES</b> | Page 3-10 of basic AFM, Section 3          |
| GV 3-14                                                 | <b>REPLACES</b> | Page 3-14 of basic AFM, Section 3          |
| GV 3-16 thru 19                                         | <b>REPLACE</b>  | Pages 3-16 thru 19 of basic AFM, Section 3 |
| GV 3-25                                                 | <b>REPLACES</b> | Page 3-25 of basic AFM, Section 3          |

INTENTIONALLY LEFT BLANK

**1.1. REFERENCE AIRSPEEDS FOR EMERGENCY PROCEDURES**

|                                  |                |
|----------------------------------|----------------|
| Best glide speed ( $V_{GLIDE}$ ) | <b>84 KIAS</b> |
| No-flaps Approach Speed          | <b>80 KIAS</b> |

## 2. FAILURES INDICATED ON THE ANNUNCIATION PANEL

The annunciator panel, located on the centre of the instrument panel, contains 9 lights for warnings, cautions and advisories. The colours are as follows:

|                      |                                                                                                     |
|----------------------|-----------------------------------------------------------------------------------------------------|
| <b><u>GREEN:</u></b> | to indicate that pertinent device is turned ON                                                      |
| <b><u>AMBER:</u></b> | to indicate no-hazard situations which have to be considered and which require a proper crew action |
| <b><u>RED:</u></b>   | to indicate emergency conditions                                                                    |
| <b><u>WHITE:</u></b> | to indicate advisory messages                                                                       |

### 2.1 ALTERNATOR FAILURE



If **ALT FAIL** caution is **ON**:


1. Circuit breaker(s)..... *Check*
2. Generator SWITCH..... *OFF*
3. Generator SWITCH..... *ON*

If **ALT FAIL CAUTION REMAINS** on:


4. Generator SWITCH..... *OFF*

#### **NOTE**

*A fully charged battery shall supply electrical power for at least 30 minutes.*

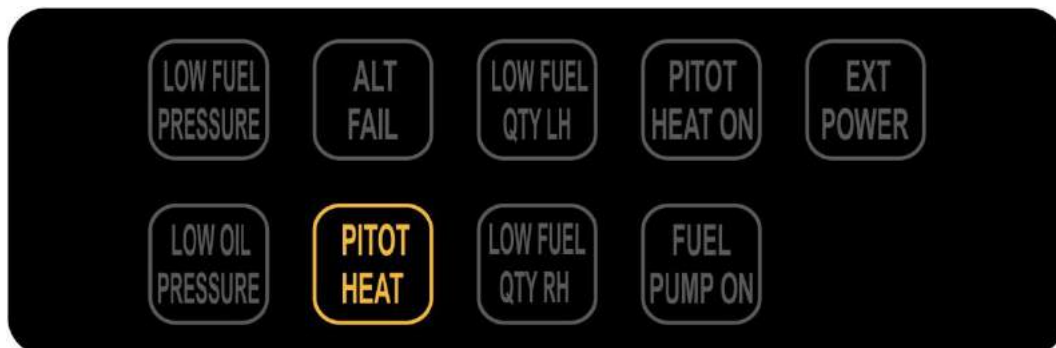**2.2 PITOT HEATING SYSTEM FAILURE**

When the Pitot Heating system is activated, the green **PITOT HEAT ON** advisory light turns on and the amber **PITOT HEAT** caution light turns **OFF**, indicating that the Pitot Heating system is functioning properly.

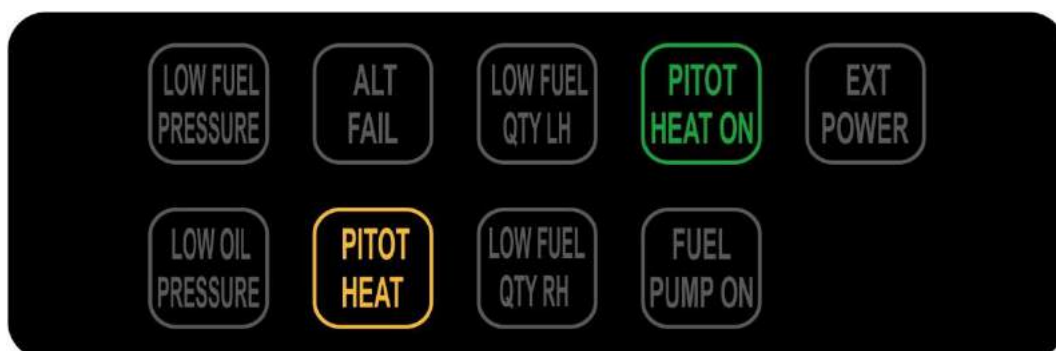

If the amber **PITOT HEAT** caution light is **ON** when the green **PITOT HEAT ON** light is on, then the Pitot Heating system is not functioning properly.

In this case apply following procedure:

- |    |                                       |          |
|----|---------------------------------------|----------|
| 1. | Pitot heat switch .....               | OFF      |
| 2. | Pitot heat circuit breaker .....      | CHECK IN |
| 3. | Pitot heat switch .....               | ON       |
| 4. | <b>PITOT HEAT</b> caution light ..... | CHECK    |

**NOTE**

*if the amber light stays ON, avoid visible moisture and OATs below 10° C.*

### 3. G500 SYSTEM FAILURES

#### 3.1 LOSS OF INFORMATION DISPLAYED

When a LRU or a LRU function fails, a large red 'X' is typically displayed on the display field associated with the failed data.

**NOTE**

*In most of cases, the red "X" annunciation is accompanied by a message advisory alert issuing a flashing ADVISORY Softkey annunciation which, once selected, acknowledges the presence of the message advisory alert and displays the alert text message in the Alerts Window.*

#### 3.2 LOSS OF AIRSPEED INFORMATION

|                                                                                    |                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p style="text-align: center;"><b>AIRSPEED FAIL</b><br/>(RED X ON DISPLAY FIELD)</p> <hr/> <p style="text-align: center;">Display system is not receiving airspeed input from Air Data Computer.</p> |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**INSTRUCTION:** revert to standby instrument



### 3.7 DISPLAY FAILURE

In case of display failure refer to backup instrument (MD302) for primary flight information, and to GTN650 for navigation information.

### 3.8 LOW FUEL QUANTITY LEFT



#### If fuel quantity LH is under 24 litres

1. Fuel tank selector ..... Switch to RH fuel tank

### 3.9 LOW FUEL QUANTITY RIGHT



#### If fuel quantity RH is under 24 litres

1. Fuel tank selector ..... Switch to LH fuel tank

### 3.10 LOW FUEL QUANTITY LEFT AND RIGHT



#### If fuel quantity LH and RH is under 24 litres

1. **Land as soon as practical:** land at the nearest approved landing area where suitable repairs can be made.

### 6.3 PROPELLER OVERSPEED

In case of propeller overspeed in flight, apply following procedure:

- |                          |              |
|--------------------------|--------------|
| 1. Throttle Lever .....  | REDUCE power |
| 2. Propeller Lever ..... | Decrease RPM |
| 3. Mixture Lever .....   | As required  |
| 4. RPM indicator .....   | CHECK        |

If it is not possible to decrease propeller rpm, **land as soon as possible** applying *Forced landing* procedure. (See Para 11)



*Maximum propeller rpm exceedance may cause engine components damage.*

*Monitor engine RPM; overspeed shall be prevented by retarding propeller lever.*

### 6.4 IRREGULAR RPM

1. Fuel pump: .....ON
2. Fuel quantity and pressure indicators: .....CHECK
3. If necessary: ..... SWITCH TANK

#### If engine continues to run irregularly

- **Land as soon as possible.**



## 6.7 OIL PRESSURE LIMITS EXCEEDANCE

### LOW OIL PRESSURE

If oil pressure is under the lower limit (25 psi)



1. Throttle Lever ..... *REDUCE to minimum practical*
2. Mixture Lever ..... *as required*
3. OIL TEMP ..... *CHECK within limits*
4. OIL PRESS ..... *CHECK*

If oil pressure does not increase and temperature remains within limits

Monitor oil and cylinder head temperatures.

Land as soon as practicable.

If oil pressure does not increase and temperature exceeds limits

Reduce engine power to minimum required.

Land as soon as possible applying Forced landing procedure. (See Para 11)

Be prepared for engine failure and emergency landing.

If oil pressure tends to zero (combined with vibration, loss of oil, unusual metallic smoke and noise)

Apply Forced landing procedure. (See Para 11)

### HIGH OIL PRESSURE

If oil pressure exceeds upper limit (115 psi)

1. Throttle Lever ..... *first REDUCE engine power by 10%*
2. Mixture Lever ..... *as required*
3. OIL PRESS ..... *CHECK*

If oil pressure does not increase


4. Land as soon as possible applying Forced landing procedure (See Para 11)

#### NOTE

An excessive oil pressure value can be counteracted by decreasing propeller rpm.



## 6.8 LOW FUEL PRESSURE

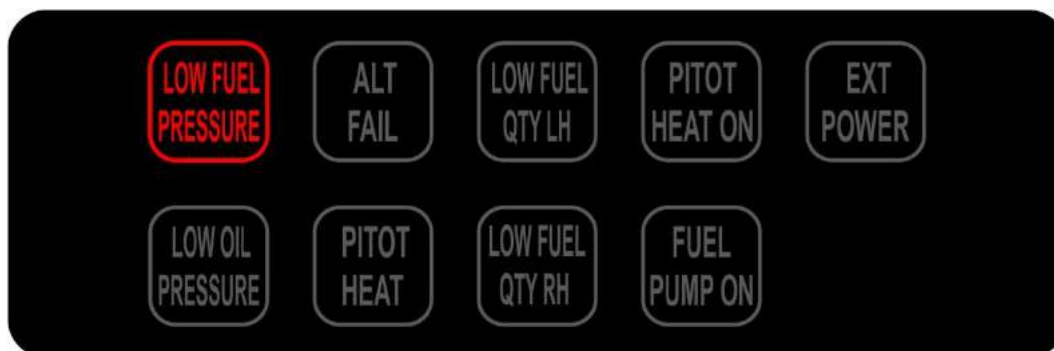

### If fuel pressure decreases below the lower limit (14 psi)

1. Electric fuel pump.....ON
2. Fuel selector valve.....Select opposite fuel tank if NOT empty
3. Fuel quantity .....CHECK

If fuel pressure doesn't build up:

1. **Land as soon as practical.** Prepare for potential engine failure and prepare to apply *Forced landing procedure*. (See Para 11)

## 6.9 HIGH FUEL PRESSURE

### If fuel pressure increases above the upper limit (35 psi)

1. **Land as soon as possible.** Prepare for potential engine shut down and apply *Forced landing procedure*. (See Para 11)

Possible injector failure or obstruction.



## 6.10 DEFECTIVE ENGINE CONTROLS

### Defective Mixture Control Cable

1. Maintain altitude to the nearest airfield
2. During descent, check engine behaviour to a higher power setting. A lean mixture can lead to engine roughness and loss of power. Landing approach must be planned accordingly.



WARNING

Go-around may then be impossible.

### Defective Throttle Control Cable

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with Propeller lever
2. Perform landing with shut-down engine applying *Forced landing procedure*. (See Para 11)

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*. (See Para 11)

### Defective Propeller Lever Control Cable

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with throttle
2. Perform normal landing.



WARNING

Go-around may then be impossible.

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*. (See Para 11)



## 7. INFLIGHT ENGINE RESTART

### 7.1 PROPELLER WINDMILLING



**WARNING**

*In case of engine shutdown, propeller will keep windmilling and will not stop, preventing the use of ignition key. Engine inflight restart must be performed without using ignition key with propeller windmilling in order to avoid possible engine damages.*

*Typical indication of a potential engine shutdown, with windmilling propeller, will be RPM running sub-idle below 600-500 RPM, to be confirmed by other engine instrument (OIL Pressure, CHT, EGT running down abnormally).*

*Inflight engine restart may be performed during 1g flight anywhere within the normal operating envelope of the airplane.*

- |                                  |                         |
|----------------------------------|-------------------------|
| 1. Master switch .....           | Check ON                |
| 2. Fuel pump .....               | ON                      |
| 3. Fuel quantity indicator ..... | CHECK                   |
| 4. Fuel Selector .....           | SWITCH TANK             |
| 5. Throttle Lever .....          | Minimum 1cm. above IDLE |
| 6. Propeller Lever.....          | Full forward            |
| 7. Mixture .....                 | FULL rich               |
| 8. Throttle lever .....          | SET as required         |

#### In case of unsuccessful engine restart:

- Land as soon as possible applying *Forced landing procedure*. (See Para 11)

#### In case of successful engine restart:

- Land as soon as possible



**CAUTION**

*After engine restart, if practical, moderate propeller rpm to allow the temperatures for stabilizing in the green arcs.*



## 10. OTHER EMERGENCIES

### 10.1 Loss of Essential Bus

In case of loss of essential bus, the following will be lost (related breakers are listed):

|               |               |
|---------------|---------------|
| PFD/MFD       | FLAP ACTUATOR |
| COM1          | PITOT HEAT    |
| GPS/NAV1      | STROBE LIGHT  |
| EIS           | LANDING LIGHT |
| FUEL PUMP     | AHRS          |
| FIELD         | ADC           |
| STALL WARNING | ANN. PANEL    |
| XPDR          |               |

Electrical power from Alternator is lost, battery will automatically provide energy (duration at least 30 min.).

Pilot will need to make reference to standby instrument for primary flight information and parameters.

Pilot will be able to use the audio panel and COM2/NAV2.

Engine parameters and related warnings/cautions are lost.

Flaps extension and retraction will be lost, apply Flaps control failure procedure (See Para 10.6).

Strobe and landing lights will be lost, NAV and taxi lights are still available; taxi light will be the only visual aid for landing in night conditions.

### 10.2 Loss of Main Bus

In case of loss of main bus, the main bus voltage will drop to zero.

The following will be lost (related breakers are listed):

|                                                      |                      |                                       |
|------------------------------------------------------|----------------------|---------------------------------------|
| AUDIO PANEL                                          | NAV LIGHT            | INSTRUMENT (clock, pitch trim indic.) |
| A.D.I. (available running on internal battery power) | TAXI LIGHT           | COM2                                  |
| INSTR. LIGHT                                         | 28/12 VDC CONVERTER  | NAV2                                  |
| CABIN LIGHT                                          | RUDDER TRIM ACTUATOR | ADF                                   |
| START                                                | 12VDC SOCKET         | DME                                   |

Fail safe operation of audio panel allows pilot to transmit and use COM1 using headphones only; speakers will not be available.

For night flights, all instrument lights will be lost, but emergency light will still be available.

**Supplement D08: pages replacement instructions**

## **SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures**

According A/C configuration apply following pages replacement:

| <b>Supplement D08<br/>NORMAL PROCEDURES<br/>page</b> |                 | <b>AFM<br/>Section 4<br/>page</b>          |
|------------------------------------------------------|-----------------|--------------------------------------------|
| GV 4-4 thru 5                                        | <b>REPLACE</b>  | Pages 4-4 thru 5 of basic AFM, Section 4   |
| GV 4-7                                               | <b>REPLACES</b> | Page 4-7 of basic AFM, Section 4           |
| GV 4-9                                               | <b>REPLACES</b> | Page 4-9 of basic AFM, Section 4           |
| GV 4-15 thru 26                                      | <b>REPLACE</b>  | Pages 4-15 thru 26 of basic AFM, Section 4 |



INTENTIONALLY LEFT BLANK

## 2. IFR FLIGHT: G500 GROUND TRAINING PRE-REQUISITES

The aircraft is equipped with a Garmin G500 avionic suite that integrates radio aids navigation with GPS navigation, providing an outstanding capability to support IFR flight, from basic instrument flight training to complex IFR scenario.

### NOTE

*Depending on national regulations, in some countries flying IFR with a single engine aircraft without autopilot installation and/or single pilot may or may not be allowed, any customer must pay careful attention to check limitations that may apply.*

The use of G500 software requires full system knowledge (Garmin applicable manual with specific peculiar limitations), careful preparation, ground and pre-flight training before flight.

Furthermore, as a minimum during training, it's strongly recommended using the avionic suite in IFR with incremental steps after initial basic IFR instruction:

1. Initial use of a single radio-aids (No GPS);
2. Use of two radio-aids (No GPS);
3. Use of GPS for point to point navigation (No approaches);
4. Use of VNAV feature;
5. Full use of avionic suite.

The flight training syllabus for IFR instruction will need to address this incremental approach in order to give pilots awareness of full avionic potential, and to highlight the complexity of single pilot usage of G500 Garmin suite enroute or inside high density airspace structure.



### CAUTION

*During IFR flight, the workload that may develop using full avionic suite could get high in single pilot; pilot planning is important and essential in order to correctly address all avionic functions and aids.*

Considering the complexity of the G500 suite, sound judgment will be required (weather, airspace complexity, pilot skills) to assess the best option for IFR steer guidance.

**NOTE**

*The necessity to correct or modify flight plans in the Garmin G500 under these conditions may distract pilots from basic handling causing deviations from assigned parameters, so careful attention must be exercised to avoid deviations on flying parameters.*

*It's highly recommended to continue cross-checking flight parameters when entering flight data into the G500, especially when trying to create / insert arrival and departure procedures and / or VNAV profiles as the quantity of actions needed is high and may distract pilots from basic and precise handling.*

The following prescriptions, other than those already present in the G500 manual, shall be observed:

- Use of GPS for precision approach navigation mode is not allowed;
- Use of GPS is prohibited as primary means for navigation. GPS is approved as supplemental means for navigation;
- Use of GPS is prohibited for IFR in terminal area or in non-precision approach operations.

If Receiver Autonomous Integrity Monitoring (RAIM) function becomes unavailable in enroute phase of flight, position must be verified every 15 minutes using other IFR approved navigation system.

**Turbulence and / or Crosswind:**

Presence of moderate to heavy turbulence and / or strong crosswind conditions (above 20 kts crosswind) will require high drift angle to correct for wind (above 15° drift) and highly reduce spare capabilities to do other concurrent tasks inside the cockpit other than precise flying.



### **3. AIRSPEEDS FOR NORMAL OPERATIONS**

The following airspeeds are those which are significant for normal operations.

|                                     | <b>FLAPS</b> | <b>1160kg<br/>(2557lbs)</b> |
|-------------------------------------|--------------|-----------------------------|
| Rotation Speed ( $V_R$ )            | T/O          | <b>60 KIAS</b>              |
| Best Angle-of-Climb Speed ( $V_X$ ) | T/O          | <b>65 KIAS</b>              |
| Best Angle-of-Climb Speed ( $V_X$ ) | 0°           | <b>75 KIAS</b>              |
| Best Rate-of-Climb speed ( $V_Y$ )  | 0°           | <b>82 KIAS</b>              |
| Flaps ( $V_{FE}$ )                  | T/O & LAND   | <b>91 KIAS</b>              |
| No flaps approach                   | 0°           | <b>80 KIAS</b>              |
| Approach speed                      | T/O          | <b>75 KIAS</b>              |
| Final Approach Speed                | FULL         | <b>70 KIAS</b>              |
| Manoeuvring speed ( $V_A$ )         | 0°           | <b>120 KIAS</b>             |
| V glide                             | 0°           | <b>84 KIAS</b>              |
| Never Exceed Speed ( $V_{NE}$ )     | 0°           | <b>166 KIAS</b>             |

## **4. PRE-FLIGHT INSPECTION**

Before each flight, it is necessary to carry out a complete aircraft check including a cabin inspection followed by an external inspection, as below detailed.

### **4.1 CABIN INSPECTION**

1. Aircraft documents (ARC, Certificate of Airworthiness, Noise certificate, Radio COM certificate, AFM): *check current and on board*
2. Weight and balance: *calculate (ref. to Section 6) and check within limits*
3. Breaker: *all IN*
4. Safety belts: *connected to hard points, check condition*
5. Ignition key: *OFF, key extracted*
6. Master switch: *ON*
7. Voltmeter: *check within the limits*
8. Lights: *all ON, check for operation*
9. Annunciator panel: *check all lights*
10. Acoustic stall warning: *check for operation*
11. Master switch: *OFF*
12. Baggage: *check first aid kit, ELT, fire extinguisher, luggage secured with restraint net.*



## 5. CHECKLISTS

### 5.1 BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*
2. Flight controls: operate full stroke checking for movement smoothness, free of play and friction.
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Throttle: *IDLE*
6. Propeller Lever: *HIGH RPM*
7. Mixture control Lever: *LEAN*
8. Circuit Breakers: *check all IN*
9. Master switch: *ON*, wait EDM930 turn on, Check ALT OUT caution ON, Check LOW FP and LOW OP warning ON
10. Only before the first flight of the day:  
Standby Instrument: Check no red crosses displayed.
  - a. Press and hold the control knob (approx. 2 sec)
  - b. Rotate the knob selecting "INFO>" page then press it
  - c. Select "BATTERY INFO" page then press the knob
  - d. Check "CHARGE (%)" to be more than 80%, then exit menu
11. Avionic Master switch: *ON*
12. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection), then update the EDM930 fuel content in the totalizer accordingly)*

#### NOTE

The totalizer function available on EDM930 Engine page allows input only up to 230lbs (maximum usable fuel). Initial Fuel indication on totalizer must be corrected manually (as it does not use the aircraft fuel quantity indicators as input). Once correctly initialized, fuel consumption on totalizer is very precise as it take instantaneous fuel flow for computation.

13. Electric fuel pump: *ON (check for audible pump noise and increase of fuel pressure)*
14. Warning "LOW FUEL PRESSURE": *extinguished*
15. Electric fuel pump: *OFF*
16. Flap control: *cycle fully extended and then set to T/O*
17. Pitch Trim: *cycle fully up and down, then set to NEUTRAL*
18. Rudder trim: *cycle full right and left, then set to NEUTRAL*



Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct  $V_R$ .

#### WARNING

19. Nav & Strobe lights: *ON*

#### NOTE

In absence of RH seat occupant: fasten seat belts around the seat in order to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency.

20. Doors: *Closed and locked*



## 5.2 ENGINE STARTING

### (a) Cold engine

1. Engine throttle: *1cm above idle*
2. Fuel selector valve: *select the tank with less fuel*
3. Electric fuel pump: *ON*
4. Mixture: *full open for 3 – 5" (positive fuel flow indication) then CUT-OFF*
5. Propeller area: *check that area is clear of persons / objects*



*Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.*



CAUTION

*Do not overheat the starter motor. Do not operate it for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.*

6. Ignition key: *BOTH*
7. Ignition key: *START*

*When engine start turning and first indication of a starting condition exist:*

8. Mixture: *rapidly move to FULL RICH*
9. Throttle: *set 1000 – 1200 RPM*
10. Check oil pressure rises within 10 sec.
11. Check "OIL PRESSURE LOW": *extinguished*
12. Electric fuel pump: *OFF*
13. Check fuel pressure: *within limits*
14. Generator switch: *ON*
15. Voltmeter: *increase and check within green arc*
16. ALT FAIL caution: *extinguished*

### NOTE

*Avoid idling operations on the ground for optimum engine operation, maintain 1000-1200 RPM, do not exceed 2200 RPM on the ground.*

17. Engine instruments: *Check within limits*
18. Check for annunciator panel with no cautions

**(b) Warm engine**

1. Engine throttle: idle
2. Fuel selector valve: *select the tank with less fuel*
3. Electric fuel pump: *ON*
4. Propeller area: *check for area clear of persons / objects*

**WARNING**

*Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.*

**CAUTION**

*Do not overheat the starter motor. Do not operate it for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.*

5. Ignition key: *BOTH*
6. Ignition key: *START*

*When engine start turning and first indication of a starting condition exist:*

7. Mixture: *rapidly move to FULL RICH*
8. Throttle: *set 1000 – 1200 RPM*
9. Check oil pressure rises within 10 sec.
10. Check “OIL PRESSURE LOW”: *extinguished*
11. Electric fuel pump: *OFF*
12. Check fuel pressure *within limits*
13. Generator switch: *ON*
14. Voltmeter: *increase and check within green arc*
15. ALT FAIL caution: *extinguished*

**NOTE**

*Avoid idling operations on the ground for optimum engine operation, maintain 1000-1200 RPM, do not exceed 2200 RPM on the ground.*

16. Engine instruments: *check within green arc*
17. Check for annunciator panel with no cautions





### 5.3 BEFORE TAXIING

1. Flight instruments and avionics: *set, TEST functions*
2. Altimeter: *set*
3. Pitot Heat: *ON, test for ammeter indication, then OFF*
4. Taxi light: *ON*
5. Parking brake: *OFF*



**CAUTION**

*When taxiing at close range to other aircraft, or during night flight in clouds, fog or haze, the strobe lights should be switched OFF. The NAV lights must always be switched ON during night procedures.*

### 5.4 TAXIING

1. Parking brake: *Release*
2. Brakes: *check*
3. Flight instruments: *check altimeter.*

#### **NOTE**

*Avoid prolonged idling during taxi.*



**CAUTION**

*Alternator lights may appear when reducing engine RPM below 950 RPM (yellow arc). The light will stay ON until RPM is increased above.*

*During taxi, it is recommended to maintain propeller speed at 1000RPM or above in order to preserve a full loaded battery, minimise annunciator nuisance and assure maximum battery performance during flight. Furthermore this is particularly true during cold weather to prevent lead fouling of spark plugs.*

*Following extended operation on the ground, or at high ambient temperatures, the following indications of fuel vapor lock may appear:*

- Arbitrary changes in idle RPM and fuel flow;
- Slow reaction of the engine to operation of throttle;
- Engine will not run with throttle in IDLE position.



**CAUTION**

#### **Solution:**

1. *For about 1 to 2 minutes, or until the engine settles, run at a speed of 1800 to 2000 RPM. Oil and cylinder head temperatures must stay within limits.*
2. *Pull throttle back to IDLE to confirm smooth running.*
3. *Set throttle to 1200 RPM and mixture for taxiing, i.e., use mixture control lever to set the maximum RPM attainable.*
4. *Immediately before the take-off run set the mixture for take-off, apply full throttle and hold this position for 10 seconds.*

#### **NOTE**

*Vapor lock can be avoided if the engine is run at speeds of 1800 RPM or more.*



## 5.5 BEFORE TAKEOFF

1. Parking brake: *brake pedal press, ON*
2. Engine instruments: *Check within limits*
3. ALT OUT caution: *OFF (check)*
4. Electric Fuel pump: *ON*
5. Fuel selector valve: *select the fullest tank*
6. Fuel pressure: *check*
7. Mixture: *FULL RICH*

### NOTE

For 5000ft density altitude and above, or high ambient temperatures, a *FULL RICH* mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operations.

8. Throttle: *set 1500 RPM*
  - a. Alternate Air check:
    - Alternate Air: *PULL (Check drop 50-100 RPM)*
  - b. Mixture check:
    - Mixture: *reduce*
    - EGT: *check increase*
    - FF: *check decrease*
    - Mixture: *FULL RICH*
9. Throttle: *2100 RPM*
10. Propeller Lever:
  - *Pull back until a drop of max. 500 RPM is reached then high RPM*
  - *Cycle 3 times*
11. Magneto Check: *L – BOTH – R – BOTH*
  - *Max RPM drop: 175 RPM*
  - *Max. difference: 50 RPM*
12. Throttle: *Idle*
13. Flaps: *check T/O*
14. Pitch and Rudder trim: *check neutral*
15. Flight controls: *check free*
16. Seat belts: *check fastened*
17. Doors: *check closed and locked*
18. Parking brake: *Release*
19. Landing light: *ON as required*
20. XPDR: *ON*



---

## 5.6 TAKEOFF

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft density altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until an increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Pitot HEAT: *ON if required*
2. Fuel pump: *ON*
3. Brakes: *apply*
4. Throttle: *FULL and check approximately 2680 ± 20 RPM*

**WARNING**

*Engine proper performance at full throttle shall be checked early in the ground roll in order to abandon take-off if necessary.*

*A rough engine, sluggish RPM increase or failure to reach take-off RPM are reasons for abandoning the take-off. If the engine oil is cold, an oil pressure in the yellow sector is permissible.*

5. Engine instruments: *check parameters within the limits*
6. Brakes: *Release*
7. Rotation speed  $V_R$ : *60 KIAS*
8. Airspeed: *67 KIAS*

*Above a safe height:*

9. Propeller lever: *2600 RPM*
10. Landing lights: *OFF*



---

**5.7 CLIMB****NOTE**

*Due to position of fuel sensors, during climb fuel gauges in cockpit will indicate a fuel quantity slightly lower than the real amount. Regaining level flight will immediately restore correct indications.*

*For 5000ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance.*

*The mixture may be adjusted to obtain smooth engine operations.*

**NOTE**

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000ft density altitude or higher.*

*During climb, a rough method of correctly leaning is to slowly reduce mixture lever until an increase of appr.ly 50-100 RPM is noticed at constant IAS or EGT reaches 1375°F mark.*

1. Flaps: *UP (minimum speed 73 KIAS)*

**NOTE**

*Expect to adjust pitch trim (pitch up) when retracting flaps after take-off*

2. Establish climb Vy: *82 KIAS*
3. Electrical fuel pump: *OFF*
4. Fuel pressure: *check within limits*
5. Throttle: *FULL*
6. MIXTURE: *RICH, above 5000ft keep EGT constant*
7. Engine instruments: *in the GREEN*

**NOTE**

*If the fuel pressure warning light illuminates, or the fuel pressure indication is below green arc, the electrical fuel pump must be switched ON.*



## 5.8 CRUISE

1. Power: set performance as required, refer to table in section 5 of AFM
2. Propeller lever: 1800-2400 RPM
3. Fuel tank selector: as required to maintain symmetric balance
4. Mixture: set in accordance with following para 5.9

### NOTE

To optimize engine life, the cylinder head temperature (CHT) should lie between 150°F and 400°F in continuous operation, and not rise above 435°F in fast cruise.

### NOTE

Monitor and manually compensate asymmetrical fuel consumption by switching fuel selector valve. Switch ON the electric fuel pump prior to swap the fuel feeding from one tank to another.

## 5.9 MIXTURE ADJUSTMENT RECOMMENDATION



### CAUTION

The maximum permissible cylinder head temperature (500 °F) must never be exceeded.

The mixture control lever should always be moved slowly.

Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH before throttle adjustment.

Care should always be taken that the cylinders do not cool down too quickly.

The cooling rate should not exceed 50 °F per minute.

### NOTE

For maximum service life cylinder head temperature should be kept below 475 °F (high performance cruise) and below 435 °F (for economy cruise).

### Best Cruise Economy Mixture

The best economy mixture setting may only be used up to a power setting of 75 %. In order to obtain the lowest specific fuel consumption at a particular power setting, proceed as follows:

- Slowly pull the mixture control lever back towards LEAN until the engine starts to run roughly.
- Then push the mixture control lever forward just far enough to restore smooth running. At the same time the exhaust gas temperature (EGT) should reach a maximum.

### Best Cruise Power Mixture

The mixture can be set for maximum performance at all power settings:

- The mixture should first be set as for best economy.
- The mixture should then be enriched until the exhaust gas temperature is approximately 100°F lower.

This mixture setting produces the maximum performance for a given manifold pressure and is mainly used for high power settings (approximately 75 %).



---

## 5.10 DESCENT

**NOTE**

*Due to position of fuel sensors, during descent fuel gauges in cockpit will indicate a fuel quantity slightly higher than the real amount. Regaining level flight will immediately restore correct indications.*

1. Mixture control: *slowly full rich*
2. Propeller lever: *as required*
3. Throttle: *reduce as required*

*Shock cooling shortens engine life.*

*When reducing power, the change in cylinder head temperature should not exceed 50°F per minute. In order to ensure best practice and avoid potential illumination of ALT FAIL (due to low propeller speed), the following best practice should be observed:*

**NOTE**

- *Reducing power to maintain a minimum descent speed of 84 KIAS (best glide) and / or a blade angle to maintain 850 RPM;*
- *Opening the ALTER AIR command to full open (to avoid ice accretion).*

*The maximum permissible cylinder head temperature (500 °F) must never be exceeded.*

*The mixture control lever should always be moved slowly.*

*Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH.*

**CAUTION**

*Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.*

**5.11 BEFORE LANDING**

1. Electric fuel pump: *ON*
2. Fuel valve: *select the fullest tank*
3. Landing Light: *ON*

*On downwind, leg abeam touch down point:*

4. Flaps: *set T/O (below 90KIAS)*

**NOTE**

*Expect to adjust pitch trim (pitch down) when extending flaps to T/O or LAND*

5. Approach speed: *set*

*On final leg, before landing:*

6. Mixture control lever: *RICH*
7. Propeller Lever: *HIGH RPM*
8. Flaps: *LAND*
9. Final Approach Speed: *set*
10. Optimal touchdown speed: *60 KIAS*



*In conditions such as (e.g.) strong wind, danger of windshear or turbulence a higher approach speed shall be selected.*

**CAUTION****5.12 BALKED LANDING/MISSED APPROACH**

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

*Above a safe height:*

4. Propeller lever: *2600 RPM*
5. Landing lights: *OFF*

**5.13 GO-AROUND**

1. Throttle: *FULL*
2. Speed: *keep over 80 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

**5.14 AFTER LANDING**

1. Throttle: *Idle*
2. Brakes: *apply*
3. Pitot heat: *OFF (if ON)*
4. Flaps: *UP*
5. Electric Fuel Pump: *OFF*
6. XPDR: *OFF*
7. Landing light: *OFF*
8. Taxi Light: *ON*



## **5.15 ENGINE SHUT DOWN**

1. Parking brake: *set*
2. Keep engine running at 1200 propeller rpm for about one minute in order to reduce latent heat.
3. Avionic equipment: *OFF*
4. Throttle: *idle*
5. Magnetos: *Check OFF – BOTH*
6. Mixture: *closed*
7. Ignition key: *OFF, key extracted*
8. Strobe light: *OFF*
9. Avionic Master: *OFF*
10. Master & Generator switches: *OFF*
11. Fuel selector valve: *OFF*



**WARNING**

*For safety, verify propeller is fully stopped before any other action.*



**CAUTION**

*Instruct passenger to fully open RH door and depart, avoiding contact with wheels and sharp wing control surfaces edges.*

## **5.16 POSTFLIGHT CHECKS**

1. Flight controls: *lock by means of seat belts*
2. Wheel chocks and wing mooring lines: *Set*
3. Parking brake: *Release*
4. Doors: *Close and lock*
5. Protection plugs: *set over pitot tube, stall warning, static ports*





**TECNAM**  
COSTRUZIONI AERONAUTICHE

## **P2010 - Aircraft Flight Manual**

---

### **5.17 FLIGHT IN RAIN**

Performance deteriorates in rain; this applies particularly to take-off distance and maximum Horizontal speed. The effect on flight characteristics is minimal.

### **5.18 REFUELLING**

Before refuelling, the airplane must be connected to electrical ground.

### **5.19 FLIGHT AT HIGH ALTITUDE**

At high altitudes the provision of oxygen for the occupant is necessary. Legal requirements for the provision of oxygen should be adhered to (see para 2.9).

Supplement D08: pages replacement instructions

## **SECTION 5 – PERFORMANCES**

Supplement D08 - Performances pages replace basic AFM Section 5 as whole

INTENTIONALLY LEFT BLANK

---

## **SECTION 5 – PERFORMANCE**

### **INDEX**

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>1.Introduction .....</b>                          | <b>2</b>  |
| <b>2.Use of Performance Charts .....</b>             | <b>2</b>  |
| <b>3.Airspeed Indicator System Calibration .....</b> | <b>3</b>  |
| <b>4.ICAO Standard Atmosphere .....</b>              | <b>5</b>  |
| <b>5.Stall speed .....</b>                           | <b>6</b>  |
| <b>6.Crosswind .....</b>                             | <b>7</b>  |
| <b>7.Take-Off performances.....</b>                  | <b>8</b>  |
| <b>8.Take-off Rate of Climb.....</b>                 | <b>11</b> |
| <b>9.En-Route Rate of Climb .....</b>                | <b>12</b> |
| <b>10.Cruise Performance .....</b>                   | <b>13</b> |
| <b>11.Landing performances.....</b>                  | <b>17</b> |
| <b>12.Balked Landing Performance .....</b>           | <b>18</b> |
| <b>13.Noise Data .....</b>                           | <b>19</b> |

---

## **1. INTRODUCTION**

This section provides all necessary data for an accurate and comprehensive planning of flight activity from takeoff to landing.

Data reported in graphs and/or in tables were determined using:

- ✓ “Flight Test Data” under conditions prescribed by EASA CS-23 regulation
- ✓ aircraft and engine in good condition
- ✓ average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performances were carried out by theoretical means for:

- ✓ Airspeed
- ✓ External temperature
- ✓ Altitude
- ✓ Weight
- ✓ Runway type and condition

## **2. USE OF PERFORMANCE CHARTS**

Performances data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.

### 3. AIRSPEED INDICATOR SYSTEM CALIBRATION

#### Normal Static Source

Graph shows calibrated airspeed  $V_{IAS}$  as a function of indicated airspeed  $V_{CAS}$ .

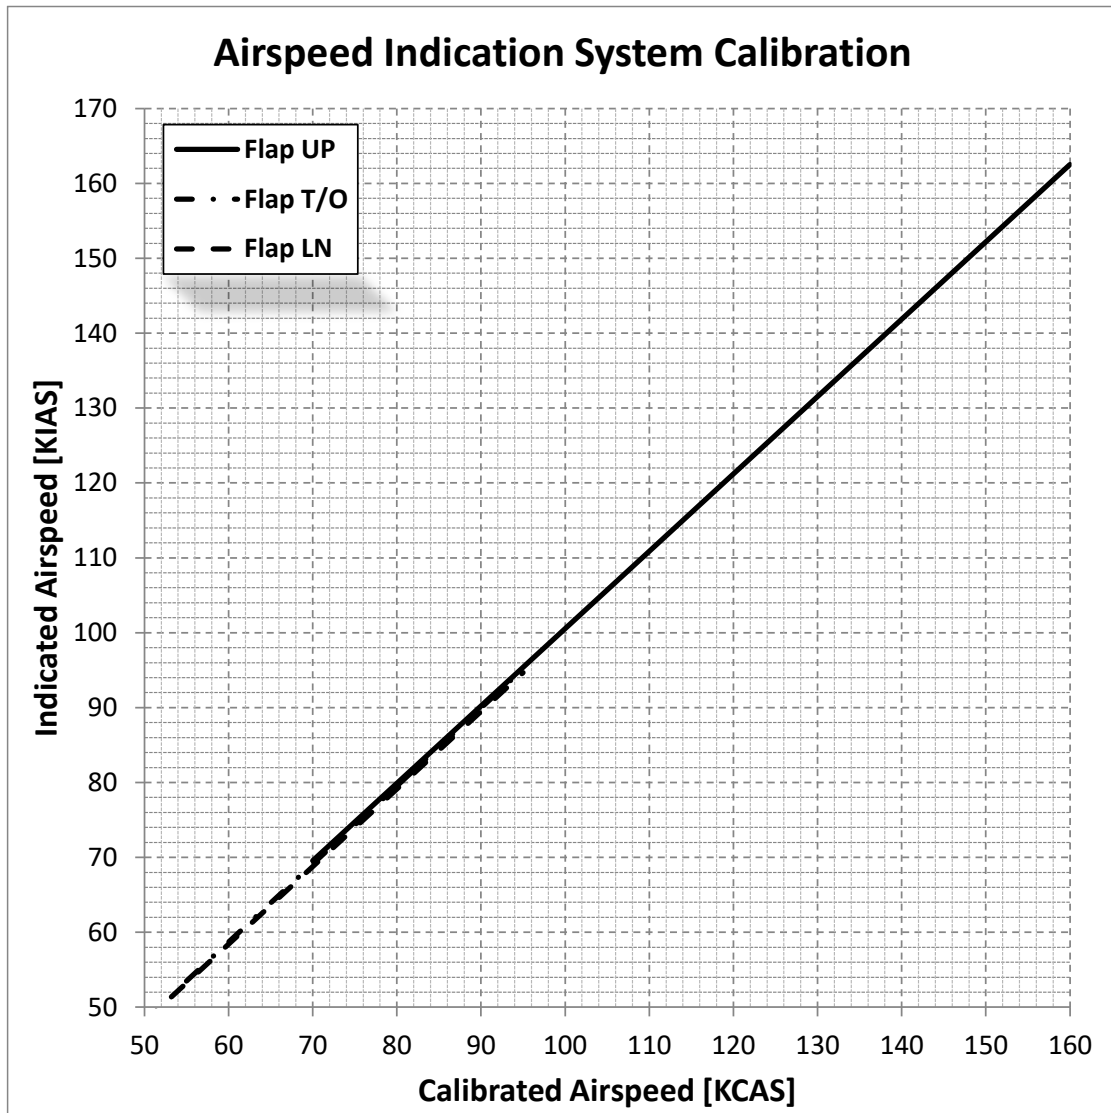


Fig. 5-1. Calibrated vs Indicated Airspeed

Example:

Given

Find

KIAS 75.0

KCAS 74.7

Flap: UP

**NOTE**

Indicated airspeed assumes 0 as an instrument error

**Alternate Static Source**

| Pressure Altitude<br>[ft] | IAS<br>[kn] | Alternate Static Air Open |                        | Vents Open  |                        | Vents and Hot Air Open |                        |
|---------------------------|-------------|---------------------------|------------------------|-------------|------------------------|------------------------|------------------------|
|                           |             | IAS<br>[kn]               | H <sub>P</sub><br>[ft] | IAS<br>[kn] | H <sub>P</sub><br>[ft] | IAS<br>[kn]            | H <sub>P</sub><br>[ft] |
| 1000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 75                        | 1020                   | 72          | 1010                   | 72                     | 1020                   |
|                           | 90          | 95                        | 1020                   | 92          | 1030                   | 93                     | 1020                   |
|                           | 110         | 115                       | 1030                   | 113         | 1020                   | 112                    | 1020                   |
|                           | 135         | 140                       | 1040                   | 139         | 1030                   | 137                    | 1030                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 1020                   | 63          | 1020                   | 62                     | 1010                   |
|                           | 70          | 75                        | 1020                   | 73          | 1020                   | 72                     | 1020                   |
|                           | 90          | 94                        | 1020                   | 92          | 1020                   | 92                     | 1020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 1020                   | 61          | 1020                   | 61                     | 1020                   |
|                           | 70          | 72                        | 1020                   | 72          | 1020                   | 71                     | 1020                   |
|                           | 90          | 92                        | 1020                   | 91          | 1020                   | 91                     | 1020                   |
| 5000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 5020                   | 72          | 5020                   | 71                     | 5020                   |
|                           | 90          | 94                        | 5030                   | 93          | 5020                   | 92                     | 5020                   |
|                           | 110         | 114                       | 5030                   | 113         | 5020                   | 112                    | 5020                   |
|                           | 133         | 137                       | 5040                   | 136         | 5030                   | 135                    | 5020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 5010                   | 62          | 5020                   | 61                     | 5010                   |
|                           | 70          | 74                        | 5020                   | 73          | 5020                   | 72                     | 5020                   |
|                           | 90          | 93                        | 5030                   | 93          | 5020                   | 93                     | 5020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 5030                   | 62          | 5020                   | 61                     | 5000                   |
|                           | 70          | 72                        | 5020                   | 72          | 5010                   | 71                     | 5010                   |
|                           | 90          | 92                        | 5020                   | 92          | 5020                   | 91                     | 5010                   |
| 8000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 8020                   | 72          | 8020                   | 71                     | 8020                   |
|                           | 90          | 93                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           | 110         | 113                       | 8030                   | 112         | 8020                   | 112                    | 8020                   |
|                           | 128         | 131                       | 8040                   | 130         | 8030                   | 130                    | 8020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 8010                   | 62          | 8020                   | 61                     | 8010                   |
|                           | 70          | 73                        | 8020                   | 72          | 8020                   | 72                     | 8020                   |
|                           | 90          | 92                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 61                        | 8020                   | 61          | 8020                   | 61                     | 8000                   |
|                           | 70          | 72                        | 8010                   | 71          | 8010                   | 71                     | 8010                   |
|                           | 90          | 92                        | 8010                   | 91          | 8010                   | 91                     | 8010                   |

## 4. ICAO STANDARD ATMOSPHERE

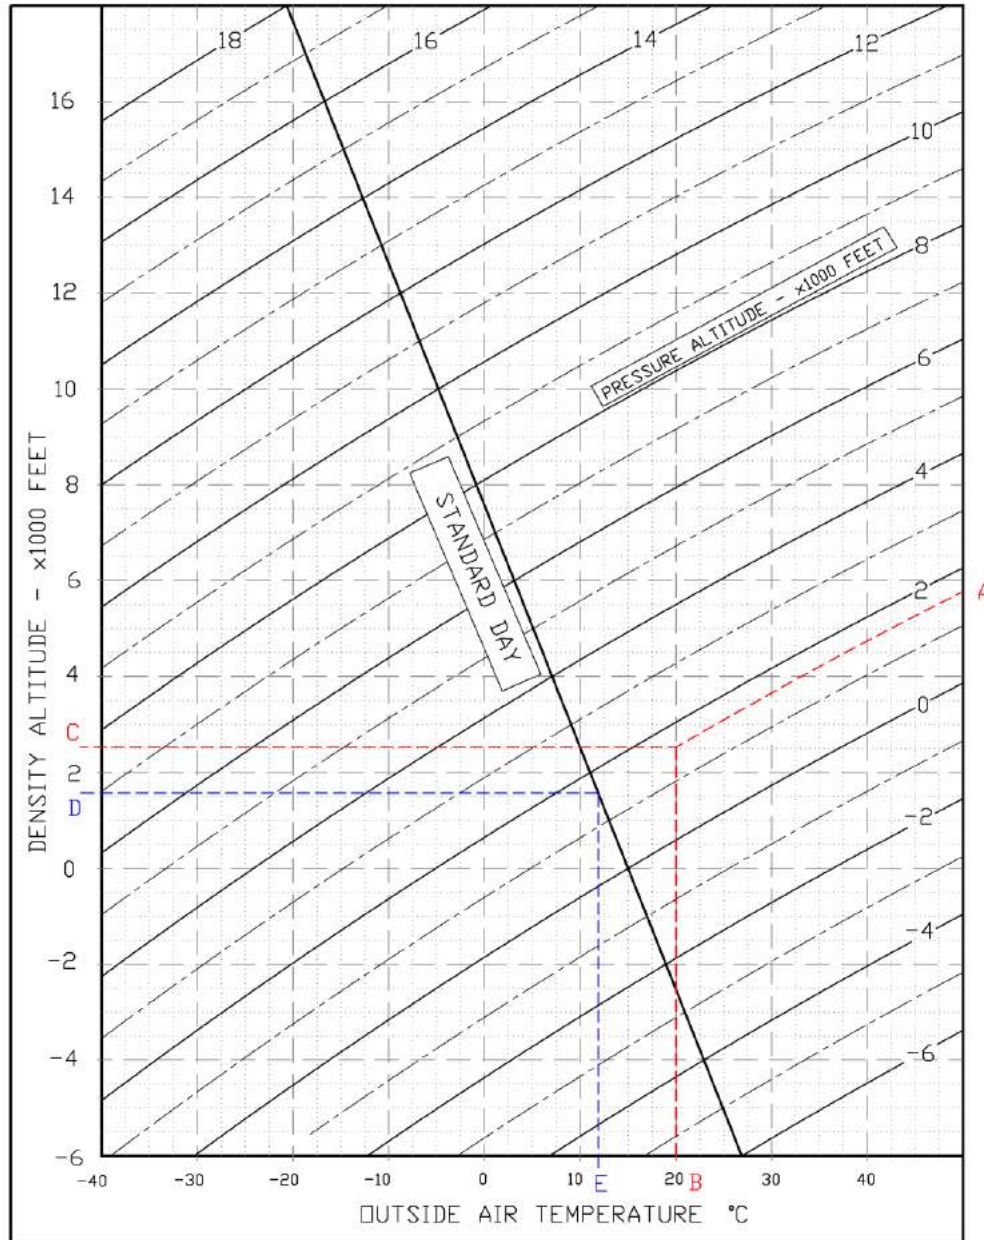


FIG. 5-2. ICAO CHART

Examples:

| <u>Scope</u>             | <u>Given</u>                                           | <u>Find</u>                     |
|--------------------------|--------------------------------------------------------|---------------------------------|
| <u>Density Altitude:</u> | A: Pressure altitude = 1600ft<br>B: Temperature = 20°C | → C: Density Altitude = 2550ft  |
| <u>ISA Temperature:</u>  | D: Pressure altitude = 1600ft                          | → E: ISA Air Temperature = 12°C |



## 5. STALL SPEED

**Weight:** 1160 kg (2557 lb)

**Throttle Lever:** IDLE

**CG:** Most Forward (19%)

**No ground effect**

| WEIGHT                               | BANK<br>ANGLE | STALL SPEED |      |           |      |            |      |
|--------------------------------------|---------------|-------------|------|-----------|------|------------|------|
|                                      |               | FLAPS 0°    |      | FLAPS T/O |      | FLAPS FULL |      |
|                                      |               | KIAS        | KCAS | KIAS      | KCAS | KIAS       | KCAS |
| [kg]<br>([lb])                       | [deg]         |             |      |           |      |            |      |
| <b>1160<br/>(2557)</b><br>(FWD C.G.) | <b>0</b>      | 59          | 60   | 53        | 55   | 50         | 52   |
|                                      | <b>15</b>     | 60          | 61   | 54        | 56   | 51         | 53   |
|                                      | <b>30</b>     | 64          | 65   | 58        | 59   | 54         | 56   |
|                                      | <b>45</b>     | 71          | 71   | 64        | 65   | 61         | 62   |
|                                      | <b>60</b>     | 85          | 85   | 77        | 78   | 73         | 74   |

### NOTE

*Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 350 ft with banking below 15°.*

**AFMS N° D08 FOR ALTERNATIVE AVIONICS CONFIGURATION AND  
VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES**



**P2010 - Aircraft Flight Manual**

Page GV 5-7

## 6. CROSSWIND

Maximum demonstrated crosswind is 12 kts

⇒ Example:

**Given**

Wind direction (with respect to aircraft longitudinal axis) =  $30^\circ$

Wind speed = 20 kts

**Find**

Headwind = 17.5 kts

Crosswind = 10 kts

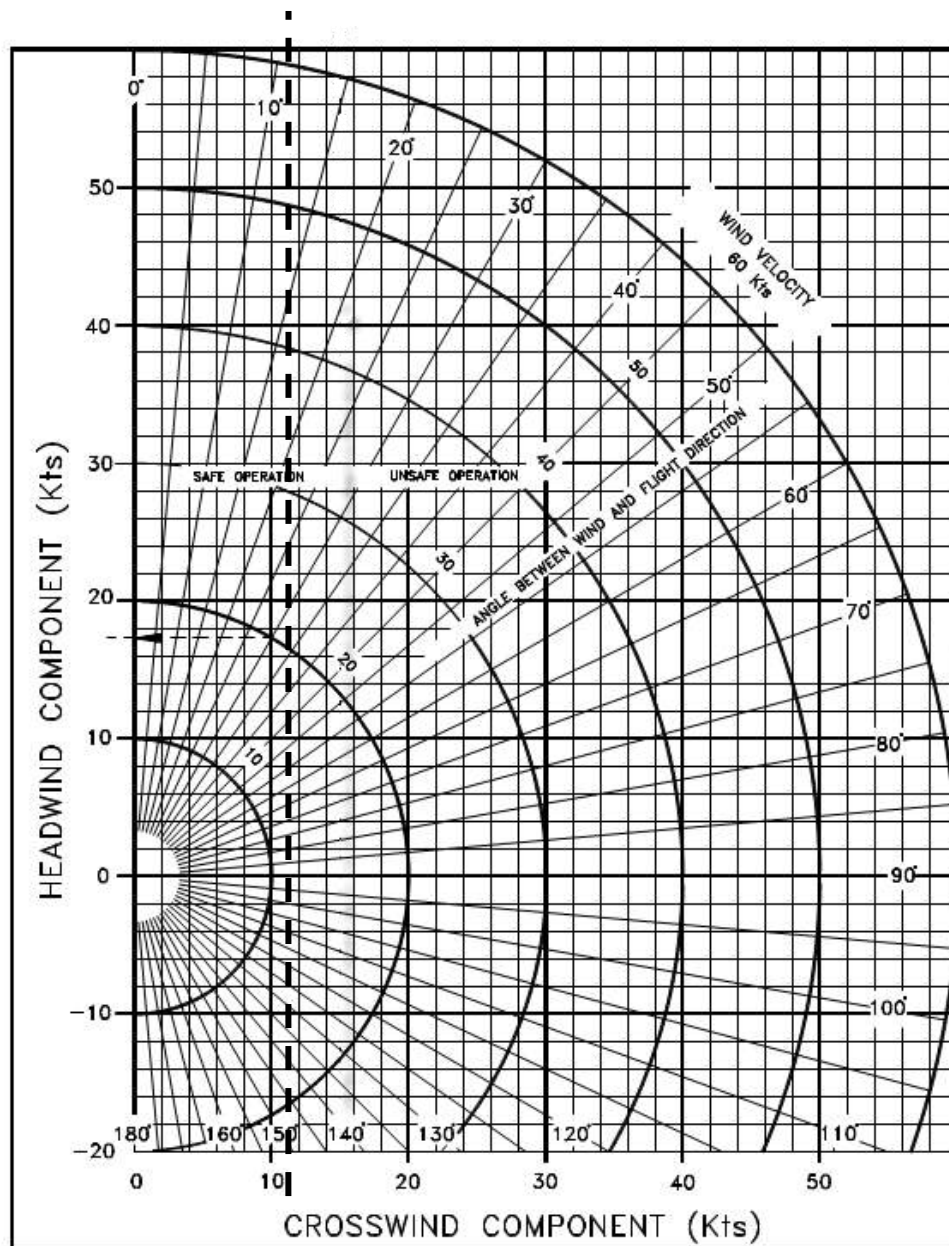


FIG. 5-3. CROSSWIND CHART

Ed. 2, Rev. 0

## Section 5 – Performances

### Crosswind



## 7. TAKE-OFF PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factored to distances of 1.10

| <b>Weight = 1160 kg (2557 lb)</b><br><b>Flaps: T/O</b><br><b>Speed at Lift-Off = 60 KIAS</b><br><b>Speed Over 50ft Obstacle = 65 KIAS</b><br><b>Throttle and Propeller Lever: Full Forward</b><br><b>Runway: Paved</b> |              |                                 |               |                |                |                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------------|----------------|----------------|-----------------------|
| <b>Corrections</b><br><b>Headwind: -10 m for each kn</b><br><b>Tailwind: +20 m for each kn</b><br><b>Grass Runway: +10% to Ground Roll</b><br><b>Runway slope: +10% to Ground Roll for each +1%</b>                    |              |                                 |               |                |                |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                                       |              | Distance [m]<br>(Distance [ft]) |               |                |                |                       |
|                                                                                                                                                                                                                        |              | Temperature [°C]                |               |                |                | ISA                   |
|                                                                                                                                                                                                                        |              | -25                             | 0             | 25             | 50             |                       |
| S.L.                                                                                                                                                                                                                   | Ground Roll  | 234<br>(768)                    | 295<br>(968)  | 364<br>(1194)  | 442<br>(1450)  | <b>336<br/>(1102)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 421<br>(1381)                   | 526<br>(1726) | 644<br>(2113)  | 776<br>(2546)  | <b>595<br/>(1952)</b> |
| 1000                                                                                                                                                                                                                   | Ground Roll  | 256<br>(840)                    | 322<br>(1056) | 397<br>(1302)  | 482<br>(1581)  | <b>360<br/>(1181)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 458<br>(1503)                   | 572<br>(1877) | 701<br>(2300)  | 844<br>(2769)  | <b>637<br/>(2090)</b> |
| 2000                                                                                                                                                                                                                   | Ground Roll  | 279<br>(915)                    | 352<br>(1155) | 434<br>(1424)  | 526<br>(1726)  | <b>387<br/>(1270)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 499<br>(1637)                   | 622<br>(2041) | 762<br>(2500)  | 918<br>(3012)  | <b>682<br/>(2238)</b> |
| 3000                                                                                                                                                                                                                   | Ground Roll  | 305<br>(1001)                   | 384<br>(1260) | 474<br>(1555)  | 575<br>(1886)  | <b>415<br/>(1362)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 543<br>(1781)                   | 678<br>(2224) | 830<br>(2723)  | 1000<br>(3281) | <b>731<br/>(2398)</b> |
| 4000                                                                                                                                                                                                                   | Ground Roll  | 333<br>(1093)                   | 420<br>(1378) | 518<br>(1699)  | 628<br>(2060)  | <b>446<br/>(1463)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 591<br>(1939)                   | 738<br>(2421) | 904<br>(2966)  | 1089<br>(3573) | <b>783<br/>(2569)</b> |
| 5000                                                                                                                                                                                                                   | Ground Roll  | 364<br>(1194)                   | 459<br>(1506) | 566<br>(1857)  | 687<br>(2254)  | <b>480<br/>(1575)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 645<br>(2116)                   | 805<br>(2641) | 986<br>(3235)  | 1188<br>(3898) | <b>840<br/>(2756)</b> |
| 6000                                                                                                                                                                                                                   | Ground Roll  | 399<br>(1309)                   | 502<br>(1647) | 620<br>(2034)  | 752<br>(2467)  | <b>516<br/>(1693)</b> |
|                                                                                                                                                                                                                        | At 50 ft AGL | 703<br>(2306)                   | 878<br>(2881) | 1075<br>(3527) | 1296<br>(4252) | <b>901<br/>(2956)</b> |

# AFMS N° D08 FOR ALTERNATIVE AVIONICS CONFIGURATION AND VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES



## P2010 - Aircraft Flight Manual

Page GV 5-9

| <b>Weight = 1060 kg (2337 lb)</b><br><br><b>Flaps: T/O</b><br><b>Speed at Lift-Off = 60 KIAS</b><br><b>Speed Over 50ft Obstacle = 65 KIAS</b><br><b>Throttle and Propeller Lever: Full Forward</b><br><b>Runway: Paved</b> |              |                                 |               |               |                |                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------------|---------------|----------------|-----------------------|
| <b>Corrections</b><br><b>Headwind: -10 m for each kn</b><br><b>Tailwind: +20 m for each kn</b><br><b>Grass Runway: +10% to Ground Roll</b><br><b>Runway slope: +10% to Ground Roll for each +1%</b>                        |              |                                 |               |               |                |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                                           |              | Distance [m]<br>(Distance [ft]) |               |               |                |                       |
|                                                                                                                                                                                                                            |              | Temperature [°C]                |               |               |                | ISA                   |
|                                                                                                                                                                                                                            |              | -25                             | 0             | 25            | 50             |                       |
| S.L.                                                                                                                                                                                                                       | Ground Roll  | 189<br>(620)                    | 238<br>(781)  | 293<br>(961)  | 356<br>(1168)  | <b>270<br/>(886)</b>  |
|                                                                                                                                                                                                                            | At 50 ft AGL | 342<br>(1122)                   | 427<br>(1401) | 523<br>(1716) | 630<br>(2067)  | <b>483<br/>(1585)</b> |
| 1000                                                                                                                                                                                                                       | Ground Roll  | 206<br>(676)                    | 259<br>(850)  | 320<br>(1050) | 388<br>(1273)  | <b>290<br/>(951)</b>  |
|                                                                                                                                                                                                                            | At 50 ft AGL | 372<br>(1220)                   | 464<br>(1522) | 569<br>(1867) | 685<br>(2247)  | <b>517<br/>(1696)</b> |
| 2000                                                                                                                                                                                                                       | Ground Roll  | 225<br>(738)                    | 283<br>(928)  | 349<br>(1145) | 424<br>(1391)  | <b>311<br/>(1020)</b> |
|                                                                                                                                                                                                                            | At 50 ft AGL | 405<br>(1329)                   | 505<br>(1657) | 619<br>(2031) | 745<br>(2444)  | <b>554<br/>(1818)</b> |
| 3000                                                                                                                                                                                                                       | Ground Roll  | 246<br>(807)                    | 309<br>(1014) | 382<br>(1253) | 463<br>(1519)  | <b>334<br/>(1096)</b> |
|                                                                                                                                                                                                                            | At 50 ft AGL | 441<br>(1447)                   | 550<br>(1804) | 674<br>(2211) | 812<br>(2664)  | <b>593<br/>(1946)</b> |
| 4000                                                                                                                                                                                                                       | Ground Roll  | 268<br>(879)                    | 338<br>(1109) | 417<br>(1368) | 506<br>(1660)  | <b>359<br/>(1178)</b> |
|                                                                                                                                                                                                                            | At 50 ft AGL | 480<br>(1575)                   | 599<br>(1965) | 734<br>(2408) | 884<br>(2900)  | <b>636<br/>(2087)</b> |
| 5000                                                                                                                                                                                                                       | Ground Roll  | 294<br>(965)                    | 370<br>(1214) | 456<br>(1496) | 553<br>(1814)  | <b>386<br/>(1266)</b> |
|                                                                                                                                                                                                                            | At 50 ft AGL | 523<br>(1716)                   | 653<br>(2142) | 800<br>(2625) | 964<br>(3163)  | <b>682<br/>(2238)</b> |
| 6000                                                                                                                                                                                                                       | Ground Roll  | 321<br>(1053)                   | 404<br>(1325) | 499<br>(1637) | 605<br>(1985)  | <b>416<br/>(1365)</b> |
|                                                                                                                                                                                                                            | At 50 ft AGL | 571<br>(1873)                   | 713<br>(2339) | 873<br>(2864) | 1052<br>(3451) | <b>732<br/>(2402)</b> |

Ed. 2, Rev. 0

## Section 5 – Performances

### Take-off Performance

# AFMS N° D08 FOR ALTERNATIVE AVIONICS CONFIGURATION AND VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES



## P2010 - Aircraft Flight Manual

Page GV 5-10

| <b>Weight = 960 kg (2116 lb)</b><br><br><b>Flaps: T/O</b><br><b>Speed at Lift-Off = 60 KIAS</b><br><b>Speed Over 50ft Obstacle = 65 KIAS</b><br><b>Throttle and Propeller Lever: Full Forward</b><br><b>Runway: Paved</b> |              |                                 |               |               |               |                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------------|---------------|---------------|-----------------------|
| <b>Corrections</b><br><b>Headwind: -10 m for each kn</b><br><b>Tailwind: +20 m for each kn</b><br><b>Grass Runway: +10% to Ground Roll</b><br><b>Runway slope: +10% to Ground Roll for each +1%</b>                       |              |                                 |               |               |               |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                                          |              | Distance [m]<br>(Distance [ft]) |               |               |               |                       |
|                                                                                                                                                                                                                           |              | Temperature [°C]                |               |               |               | ISA                   |
|                                                                                                                                                                                                                           |              | -25                             | 0             | 25            | 50            |                       |
| S.L.                                                                                                                                                                                                                      | Ground Roll  | 149<br>(489)                    | 187<br>(614)  | 231<br>(758)  | 281<br>(922)  | <b>213<br/>(699)</b>  |
|                                                                                                                                                                                                                           | At 50 ft AGL | 272<br>(892)                    | 340<br>(1115) | 416<br>(1365) | 501<br>(1644) | <b>384<br/>(1260)</b> |
| 1000                                                                                                                                                                                                                      | Ground Roll  | 162<br>(531)                    | 204<br>(669)  | 252<br>(827)  | 306<br>(1004) | <b>229<br/>(751)</b>  |
|                                                                                                                                                                                                                           | At 50 ft AGL | 296<br>(971)                    | 369<br>(1211) | 452<br>(1483) | 545<br>(1788) | <b>411<br/>(1348)</b> |
| 2000                                                                                                                                                                                                                      | Ground Roll  | 177<br>(581)                    | 223<br>(732)  | 275<br>(902)  | 334<br>(1096) | <b>245<br/>(804)</b>  |
|                                                                                                                                                                                                                           | At 50 ft AGL | 322<br>(1056)                   | 402<br>(1319) | 492<br>(1614) | 593<br>(1946) | <b>440<br/>(1444)</b> |
| 3000                                                                                                                                                                                                                      | Ground Roll  | 194<br>(636)                    | 244<br>(801)  | 301<br>(988)  | 365<br>(1198) | <b>264<br/>(866)</b>  |
|                                                                                                                                                                                                                           | At 50 ft AGL | 350<br>(1148)                   | 438<br>(1437) | 536<br>(1759) | 645<br>(2116) | <b>472<br/>(1549)</b> |
| 4000                                                                                                                                                                                                                      | Ground Roll  | 212<br>(696)                    | 266<br>(873)  | 329<br>(1079) | 399<br>(1309) | <b>283<br/>(928)</b>  |
|                                                                                                                                                                                                                           | At 50 ft AGL | 382<br>(1253)                   | 477<br>(1565) | 584<br>(1916) | 703<br>(2306) | <b>506<br/>(1660)</b> |
| 5000                                                                                                                                                                                                                      | Ground Roll  | 231<br>(758)                    | 291<br>(955)  | 360<br>(1181) | 436<br>(1430) | <b>305<br/>(1001)</b> |
|                                                                                                                                                                                                                           | At 50 ft AGL | 416<br>(1365)                   | 520<br>(1706) | 636<br>(2087) | 766<br>(2513) | <b>542<br/>(1778)</b> |
| 6000                                                                                                                                                                                                                      | Ground Roll  | 253<br>(830)                    | 319<br>(1047) | 393<br>(1289) | 477<br>(1565) | <b>328<br/>(1076)</b> |
|                                                                                                                                                                                                                           | At 50 ft AGL | 454<br>(1489)                   | 567<br>(1860) | 694<br>(2277) | 836<br>(2743) | <b>582<br/>(1909)</b> |

Ed. 2, Rev. 0

## Section 5 – Performances

### Take-off Performances

**8. TAKE-OFF RATE OF CLIMB****NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2600 RPM<br>Flaps: Take-Off |                              |                                            |                        |      |      |      |             |
|------------------------------------------------------------------------|------------------------------|--------------------------------------------|------------------------|------|------|------|-------------|
| Weight<br>[kg]<br>([lb])                                               | Pressure<br>Altitude<br>[ft] | Climb<br>Speed<br>V <sub>y</sub><br>[KIAS] | Rate of Climb [ft/min] |      |      |      |             |
|                                                                        |                              |                                            | Temperature [°C]       |      |      |      | ISA         |
|                                                                        |                              |                                            | -25                    | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                                                 | S.L.                         | 72                                         | 974                    | 808  | 659  | 525  | <b>717</b>  |
|                                                                        | <b>2000</b>                  | 71                                         | 848                    | 684  | 538  | 406  | <b>617</b>  |
|                                                                        | <b>4000</b>                  | 70                                         | 721                    | 560  | 417  | 287  | <b>518</b>  |
|                                                                        | <b>6000</b>                  | 69                                         | 596                    | 437  | 296  | 169  | <b>419</b>  |
|                                                                        | <b>8000</b>                  | 68                                         | 470                    | 315  | 176  | 51   | <b>320</b>  |
|                                                                        | <b>10000</b>                 | 67                                         | 345                    | 193  | 56   | -67  | <b>221</b>  |
|                                                                        | <b>12000</b>                 | 67                                         | 221                    | 71   | -63  | -184 | <b>122</b>  |
|                                                                        | <b>14000</b>                 | 66                                         | 96                     | -51  | -182 | -300 | <b>23</b>   |
| <b>1060<br/>(2337)</b>                                                 | S.L.                         | 70                                         | 1118                   | 943  | 787  | 647  | <b>848</b>  |
|                                                                        | <b>2000</b>                  | 69                                         | 985                    | 813  | 660  | 522  | <b>744</b>  |
|                                                                        | <b>4000</b>                  | 69                                         | 853                    | 684  | 533  | 397  | <b>640</b>  |
|                                                                        | <b>6000</b>                  | 68                                         | 721                    | 555  | 406  | 273  | <b>536</b>  |
|                                                                        | <b>8000</b>                  | 68                                         | 589                    | 426  | 280  | 149  | <b>431</b>  |
|                                                                        | <b>10000</b>                 | 67                                         | 458                    | 298  | 155  | 26   | <b>327</b>  |
|                                                                        | <b>12000</b>                 | 66                                         | 327                    | 170  | 29   | -97  | <b>223</b>  |
|                                                                        | <b>14000</b>                 | 66                                         | 197                    | 43   | -95  | -220 | <b>119</b>  |
| <b>960<br/>(2116)</b>                                                  | S.L.                         | 69                                         | 1288                   | 1103 | 937  | 787  | <b>1001</b> |
|                                                                        | <b>2000</b>                  | 69                                         | 1147                   | 964  | 801  | 654  | <b>890</b>  |
|                                                                        | <b>4000</b>                  | 68                                         | 1006                   | 827  | 666  | 522  | <b>780</b>  |
|                                                                        | <b>6000</b>                  | 68                                         | 866                    | 689  | 532  | 390  | <b>669</b>  |
|                                                                        | <b>8000</b>                  | 67                                         | 726                    | 553  | 398  | 258  | <b>558</b>  |
|                                                                        | <b>10000</b>                 | 66                                         | 586                    | 416  | 264  | 127  | <b>448</b>  |
|                                                                        | <b>12000</b>                 | 66                                         | 447                    | 280  | 131  | -3   | <b>337</b>  |
|                                                                        | <b>14000</b>                 | 65                                         | 309                    | 145  | -2   | -134 | <b>226</b>  |

## 9. EN-ROUTE RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2600 RPM<br>Flaps: UP |                                  |                                                |                        |            |             |             |             |
|------------------------------------------------------------------|----------------------------------|------------------------------------------------|------------------------|------------|-------------|-------------|-------------|
| Weight<br><br>[kg]<br>([lb])                                     | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>V <sub>Y</sub><br><br>[KIAS] | Rate of Climb [ft/min] |            |             |             |             |
|                                                                  |                                  |                                                | Temperature [°C]       |            |             |             | ISA         |
|                                                                  |                                  |                                                | -25                    | 0          | 25          | 50          |             |
| <b>1160<br/>(2557)</b>                                           | S.L.                             | 82                                             | 1131                   | 944        | 776         | 625         | <b>841</b>  |
|                                                                  | <b>2000</b>                      | 81                                             | 989                    | 804        | 639         | 491         | <b>729</b>  |
|                                                                  | <b>4000</b>                      | 80                                             | 846                    | 665        | 503         | 357         | <b>618</b>  |
|                                                                  | <b>6000</b>                      | 79                                             | 705                    | 526        | 367         | 224         | <b>506</b>  |
|                                                                  | <b>8000</b>                      | 78                                             | 563                    | 388        | 232         | 91          | <b>394</b>  |
|                                                                  | <b>10000</b>                     | 77                                             | 423                    | 251        | 97          | <b>-41</b>  | <b>282</b>  |
|                                                                  | <b>12000</b>                     | 76                                             | 282                    | 113        | <b>-37</b>  | <b>-173</b> | <b>171</b>  |
|                                                                  | <b>14000</b>                     | 76                                             | 142                    | <b>-23</b> | <b>-171</b> | <b>-305</b> | <b>59</b>   |
| <b>1060<br/>(2337)</b>                                           | S.L.                             | 82                                             | 1284                   | 1085       | 907         | 747         | <b>976</b>  |
|                                                                  | <b>2000</b>                      | 81                                             | 1133                   | 937        | 762         | 605         | <b>857</b>  |
|                                                                  | <b>4000</b>                      | 80                                             | 982                    | 789        | 618         | 463         | <b>739</b>  |
|                                                                  | <b>6000</b>                      | 79                                             | 831                    | 642        | 474         | 322         | <b>621</b>  |
|                                                                  | <b>8000</b>                      | 78                                             | 682                    | 496        | 330         | 181         | <b>502</b>  |
|                                                                  | <b>10000</b>                     | 77                                             | 532                    | 350        | 187         | 40          | <b>384</b>  |
|                                                                  | <b>12000</b>                     | 76                                             | 383                    | 204        | 45          | <b>-99</b>  | <b>265</b>  |
|                                                                  | <b>14000</b>                     | 75                                             | 235                    | 59         | <b>-97</b>  | <b>-239</b> | <b>147</b>  |
| <b>960<br/>(2116)</b>                                            | S.L.                             | 81                                             | 1465                   | 1251       | 1060        | 888         | <b>1134</b> |
|                                                                  | <b>2000</b>                      | 80                                             | 1302                   | 1092       | 905         | 735         | <b>1007</b> |
|                                                                  | <b>4000</b>                      | 79                                             | 1140                   | 934        | 749         | 583         | <b>880</b>  |
|                                                                  | <b>6000</b>                      | 78                                             | 979                    | 776        | 595         | 432         | <b>753</b>  |
|                                                                  | <b>8000</b>                      | 77                                             | 818                    | 619        | 441         | 281         | <b>625</b>  |
|                                                                  | <b>10000</b>                     | 76                                             | 658                    | 462        | 287         | 130         | <b>498</b>  |
|                                                                  | <b>12000</b>                     | 75                                             | 498                    | 306        | 134         | <b>-20</b>  | <b>371</b>  |
|                                                                  | <b>14000</b>                     | 74                                             | 339                    | 150        | <b>-18</b>  | <b>-170</b> | <b>244</b>  |



## 10. CRUISE PERFORMANCE

| <b>Weight:</b> 1160 kg         |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|--------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH      |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 0 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                            | MAP<br>[inHg] | ISA – 30°C (-15°C) |             |                            | ISA (15°C)                                  |             |                            | ISA + 30°C (45°C) |             |                            |
|                                |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                    | <b>29.9</b>   | <b>113</b>         | <b>138</b>  | <b>19.2 (72.7)</b>         | <b>107</b>                                  | <b>139</b>  | <b>18.4 (69.7)</b>         | <b>102</b>        | <b>141</b>  | <b>17.7 (67)</b>           |
| <b>2600</b>                    | 29.9          | 109                | 136         | 18.7 (70.8)                | 103                                         | 138         | 17.9 (67.8)                | 98                | 139         | 17.2 (65.1)                |
|                                | 28            | 101                | 132         | 17.6 (66.6)                | 96                                          | 134         | 16.9 (64)                  | 91                | 135         | 16.3 (61.7)                |
|                                | 26            | 90                 | 126         | 16.1 (60.9)                | 85                                          | 127         | 15.4 (58.3)                | 81                | 128         | 14.9 (56.4)                |
|                                | 24            | 79                 | 120         | 14.7 (55.6)                | 75                                          | 121         | 14.1 (53.4)                | 71                | 121         | 13.6 (51.5)                |
|                                | 22            | 69                 | 113         | 13.3 (50.3)                | 65                                          | 113         | 12.8 (48.5)                | 62                | 113         | 12.4 (46.9)                |
|                                | 20            | 59                 | 105         | 11.9 (45)                  | 56                                          | 104         | 11.5 (43.5)                | 53                | 103         | 11.1 (42)                  |
| <b>2450</b>                    | 29.9          | 103                | 133         | 17.9 (67.8)                | 98                                          | 135         | 17.1 (64.7)                | 93                | 136         | 16.5 (62.5)                |
|                                | 28            | 95                 | 129         | 16.8 (63.6)                | 90                                          | 130         | 16.1 (60.9)                | 85                | 131         | 15.5 (58.7)                |
|                                | 26            | 85                 | 123         | 15.4 (58.3)                | 80                                          | 124         | 14.8 (56)                  | 76                | 125         | 14.3 (54.1)                |
|                                | 24            | 75                 | 117         | 14.1 (53.4)                | 71                                          | 117         | 13.5 (51.1)                | 67                | 118         | 13.1 (49.6)                |
|                                | 22            | 65                 | 110         | 12.8 (48.5)                | 62                                          | 110         | 12.3 (46.6)                | 59                | 110         | 11.9 (45)                  |
|                                | 20            | 55                 | 102         | 11.5 (43.5)                | 52                                          | 101         | 11.1 (42)                  | 50                | 100         | 10.7 (40.5)                |
| <b>2350</b>                    | 29.9          | 100                | 131         | 17.4 (65.9)                | 94                                          | 133         | 16.7 (63.2)                | 90                | 134         | 16.1 (60.9)                |
|                                | 28            | 91                 | 127         | 16.2 (61.3)                | 86                                          | 128         | 15.6 (59.1)                | 82                | 129         | 15 (56.8)                  |
|                                | 26            | 81                 | 121         | 15 (56.8)                  | 77                                          | 122         | 14.4 (54.5)                | 73                | 123         | 13.9 (52.6)                |
|                                | 24            | 72                 | 115         | 13.7 (51.9)                | 68                                          | 115         | 13.1 (49.6)                | 65                | 115         | 12.7 (48.1)                |
|                                | 22            | 62                 | 108         | 12.4 (46.9)                | 59                                          | 108         | 12 (45.4)                  | 56                | 107         | 11.6 (43.9)                |
|                                | 20            | 53                 | 99          | 11.1 (42)                  | 50                                          | 98          | 10.7 (40.5)                | 48                | 96          | 10.4 (39.4)                |





| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 3000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-21°C) |             |                            | ISA (9°C)                                   |             |                            | ISA + 30°C (39°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>26.8</b>   | <b>104</b>         | <b>137</b>  | <b>17.9 (67.8)</b>         | <b>98</b>                                   | <b>138</b>  | <b>17.2 (65.1)</b>         | <b>93</b>         | <b>139</b>  | <b>16.5 (62.5)</b>         |
| <b>2600</b>                       | 26.8          | 100                | 135         | 17.4 (65.9)                | 94                                          | 136         | 16.7 (63.2)                | 90                | 137         | 16.1 (60.9)                |
| <b>2600</b>                       | 26            | 96                 | 133         | 16.9 (64)                  | 90                                          | 134         | 16.2 (61.3)                | 86                | 135         | 15.6 (59.1)                |
| <b>2600</b>                       | 24            | 85                 | 126         | 15.4 (58.3)                | 80                                          | 127         | 14.8 (56)                  | 76                | 128         | 14.3 (54.1)                |
| <b>2600</b>                       | 22            | 76                 | 128         | 14.3 (54.1)                | 70                                          | 120         | 13.5 (51.1)                | 67                | 120         | 13 (49.2)                  |
| <b>2600</b>                       | 20            | 63                 | 111         | 12.6 (47.7)                | 60                                          | 111         | 12.1 (45.8)                | 57                | 110         | 11.7 (44.3)                |
| <b>2600</b>                       | 18            | 53                 | 101         | 11.1 (42)                  | 50                                          | 99          | 10.7 (40.5)                | 47                | 97          | 10.4 (39.4)                |
| <b>2450</b>                       | 26.8          | 94                 | 132         | 16.6 (62.8)                | 89                                          | 132         | 15.9 (60.2)                | 84                | 133         | 15.3 (57.9)                |
| <b>2450</b>                       | 26            | 90                 | 129         | 16.1 (60.9)                | 85                                          | 129         | 15.4 (58.3)                | 81                | 130         | 14.8 (56)                  |
| <b>2450</b>                       | 24            | 80                 | 123         | 14.7 (55.6)                | 75                                          | 123         | 14.2 (53.8)                | 72                | 124         | 13.7 (51.9)                |
| <b>2450</b>                       | 22            | 70                 | 116         | 13.5 (51.1)                | 66                                          | 116         | 12.9 (48.8)                | 63                | 117         | 12.5 (47.3)                |
| <b>2450</b>                       | 20            | 60                 | 108         | 12.1 (45.8)                | 57                                          | 108         | 11.6 (43.9)                | 54                | 107         | 11.3 (42.8)                |
| <b>2450</b>                       | 18            | 50                 | 97          | 10.7 (40.5)                | 47                                          | 97          | 10.4 (39.4)                | 45                | 95          | 10.1 (38.2)                |
| <b>2350</b>                       | 26.8          | 90                 | 130         | 16.1 (60.9)                | 85                                          | 131         | 15.5 (58.7)                | 81                | 131         | 14.9 (56.4)                |
| <b>2350</b>                       | 26            | 86                 | 127         | 15.6 (59.1)                | 81                                          | 128         | 15 (56.8)                  | 77                | 129         | 14.4 (54.5)                |
| <b>2350</b>                       | 24            | 77                 | 121         | 14.3 (54.1)                | 72                                          | 122         | 13.8 (52.2)                | 69                | 122         | 13.3 (50.3)                |
| <b>2350</b>                       | 22            | 67                 | 114         | 13.1 (49.6)                | 64                                          | 114         | 12.6 (47.7)                | 60                | 114         | 12.2 (46.2)                |
| <b>2350</b>                       | 20            | 57                 | 105         | 11.7 (44.3)                | 54                                          | 105         | 11.3 (42.8)                | 51                | 103         | 11 (41.6)                  |
| <b>2350</b>                       | 18.5          | 50                 | 98          | 10.7 (40.5)                | 47                                          | 95          | 10.4 (39.4)                | 45                | 92          | 10.1 (38.2)                |

# AFMS N° D08 FOR ALTERNATIVE AVIONICS CONFIGURATION AND VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES



## P2010 - Aircraft Flight Manual

Page GV 5-15

| Weight: 1160 kg<br>Mixture: FULL RICH<br>Pressure Altitude: 6000 ft |               |                    |             |                            | Corrections<br>Best Power: -10% to Full Rich F.C.<br>Best Economy: -20% to Full Rich F.C. |             |                            |                   |             |                            |
|---------------------------------------------------------------------|---------------|--------------------|-------------|----------------------------|-------------------------------------------------------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| RPM                                                                 | MAP<br>[inHg] | ISA – 30°C (-27°C) |             |                            | ISA (3°C)                                                                                 |             |                            | ISA + 30°C (33°C) |             |                            |
|                                                                     |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                                                                             | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                                                         | <b>23.9</b>   | <b>94</b>          | <b>135</b>  | <b>16.6 (62.8)</b>         | <b>89</b>                                                                                 | <b>136</b>  | <b>15.9 (60.2)</b>         | <b>84</b>         | <b>137</b>  | <b>15.3 (57.9)</b>         |
| <b>2600</b>                                                         | 23.9          | 90                 | 133         | 16.1 (60.9)                | 85                                                                                        | 134         | 15.5 (58.7)                | 81                | 134         | 14.9 (56.4)                |
| <b>2600</b>                                                         | 23            | 85                 | 130         | 15.5 (58.7)                | 80                                                                                        | 130         | 14.8 (56)                  | 76                | 131         | 14.3 (54.1)                |
| <b>2600</b>                                                         | 22            | 80                 | 126         | 14.8 (56)                  | 75                                                                                        | 127         | 14.2 (53.8)                | 72                | 127         | 13.6 (51.5)                |
| <b>2600</b>                                                         | 20            | 68                 | 117         | 13.2 (50)                  | 64                                                                                        | 117         | 12.7 (48.1)                | 61                | 117         | 12.3 (46.6)                |
| <b>2600</b>                                                         | 19            | 63                 | 113         | 12.5 (47.3)                | 59                                                                                        | 112         | 12 (45.4)                  | 56                | 111         | 11.6 (43.9)                |
| <b>2600</b>                                                         | 18            | 57                 | 108         | 11.7 (44.3)                | 54                                                                                        | 106         | 11.3 (42.8)                | 51                | 104         | 10.9 (41.3)                |
| <b>2450</b>                                                         | 23.9          | 85                 | 129         | 15.4 (58.3)                | 80                                                                                        | 130         | 14.8 (56)                  | 76                | 131         | 14.2 (53.8)                |
| <b>2450</b>                                                         | 23            | 80                 | 126         | 14.8 (56)                  | 75                                                                                        | 127         | 14.2 (53.8)                | 72                | 127         | 13.7 (51.9)                |
| <b>2450</b>                                                         | 22            | 75                 | 123         | 14.1 (53.4)                | 71                                                                                        | 123         | 13.6 (51.5)                | 67                | 123         | 13.1 (49.6)                |
| <b>2450</b>                                                         | 20            | 64                 | 114         | 12.7 (48.1)                | 61                                                                                        | 114         | 12.2 (46.2)                | 58                | 113         | 11.8 (44.7)                |
| <b>2450</b>                                                         | 19            | 59                 | 110         | 12 (45.4)                  | 56                                                                                        | 109         | 11.6 (43.9)                | 53                | 107         | 11.2 (42.4)                |
| <b>2450</b>                                                         | 18            | 54                 | 104         | 11.3 (42.8)                | 51                                                                                        | 102         | 10.9 (41.3)                | 49                | 99          | 10.6 (40.1)                |
| <b>2350</b>                                                         | 23.9          | 81                 | 127         | 15 (56.8)                  | 77                                                                                        | 128         | 14.4 (54.5)                | 73                | 128         | 13.8 (52.2)                |
| <b>2350</b>                                                         | 23            | 77                 | 124         | 14.3 (54.1)                | 73                                                                                        | 124         | 13.8 (52.2)                | 69                | 124         | 13.3 (50.3)                |
| <b>2350</b>                                                         | 22            | 72                 | 121         | 13.7 (51.9)                | 68                                                                                        | 121         | 13.2 (50)                  | 65                | 120         | 12.7 (48.1)                |
| <b>2350</b>                                                         | 20            | 62                 | 112         | 12.3 (46.6)                | 58                                                                                        | 111         | 11.9 (45)                  | 55                | 110         | 11.5 (43.5)                |
| <b>2350</b>                                                         | 19            | 57                 | 107         | 11.7 (44.3)                | 54                                                                                        | 106         | 11.2 (42.4)                | 51                | 103         | 10.9 (41.3)                |
| <b>2350</b>                                                         | 18.5          | 54                 | 104         | 11.3 (42.8)                | 51                                                                                        | 102         | 10.9 (41.3)                | 49                | 99          | 10.6 (40.1)                |

Ed. 2, Rev. 0

## Section 5 – Performances

### Cruise Performance



| <b>Weight:</b> 1160 kg            |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|-----------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH         |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 9000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                               | MAP<br>[inHg] | ISA – 30°C (-33°C) |             |                            | ISA (-3°C)                                  |             |                            | ISA + 30°C (27°C) |             |                            |
|                                   |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                       | <b>21.3</b>   | <b>85</b>          | <b>133</b>  | <b>15.4 (58.3)</b>         | <b>80</b>                                   | <b>133</b>  | <b>14.7 (55.6)</b>         | <b>76</b>         | <b>133</b>  | <b>14.2 (53.8)</b>         |
| <b>2600</b>                       | 21.3          | 81                 | 130         | 15 (56.8)                  | 77                                          | 131         | 14.3 (54.1)                | 73                | 131         | 13.8 (52.2)                |
| <b>2600</b>                       | 20            | 73                 | 124         | 13.8 (52.2)                | 69                                          | 124         | 13.3 (50.3)                | 65                | 123         | 12.8 (48.5)                |
| <b>2600</b>                       | 19            | 67                 | 119         | 13.1 (49.6)                | 64                                          | 119         | 12.6 (47.7)                | 60                | 118         | 12.1 (45.8)                |
| <b>2600</b>                       | 18            | 62                 | 114         | 12.3 (46.6)                | 58                                          | 113         | 11.9 (45)                  | 55                | 111         | 11.5 (43.5)                |
| <b>2450</b>                       | 21.3          | 77                 | 127         | 14.3 (54.1)                | 72                                          | 127         | 13.7 (51.9)                | 69                | 127         | 13.2 (50)                  |
| <b>2450</b>                       | 20            | 69                 | 121         | 13.3 (50.3)                | 65                                          | 121         | 12.8 (48.5)                | 62                | 119         | 12.3 (46.6)                |
| <b>2450</b>                       | 19            | 64                 | 116         | 12.6 (47.7)                | 60                                          | 115         | 12.1 (45.8)                | 57                | 114         | 11.7 (44.3)                |
| <b>2450</b>                       | 18            | 59                 | 111         | 11.9 (45)                  | 55                                          | 109         | 11.4 (43.2)                | 52                | 106         | 11.1 (42)                  |
| <b>2350</b>                       | 19            | 66                 | 121         | 12.9 (48.8)                | 62                                          | 120         | 12.4 (46.9)                | 59                | 117         | 11.9 (45)                  |
| <b>2350</b>                       | 18            | 60                 | 115         | 12.2 (46.2)                | 57                                          | 113         | 11.7 (44.3)                | 54                | 110         | 11.3 (42.8)                |

| <b>Weight:</b> 1160 kg             |               |                    |             |                            | <b>Corrections</b>                          |             |                            |                   |             |                            |
|------------------------------------|---------------|--------------------|-------------|----------------------------|---------------------------------------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| <b>Mixture:</b> FULL RICH          |               |                    |             |                            | <b>Best Power:</b> -10% to Full Rich F.C.   |             |                            |                   |             |                            |
| <b>Pressure Altitude:</b> 12000 ft |               |                    |             |                            | <b>Best Economy:</b> -20% to Full Rich F.C. |             |                            |                   |             |                            |
| RPM                                | MAP<br>[inHg] | ISA – 30°C (-39°C) |             |                            | ISA (-9°C)                                  |             |                            | ISA + 30°C (21°C) |             |                            |
|                                    |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]                               | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([L/h]) |
| <b>2700</b>                        | <b>19</b>     | <b>75</b>          | <b>128</b>  | <b>14.1 (53.4)</b>         | <b>70</b>                                   | <b>128</b>  | <b>13.5 (51.1)</b>         | <b>67</b>         | <b>128</b>  | <b>13 (49.2)</b>           |
| <b>2600</b>                        | 19            | 72                 | 126         | 13.7 (51.9)                | 68                                          | 126         | 13.2 (50)                  | 64                | 125         | 12.7 (48.1)                |
| <b>2600</b>                        | 18            | 66                 | 121         | 13 (49.2)                  | 63                                          | 120         | 12.4 (46.9)                | 59                | 118         | 12 (45.4)                  |
| <b>2450</b>                        | 19            | 68                 | 123         | 13.2 (50)                  | 64                                          | 122         | 12.7 (48.1)                | 61                | 121         | 12.2 (46.2)                |
| <b>2450</b>                        | 18            | 63                 | 118         | 12.5 (47.3)                | 59                                          | 116         | 12 (45.4)                  | 56                | 113         | 11.6 (43.9)                |
| <b>2350</b>                        | 19            | 66                 | 121         | 12.9 (48.8)                | 62                                          | 120         | 12.4 (46.9)                | 59                | 117         | 11.9 (45)                  |
| <b>2350</b>                        | 18            | 60                 | 115         | 12.2 (46.2)                | 57                                          | 113         | 11.7 (44.3)                | 54                | 110         | 11.3 (42.8)                |

## 11. LANDING PERFORMANCES

**NOTE**

To account for likely in service performance variations apply a factored to distances of 1.67

| <b>Weight = 1160 kg (2557 lb)</b>           |              |                                                      |               |               |               |                       |
|---------------------------------------------|--------------|------------------------------------------------------|---------------|---------------|---------------|-----------------------|
| <b>Corrections</b>                          |              |                                                      |               |               |               |                       |
| <b>Flaps: LAND</b>                          |              | <b>Headwind: -4 m for each kn</b>                    |               |               |               |                       |
| <b>Short Final Approach Speed = 66 KIAS</b> |              | <b>Tailwind: +13 m for each kn</b>                   |               |               |               |                       |
| <b>Throttle Lever: Idle</b>                 |              | <b>Grass Runway: +10% to Ground Roll</b>             |               |               |               |                       |
| <b>Runway: Paved</b>                        |              | <b>Runway slope: -3% to Ground Roll for each +1%</b> |               |               |               |                       |
| Pressure<br>Altitude<br>[ft]                |              | Distance [m]<br>(Distance [ft])                      |               |               |               |                       |
|                                             |              | Temperature [°C]                                     |               |               |               | ISA                   |
|                                             |              | -25                                                  | 0             | 25            | 50            |                       |
| S.L.                                        | Ground Roll  | 204<br>(669)                                         | 225<br>(738)  | 245<br>(804)  | 266<br>(873)  | <b>237<br/>(778)</b>  |
|                                             | At 50 ft AGL | 488<br>(1601)                                        | 509<br>(1670) | 529<br>(1736) | 550<br>(1804) | <b>521<br/>(1709)</b> |
| 1000                                        | Ground Roll  | 212<br>(696)                                         | 233<br>(764)  | 254<br>(833)  | 276<br>(906)  | <b>244<br/>(801)</b>  |
|                                             | At 50 ft AGL | 496<br>(1627)                                        | 517<br>(1696) | 538<br>(1765) | 560<br>(1837) | <b>528<br/>(1732)</b> |
| 2000                                        | Ground Roll  | 220<br>(722)                                         | 242<br>(794)  | 264<br>(866)  | 286<br>(938)  | <b>251<br/>(823)</b>  |
|                                             | At 50 ft AGL | 504<br>(1654)                                        | 526<br>(1726) | 548<br>(1798) | 570<br>(1870) | <b>535<br/>(1755)</b> |
| 3000                                        | Ground Roll  | 228<br>(748)                                         | 251<br>(823)  | 274<br>(899)  | 297<br>(974)  | <b>259<br/>(850)</b>  |
|                                             | At 50 ft AGL | 512<br>(1680)                                        | 535<br>(1755) | 558<br>(1831) | 581<br>(1906) | <b>543<br/>(1781)</b> |
| 4000                                        | Ground Roll  | 236<br>(774)                                         | 260<br>(853)  | 284<br>(932)  | 308<br>(1010) | <b>267<br/>(876)</b>  |
|                                             | At 50 ft AGL | 520<br>(1706)                                        | 544<br>(1785) | 568<br>(1864) | 592<br>(1942) | <b>551<br/>(1808)</b> |
| 5000                                        | Ground Roll  | 245<br>(804)                                         | 270<br>(886)  | 295<br>(968)  | 320<br>(1050) | <b>275<br/>(902)</b>  |
|                                             | At 50 ft AGL | 529<br>(1736)                                        | 554<br>(1818) | 579<br>(1900) | 604<br>(1982) | <b>559<br/>(1834)</b> |
| 6000                                        | Ground Roll  | 255<br>(837)                                         | 280<br>(919)  | 306<br>(1004) | 332<br>(1089) | <b>284<br/>(932)</b>  |
|                                             | At 50 ft AGL | 539<br>(1768)                                        | 564<br>(1850) | 590<br>(1936) | 616<br>(2021) | <b>568<br/>(1864)</b> |

## 12. BALKED LANDING PERFORMANCE

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb and to angle of climb of 0.90

| Throttle and Propeller Lever: Full Forward |                              |                              |      |     |      |             |
|--------------------------------------------|------------------------------|------------------------------|------|-----|------|-------------|
| Flaps: LAND                                |                              |                              |      |     |      |             |
| Speed: 67 KIAS                             |                              |                              |      |     |      |             |
| Weight<br>[kg]<br>([lb])                   | Pressure<br>Altitude<br>[ft] | Steady Gradient of Climb [%] |      |     |      |             |
|                                            |                              | Temperature [°C]             |      |     |      | ISA         |
|                                            |                              | -25                          | 0    | 25  | 50   |             |
| <b>1160<br/>(2557)</b>                     | S.L.                         | 10.9                         | 8.6  | 6.6 | 4.7  | <b>7.4</b>  |
|                                            | <b>1000</b>                  | 10.0                         | 7.8  | 5.7 | 3.9  | <b>6.7</b>  |
|                                            | <b>2000</b>                  | 9.2                          | 6.9  | 4.9 | 3.1  | <b>6.0</b>  |
|                                            | <b>3000</b>                  | 8.3                          | 6.1  | 4.1 | 2.3  | <b>5.3</b>  |
|                                            | <b>4000</b>                  | 7.4                          | 5.2  | 3.2 | 1.4  | <b>4.6</b>  |
|                                            | <b>5000</b>                  | 6.6                          | 4.4  | 2.4 | 0.6  | <b>3.9</b>  |
|                                            | <b>6000</b>                  | 5.7                          | 3.5  | 1.6 | -0.2 | <b>3.3</b>  |
|                                            | <b>7000</b>                  | 4.8                          | 2.7  | 0.7 | -1.0 | <b>2.6</b>  |
| <b>1060<br/>(2337)</b>                     | S.L.                         | 12.9                         | 10.4 | 8.1 | 6.1  | <b>9.0</b>  |
|                                            | <b>1000</b>                  | 11.9                         | 9.4  | 7.2 | 5.2  | <b>8.3</b>  |
|                                            | <b>2000</b>                  | 11.0                         | 8.5  | 6.3 | 4.3  | <b>7.5</b>  |
|                                            | <b>3000</b>                  | 10.0                         | 7.6  | 5.4 | 3.4  | <b>6.8</b>  |
|                                            | <b>4000</b>                  | 9.1                          | 6.7  | 4.5 | 2.5  | <b>6.0</b>  |
|                                            | <b>5000</b>                  | 8.1                          | 5.7  | 3.6 | 1.7  | <b>5.3</b>  |
|                                            | <b>6000</b>                  | 7.2                          | 4.8  | 2.7 | 0.8  | <b>4.5</b>  |
|                                            | <b>7000</b>                  | 6.2                          | 3.9  | 1.8 | -0.1 | <b>3.8</b>  |
| <b>960<br/>(2116)</b>                      | S.L.                         | 15.2                         | 12.4 | 10  | 7.7  | <b>10.9</b> |
|                                            | <b>1000</b>                  | 14.1                         | 11.4 | 9.0 | 6.7  | <b>10.1</b> |
|                                            | <b>2000</b>                  | 13.1                         | 10.4 | 7.9 | 5.8  | <b>9.3</b>  |
|                                            | <b>3000</b>                  | 12.0                         | 9.3  | 6.9 | 4.8  | <b>8.4</b>  |
|                                            | <b>4000</b>                  | 11.0                         | 8.3  | 5.9 | 3.8  | <b>7.6</b>  |
|                                            | <b>5000</b>                  | 10.0                         | 7.3  | 4.9 | 2.8  | <b>6.8</b>  |
|                                            | <b>6000</b>                  | 8.9                          | 6.3  | 3.9 | 1.8  | <b>6.0</b>  |
|                                            | <b>7000</b>                  | 7.9                          | 5.3  | 2.9 | 0.9  | <b>5.2</b>  |

---

### **13. NOISE DATA**

Noise level, determined in accordance with ICAO/Annex 16 6<sup>th</sup> Ed., July 2011, Vol. I°, Chapter 10 and 14 CFR 36.1581(c), is **80.58 dB(A)**.

*NOTE: No determination has been made by the Federal Aviation Administration that the noise levels of this aircraft are or should be acceptable or unacceptable for operation at, into, or out of, any airport.*



# P2010 - Aircraft Flight Manual

---

INTENTIONALLY LEFT BLANK

---

## Section 9 - Supplements

*Ed. 2, Rev. 0*

### **Supplement n° D08 - ALTERNATIVE AVIONICS CONFIGURATION AND VARIABLE PITCH PROPELLER EQUIPPED AIRPLANES**

Supplement D08: pages replacement instructions

## **SECTION 6 – WEIGHT AND BALANCE**

Refer to the basic AFM, Section 6 Weight and Balance



INTENTIONALLY LEFT BLANK

**Supplement D08: pages replacement instructions**

## **SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**

**Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems Description**

According A/C configuration apply following pages replacement:

| <b>Supplement D08<br/>AIRFRAME AND SYSTEMS<br/>page</b> |                 | <b>AFM<br/>Section 7<br/>page</b>          |
|---------------------------------------------------------|-----------------|--------------------------------------------|
| GV 7-8 thru 11                                          | <b>REPLACE</b>  | Pages 7-8 thru 11 of basic AFM, Section 7  |
| GV 7-16                                                 | <b>REPLACES</b> | Page 7-16 of basic AFM, Section 7          |
| GV 7-20 thru 24                                         | <b>REPLACE</b>  | Pages 7-20 thru 24 of basic AFM, Section 7 |
| GV 7-27                                                 | <b>REPLACES</b> | Page 7-27 of basic AFM, Section 7          |
| GV 7-36                                                 | <b>REPLACES</b> | Page 7-36 of basic AFM, Section 7          |

INTENTIONALLY LEFT BLANK



### **3. FLIGHT CONTROLS**

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

The control of the stabilator trim is operated by means of a control wheel, located between the two front seats that acts directly on the control cables.

Stabilator trim position is displayed on a dedicated analogue indicator located on the LH area of the instrument panel.

Rudder Trimming device for lateral control is provided by means of an electrical actuator controlled by a rocker switch located near the pitch trim wheel; the surface is connected to a potentiometer linked to a rudder trim analogue indicator located on the LH area of the instrument panel.



## 4. INSTRUMENT PANEL

The instrument panel installed on P2010, when equipped with G500 suite, is presented below:

- N° 1 Garmin GDU 620 (PFD/MFD), (5);
- N° 1 Garmin GTN 650 (Com/Nav/Gps), (9);
- N° 1 Garmin GNC 255A (Com/Nav), (10);
- N° 1 Garmin GMA 340 (Audio Panel), (8);
- N° 1 Bendix/King KN 572 (DME unit), (14);
- N° 1 Bendix/King KR87 (ADF unit), (11);
- N° 1 JP Instruments EDM 930 (EIS unit), (13);
- N° 1 JP Instruments EDM 930 Remote Alarm Display, (12);
- N° 1 Mid-Continent MD-302 (Stand-by Instrument), (6);
- N° 1 Annunciator panel, (7);
- N° 1 Pitch trim indicator, (3);
- N° 1 Rudder trim indicator, (4);
- N° 1 Chronometer (2);



Fig. 7-8. INSTRUMENT PANEL

Ed. 2, Rev. 0

## Section 7 – Airframe and Systems description

### INSTRUMENT PANEL



#### 4.1 ENGINE CONTROL LEVER

Engine handling is via three levers: Throttle, RPM lever, Mixture control lever.

They're situated on the center control; the use of "front/forward" and "rear/backward" is defined in relation to the direction of flight (longitudinal).

##### Mixture control lever

This lever (right hand lever with red handle) controls the fuel-air mixture, which is supplied to the engine.

With the lever full forward, extra fuel is being supplied to the engine which at higher performance setting contributes to engine cooling.

In cruise, the mixture should be made leaner in order to reach the appropriate fuel-air mixture. The leaning procedure is given in Chapter 4.

Lever forward (RICH) >> Mixture rich (in fuel)

Lever to rear (LEAN) >> Mixture lean (in fuel)

To shut off the engine the mixture control lever is pulled to the rear stop: air without fuel is drawn into the cylinders that shuts down.

##### Throttle

This lever (left hand with large knob) is used to control manifold pressure (MAP).

High manifold pressure means a large quantity of fuel-air mixture is being supplied to engine, while low manifold pressure means a lesser quantity of fuel-air mixture is being supplied.

##### Propeller lever

By means of this lever (central lever with blue handle) the propeller governor controls the propeller pitch, and consequently engine RPM. A selected RPM is held constant by the governor independent of the airspeed and the throttle setting.

Lever forward (HIGH RPM) = fine pitch

Lever rearward (LOW RPM) = coarse pitch

Following a defect in governor or oil system, the blades go to the finest possible pitch (maximum RPM), thus allowing continuation of the flight.



**CAUTION**

*Following failure of the governor or a serious drop in oil pressure, the RPM should be adjusted using the throttle. Every effort should be made not to exceed 2700 RPM.*



**CAUTION**

*The throttle and RPM lever should be moved slowly, in order to avoid over-speed and excessively rapid RPM changes.*



## 4.2 ALTERNATE AIR

Alternate Air knob is located on the central pedestal; when the knob is fully pulled outward from the instrument panel, injectors receive maximum hot air. During normal operation, the knob is set in OFF position.

## 4.3 DEFROST AND CABIN HEAT

Two knobs, located on the lower side of the central pedestal, allow Defrost and Cabin Heat function. The one marked as “Defrost and Cabin Heat” allows hot air to perform windshield defrost and partially cabin heat.

The cabin heat control knob, when fully outward, allows cabin to receive maximum hot air. When both cabin heat and defrost and cabin heat are pulled, air is partitioned.



Fig. 7-9. CENTRAL PEDESTAL



## 7 POWERPLANT

### 7.1 ENGINE

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Manufacturer .....             | Lycoming Textron                                                                                            |
| Model .....                    | IO-360-M1A                                                                                                  |
| Type Certificate .....         | EASA TCDS no. IM.E.032                                                                                      |
| Engine type .....              | Fuel injected (IO), direct drive, four cylinder horizontally opposed, air cooled with down exhaust outlets. |
| Maximum power .....            | 134.0 kW (180hp) @ 2700 rpm                                                                                 |
| Maximum continuous power ..... | 129.2 kW (173.3hp) @ 2600 rpm                                                                               |

| Oil Consumption            |      |     |                         |                       |
|----------------------------|------|-----|-------------------------|-----------------------|
| Operation                  | RPM  | HP  | Max. Oil Cons. Qts./Hr. | *Max. Cyl. Head Temp. |
| Normal Rated               | 2700 | 180 | .80                     | 500°F (260°C)         |
| Performance Cruise (75%)   | 2450 | 135 | .45                     | 500°F (260°C)         |
| Economy Cruise (60R Rated) | 2350 | 117 | .39                     | 500°F (260°C)         |

### 7.2 PROPELLER

|                        |                                         |
|------------------------|-----------------------------------------|
| Manufacturer .....     | MT Propeller                            |
| Model .....            | MTV-15-B/193-52                         |
| Type Certificate ..... | EASA TCDS no. P.098                     |
| Blades/hub .....       | wood/composite 2-blades – aluminium hub |
| Diameter .....         | 1930 mm (6,33 ft) no reduction allowed  |
| Type .....             | Variable pitch                          |

#### Governor

|                    |              |
|--------------------|--------------|
| Manufacturer ..... | MT Propeller |
| Model .....        | P-860-23:    |
| Type .....         | Hydraulic    |





## **9 ELECTRICAL SYSTEM**

Primary DC power is provided by an external alternator with a 28 VDC output, rated of 70 Amps @ 2700 rpm. During normal operations, it recharges the battery.

Secondary DC power is provided by a lead type battery (GILL G-247) which provides the energy necessary for feeding the essential electrical loads in the event of an alternator failure.

The switch between the energy sources is automatic and no action is required in order to activate the alternate energy source.

For ground maintenance and/or starting, an external power socket is provided.

The alternator and battery are connected to the battery bus in order to provide energy for the electric equipment.

Each electrically fed instrument is connected to a dedicated circuit breaker which protects the cable from the battery bus to the associated electric equipment.



**WARNING**

*If the Ignition is in the position L, R, or BOTH, an accidental movement of the propeller may start the engine with possible danger for bystanders.*

In the following figure is presented the electrical system architecture.



## P2010 - Aircraft Flight Manual

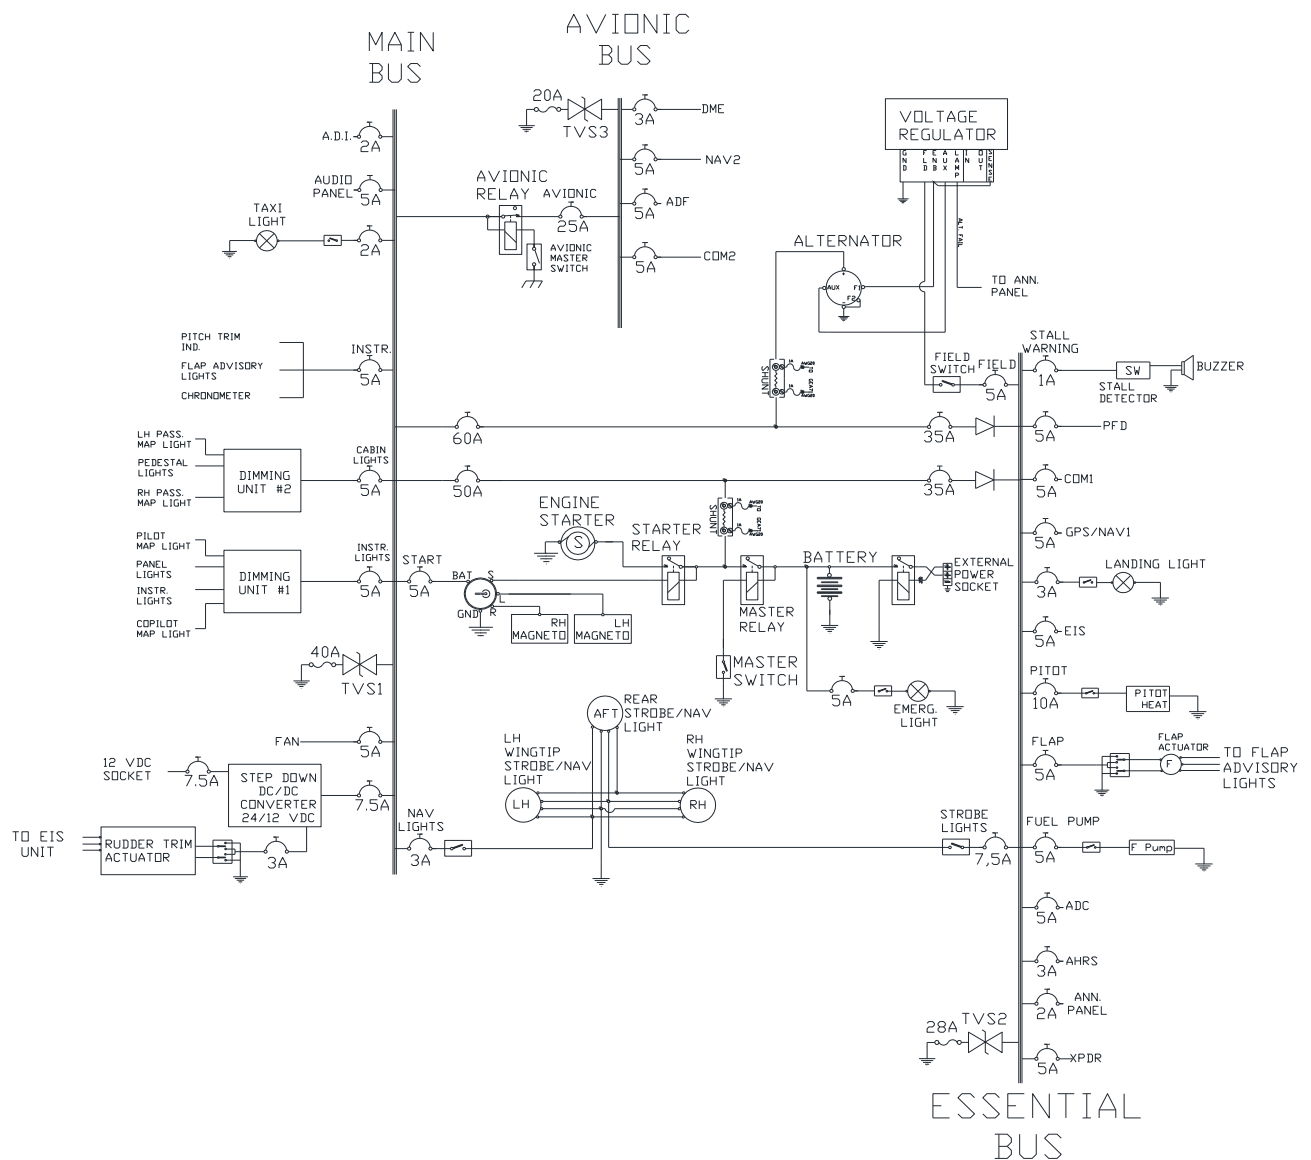


FIG.7-15. ELECTRICAL SYSTEM ARCHITECTURE

## 9.1 STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.



## 9.2 AVIONICS

P2010 avionic system, in this equipment configuration, is mainly based on avionics package Garmin G500.

The G500 suite installed on P2010 is based on a single display layout. It provides the pilot with all primary flight information and is able to act as a navigation indicator for external navigation sources such as VHF NAV and GPS. G500 also presents moving map information to the pilot.

Engine parameters are presented on an external instrument, EDM-930, equipped with an additional Remote Alarm Display which is intended to provide RPM and MAP information in the event of primary display failure.

An external annunciator panel is located in the top center area of the instrument panel.

In order to provide the pilot with main flight information in the event of PFD failure, or in the event of an AHRS and ADC units combined failure, an integrated digital stand-by instrument, Mid-Continent MD-302, featuring airspeed, altitude, attitude and slip information is installed.

An ELT device is installed and its control switch is located in the upper left area of the cockpit.

The Com/Nav functions are embodied into two devices, GNC 255 and GTN 650. The second one provides also GPS signal.

A dedicated DME and an dedicated ADF receivers are installed, and also a Transponder unit.

Two dedicated analogue indicators are provided for pitch and rudder trim positions.

The installed equipment is such that the aircraft is able to fly under day/night VFR and day/night IFR rules and to perform ILS CAT I approaches with ILS.



### CAUTION


*Standby MD302 has a better availability and integrity than Garmin G500 (at least for the critical parameters) against the HIRF/IEL threats. In case of inconsistency between Garmin PFD and MD-302SAM flight informations, it may be expected MD-302SAM to be more reliable, but cross-check with other flight parameters will be necessary to address the faulty source of information.*



### 9.3 EXTERNAL POWER SUPPLY

On the right side of the tail cone, an external power is present. Using this device it is possible to feed the electric system directly on the main bus bar, by an external power source. It should be used at the engine start-up in cold weather condition.

A white advisory “EXT. POWER” label will appear on annunciator panel upon connection of external power in order to advise pilot; the label will disappear upon disconnection of ground external power.

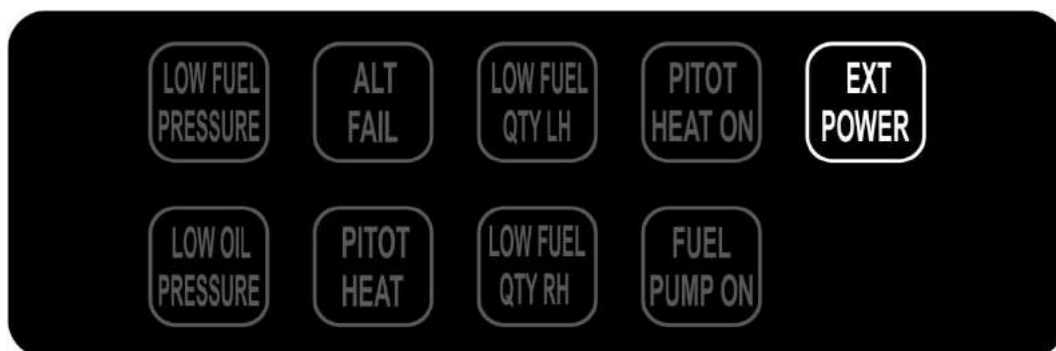

**CAUTION**

*Exercise caution while applying external power.*

*Exercise extreme caution while disconnecting external power with engine running due to airflow coming from the propeller.*

*Approach the power supply receptacle from rear of the wing.*

*Make a positive check, upon disconnection, that:*

- the power chord is free from any aircraft structure
- the receptacle is firmly closed.

Follow this procedure to start the engine using the external power source.

1. Ignition key, Master switch, Generator switch: OFF
2. Open the receptacle door and insert the external power source's plug into the socket
3. Engine start-up procedure (see Sect. 4 in this manual)
4. Disconnect the external power source's plug and close firmly the receptacle door.



## 10. PITOT-STATIC PRESSURE SYSTEMS

The P2010 air speed/altitude indicating systems are connected with a Pitot-Static system based on a total pressure/Pitot probe (simple Pitot tube, heated for icing protection) mounted on left wing strut and two static pressure ports connected in parallel and located in correspondence of engine firewall on left and right side of fuselage. Flexible hoses connects total pressure and static ports to primary analogue instruments, anemometer and altimeter.

Garmin G500 suite and standby MD 302 unit are connected to both static and total pressure lines providing both air speed and altitude information.

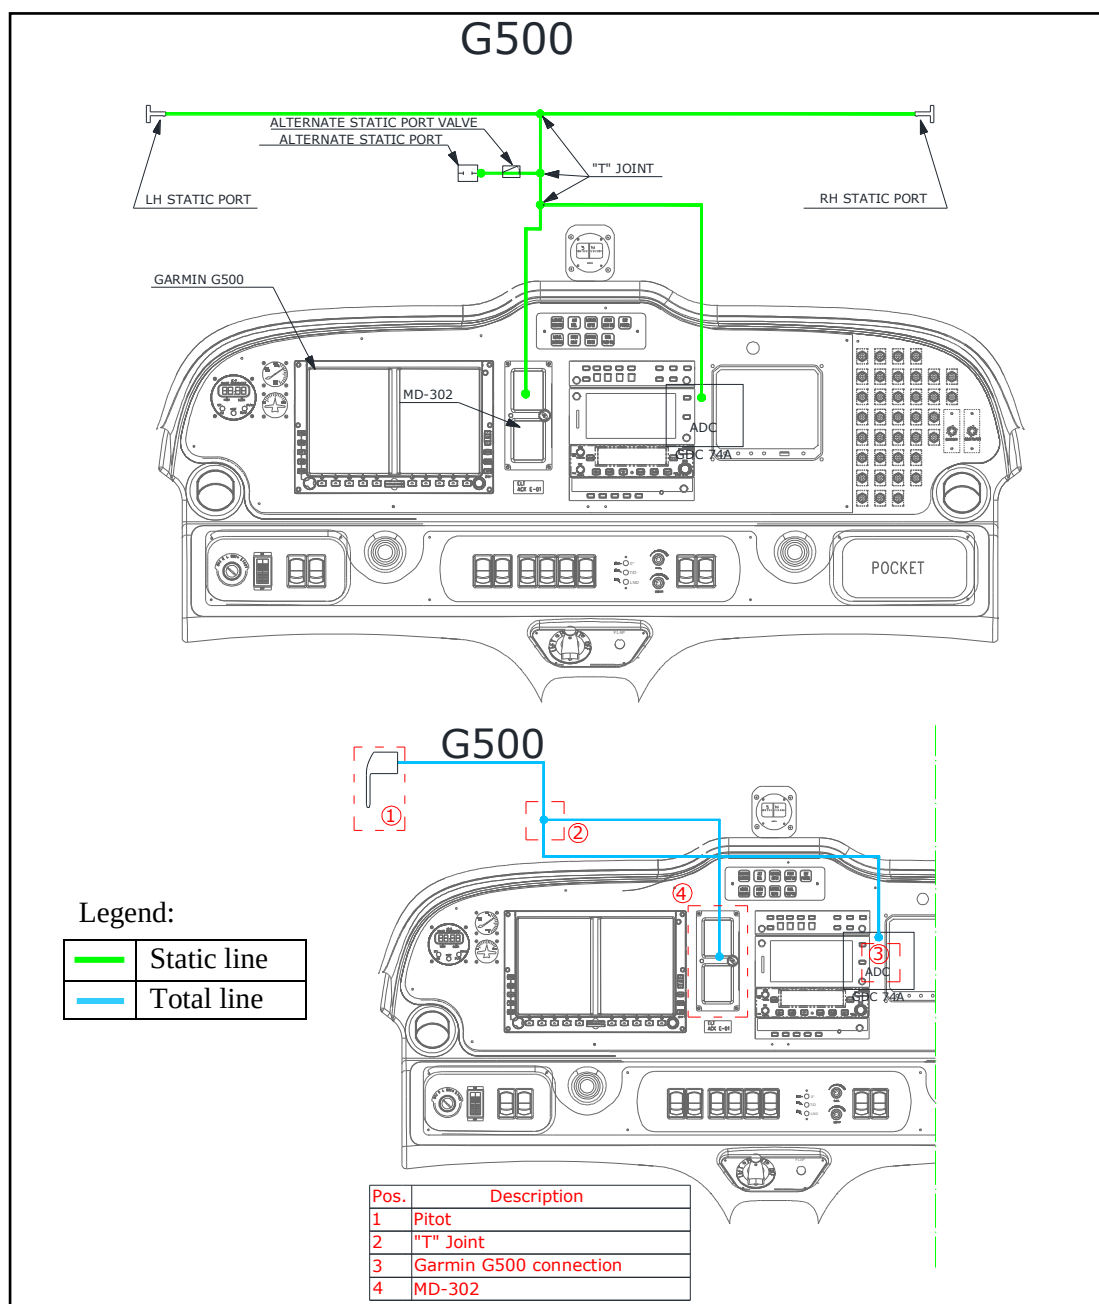


FIG.7-16. PITOT-STATIC SYSTEM



## 11.2 INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

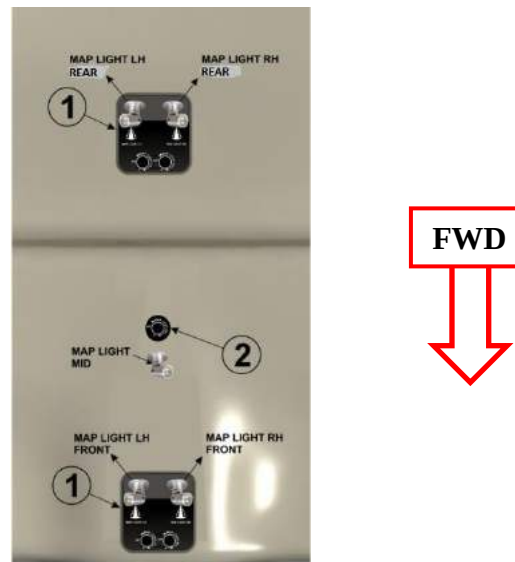


FIG.7-18. CABIN CEILING LIGHTS LAYOUT

The instrument panel can be illuminated by 8 incandescence light strips, all dimmable.



FIG.7-19. INSTRUMENT PANEL LIGHTS LAYOUT



## P2010 - Aircraft Flight Manual

Pedestal placards:





Supplement D08: pages replacement instructions

## **SECTION 8 – GROUND HANDLING & SERVICE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 8 Ground Handling & Service**

Refer to the basic AFM, Section 8 – Ground Handling & Service



INTENTIONALLY LEFT BLANK

## Supplement n° D10

### AFMS FOR Lycoming IO-390 Engine and G1000 Nxi Avionic Suite

#### Record of Revisions

| Rev | Revised page | Description of Revision                                            | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges                                       |
|-----|--------------|--------------------------------------------------------------------|-----------------|-----------|----------|-----------------------------------------------------------------------------|
|     |              |                                                                    | DO              | OoA       | HDO      |                                                                             |
| 0   | -            | First Issue                                                        | A.Sabino        | C. Caruso | M. Oliva | EASA Approval N° 10065113                                                   |
| 1   | D10-1, 5, 6  | Cover pages amended                                                | A.Sabino        | C. Caruso | M. Oliva | Approved under the authority of DOA, ref. EASA.21J.335 (MOD2010/131.180403) |
|     | E3-4         | Added Reference Airspeeds for Emg Procedures.                      |                 |           |          |                                                                             |
|     | E4-19        | Governor purging cycling added.                                    |                 |           |          |                                                                             |
|     | E4-24        | Reference to missed approach speed inserted in place of its value. |                 |           |          |                                                                             |
|     |              |                                                                    |                 |           |          |                                                                             |

#### List of Effective Pages

|                    | Page                                        | Revision |
|--------------------|---------------------------------------------|----------|
| <b>Cover Pages</b> | D10-2 thru 4, 7 thru 10                     | Rev. 0   |
|                    | D10-1, 5, 6                                 | Rev. 1   |
| <b>Section 1</b>   | E1-6                                        | Rev. 0   |
| <b>Section 2</b>   | E2-1, 5 thru 10, 17 thru 20                 | Rev. 0   |
| <b>Section 3</b>   | E3-14, E3-18, E3-19                         | Rev. 0   |
|                    | E3-4                                        | Rev. 1   |
| <b>Section 4</b>   | E4-1, 7, 13, 15, 20, 22 thru 24, 27 thru 34 | Rev. 0   |
|                    | E4-19, 24                                   | Rev. 1   |
| <b>Section 5</b>   | E5-1 thru 20                                | Rev. 0   |
| <b>Section 7</b>   | E7-8 thru 11, 16, 21, 27, 33, 35, 37        | Rev. 0   |

## **INTRODUCTION**

The information contained herein supplements or supersedes the basic Aircraft Flight Manual: detailed instructions are provided to allow the owner for replacing the AFM pages containing information amended as per Garmin G1000 Nxi and new powerplant system composed by Lycoming IO-390 engine and MTV-12 propeller.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

**Supplement D10: pages replacement instructions**

### **SECTION 1 – GENERAL**

**Make sure you first applied instructions reported on the basic AFM,  
Section 1 General**

According A/C configuration apply following pages replacement:

| <b>Supplement D10<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 1<br/>page</b> |
|------------------------------------------------|-----------------|-----------------------------------|
| E1-6                                           | <b>REPLACES</b> | Page 1-6 of basic AFM, Section 1  |

## 5. ENGINE

|                        |                                                                                      |
|------------------------|--------------------------------------------------------------------------------------|
| Manufacturer .....     | Lycoming Engines                                                                     |
| Model .....            | IO-390-C3B6                                                                          |
| Type Certificate ..... | EASA TCDS no. IM.E.097                                                               |
| Engine type .....      | Fuel injected (IO), direct drive, four cylinder<br>horizontally opposed, air cooled. |
| Maximum power .....    | 160.3 kW (215 hp) @ 2700 rpm                                                         |

## 6. PROPELLER

|                        |                                            |
|------------------------|--------------------------------------------|
| Manufacturer .....     | MT-Propeller Entwicklung GmbH              |
| Model .....            | MTV-12-B/183-59                            |
| Type Certificate ..... | EASA TCDS no. P.013                        |
| Blades/hub .....       | wood/composite 3-blades – aluminum hub     |
| Diameter .....         | 1830 mm (72 in)                            |
| Type .....             | Variable pitch propeller at constant speed |

### Governor

|                    |              |
|--------------------|--------------|
| Manufacturer ..... | MT Propeller |
| Model .....        | P-860-23:    |
| Type .....         | Hydraulic    |

**Supplement D10: pages replacement instructions**

## **SECTION 2 – LIMITATIONS**

**Make sure you first applied instructions reported on the basic AFM,  
Section 2 Limitations**

According A/C configuration apply following pages replacement:

| <b>Supplement D10<br/>LIMITATIONS<br/>page</b> |                    | <b>AFM<br/>Section 2<br/>page</b>        |
|------------------------------------------------|--------------------|------------------------------------------|
| E2-1                                           | <b>REPLACES</b>    | Page 2-1 of basic AFM, Section 2         |
| E2-5 thru 10                                   | <b>REPLACE</b>     | Page 2-7 thru 10 of basic AFM, Section 2 |
| E2-17 thru 20                                  | <b>TO BE ADDED</b> | At the end of Section 2 of basic AFM     |

**SECTION 2 – LIMITATIONS****INDEX**

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>1. INTRODUCTION.....</b>                                    | <b>3</b>  |
| <b>2. AIRSPEED LIMITATIONS.....</b>                            | <b>5</b>  |
| <b>3. AIRSPEED INDICATOR MARKINGS.....</b>                     | <b>6</b>  |
| <b>4. POWERPLANT LIMITATIONS.....</b>                          | <b>7</b>  |
| <b>5. FUEL.....</b>                                            | <b>8</b>  |
| <b>6. LUBRICANT.....</b>                                       | <b>8</b>  |
| <b>7. PAINT.....</b>                                           | <b>9</b>  |
| <b>8. PROPELLER.....</b>                                       | <b>9</b>  |
| <b>9. MAXIMUM OPERATING ALTITUDE.....</b>                      | <b>9</b>  |
| <b>10. AMBIENT TEMPERATURE.....</b>                            | <b>9</b>  |
| <b>11. POWERPLANT INSTRUMENT MARKINGS.....</b>                 | <b>10</b> |
| <b>12. OTHER INSTRUMENT MARKINGS.....</b>                      | <b>10</b> |
| <b>13. WEIGHTS.....</b>                                        | <b>11</b> |
| <b>14. CENTER OF GRAVITY RANGE.....</b>                        | <b>11</b> |
| <b>15. FLIGHT CREW.....</b>                                    | <b>11</b> |
| <b>16. APPROVED MANEUVERS.....</b>                             | <b>12</b> |
| <b>16.1. Types of Surface.....</b>                             | <b>12</b> |
| <b>17. MANEUVERS LOAD FACTOR LIMITS.....</b>                   | <b>12</b> |
| <b>18. KINDS OF OPERATION EQUIPMENT LIST (KOEL).....</b>       | <b>13</b> |
| <b>19. LIMITATIONS PLACARDS.....</b>                           | <b>15</b> |
| <b>19.1. Speed limitations.....</b>                            | <b>15</b> |
| <b>19.2. Operating limitations.....</b>                        | <b>15</b> |
| <b>19.3. No Smoking placard.....</b>                           | <b>15</b> |
| <b>19.4. Baggage Compartment placard.....</b>                  | <b>16</b> |
| <b>20. PBN (RNAV &amp; RNP) OPERATIONAL ELIGIBILITY .....</b>  | <b>17</b> |
| <b>20.1. General GNSS Navigation Equipment Approvals .....</b> | <b>17</b> |
| <b>20.2. G1000 NXi GNSS (GPS/SBAS) Limitations .....</b>       | <b>18</b> |

## 2. AIRSPEED LIMITATIONS

The following table addresses the airspeed limitations and their operational significance:

| AIRSPEED |                                   | KIAS | KCAS | REMARKS                                                                                                                                                   |
|----------|-----------------------------------|------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| $V_{NE}$ | Never exceed speed                | 169  | 164  | Do not exceed this speed in any operation.                                                                                                                |
| $V_{NO}$ | Maximum Structural Cruising Speed | 132  | 130  | Do not exceed this speed except in smooth air, and only with caution.                                                                                     |
| $V_A$    | Design Manoeuvring speed          | 120  | 119  | Do not make full or abrupt control movement above this speed, because under certain conditions the aircraft may be overstressed by full control movement. |
| $V_O$    | Operating Manoeuvring speed       |      |      |                                                                                                                                                           |
| $V_{FE}$ | Maximum flaps extended speed      | 91   | 92   | Do not exceed this speed for indicated flaps setting.                                                                                                     |



### 3. AIRSPEED INDICATOR MARKINGS

Airspeed indicator markings and their colour code are explained in the following table.

| MARKING    | KIAS             | EXPLANATION                                                                                                                                                                    |
|------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| White arc  | <b>47 – 91</b>   | Positive Flap Operating Range (lower limit is $V_{SO}$ , at specified maximum weight and upper limit is the maximum speed permissible with landing flaps extension).           |
| Green arc  | <b>57– 132</b>   | Normal Operating Range (lower limit is $V_{S1}$ at specified maximum weight and most forward c.g. with flaps retracted and upper limit is maximum structural speed $V_{NO}$ ). |
| Yellow arc | <b>132 – 169</b> | Manoeuvres must be conducted with caution and only in smooth air.                                                                                                              |
| Red line   | <b>169</b>       | Maximum speed for all operations.                                                                                                                                              |

## 4. POWERPLANT LIMITATIONS

Following table reports the operating limitations the installed engine:

**ENGINE MANUFACTURER:** Lycoming Engines

**ENGINE MODEL:** IO-390-C3B6

**MAXIMUM POWER:**

|              | Maximum Power<br>(hp) | Max RPM<br>(Propeller RPM) |
|--------------|-----------------------|----------------------------|
| Maximum T.O. | 215                   | 2700                       |

**Temperatures:**

Max CHT ..... 465° F (240° C)

Max Oil ..... 235° F (113° C)

**Oil Pressure:**

Minimum Idling ..... 25 psi (1.7 Bar)

Minimum Normal ..... 55 psi (3.8 Bar)

Maximum Normal ..... 95 psi (6.5 Bar)

Starting, Warm-up, taxi and take-off (Max) ..... 115 psi (7.9 Bar)

**Fuel pressure:**

- At Inlet to fuel injector:

Minimum ..... 14 psi (0.96 Bar)

Maximum ..... 35 psi (2.41 Bar)

## 5. FUEL

|                             |                                       |
|-----------------------------|---------------------------------------|
| <b>2 TANKS:</b>             | 120 litres each one (31.7 US gallons) |
| <b>MAXIMUM CAPACITY:</b>    | 240 litres (63.4 US gallons)          |
| <b>MAXIMUM USABLE FUEL:</b> | 231 litres (61 US gallons)            |
| <b>APPROVED FUEL:</b>       | AVGAS 100 LL                          |

For additional information, refer to Lycoming Service Instruction No. 1070, latest issue.

## 6. LUBRICANT

Recommended Grade Oil:

| <b>Average Ambient<br/>Temperature</b> | <b>MIL-L-6082B or<br/>SAEJ1966 Spec.<br/>Mineral Grades</b> | <b>MIL-L-22851 or<br/>SAEJ1899 Spec.<br/>Ashless Dispersant Grades</b> |
|----------------------------------------|-------------------------------------------------------------|------------------------------------------------------------------------|
| All Temperatures                       | ----                                                        | SAE15W50 or SAE20W-50                                                  |
| Above 80°F                             | SAE60                                                       | SAE60                                                                  |
| Above 60°F                             | SAE50                                                       | SAE40 or SAE50                                                         |
| 30°F to 90°F                           | SAE40                                                       | SAE40                                                                  |
| 0°F to 70°F                            | SAE30                                                       | SAE40, SAE30, SAE20W40                                                 |
| Below 10°F                             | SAE20                                                       | SAE30 or SAE20W30                                                      |

For additional info, refer to Engine Installation and Operation Manual IO-390-C Series, latest issue.

## 7. PAINT

To ensure that the temperature of the composite structure does not exceed limits, the outer surface of the aeroplane must be painted with white paint, except for areas of registration marks, placards, and ornament.

Refer to Aircraft Maintenance Manual (AMM), ATA Chapter 4 and 51, for specific paint requirements.

## 8. PROPELLER

|                            |                                        |
|----------------------------|----------------------------------------|
| <b>MANUFACTURER:</b> ..... | MT-Propeller Entwicklung GmbH          |
| <b>MODEL:</b> .....        | MTV 12B/183-59                         |
| <b>TYPE:</b> .....         | wood/composite 3-blade, variable pitch |
| <b>DIAMETER:</b> .....     | 1830 mm (72 in)                        |

## 9. MAXIMUM OPERATING ALTITUDE

Maximum operating altitude is 12000 ft (3658 m) MSL.



**CAUTION**

*Flight crew is required to use supplemental oxygen according to applicable Air Operation Rules.*

## 10. AMBIENT TEMPERATURE

Ambient temperature: from -25°C (-13 °F) to +50°C (122 °F).



**WARNING**

*Flight in expected and/or known icing conditions is forbidden.*

## 11. POWERPLANT INSTRUMENT MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

| INSTRUMENT |        | RED ARC<br>Minimum<br>limit | WHITE ARC<br>Advisory | GREEN ARC<br>Safe operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum<br>limit |
|------------|--------|-----------------------------|-----------------------|-----------------------------|-----------------------|-----------------------------|
| PROPELLER  | RPM    | /                           | /                     | 950 - 2700                  | 0 - 950               | 2700 - 2800                 |
| MAP        | inHg   | /                           | 30-35                 | 10 - 30                     |                       |                             |
| OIL TEMP.  | °F     | /                           | /                     | 140 - 235                   | 0 - 140               | 235 - 245                   |
| CHT        | °F     | /                           | /                     | 150 - 465                   | /                     | 465 - 475                   |
| EGT        | °F     | /                           | 1000 - 1500           | /                           | /                     | 1500 - 1550                 |
| OIL PRESS  | psi    | 0 - 25                      | /                     | 55-95                       | 25 - 55<br>95 - 115   | 115 - 125                   |
| FUEL PRESS | psi    | 0 - 14                      | /                     | 14-35                       | /                     | 35 - 40                     |
| FUEL QTY   | litres | 0                           | /                     | 0 - 115                     | /                     | /                           |
|            | gal    | 0                           |                       | 0 - 30.4                    |                       |                             |
| FUEL FLOW  | l/hr   | /                           | 0 - 100               | /                           | /                     | /                           |
|            | gal/hr |                             | 0 - 27                |                             |                       |                             |

## 12. OTHER INSTRUMENT MARKINGS

| INSTRUMENT | RED ARC<br>Minimum limit | GREEN ARC<br>Safe operation | YELLOW ARC<br>Caution | RED ARC<br>Maximum limit |
|------------|--------------------------|-----------------------------|-----------------------|--------------------------|
| Voltmeter  | 20 - 21 Volt             | 24 - 30 Volt                | 21 - 24 Volt          | 30 - 31 Volt             |

---

## **20 PBN (RNAV & RNP) OPERATIONAL ELIGIBILITY**

### **20.1 General GNSS Navigation Equipment Approvals**

The GPS/GNSS receivers in the G1000 NXi System are certified to TSO C129a Class A1 and ETSO C129a Class A1 or TSO C145a and ETSO 2C145a.

The Garmin GNSS navigation system as installed in this airplane complies with the requirements of AC 20-138A, JAA TGL-10 and AMCs 20-4A, 20-27A and 20-28.

It's approved for navigation using GPS and SBAS (within the coverage of a Satellite Based Augmentation System complying with ICAO Annex 10) for IFR en route, terminal area, precision and non-precision approach operations.

The G1000 NXi System meets the requirements for GPS/GNSS as a Primary Means of Navigation for Oceanic/Remote Operations (RNP-10) per AC 20-138C, FAA Notice N8110.60, FAA Order 8400-12C and FAA Order 8700-1. Both GPS/GNSS receivers are required to be operating and receiving usable signals except for routes requiring only one Long Range Navigation sensor.

In accordance to ICAO doc 9613 (Fourth Edition – 2013), the G1000 NXi System has been shown to be eligible for:

- B-RNAV (RNAV-5) per AMC 20-4A.
- RNAV1 / P-RNAV (RNP-1) Enroute and Terminal navigation per JAA TGL-10 Rev.1.
- RNP APCH LNAV/VNAV per EASA AMC 20-27. This does not include APV BARO-VNAV operation which is not cleared.
- LPV with SBAS per EASA AMC 20-28.

provided that the G1000 NXi is receiving usable navigation information from at least one GPS receiver.

## **20.2 G1000 NXi GNSS (GPS/SBAS)**

### **Navigation System Limitations**

The pilot must confirm at system initialization that the Navigation database is current. Navigation database is expected to be current for the duration of the flight.

If the AIRAC cycle will change during flight, the pilot must ensure the accuracy of navigation data, including suitability of navigation facilities used to define the routes and procedures for flight. If an amended chart affecting navigation data is published for the procedure, the database must not be used to conduct the procedure.

GPS/SBAS based IFR enroute, oceanic, and terminal navigation is prohibited unless the pilot verifies and uses a valid, compatible, and current Navigation database or verifies each waypoint for accuracy by reference to current approved data.

Discrepancies that invalidate a procedure must be reported to Garmin International. The affected procedure is prohibited from being flown using data from the Navigation database until a new Navigation database is installed in the airplane and verified that the discrepancy has been corrected.

Contact information to report Navigation database discrepancies can be found at [www.Garmin.com](http://www.Garmin.com)>Support>Contact Garmin Support>Aviation. Pilots and operators can view navigation data base alerts at [www.Garmin.com](http://www.Garmin.com) > In the Air> NavData Alerts.

For flight planning purposes, in areas where SBAS coverage is not available, the pilot must check RAIM availability.

Within Europe, RAIM availability can be determined using the G1000 NXi WFDE Prediction program or Europe's AUGER GPS RAIM Prediction Tool at <http://augur.ecac-nav.com/augur/app/home>.

This requirement is not necessary if SBAS coverage is confirmed to be available along the entire route of flight.

The route planning and WFDE prediction program may be downloaded from the GARMIN G1000 NXi website on the internet. For information on using the WFDE Prediction Program, refer to GARMIN WAAS FDE Prediction Program, part number 190-00643-01, 'WFDE Prediction Program instructions'.

For flight planning purposes for operations within European B-RNAV and P-RNAV airspace, if more than one satellite is scheduled to be out of service, then the availability of GPS integrity RAIM shall be confirmed for the intended flight (route and time).

In the event of a predicted continuous loss of RAIM of more than five minutes for any part of the intended flight, the flight should be delayed, cancelled, or rerouted on a track where RAIM requirements can be met.

Both GPS navigation receivers must be operating and providing GPS navigation guidance to the PFD for operations requiring RNP-4 performance.

Whenever possible, RNP and RNAV routes including Standard Instrument Departures (SIDs) and Obstacle Departure Procedures (ODPs), Standard Terminal Arrival (STAR), and enroute RNAV "Q" and RNAV "T" routes should be loaded into the flight plan from the database in their entirety, rather than loading route waypoints from the database into the flight plan individually. Selecting and inserting individual named fixes from the database is permitted, provided all fixes along the published route to be flown are inserted. "GPS", "or GPS", and "RNAV (GPS)" instrument approaches using the G1000 NXi System are prohibited unless the pilot verifies and uses the current Navigation database. GPS based instrument approaches must be flown in accordance with an approved instrument approach procedure that is loaded from the Navigation database.

Not all published Instrument Approach Procedures (IAP) are in the Navigation database.

Pilots planning on flying an RNAV instrument approach must ensure that the Navigation database contains the planned RNAV Instrument Approach Procedure and that approach procedure must be loaded from the Navigation database into the FMS flight plan by its name.

The navigation equipment required to join and fly an instrument approach procedure is indicated by the title of the procedure and notes on the IAP chart.

Use of the GARMIN G1000 NXi GPS/SBAS receivers to provide navigation guidance during the final approach segment of an ILS, LOC, LOC-BC, LDA, SDF,MLS or any other type of approach not approved for "or GPS" navigation is prohibited. When using the G1000 NXi VOR/LOC/GS receivers to fly the final approach segment, VOR/LOC/GS navigation data must be selected and presented on the CDI.

## **SID/STAR**

The use of SIDs and STARs stored in GPS data base is only authorized, if the pilot has checked that GPS procedure corresponds to the one given in the official documentation (coordinates of various points and paths between points).



INTENTIONALLY LEFT BLANK

**Supplement D10: pages replacement instructions**

### **SECTION 3 – EMERGENCY PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 3 Emergency Procedures**

According A/C configuration apply following pages replacement:

| <b>Supplement D10<br/>LIMITATIONS<br/>page</b> |                 | <b>AFM<br/>Section 3<br/>page</b> |
|------------------------------------------------|-----------------|-----------------------------------|
| E3-4                                           | <b>REPLACES</b> | Page 3-4 of basic AFM, Section 3  |
| E3-14                                          | <b>REPLACES</b> | Page 3-14 of basic AFM, Section 3 |
| E3-18                                          | <b>REPLACES</b> | Page 3-18 of basic AFM, Section 3 |
| E3-19                                          | <b>REPLACES</b> | Page 3-19 of basic AFM, Section 3 |

**1.1. REFERENCE AIRSPEEDS FOR EMERGENCY PROCEDURES**

|                                  |         |
|----------------------------------|---------|
| Best Glide Speed ( $V_{GLIDE}$ ) | 84 KIAS |
| No-Flaps Approach Speed          | 78 KIAS |

### 6.3 PROPELLER OVERSPEED

In case of propeller overspeed in flight, apply following procedure:

1. Throttle Lever ..... REDUCE power
2. Propeller Lever ..... Decrease RPM
3. Mixture Lever ..... As required
4. RPM indicator ..... CHECK

**If it is not possible to decrease propeller RPM,**

- land as soon as possible applying Forced landing procedure.



*Maximum propeller rpm exceedance may cause engine components damage.*

*Monitor engine RPM; overspeed shall be prevented by retarding propeller lever.*

### 6.4 IRREGULAR RPM

1. Oil Pressure: ..... CHECK
2. Fuel Pressure: ..... CHECK

**If Oil and Fuel Pressure stay within limits and a governor failure is suspected,**

- Land as soon as practical, monitoring RPM and Propeller Lever position.

## **6.10 DEFECTIVE ENGINE CONTROLS**

### **Defective Mixture Control Cable**

1. Maintain altitude to the nearest airfield
2. During descent, check engine behaviour to a higher power setting. A lean mixture can lead to engine roughness and loss of power. Landing approach must be planned accordingly.

**WARNING**

Go-around may then be impossible.

### **Defective Throttle Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with Propeller lever
2. Perform landing with shut-down engine applying *Forced landing procedure*.

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*.

### **Defective Propeller Lever Control Cable**

If power is sufficient to continue flight:

1. Approach nearest airfield, control engine power with throttle
2. Perform normal landing.

**WARNING**

Go-around may then be impossible.

If power is not sufficient to continue flight:

1. Carry out *Forced landing procedure*.

## 7 INFLIGHT ENGINE RESTART

### 7.1 PROPELLER WINDMILLING

**WARNING**

*In case of engine shutdown, propeller will keep windmilling and will not stop, preventing the use of ignition key. Engine inflight restart must be performed without using ignition key with propeller windmilling in order to avoid possible engine damages.*

*Typical indication of a potential engine shutdown, with windmilling propeller, will be low RPM values incompatible with power lever demand, to be confirmed by other engine instrument (OIL Pressure, CHT, EGT running down abnormally).*

*Flight test results suggest a windmilling propeller speed as low as 1000 RPM at low speeds in case of an engine flameout.*

*Inflight engine restart may be performed during 1g flight anywhere within the normal operating envelope of the airplane.*

- |                                  |                         |
|----------------------------------|-------------------------|
| 1. Master switch .....           | Check ON                |
| 2. Fuel pump .....               | ON                      |
| 3. Fuel quantity indicator ..... | CHECK                   |
| 4. Fuel Selector .....           | SWITCH TANK             |
| 5. Throttle Lever .....          | Minimum 1cm. above IDLE |
| 6. Propeller Lever.....          | Full forward            |
| 7. Mixture .....                 | FULL rich               |
| 8. Throttle lever .....          | SET as required         |

#### **In case of unsuccessful engine restart:**

- **Land as soon as possible** applying *Forced landing procedure*.

#### **In case of successful engine restart:**

- **Land as soon as possible**

**CAUTION**

*After engine restart, if practical, moderate propeller rpm to allow the temperatures for stabilizing in the green arcs.*

**Supplement D10: pages replacement instructions**

## **SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM,  
Section 4 Normal Procedures**

According A/C configuration apply following pages replacement:

| <b>Supplement D10<br/>NORMAL<br/>PROCEDURES<br/>page</b> |                    | <b>AFM<br/>Section 4<br/>page</b>         |
|----------------------------------------------------------|--------------------|-------------------------------------------|
| E4-1                                                     | <b>REPLACES</b>    | Pages 4-1 of basic AFM, Section 4         |
| E4-7                                                     | <b>REPLACES</b>    | Page 4-7 of basic AFM, Section 4          |
| E4-13                                                    | <b>REPLACES</b>    | Page 4-13 of basic AFM, Section 4         |
| E4-15                                                    | <b>REPLACES</b>    | Page 4-15 of basic AFM, Section 4         |
| E4-19                                                    | <b>REPLACES</b>    | Page 4-19 of basic AFM, Section 4         |
| E4-20                                                    | <b>REPLACES</b>    | Page 4-20 of basic AFM, Section 4         |
| E4-22 thru 24                                            | <b>REPLACE</b>     | Page 4-22 thru 24 of basic AFM, Section 4 |
| E4-27 thru 34                                            | <b>TO BE ADDED</b> | At the end of Section 4 of basic AFM      |

## **SECTION 4 – NORMAL PROCEDURES**

### **INDEX**

|                                                                                                   |           |
|---------------------------------------------------------------------------------------------------|-----------|
| <b>1. INTRODUCTION .....</b>                                                                      | <b>3</b>  |
| <b>2. IFR FLIGHT: TRAINING PRE-REQUISITES AND INCREMENTAL<br/>EXPOSITION TO G1000 SUITE .....</b> | <b>4</b>  |
| <b>3. AIRSPEEDS FOR NORMAL OPERATIONS .....</b>                                                   | <b>7</b>  |
| <b>4. PRE-FLIGHT INSPECTION.....</b>                                                              | <b>9</b>  |
| <b>4.1. CABIN INSPECTION .....</b>                                                                | <b>9</b>  |
| <b>4.2. AIRCRAFT WALK-AROUND.....</b>                                                             | <b>10</b> |
| <b>5. CHECKLISTS.....</b>                                                                         | <b>15</b> |
| <b>5.1. BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION).....</b>                              | <b>15</b> |
| <b>5.2. ENGINE STARTING .....</b>                                                                 | <b>16</b> |
| <b>5.3. BEFORE TAXIING .....</b>                                                                  | <b>17</b> |
| <b>5.4. TAXIING .....</b>                                                                         | <b>18</b> |
| <b>5.5. BEFORE TAKEOFF.....</b>                                                                   | <b>19</b> |
| <b>5.6. TAKEOFF .....</b>                                                                         | <b>20</b> |
| <b>5.7. CLIMB.....</b>                                                                            | <b>21</b> |
| <b>5.8. CRUISE.....</b>                                                                           | <b>22</b> |
| <b>5.9. MIXTURE ADJUSTMENT RECOMMENDATION .....</b>                                               | <b>22</b> |
| <b>5.10. DESCENT.....</b>                                                                         | <b>23</b> |
| <b>5.11. BEFORE LANDING .....</b>                                                                 | <b>24</b> |
| <b>5.12. BALKED LANDING/MISSED APPROACH .....</b>                                                 | <b>24</b> |
| <b>5.13. GO-AROUND .....</b>                                                                      | <b>24</b> |
| <b>5.14. AFTER LANDING .....</b>                                                                  | <b>24</b> |
| <b>5.15. ENGINE SHUT DOWN .....</b>                                                               | <b>25</b> |
| <b>5.16. POSTFLIGHT CHECKS .....</b>                                                              | <b>25</b> |
| <b>5.17. FLIGHT IN RAIN .....</b>                                                                 | <b>26</b> |
| <b>5.18. REFUELLING .....</b>                                                                     | <b>26</b> |
| <b>5.19. FLIGHT AT HIGH ALTITUDE.....</b>                                                         | <b>26</b> |
| <b>6. ADDITIONAL GUIDANCE FOR RNAV .....</b>                                                      | <b>27</b> |
| <b>6.1. APPROACH APPLICATIONS .....</b>                                                           | <b>29</b> |



### 3. AIRSPEEDS FOR NORMAL OPERATIONS

The following airspeeds are those which are significant for normal operations.

|                                     | <b>FLAPS</b> | <b>1160kg<br/>(2557lbs)</b> |
|-------------------------------------|--------------|-----------------------------|
| Rotation Speed ( $V_R$ )            | T/O          | <b>58 KIAS</b>              |
| Best Angle-of-Climb Speed ( $V_X$ ) | 0°           | <b>77 KIAS</b>              |
| Best Rate-of-Climb speed ( $V_Y$ )  | 0°           | <b>86 KIAS</b>              |
| Flaps ( $V_{FE}$ )                  | T/O & FULL   | <b>91 KIAS</b>              |
| No flaps approach                   | 0°           | <b>78 KIAS</b>              |
| Approach speed                      | T/O          | <b>73 KIAS</b>              |
| Final Approach Speed                | FULL         | <b>68 KIAS</b>              |
| Optimal touch down speed            | FULL         | <b>58 KIAS</b>              |
| Missed approach speed               | FULL         | <b>81 KIAS</b>              |
| Manoeuvring speed ( $V_A$ )         | 0°           | <b>120 KIAS</b>             |
| Vglide                              | 0°           | <b>84 KIAS</b>              |
| Never Exceed Speed ( $V_{NE}$ )     | 0°           | <b>169 KIAS</b>             |

- S** Propeller and spinner condition *CHECK for nicks, cracks, dents and other defects, propeller should rotate freely. Check fixing and lack of play between blades and hub.*
- T** Check the engine cowling surface conditions and perform the following checks:
- a) *Nacelle inlets and exhausts openings must be free of obstructions. Visually inspect that ram air intake is unobstructed. If inlet and outlet plugs are installed, they must be removed.*
  - b) *Check radiator. There should be no indication of leakages and obstructions.*
  - c) *Check for foreign objects*
  - d) *Check exhaust general conditions.*
  - e) *At cold engine, Check engine oil level and replenish as required. Prior to long flights oil should be added so that the oil level reaches the “max” mark.*
  - f) *Drain off Gascolator for water and sediment (drain until no water comes off). Then make sure drain valve is closed.*
  - g) *Check drainage hoses free of obstructions.*
- U** Engine cowling fittings *CHECK all fixed or locked.*
- V** Landing/taxi light and LH static port *CHECK, Visual inspection for integrity. Right side tank vent: check for obstructions.*
- Z** Tow bar and chocks *REMOVE, stow on board pitot, static ports and stall warning protective plugs.*

**NOTE**

*Avoid blowing inside Pitot tube and inside airspeed indicator system's static ports as this may damage instruments.*

## 5. CHECKLISTS

### 5.1. BEFORE STARTING ENGINE (AFTER PREFLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*
2. Flight controls: *operate full stroke checking for movement smoothness, free of play and friction.*
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Throttle: *IDLE*
6. Propeller Lever: *MAX RPM*
7. Mixture control Lever: *LEAN*
8. Circuit Breakers: *check all IN*
9. Master switch: *ON, wait PFD turn on, Check ALT OUT caution ON, Check LOW FP and LOW OP warning ON*
10. Only before the first flight of the day:

Standby Instrument: *Check no red crosses displayed.*

- a. Press and hold the control knob (approx. 2 sec)
- b. Rotate the knob selecting "INFO>" page then press it
- c. Select "BATTERY INFO" page then press the knob
- d. Check "CHARGE (%)" to be more than 80%, then exit menu
11. Avionic Master switch: *ON, wait MFD turn on, check instruments, check Voltage on Main and Essential Buses.*
12. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection), then update the Garmin fuel content in the totalizer accordingly*

#### NOTE

*The totalizer function available on Garmin Engine page allows input only up to 230lbs (maximum usable fuel). Initial Fuel indication on totalizer must be corrected manually (as it does not use the aircraft fuel quantity indicators as input). Once correctly initialized, fuel consumption on totalizer is very precise as it takes instantaneous fuel flow for computation*

13. Electric fuel pump: *ON (check for audible pump noise and increase of fuel pressure)*
14. Warning "LOW FUEL PRESSURE": *extinguished*
15. Electric fuel pump: *OFF*
16. Flap control: *cycle fully extended and then set to T/O*
17. Pitch Trim: *cycle fully up and down, then set to NEUTRAL*
18. Rudder trim: *cycle full right and left, then set to NEUTRAL*



#### WARNING

*Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct  $V_R$ .*

19. Nav & Strobe lights: *ON*

#### NOTE

*In absence of RH seat occupant: fasten seat belts around the seat in order to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency*

20. Doors: *Closed and locked*

## 5.5. BEFORE TAKEOFF

1. Parking brake: *brake pedal press, ON*
2. Engine instruments: *Check within limits*
3. ALT OUT caution: *OFF (check)*
4. Electric Fuel pump: *ON*
5. Fuel selector valve: *select the fullest tank*
6. Fuel pressure: *check*
7. Mixture: *FULL RICH*

### NOTE

For 5000ft density altitude and above, or high ambient temperatures, a *FULL RICH* mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operations

8. Throttle: *set 1500 RPM*
  - a. Alternate Air check:
    - Alternate Air: *PULL (Check drop 50-100 RPM)*
  - b. Mixture check:
    - Mixture: *reduce*
    - EGT: *check increase*
    - FF: *check decrease*
    - Mixture: *FULL RICH*
9. Throttle: *2100 RPM*
10. Propeller Lever:
  - *Pull back until a drop of max. 500 RPM is reached then high RPM*
  - *Cycle 3 times*
11. Magneto Check: *L – BOTH – R – BOTH*
  - *Max RPM drop: 175 RPM*
  - *Max. difference: 50 RPM*
12. Throttle: *Idle*
13. Flaps: *check T/O*
14. Pitch and Rudder trim: *check neutral*
15. Flight controls: *check free*
16. Seat belts: *check fastened*
17. Doors: *check closed and locked*
18. Parking brake: *Release*
19. Landing light: *ON as required*
20. XPDR: *ON*

## 5.6. TAKEOFF

**NOTE**

*For 5000 ft density altitude and above, or high ambient temperatures, a FULL RICH mixture may cause rough running of the engine or a loss of performance. The mixture may be adjusted to obtain smooth engine operation.*

*Lean to maximum RPM at Full Throttle prior to take-off where airports are at 5000 ft density altitude or higher.*

1. Pitot HEAT: *ON if required*
2. Fuel pump: *ON*
3. Brakes: *apply*
4. Throttle: *FULL and check approximately 2680  $\pm$  20 RPM*



*Engine proper performance at full throttle shall be checked early in the ground roll in order to abandon take-off if necessary.*

*A rough engine, sluggish RPM increase or failure to reach take-off RPM are reasons for abandoning the take-off. If the engine oil is cold, an oil pressure in the yellow sector is permissible.*

5. Engine instruments: *check parameters within the limits*
6. Brakes: *Release*

*Once  $V_R$  is reached:*

7. Rotate and allow airspeed to reach  $V_X$

*Above a safe height:*

8. Landing lights: *OFF*

## 5.8. CRUISE

1. Power: set performance as required, refer to table in section 5 of AFM
2. Propeller lever: 1800-2400 RPM
3. Fuel tank selector: as required to maintain symmetric balance
4. Mixture: set in accordance with following para 5.9

**NOTE**

To optimize engine life, monitor CHT as advised in the last issues of engine manufacturer's publications.

**NOTE**

Monitor and manually compensate asymmetrical fuel consumption by switching fuel selector valve. Switch ON the electric fuel pump prior to swap the fuel feeding from one tank to another.

## 5.9. MIXTURE ADJUSTMENT RECOMMENDATION



The maximum permissible cylinder head temperature must never be exceeded. The mixture control lever should always be moved slowly.

Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH before throttle adjustment.

Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.

**NOTE**

If not otherwise specified in the last issues of engine manufacturer's publications, CHT should be kept below 435 °F (high performance cruise) and below 400 °F (economy cruise) for maximum service life.

### Best Cruise Economy Mixture

The best economy mixture setting may only be used up to a power setting of 75 %. In order to obtain the lowest specific fuel consumption at a particular power setting, proceed as follows:

- Slowly pull the mixture control lever back towards LEAN until the engine starts to run roughly.
- Then push the mixture control lever forward just far enough to restore smooth running. At the same time the exhaust gas temperature (EGT) should reach a maximum.

### Best Cruise Power Mixture

The mixture can be set for maximum performance at all power settings:

- The mixture should first be set as for best economy.
- The mixture should then be enriched until the exhaust gas temperature is approximately 100°F lower.

This mixture setting produces the maximum performance for a given manifold pressure and is mainly used for high power settings (approximately 75 %).

## 5.10. DESCENT

1. Mixture control: *slowly full rich*
2. Propeller lever: *as required*
3. Throttle: *reduce as required*

**NOTE**

*Shock cooling shortens engine life.*

*When reducing power, the change in cylinder head temperature should not exceed 50°F per minute. In order to ensure best practice and avoid potential illumination of ALT FAIL (due to low propeller speed), the following best practice should be observed:*

- *Reducing power to maintain at least the best glide speed;*
- *Opening the ALTERNATE AIR command to full open (to avoid ice accretion).*

**CAUTION**

*The maximum permissible cylinder head temperature must never be exceeded. The mixture control lever should always be moved slowly.*

*Before selecting a higher power setting the mixture control lever should, on each occasion, be moved slowly to fully RICH.*

*Care should always be taken that the cylinders do not cool down too quickly. The cooling rate should not exceed 50 °F per minute.*

### 5.11. BEFORE LANDING

1. Electric fuel pump: *ON*
2. Fuel valve: *select the fullest tank*
3. Landing Light: *ON*

*On downwind, leg abeam touch down point:*

4. Flaps: *set T/O (below  $V_{FE}$ )*

#### NOTE

*Expect to adjust pitch trim (pitch down) when extending flaps to T/O or LAND*

5. Approach speed: *set On final leg, before landing:*
6. Mixture control lever: *RICH*
7. Propeller Lever: *HIGH RPM*
8. Flaps: *LAND*
9. Final Approach Speed: *set*



**CAUTION**

*In conditions such as (e.g.) strong wind, danger of windshear or turbulence a higher approach speed shall be selected..*

### 5.12. BALKED LANDING/MISSED APPROACH

1. Throttle: *FULL*
2. Speed: *keep over 81 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

*Above a safe height:*

4. Landing lights: *OFF*

### 5.13. GO-AROUND

1. Throttle: *FULL*
2. Speed: *keep over 81 KIAS, climb to  $V_Y$  or  $V_X$  as applicable*
3. Flaps position: *T/O*

### 5.14. AFTER LANDING

1. Throttle: *Idle*
2. Brakes: *apply*
3. Pitot heat: *OFF (if ON)*
4. Flaps: *UP*
5. Electric Fuel Pump: *OFF*
6. XPDR: *OFF*
7. Landing light: *OFF*



## 6 ADDITIONAL GUIDANCE FOR RNAV

Experience of RNAV systems, and Flight FMS in general, has identified the pitfalls of waypoint entry error at the receiver as well as inaccuracies and errors in the database itself.

Research and experience have both shown that human error, often the result of a lack of familiarity with the airborne equipment, represents the major hazard in operations using RNAV systems. Therefore, it is imperative that pilots understand their system thoroughly and are able to determine whether it is safe to proceed.

This requires robust procedures, which check for possible errors in the computer database, monitor continued performance of the RNAV systems and enable pilots to identify and avoid not only their own mistakes but also errors in the information presented to them.

Flight planning on RNAV routes should include the following recommendation.

- During the pre-flight planning phase, given a GPS constellation of 23 satellites or less (22 or less for GPS stand-alone equipment that incorporate pressure altitude aiding), the availability of GPS integrity (RAIM) should be confirmed for the intended flight (route and time). This should be obtained from a prediction program either ground-based, or provided as an equipment function, or from an alternative method acceptable to the Authority;
- Where a navigation data base is installed, the data base validity (current AIRAC cycle) should be checked before flight;
- Traditional navigation equipment (e.g. VOR, DME and ADF) should be selected to available aids so as to allow immediate cross-checking or reversion in the event of loss of GPS navigation capability.

### 1) Pre-flight Planning

During the pre-flight planning phase, the availability of the navigation infrastructure, required for the intended operation, including any non-RNAV contingencies, must be confirmed for the period of intended operation. Availability of the onboard navigation equipment necessary for the route to be flown must be confirmed. The onboard navigation database must be appropriate for the region of intended operation and must include the navigation aids, waypoints, and coded terminal airspace procedures for the departure, arrival and alternate airfields.

Where the responsible airspace authority has specified in the AIP that dual P-RNAV systems are required for specific terminal P-RNAV procedure, the availability of dual P-RNAV systems must be confirmed. This typically will apply where procedures are effective below the applicable minimum obstacle clearance altitude or where radar coverage is inadequate for the purposes of supporting P-RNAV. This will also take into account the particular hazards of a terminal area and the feasibility of contingency procedures following loss of P-RNAV capability.

RAIM availability must be confirmed with account taken of the latest information.

## 2) Departure

At system initialisation, the flight crew must confirm that the navigation database is current and verify that the aircraft position has been entered correctly. The active flight plan should be checked by comparing the charts, SID or other applicable documents, with the map display. This includes confirmation of the waypoint sequence, reasonableness of track angles and distances, any altitude or speed constraints, and, where possible, which waypoints are fly-by and which are fly-over. If required by a procedure, a check will need to be made to confirm that updating will use a specific navigation aid(s), or to confirm exclusion of a specific navigation aid. A procedure shall not be used if doubt exists as to the validity of the procedure in the navigation database

**The creation of new waypoints by manual entry into the RNAV system by the flight crew is not permitted as it would invalidate the affected P-RNAV procedure.**

Route modifications in the terminal area may take the form of radar headings or 'direct to' clearances and the flight crew must be capable of reacting in a timely fashion. This may include the insertion in the flight plan of waypoints loaded from the database.

During the procedure and where feasible, flight progress should be monitored for navigational reasonableness, by cross-checks, with conventional navigation aids using the primary display.

## 3) Arrival

Prior to the arrival phase, the flight crew should verify that the correct terminal procedure has been loaded. The active flight plan should be checked by comparing the charts with the map display. This includes confirmation of the waypoint sequence, reasonableness of track angles and distances, any altitude or speed constraints, and, where possible, which waypoints are fly-by and which are fly-over. If required by a procedure, a check will need to be made to confirm that updating will exclude a particular navigation aid. A procedure shall not be used if doubt exists as to the validity of the procedure in the navigation database.

Note: as a minimum, the arrival checks could be a simple inspection of a suitable map display that achieves the objectives of this paragraph.

**The creation of new waypoints by manual entry into the RNAV system by the flight crew would invalidate the P-RNAV procedure and is not permitted.**

Where the contingency to revert to a conventional arrival procedure is required, the flight crew must make the necessary preparation.

During the procedure and where feasible, flight progress should be monitored for navigational reasonableness by cross-checks with conventional navigation aids using the primary display.

Route modifications in the terminal area may take the form of radar headings or 'direct to' clearances and the flight crew must be capable of reacting in a timely fashion.

Although a particular method is not mandated, any published altitude and speed constraints must be observed.

In the event that either the GPS or the EGNOS signal is not available at the destination, by the nature of the system, and its susceptibility to interference, there exists the possibility that it will also be unavailable over a wide area. Therefore it is probable that the signal will also be unavailable at a nearby diversion aerodrome.

Notwithstanding any normal operational requirements for the identification of an alternate aerodrome, where a RNAV approach is to be flown in conditions where a visual approach will not be possible; pilots should always ensure that either:

- 1) A different type of approach system is available at the destination, not dependent on GPS data and for which the weather is forecast to be suitable to enable a landing to be made from that approach, or;
- 2) There is at least one alternate destination within range, where a different type of approach system is available, which is not dependent on GPS data and for which the weather is forecast to be suitable to enable a landing to be made from that approach.

## 9.1 APPROACH APPLICATIONS

**NOTE**

*When GPS is not approved for the selected final approach course, the message "NOT APPROVED FOR GPS" is displayed. GPS provides guidance for the approach, but the HIS must be switched to a NAV receiver to fly the final course of the approach*

**NOTE**

*f certain GPS parameters (SBAS, RAIM, etc.) are not available, some published approach procedures for the desired airport may not be displayed in the list of available approaches.*

An Approach Procedure (APPR) can be loaded at any airport that has one available, and provides guidance for non-precision and precision approaches to airports with published instrument approach procedures.

**NOTE**

*Only one approach can be loaded at a time in a flight plan. If an approach is loaded when another approach is already in the active flight plan, the new approach replaces the previous approach. The route is defined by selection of an approach and the transition waypoints.*

Whenever an approach is selected, the choice to either “load” or “activate” is given. “Loading” adds the approach to the end of the flight plan without immediately using it for navigation guidance. This allows continued navigation via the intermediate waypoints in the original flight plan, but keeps the procedure available on the Active Flight Plan Page for quick activation when needed. “Activating” also adds the procedure to the end of the flight plan but immediately begins to provide guidance to the first waypoint in the approach.

When selecting an approach, a “GPS” designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. Some procedures do not have this designation, meaning the GPS receiver can be used for supplemental navigation guidance only.

**NOTE**

*If the GPS receiver cannot be used for primary guidance, the appropriate navigation receiver must be used for the selected approach (e.g., VOR or ILS). The final course segment of ILS approaches, for example, must be flown by tuning the NAV receiver to the proper frequency and selecting that NAV receiver on the CDI*

The G1000Nxi SBAS GPS allows for flying LNAV, LP, LP+V and LPV approach service levels according to the published chart. The ‘+V’ designation adds advisory vertical guidance for assistance in maintaining a constant vertical glidepath similar to an ILS glideslope on approach. This guidance is displayed on the system PFD in the same location as the ILS glideslope using a magenta diamond. A sample of how the active approach service level is annunciated on the HSI is shown in the following table:

| HSI Annunciation                           | Description                                                                                                                  | Example on HSI                                                                                                                                      |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| LNAV                                       | RNAV GPS approach using published LNAV minima                                                                                |  <p><b>Approach Service Level</b><br/>- LNAV, LP, LP+V, LPV</p> |
| LP<br>(available only if SBAS available)   | RNAV GPS approach using published LP minima (downgrades to LNAV if SBAS unavailable)                                         |                                                                                                                                                     |
| LP+V<br>(available only if SBAS available) | RNAV GPS approach using published LP minima. Advisory vertical guidance is provided (downgrades to LNAV if SBAS unavailable) |                                                                                                                                                     |
| LPV<br>(available only if SBAS available)  | RNAV GPS approach using published LPV minima                                                                                 |                                                                                                                                                     |

Before reaching the IAF, the flight crew should verify that the correct procedure has been loaded into the receiver's route or flight plan. A comparison with the approach chart should be made including the following:

- The waypoint sequence.
- Reasonableness of the tracks and distances of the approach legs, accuracy of the inbound course and mileage of the FAS.
- Verify from the charts, map display or CDU, which waypoints are fly-by and which are fly-over.
- Check any map display to ensure the track lines actually 'fly-over' or 'fly-by' the respective waypoints in the procedure.

By the time the aircraft reaches the IAF the pilot should have completed the above and been cleared for the approach. Also, the approach must have been activated in the receiver at least by this time.

Approach Applications which are classified as RNP Approach (APCH) in accordance with ICAO Doc 9613 Performance Based Navigation (PBN) Manual (and ICAO state Letter SP65/4-10/53) give access to minima (on an instrument approach procedure) designated as:

#### **LNAV (Lateral Navigation)**

This is a Non-Precision or 2D Approach with Lateral only navigation guidance provided by GNSS and an Aircraft Based Augmentation System (ABAS). Receiver Autonomous Integrity Monitoring (RAIM) is a form of ABAS. Lateral guidance is linear with accuracy to within +/- 0.3 NM parallel to either side of the final approach track.

#### **LP (Localiser Performance)**

This is a Non-Precision or 2D Approach with Lateral only navigation guidance provided by GNSS and SBAS. The EGNOS is a form of SBAS in Europe. The lateral guidance is angular with increasing sensitivity as the aircraft continues along the final approach track; much like a localiser indication.

#### **LPV (Localiser Performance with Vertical Guidance)**

This is an Approach Procedure with Vertical Guidance. The Lateral and Vertical guidance is provided by GPS and SBAS. Lateral and vertical guidance are angular with increasing sensitivity as the aircraft progresses down the final approach track; much like an ILS indication. LPV approach and annunciation on HSI is available only if SBAS is available.



*Before selecting a LPV approach, make sure SBAS is indicated ACTIVE in the GPS status box on AUX-GPS STATUS page on MFD.*

*If DISABLED highlight the appropriate SBAS SELECTION Box under SBAS softkey under AUX-GPS Status Page on MFD*



*Should SBAS signal be lost, augmentation is lost. It may be possible to continue with LNAV only but this is reliant on the availability of RAIM.*

**NOTE:** The instrument approach procedures associated with RNP APCH are entitled RNAV (GNSS) to reflect that GNSS is the primary navigation system. With the inherent onboard performance monitoring and alerting provided by GNSS, the navigation specification qualifies as RNP, however these procedures pre-date PBN, so the chart name has remained as RNAV.

### **Missed approach procedures**

Before commencing an RNAV (GNSS) missed approach, a MAP should be possible without reference to GPS derived navigation so that, in the event of a loss of GPS accuracy or loss of integrity during the approach, a safe return to above Minimum Sector Altitude can be made.

This may be possible by dead reckoning (DR) navigation but where this is not possible and the MAP requires reference to terrestrial navigation aids, these must be available, tuned and correctly identified before passing the IAF and remain available throughout the approach.

Reasons for a missed approach are many and if GPS information remains available for the MAP, the pilot must be able to sequence the system correctly past the MAP, in order to follow the published MAP correctly.

Pilots should be fully competent in the necessary selection routines required by their own equipment, in order to transition to the MAP and preserve accurate navigation throughout.

When GPS navigation is NOT available for the MAP, it may be necessary to reset the display function of the HSI/CDI to disengage GPS information and regain VOR/LOC display. Pilots must be fully conversant with navigation display selections in order safely to follow the MAP.

### **Abnormal procedures for approaches**

As the aircraft approaches the FAF (LNAV Only, without SBAS), the receiver automatically perform a final RAIM prediction for the approach. The receiver will not enter the approach mode if this RAIM prediction is negative. In this case, the approach should be discontinued.

However, this RAIM check assumes availability of the full constellation and will not take account of scheduled interruptions or failures. This can lead to a successful RAIM prediction at this point when the RAIM function itself is not available.

If RAIM is lost after passing the FAF the equipment should continue to provide navigation, where possible for five minutes, before giving a RAIM loss indication and this should be enough to complete the approach.

Should RAIM detect an out of tolerance situation, a warning will be given and a missed approach should be initiated immediately

The approach should always be discontinued:

- (a) If the receiver fails to engage the correct approach mode or;
- (b) In case of Loss Of Integrity (LOI) monitoring or;
- (c) Whenever the HSI/CDI indication (or GP indication where applicable) exceeds half scale displacement or;
- (d) If a RAIM (or equivalent) warning is activated or;
- (e) If RAIM (or equivalent) function is not available and annunciated before passing the FAF.

INTENTIONALLY LEFT BLANK



Supplement D10: pages replacement instructions

## **SECTION 5 – PERFORMANCES**

Supplement D10 - Performances pages replace basic AFM Section 5 as whole

## SECTION 5 – PERFORMANCE

### INDEX

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>1. INTRODUCTION.....</b>                          | <b>2</b>  |
| <b>2. USE OF PERFORMANCE CHARTS.....</b>             | <b>2</b>  |
| <b>3. AIRSPEED INDICATOR SYSTEM CALIBRATION.....</b> | <b>3</b>  |
| <b>4. ICAO STANDARD ATMOSPHERE .....</b>             | <b>5</b>  |
| <b>5. STALL SPEED .....</b>                          | <b>6</b>  |
| <b>6. CROSSWIND .....</b>                            | <b>7</b>  |
| <b>7. TAKE-OFF PERFORMANCE .....</b>                 | <b>8</b>  |
| <b>8. TAKE-OFF RATE OF CLIMB.....</b>                | <b>11</b> |
| <b>9. EN-ROUTE RATE OF CLIMB .....</b>               | <b>12</b> |
| <b>10. CRUISE PERFORMANCE .....</b>                  | <b>13</b> |
| <b>11. LANDING PERFORMANCES .....</b>                | <b>17</b> |
| <b>12. BALKED LANDING PERFORMANCE .....</b>          | <b>18</b> |
| <b>13. NOISE DATA .....</b>                          | <b>19</b> |

## **1. INTRODUCTION**

This section provides all necessary data for an accurate and comprehensive planning of flight activity from takeoff to landing.

Data reported in graphs and/or in tables were determined using:

- ✓ “Flight Test Data” under conditions prescribed by EASA CS-23 regulation
- ✓ aircraft and engine in good condition
- ✓ average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performances were carried out by theoretical means for:

- ✓ Airspeed
- ✓ External temperature
- ✓ Altitude
- ✓ Weight
- ✓ Runway type and condition

## **2. USE OF PERFORMANCE CHARTS**

Performances data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.

### 3. AIRSPEED INDICATOR SYSTEM CALIBRATION

#### Normal Static Source

Graph shows calibrated airspeed  $V_{IAS}$  as a function of indicated airspeed  $V_{CAS}$ .

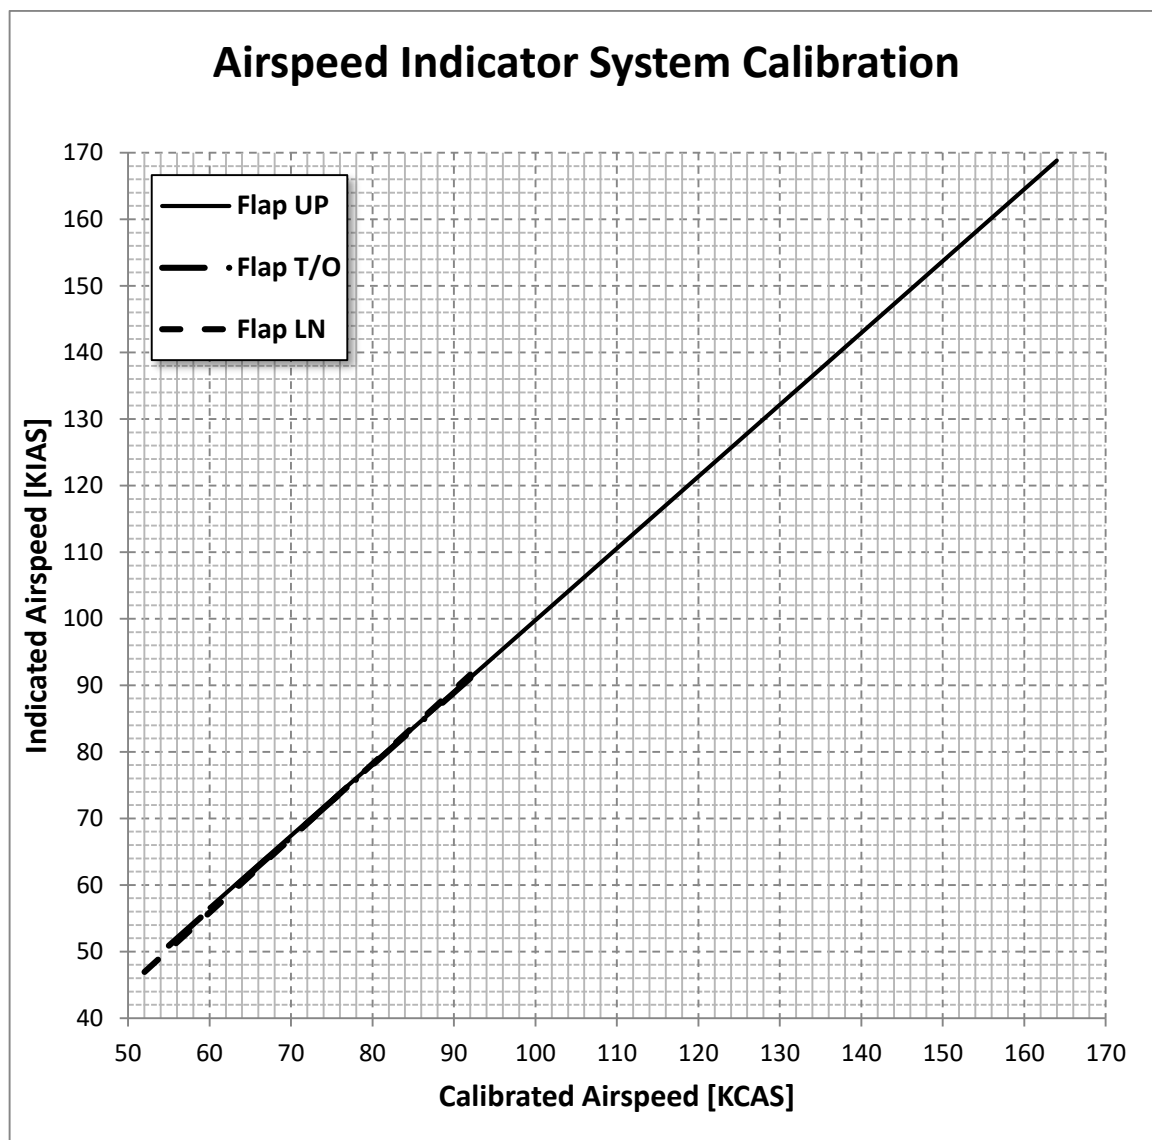


FIG. 5-1. CALIBRATED VS INDICATED AIRSPEED

Example:

Given

KIAS 75.0

Flap: UP

Find

KCAS 77.1

**NOTE**

Indicated airspeed assumes 0 as an instrument error

## Alternate Static Source

| Pressure Altitude<br>[ft] | IAS<br>[kn] | Alternate Static Air Open |                        | Vents Open  |                        | Vents and Hot Air Open |                        |
|---------------------------|-------------|---------------------------|------------------------|-------------|------------------------|------------------------|------------------------|
|                           |             | IAS<br>[kn]               | H <sub>p</sub><br>[ft] | IAS<br>[kn] | H <sub>p</sub><br>[ft] | IAS<br>[kn]            | H <sub>p</sub><br>[ft] |
| 1000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 75                        | 1020                   | 72          | 1010                   | 72                     | 1020                   |
|                           | 90          | 95                        | 1020                   | 92          | 1030                   | 93                     | 1020                   |
|                           | 110         | 115                       | 1030                   | 113         | 1020                   | 112                    | 1020                   |
|                           | 135         | 140                       | 1040                   | 139         | 1030                   | 137                    | 1030                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 1020                   | 63          | 1020                   | 62                     | 1010                   |
|                           | 70          | 75                        | 1020                   | 73          | 1020                   | 72                     | 1020                   |
|                           | 90          | 94                        | 1020                   | 92          | 1020                   | 92                     | 1020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 1020                   | 61          | 1020                   | 61                     | 1020                   |
|                           | 70          | 72                        | 1020                   | 72          | 1020                   | 71                     | 1020                   |
|                           | 90          | 92                        | 1020                   | 91          | 1020                   | 91                     | 1020                   |
| 5000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 5020                   | 72          | 5020                   | 71                     | 5020                   |
|                           | 90          | 94                        | 5030                   | 93          | 5020                   | 92                     | 5020                   |
|                           | 110         | 114                       | 5030                   | 113         | 5020                   | 112                    | 5020                   |
|                           | 133         | 137                       | 5040                   | 136         | 5030                   | 135                    | 5020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 5010                   | 62          | 5020                   | 61                     | 5010                   |
|                           | 70          | 74                        | 5020                   | 73          | 5020                   | 72                     | 5020                   |
|                           | 90          | 93                        | 5030                   | 93          | 5020                   | 93                     | 5020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 63                        | 5030                   | 62          | 5020                   | 61                     | 5000                   |
|                           | 70          | 72                        | 5020                   | 72          | 5010                   | 71                     | 5010                   |
|                           | 90          | 92                        | 5020                   | 92          | 5020                   | 91                     | 5010                   |
| 8000                      |             | FLAP UP                   |                        |             |                        |                        |                        |
|                           | 70          | 72                        | 8020                   | 72          | 8020                   | 71                     | 8020                   |
|                           | 90          | 93                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           | 110         | 113                       | 8030                   | 112         | 8020                   | 112                    | 8020                   |
|                           | 128         | 131                       | 8040                   | 130         | 8030                   | 130                    | 8020                   |
|                           |             | FLAP T/O                  |                        |             |                        |                        |                        |
|                           | 60          | 62                        | 8010                   | 62          | 8020                   | 61                     | 8010                   |
|                           | 70          | 73                        | 8020                   | 72          | 8020                   | 72                     | 8020                   |
|                           | 90          | 92                        | 8030                   | 92          | 8020                   | 92                     | 8020                   |
|                           |             | FLAP LND                  |                        |             |                        |                        |                        |
|                           | 60          | 61                        | 8020                   | 61          | 8020                   | 61                     | 8000                   |
|                           | 70          | 72                        | 8010                   | 71          | 8010                   | 71                     | 8010                   |
|                           | 90          | 92                        | 8010                   | 91          | 8010                   | 91                     | 8010                   |

## 4. ICAO STANDARD ATMOSPHERE

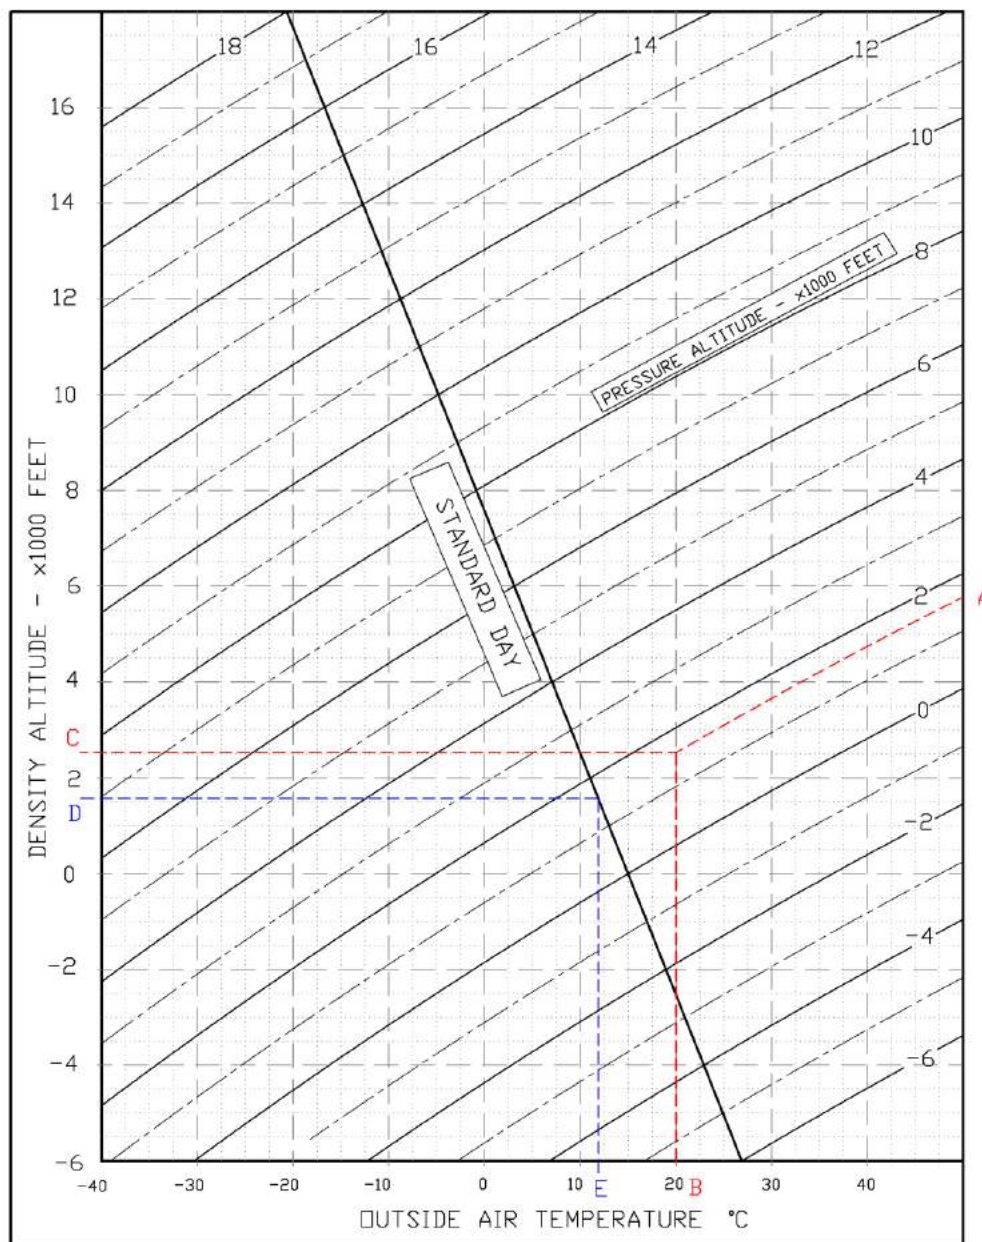


FIG. 5-2. ICAO CHART

Examples:

| <u>Scope</u>             | <u>Given</u>                                           | <u>Find</u>                     |
|--------------------------|--------------------------------------------------------|---------------------------------|
| <u>Density Altitude:</u> | A: Pressure altitude = 1600ft<br>B: Temperature = 20°C | → C: Density Altitude = 2550ft  |
| <u>ISA Temperature:</u>  | D: Pressure altitude = 1600ft                          | → E: ISA Air Temperature = 12°C |

## 5. STALL SPEED

| <b>Weight:</b> 1160 kg (2557 lb)<br><b>Throttle Lever:</b> IDLE<br><b>CG:</b> Most Forward (19%)<br><b>No ground effect</b> |                            |             |      |           |      |            |      |
|-----------------------------------------------------------------------------------------------------------------------------|----------------------------|-------------|------|-----------|------|------------|------|
| WEIGHT<br><br>[kg]<br>([lb])                                                                                                | BANK<br>ANGLE<br><br>[deg] | STALL SPEED |      |           |      |            |      |
|                                                                                                                             |                            | FLAPS 0°    |      | FLAPS T/O |      | FLAPS FULL |      |
|                                                                                                                             |                            | KIAS        | KCAS | KIAS      | KCAS | KIAS       | KCAS |
| <b>1160<br/>(2557)</b><br>(FWD C.G.)                                                                                        | <b>0</b>                   | 57          | 60   | 51        | 55   | 47         | 52   |
|                                                                                                                             | <b>15</b>                  | 58          | 61   | 52        | 56   | 49         | 53   |
|                                                                                                                             | <b>30</b>                  | 62          | 65   | 56        | 59   | 52         | 56   |
|                                                                                                                             | <b>45</b>                  | 69          | 71   | 62        | 65   | 59         | 62   |
|                                                                                                                             | <b>60</b>                  | 84          | 85   | 76        | 78   | 72         | 74   |

**NOTE**

*Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 350 ft with banking below 15°.*

## 6. CROSSWIND

Maximum demonstrated crosswind is 12 kts

⇒ Example:

### Given

Wind direction (with respect to aircraft longitudinal axis) =  $30^\circ$

Wind speed = 20 kts

### Find

Headwind = 17.5 kts

Crosswind = 10 kts

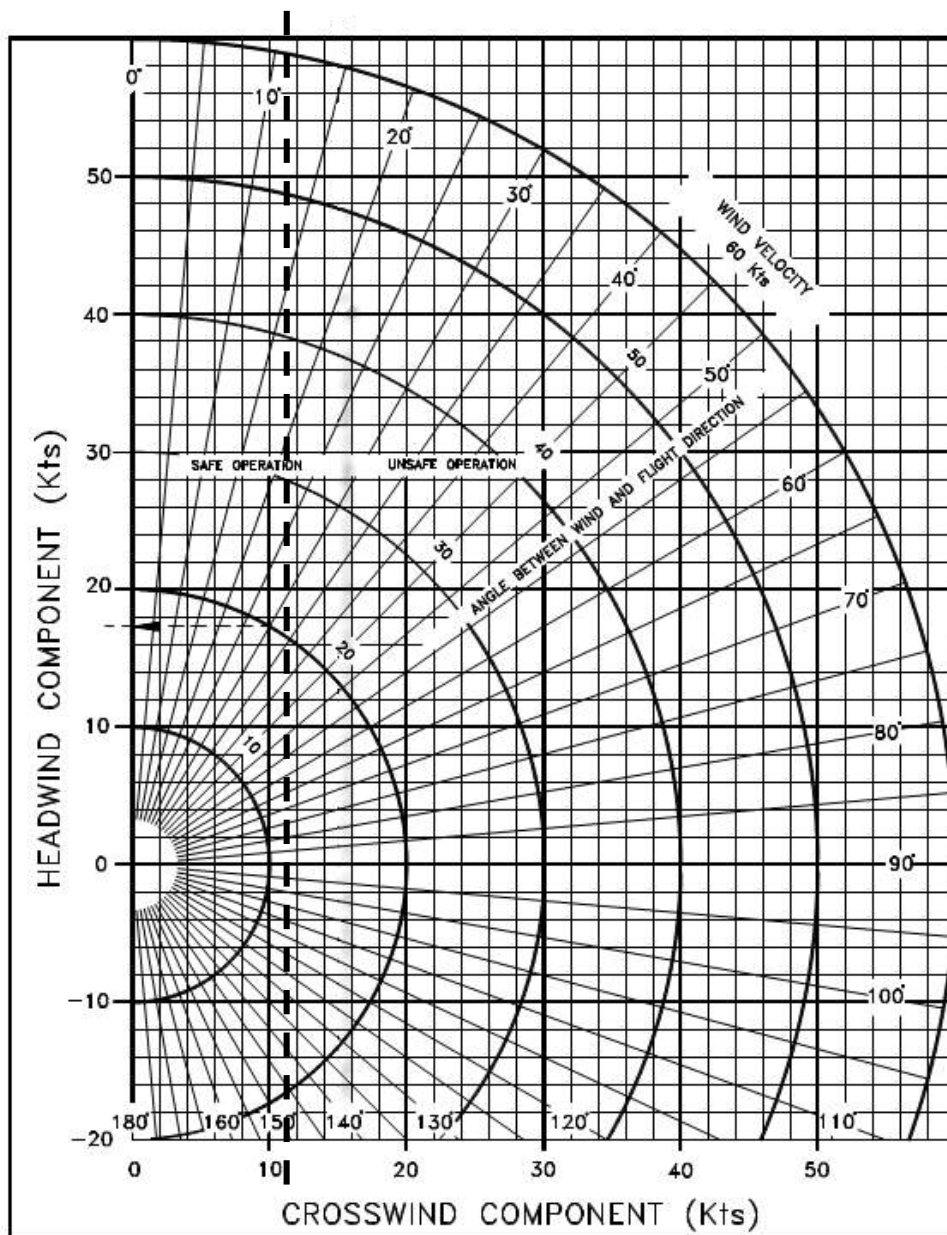


FIG. 5-3. CROSSWIND CHART



## 7. TAKE-OFF PERFORMANCE

**NOTE**

To account for likely in service performance variations apply a factored to distances of 1.10

| <b>Weight = 1160 kg (2557 lb)</b><br><b>Flaps: T/O</b><br><b>Speed at Lift-Off = 58 KIAS</b><br><b>Speed Over 50ft Obstacle = 63 KIAS</b><br><b>Throttle and Propeller Lever: Full Forward</b><br><b>Runway: Paved</b> |                     |                                                       |               |               |               |                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|-------------------------------------------------------|---------------|---------------|---------------|-----------------------|
|                                                                                                                                                                                                                        |                     | <b>Corrections</b>                                    |               |               |               |                       |
|                                                                                                                                                                                                                        |                     | <b>Headwind: -10 m for each kn</b>                    |               |               |               |                       |
|                                                                                                                                                                                                                        |                     | <b>Tailwind: +20 m for each kn</b>                    |               |               |               |                       |
|                                                                                                                                                                                                                        |                     | <b>Grass Runway: +10% to Ground Roll</b>              |               |               |               |                       |
|                                                                                                                                                                                                                        |                     | <b>Runway slope: +10% to Ground Roll for each +1%</b> |               |               |               |                       |
| Pressure<br>Altitude<br><br>[ft]                                                                                                                                                                                       |                     | Distance [m]<br>(Distance [ft])                       |               |               |               |                       |
|                                                                                                                                                                                                                        |                     | Temperature [°C]                                      |               |               |               | ISA                   |
|                                                                                                                                                                                                                        |                     | -25                                                   | 0             | 25            | 50            |                       |
| <b>S.L.</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 244<br>(801)                                          | 292<br>(958)  | 345<br>(1132) | 402<br>(1319) | <b>323<br/>(1060)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 355<br>(1165)                                         | 426<br>(1398) | 503<br>(1650) | 586<br>(1923) | <b>472<br/>(1549)</b> |
| <b>1000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 261<br>(856)                                          | 313<br>(1027) | 370<br>(1214) | 431<br>(1414) | <b>342<br/>(1122)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 380<br>(1247)                                         | 456<br>(1496) | 539<br>(1768) | 628<br>(2060) | <b>499<br/>(1637)</b> |
| <b>2000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 280<br>(919)                                          | 336<br>(1102) | 396<br>(1299) | 462<br>(1516) | <b>362<br/>(1188)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 408<br>(1339)                                         | 489<br>(1604) | 578<br>(1896) | 673<br>(2208) | <b>527<br/>(1729)</b> |
| <b>3000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 300<br>(984)                                          | 360<br>(1181) | 425<br>(1394) | 495<br>(1624) | <b>383<br/>(1257)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 437<br>(1434)                                         | 525<br>(1722) | 620<br>(2034) | 722<br>(2369) | <b>558<br/>(1831)</b> |
| <b>4000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 322<br>(1056)                                         | 386<br>(1266) | 456<br>(1496) | 531<br>(1742) | <b>405<br/>(1329)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 469<br>(1539)                                         | 563<br>(1847) | 665<br>(2182) | 775<br>(2543) | <b>591<br/>(1939)</b> |
| <b>5000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 345<br>(1132)                                         | 414<br>(1358) | 489<br>(1604) | 570<br>(1870) | <b>429<br/>(1407)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 503<br>(1650)                                         | 604<br>(1982) | 714<br>(2343) | 832<br>(2730) | <b>626<br/>(2054)</b> |
| <b>6000</b>                                                                                                                                                                                                            | <b>Ground Roll</b>  | 371<br>(1217)                                         | 445<br>(1460) | 526<br>(1726) | 613<br>(2011) | <b>455<br/>(1493)</b> |
|                                                                                                                                                                                                                        | <b>At 50 ft AGL</b> | 541<br>(1775)                                         | 649<br>(2129) | 766<br>(2513) | 893<br>(2930) | <b>663<br/>(2175)</b> |

**Weight = 1060 kg (2337 lb)****Flaps:** T/O**Speed at Lift-Off =** 58 KIAS**Speed Over 50ft Obstacle =** 63 KIAS**Throttle and Propeller Lever:** Full Forward**Runway:** Paved**Corrections****Headwind:** -10 m for each kn**Tailwind:** +20 m for each kn**Grass Runway:** +10% to Ground Roll**Runway slope:** +10% to Ground Roll for each +1%

| Pressure<br>Altitude<br><br>[ft] |              | Distance [m]<br>(Distance [ft]) |               |               |               |                       |
|----------------------------------|--------------|---------------------------------|---------------|---------------|---------------|-----------------------|
|                                  |              | Temperature [°C]                |               |               |               | ISA                   |
|                                  |              | -25                             | 0             | 25            | 50            |                       |
| S.L.                             | Ground Roll  | 193<br>(633)                    | 231<br>(758)  | 273<br>(896)  | 318<br>(1043) | <b>256<br/>(840)</b>  |
|                                  | At 50 ft AGL | 281<br>(922)                    | 337<br>(1106) | 398<br>(1306) | 464<br>(1522) | <b>373<br/>(1224)</b> |
| 1000                             | Ground Roll  | 206<br>(676)                    | 248<br>(814)  | 292<br>(958)  | 341<br>(1119) | <b>271<br/>(889)</b>  |
|                                  | At 50 ft AGL | 301<br>(988)                    | 361<br>(1184) | 426<br>(1398) | 497<br>(1631) | <b>394<br/>(1293)</b> |
| 2000                             | Ground Roll  | 221<br>(725)                    | 265<br>(869)  | 314<br>(1030) | 365<br>(1198) | <b>286<br/>(938)</b>  |
|                                  | At 50 ft AGL | 322<br>(1056)                   | 387<br>(1270) | 457<br>(1499) | 533<br>(1749) | <b>417<br/>(1368)</b> |
| 3000                             | Ground Roll  | 237<br>(778)                    | 285<br>(935)  | 336<br>(1102) | 392<br>(1286) | <b>303<br/>(994)</b>  |
|                                  | At 50 ft AGL | 346<br>(1135)                   | 415<br>(1362) | 490<br>(1608) | 571<br>(1873) | <b>442<br/>(1450)</b> |
| 4000                             | Ground Roll  | 254<br>(833)                    | 305<br>(1001) | 361<br>(1184) | 420<br>(1378) | <b>321<br/>(1053)</b> |
|                                  | At 50 ft AGL | 371<br>(1217)                   | 445<br>(1460) | 526<br>(1726) | 613<br>(2011) | <b>467<br/>(1532)</b> |
| 5000                             | Ground Roll  | 273<br>(896)                    | 328<br>(1076) | 387<br>(1270) | 451<br>(1480) | <b>340<br/>(1115)</b> |
|                                  | At 50 ft AGL | 398<br>(1306)                   | 478<br>(1568) | 564<br>(1850) | 658<br>(2159) | <b>495<br/>(1624)</b> |
| 6000                             | Ground Roll  | 293<br>(961)                    | 352<br>(1155) | 416<br>(1365) | 485<br>(1591) | <b>360<br/>(1181)</b> |
|                                  | At 50 ft AGL | 428<br>(1404)                   | 513<br>(1683) | 606<br>(1988) | 706<br>(2316) | <b>524<br/>(1719)</b> |

**Weight = 960 kg (2116 lb)****Flaps: T/O****Speed at Lift-Off = 58 KIAS****Speed Over 50ft Obstacle = 63 KIAS****Throttle and Propeller Lever: Full Forward****Runway: Paved****Corrections****Headwind: -10 m for each kn****Tailwind: +20 m for each kn****Grass Runway: +10% to Ground Roll****Runway slope: +10% to Ground Roll for each +1%**

| Pressure<br>Altitude<br><br>[ft] |              | Distance [m]<br>(Distance [ft]) |               |               |               |                       |
|----------------------------------|--------------|---------------------------------|---------------|---------------|---------------|-----------------------|
|                                  |              | Temperature [°C]                |               |               |               | ISA                   |
|                                  |              | -25                             | 0             | 25            | 50            |                       |
| S.L.                             | Ground Roll  | 149<br>(489)                    | 179<br>(587)  | 211<br>(692)  | 246<br>(807)  | <b>198<br/>(650)</b>  |
|                                  | At 50 ft AGL | 217<br>(712)                    | 260<br>(853)  | 308<br>(1010) | 358<br>(1175) | <b>288<br/>(945)</b>  |
| 1000                             | Ground Roll  | 160<br>(525)                    | 191<br>(627)  | 226<br>(741)  | 263<br>(863)  | <b>209<br/>(686)</b>  |
|                                  | At 50 ft AGL | 233<br>(764)                    | 279<br>(915)  | 330<br>(1083) | 384<br>(1260) | <b>305<br/>(1001)</b> |
| 2000                             | Ground Roll  | 171<br>(561)                    | 205<br>(673)  | 242<br>(794)  | 282<br>(925)  | <b>221<br/>(725)</b>  |
|                                  | At 50 ft AGL | 249<br>(817)                    | 299<br>(981)  | 353<br>(1158) | 412<br>(1352) | <b>322<br/>(1056)</b> |
| 3000                             | Ground Roll  | 183<br>(600)                    | 220<br>(722)  | 260<br>(853)  | 303<br>(994)  | <b>234<br/>(768)</b>  |
|                                  | At 50 ft AGL | 267<br>(876)                    | 321<br>(1053) | 379<br>(1243) | 441<br>(1447) | <b>341<br/>(1119)</b> |
| 4000                             | Ground Roll  | 197<br>(646)                    | 236<br>(774)  | 279<br>(915)  | 325<br>(1066) | <b>248<br/>(814)</b>  |
|                                  | At 50 ft AGL | 287<br>(942)                    | 344<br>(1129) | 406<br>(1332) | 474<br>(1555) | <b>361<br/>(1184)</b> |
| 5000                             | Ground Roll  | 211<br>(692)                    | 253<br>(830)  | 299<br>(981)  | 349<br>(1145) | <b>262<br/>(860)</b>  |
|                                  | At 50 ft AGL | 308<br>(1010)                   | 369<br>(1211) | 436<br>(1430) | 508<br>(1667) | <b>383<br/>(1257)</b> |
| 6000                             | Ground Roll  | 227<br>(745)                    | 272<br>(892)  | 321<br>(1053) | 374<br>(1227) | <b>278<br/>(912)</b>  |
|                                  | At 50 ft AGL | 331<br>(1086)                   | 397<br>(1302) | 469<br>(1539) | 546<br>(1791) | <b>405<br/>(1329)</b> |

**8. TAKE-OFF RATE OF CLIMB****NOTE**

*To account for likely in service performance variations apply a factored to rate of climb of 0.90*

| Throttle Lever: Full Forward<br>Propeller: 2700 RPM<br>Flaps: Take-Off |                                  |                                                |                        |      |      |            |             |
|------------------------------------------------------------------------|----------------------------------|------------------------------------------------|------------------------|------|------|------------|-------------|
| Weight<br><br>[kg]<br>([lb])                                           | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>V <sub>y</sub><br><br>[KIAS] | Rate of Climb [ft/min] |      |      |            |             |
|                                                                        |                                  |                                                | Temperature [°C]       |      |      |            | ISA         |
|                                                                        |                                  |                                                | -25                    | 0    | 25   | 50         |             |
| <b>1160<br/>(2557)</b>                                                 | <b>S.L.</b>                      | 69                                             | 1264                   | 1074 | 905  | 752        | <b>970</b>  |
|                                                                        | <b>2000</b>                      | 69                                             | 1119                   | 933  | 766  | 616        | <b>857</b>  |
|                                                                        | <b>4000</b>                      | 69                                             | 976                    | 792  | 629  | 481        | <b>744</b>  |
|                                                                        | <b>6000</b>                      | 70                                             | 832                    | 652  | 492  | 347        | <b>631</b>  |
|                                                                        | <b>8000</b>                      | 70                                             | 690                    | 513  | 355  | 212        | <b>519</b>  |
|                                                                        | <b>10000</b>                     | 70                                             | 547                    | 374  | 218  | 79         | <b>406</b>  |
|                                                                        | <b>12000</b>                     | 70                                             | 405                    | 235  | 83   | <b>-55</b> | <b>293</b>  |
| <b>1060<br/>(2337)</b>                                                 | <b>S.L.</b>                      | 68                                             | 1461                   | 1251 | 1064 | 896        | <b>1137</b> |
|                                                                        | <b>2000</b>                      | 69                                             | 1302                   | 1096 | 912  | 746        | <b>1012</b> |
|                                                                        | <b>4000</b>                      | 69                                             | 1143                   | 941  | 760  | 597        | <b>887</b>  |
|                                                                        | <b>6000</b>                      | 69                                             | 985                    | 786  | 608  | 448        | <b>763</b>  |
|                                                                        | <b>8000</b>                      | 70                                             | 827                    | 632  | 457  | 300        | <b>638</b>  |
|                                                                        | <b>10000</b>                     | 70                                             | 670                    | 478  | 307  | 152        | <b>513</b>  |
|                                                                        | <b>12000</b>                     | 70                                             | 513                    | 325  | 157  | 5          | <b>389</b>  |
| <b>960<br/>(2116)</b>                                                  | <b>S.L.</b>                      | 68                                             | 1693                   | 1459 | 1250 | 1062       | <b>1331</b> |
|                                                                        | <b>2000</b>                      | 68                                             | 1515                   | 1285 | 1080 | 896        | <b>1192</b> |
|                                                                        | <b>4000</b>                      | 69                                             | 1338                   | 1112 | 911  | 729        | <b>1053</b> |
|                                                                        | <b>6000</b>                      | 69                                             | 1162                   | 940  | 742  | 563        | <b>914</b>  |
|                                                                        | <b>8000</b>                      | 69                                             | 986                    | 768  | 574  | 398        | <b>775</b>  |
|                                                                        | <b>10000</b>                     | 70                                             | 811                    | 597  | 406  | 234        | <b>636</b>  |
|                                                                        | <b>12000</b>                     | 70                                             | 636                    | 426  | 239  | 70         | <b>497</b>  |

## 9. EN-ROUTE RATE OF CLIMB

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb of 0.90

| Throttle Lever: Full Forward<br>Propeller: 2700 RPM<br>Flaps: UP |                                  |                                                |                        |      |      |      |             |
|------------------------------------------------------------------|----------------------------------|------------------------------------------------|------------------------|------|------|------|-------------|
| Weight<br><br>[kg]<br>([lb])                                     | Pressure<br>Altitude<br><br>[ft] | Climb<br>Speed<br>V <sub>Y</sub><br><br>[KIAS] | Rate of Climb [ft/min] |      |      |      |             |
|                                                                  |                                  |                                                | Temperature [°C]       |      |      |      | ISA         |
|                                                                  |                                  |                                                | -25                    | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                                           | <b>S.L.</b>                      | 86                                             | 1431                   | 1220 | 1032 | 863  | <b>1105</b> |
|                                                                  | <b>2000</b>                      | 86                                             | 1271                   | 1064 | 879  | 712  | <b>980</b>  |
|                                                                  | <b>4000</b>                      | 85                                             | 1111                   | 908  | 726  | 562  | <b>854</b>  |
|                                                                  | <b>6000</b>                      | 84                                             | 952                    | 752  | 574  | 413  | <b>729</b>  |
|                                                                  | <b>8000</b>                      | 84                                             | 794                    | 597  | 422  | 264  | <b>604</b>  |
|                                                                  | <b>10000</b>                     | 83                                             | 636                    | 443  | 270  | 115  | <b>478</b>  |
|                                                                  | <b>12000</b>                     | 83                                             | 478                    | 289  | 120  | -33  | <b>353</b>  |
| <b>1060<br/>(2337)</b>                                           | <b>S.L.</b>                      | 84                                             | 1617                   | 1390 | 1187 | 1004 | <b>1265</b> |
|                                                                  | <b>2000</b>                      | 84                                             | 1444                   | 1221 | 1021 | 842  | <b>1130</b> |
|                                                                  | <b>4000</b>                      | 84                                             | 1272                   | 1052 | 856  | 680  | <b>995</b>  |
|                                                                  | <b>6000</b>                      | 84                                             | 1100                   | 885  | 692  | 518  | <b>860</b>  |
|                                                                  | <b>8000</b>                      | 83                                             | 929                    | 717  | 528  | 358  | <b>725</b>  |
|                                                                  | <b>10000</b>                     | 83                                             | 759                    | 551  | 365  | 197  | <b>589</b>  |
|                                                                  | <b>12000</b>                     | 83                                             | 589                    | 385  | 202  | 38   | <b>454</b>  |
| <b>960<br/>(2116)</b>                                            | <b>S.L.</b>                      | 84                                             | 1837                   | 1590 | 1368 | 1169 | <b>1454</b> |
|                                                                  | <b>2000</b>                      | 83                                             | 1649                   | 1405 | 1188 | 992  | <b>1307</b> |
|                                                                  | <b>4000</b>                      | 83                                             | 1461                   | 1222 | 1008 | 816  | <b>1159</b> |
|                                                                  | <b>6000</b>                      | 83                                             | 1274                   | 1039 | 829  | 640  | <b>1012</b> |
|                                                                  | <b>8000</b>                      | 83                                             | 1088                   | 857  | 650  | 464  | <b>864</b>  |
|                                                                  | <b>10000</b>                     | 82                                             | 902                    | 675  | 472  | 290  | <b>717</b>  |
|                                                                  | <b>12000</b>                     | 82                                             | 717                    | 494  | 295  | 116  | <b>570</b>  |

## 10. CRUISE PERFORMANCE

| <b>Weight:</b> 1160 kg<br><b>Mixture:</b> BEST ECONOMY<br><b>Pressure Altitude:</b> 0 ft |               |                    |             |                            |               |             |                            |                   |             |                            |
|------------------------------------------------------------------------------------------|---------------|--------------------|-------------|----------------------------|---------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| RPM                                                                                      | MAP<br>[inHg] | ISA – 30°C (-15°C) |             |                            | ISA (15°C)    |             |                            | ISA + 30°C (45°C) |             |                            |
|                                                                                          |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) |
| 2700                                                                                     | 29.3          | 106                | 142         | 18.3 (69.4)                | 100           | 144         | 16.8 (63.7)                | 95                | 145         | 15.6 (59.0)                |
|                                                                                          | 28.0          | 99                 | 139         | 17.5 (66.2)                | 94            | 140         | 16.1 (60.8)                | 90                | 141         | 14.9 (56.4)                |
|                                                                                          | 26.0          | 90                 | 133         | 16.1 (61.1)                | 85            | 134         | 14.9 (56.2)                | 81                | 135         | 13.8 (52.3)                |
|                                                                                          | 24.0          | 81                 | 127         | 14.9 (56.4)                | 76            | 128         | 13.7 (52.0)                | 73                | 129         | 12.8 (48.4)                |
|                                                                                          | 22.0          | 71                 | 121         | 13.6 (51.5)                | 68            | 121         | 12.6 (47.7)                | 64                | 121         | 11.8 (44.5)                |
|                                                                                          | 20.0          | 62                 | 114         | 12.4 (46.8)                | 59            | 113         | 11.5 (43.4)                | 56                | 113         | 10.7 (40.7)                |
| 2450                                                                                     | 29.3          | 95                 | 136         | 16.9 (63.8)                | 90            | 137         | 15.5 (58.6)                | 85                | 138         | 14.4 (54.5)                |
|                                                                                          | 28.0          | 89                 | 133         | 16.0 (60.7)                | 84            | 134         | 14.8 (55.9)                | 80                | 135         | 13.7 (52.0)                |
|                                                                                          | 26.0          | 80                 | 127         | 14.9 (56.2)                | 76            | 128         | 13.7 (51.9)                | 72                | 129         | 12.8 (48.3)                |
|                                                                                          | 24.0          | 72                 | 121         | 13.7 (51.7)                | 68            | 122         | 12.6 (47.8)                | 65                | 122         | 11.8 (44.7)                |
|                                                                                          | 22.0          | 63                 | 114         | 12.5 (47.2)                | 60            | 114         | 11.6 (43.8)                | 57                | 114         | 10.8 (41.0)                |
|                                                                                          | 20.0          | 55                 | 106         | 11.3 (42.9)                | 52            | 106         | 10.5 (39.9)                | 49                | 104         | 9.9 (37.5)                 |
| 2350                                                                                     | 29.3          | 91                 | 134         | 16.3 (61.6)                | 86            | 135         | 15.0 (56.7)                | 82                | 136         | 13.9 (52.7)                |
|                                                                                          | 28.0          | 85                 | 130         | 15.5 (58.7)                | 80            | 131         | 14.3 (54.1)                | 77                | 132         | 13.3 (50.3)                |
|                                                                                          | 26.0          | 77                 | 125         | 14.3 (54.3)                | 73            | 125         | 13.2 (50.1)                | 69                | 126         | 12.4 (46.8)                |
|                                                                                          | 24.0          | 68                 | 119         | 13.2 (49.9)                | 65            | 119         | 12.2 (46.2)                | 61                | 119         | 11.4 (43.2)                |
|                                                                                          | 22.0          | 60                 | 112         | 12.0 (45.6)                | 57            | 111         | 11.2 (42.3)                | 54                | 110         | 10.5 (39.7)                |
|                                                                                          | 20.0          | 52                 | 103         | 10.9 (41.4)                | 49            | 102         | 10.2 (38.6)                | 47                | 100         | 9.6 (36.3)                 |

| <b>Weight:</b> 1160 kg<br><b>Mixture:</b> BEST ECONOMY<br><b>Pressure Altitude:</b> 3000 ft |               |                    |             |                            |               |             |                            |                   |             |                            |
|---------------------------------------------------------------------------------------------|---------------|--------------------|-------------|----------------------------|---------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| RPM                                                                                         | MAP<br>[inHg] | ISA – 30°C (-21°C) |             |                            | ISA (9°C)     |             |                            | ISA + 30°C (39°C) |             |                            |
|                                                                                             |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) |
| 2700                                                                                        | 26.8          | 96                 | 140         | 16.5 (62.4)                | 91            | 142         | 15.1 (57.3)                | 86                | 143         | 14.0 (53.1)                |
|                                                                                             | 25.0          | 87                 | 135         | 15.3 (58.0)                | 83            | 136         | 14.1 (53.4)                | 79                | 137         | 13.1 (49.6)                |
|                                                                                             | 24.0          | 83                 | 132         | 14.8 (55.9)                | 79            | 133         | 13.6 (51.5)                | 75                | 134         | 12.7 (47.9)                |
|                                                                                             | 22.0          | 73                 | 125         | 13.5 (50.9)                | 69            | 126         | 12.4 (47.1)                | 66                | 125         | 11.6 (43.9)                |
|                                                                                             | 20.0          | 65                 | 118         | 12.3 (46.7)                | 61            | 118         | 11.4 (43.2)                | 58                | 117         | 10.7 (40.5)                |
|                                                                                             | 18.0          | 56                 | 110         | 11.1 (42.2)                | 53            | 108         | 10.4 (39.2)                | 50                | 106         | 9.7 (36.8)                 |
| 2450                                                                                        | 26.8          | 87                 | 135         | 15.3 (57.9)                | 82            | 136         | 14.1 (53.2)                | 78                | 136         | 13.1 (49.5)                |
|                                                                                             | 25.0          | 79                 | 129         | 14.2 (53.7)                | 74            | 130         | 13.1 (49.5)                | 71                | 130         | 12.2 (46.1)                |
|                                                                                             | 24.0          | 75                 | 126         | 13.6 (51.6)                | 71            | 127         | 12.6 (47.7)                | 67                | 127         | 11.7 (44.5)                |
|                                                                                             | 22.0          | 65                 | 119         | 12.4 (47.0)                | 62            | 119         | 11.5 (43.5)                | 59                | 118         | 10.8 (40.7)                |
|                                                                                             | 20.0          | 57                 | 111         | 11.4 (43.0)                | 54            | 110         | 10.6 (40.0)                | 52                | 108         | 9.9 (37.5)                 |
|                                                                                             | 18.0          | 49                 | 102         | 10.3 (38.9)                | 47            | 99          | 9.6 (36.3)                 | 44                | 94          | 9.0 (34.2)                 |
| 2350                                                                                        | 26.8          | 83                 | 132         | 14.8 (56.0)                | 79            | 133         | 13.6 (51.6)                | 75                | 134         | 12.7 (48.0)                |
|                                                                                             | 25.0          | 75                 | 127         | 13.7 (51.9)                | 71            | 127         | 12.7 (47.9)                | 68                | 127         | 11.8 (44.7)                |
|                                                                                             | 24.0          | 71                 | 124         | 13.2 (49.9)                | 67            | 124         | 12.2 (46.2)                | 64                | 124         | 11.4 (43.1)                |
|                                                                                             | 22.0          | 62                 | 116         | 12.0 (45.4)                | 59            | 116         | 11.1 (42.1)                | 56                | 114         | 10.4 (39.4)                |
|                                                                                             | 20.0          | 55                 | 108         | 11.0 (41.6)                | 52            | 107         | 10.2 (38.7)                | 49                | 104         | 9.6 (36.3)                 |
|                                                                                             | 18.0          | 47                 | 98          | 9.9 (37.6)                 | 44            | 94          | 9.3 (35.1)                 | 42                | 86          | 8.8 (33.1)                 |

| <b>Weight:</b> 1160 kg<br><b>Mixture:</b> BEST ECONOMY<br><b>Pressure Altitude:</b> 6000 ft |               |                    |             |                            |               |             |                            |                   |             |                            |
|---------------------------------------------------------------------------------------------|---------------|--------------------|-------------|----------------------------|---------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| RPM                                                                                         | MAP<br>[inHg] | ISA – 30°C (-27°C) |             |                            | ISA (3°C)     |             |                            | ISA + 30°C (33°C) |             |                            |
|                                                                                             |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) |
| 2700                                                                                        | 23.9          | 85                 | 137         | 14.6 (55.1)                | 81            | 138         | 13.4 (50.7)                | 76                | 138         | 12.4 (47.1)                |
|                                                                                             | 23.0          | 80                 | 134         | 13.9 (52.8)                | 76            | 134         | 12.8 (48.6)                | 72                | 134         | 12.0 (45.2)                |
|                                                                                             | 22.0          | 75                 | 130         | 13.3 (50.3)                | 71            | 130         | 12.3 (46.4)                | 67                | 130         | 11.4 (43.3)                |
|                                                                                             | 21.0          | 71                 | 127         | 12.8 (48.4)                | 67            | 127         | 11.8 (44.7)                | 64                | 126         | 11.0 (41.7)                |
|                                                                                             | 20.0          | 67                 | 123         | 12.3 (46.5)                | 64            | 123         | 11.4 (43.0)                | 60                | 122         | 10.6 (40.2)                |
|                                                                                             | 18.0          | 58                 | 114         | 11.1 (42.1)                | 55            | 113         | 10.3 (39.1)                | 52                | 110         | 9.7 (36.7)                 |
| 2450                                                                                        | 23.9          | 77                 | 131         | 13.5 (51.2)                | 73            | 132         | 12.5 (47.2)                | 69                | 131         | 11.6 (44.0)                |
|                                                                                             | 23.0          | 72                 | 127         | 12.9 (49.0)                | 68            | 128         | 11.9 (45.2)                | 65                | 127         | 11.1 (42.2)                |
|                                                                                             | 22.0          | 68                 | 123         | 12.3 (46.6)                | 64            | 123         | 11.4 (43.1)                | 61                | 122         | 10.6 (40.3)                |
|                                                                                             | 21.0          | 64                 | 120         | 11.9 (44.9)                | 60            | 119         | 11.0 (41.6)                | 57                | 118         | 10.3 (38.9)                |
|                                                                                             | 20.0          | 60                 | 116         | 11.4 (43.1)                | 57            | 115         | 10.6 (39.9)                | 54                | 113         | 9.9 (37.4)                 |
|                                                                                             | 18.0          | 52                 | 106         | 10.3 (39.0)                | 49            | 104         | 9.6 (36.3)                 | 46                | 98          | 9.0 (34.2)                 |
| 2350                                                                                        | 23.9          | 74                 | 129         | 13.1 (49.6)                | 70            | 129         | 12.1 (45.8)                | 66                | 128         | 11.3 (42.7)                |
|                                                                                             | 23.0          | 69                 | 125         | 12.5 (47.5)                | 65            | 125         | 11.6 (43.9)                | 62                | 124         | 10.8 (41.0)                |
|                                                                                             | 22.0          | 65                 | 121         | 11.9 (45.2)                | 61            | 120         | 11.1 (41.9)                | 58                | 119         | 10.3 (39.2)                |
|                                                                                             | 21.0          | 61                 | 117         | 11.5 (43.5)                | 58            | 116         | 10.7 (40.3)                | 55                | 114         | 10.0 (37.8)                |
|                                                                                             | 20.0          | 57                 | 113         | 11.0 (41.7)                | 54            | 112         | 10.2 (38.7)                | 51                | 109         | 9.6 (36.3)                 |
|                                                                                             | 18.0          | 49                 | 103         | 10.0 (37.8)                | 46            | 99          | 9.3 (35.2)                 | 44                | 91          | 8.8 (33.2)                 |



| <b>Weight:</b> 1160 kg<br><b>Mixture:</b> BEST ECONOMY<br><b>Pressure Altitude:</b> 9000 ft |               |                    |             |                            |               |             |                            |                   |             |                            |
|---------------------------------------------------------------------------------------------|---------------|--------------------|-------------|----------------------------|---------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| RPM                                                                                         | MAP<br>[inHg] | ISA – 30°C (-33°C) |             |                            | ISA (-3°C)    |             |                            | ISA + 30°C (27°C) |             |                            |
|                                                                                             |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) |
| 2700                                                                                        | 21.3          | 75                 | 132         | 12.8 (48.5)                | 70            | 132         | 11.8 (44.7)                | 67                | 132         | 11.0 (41.6)                |
|                                                                                             | 20.0          | 70                 | 128         | 12.2 (46.2)                | 66            | 128         | 11.3 (42.7)                | 62                | 127         | 10.5 (39.8)                |
|                                                                                             | 19.0          | 65                 | 124         | 11.6 (44.1)                | 61            | 123         | 10.8 (40.8)                | 58                | 121         | 10.1 (38.1)                |
|                                                                                             | 18.0          | 60                 | 119         | 11.1 (42.0)                | 57            | 117         | 10.3 (38.9)                | 54                | 115         | 9.6 (36.4)                 |
| 2450                                                                                        | 21.3          | 67                 | 126         | 11.9 (45.2)                | 64            | 125         | 11.0 (41.7)                | 60                | 124         | 10.3 (39.0)                |
|                                                                                             | 20.0          | 63                 | 121         | 11.4 (43.0)                | 59            | 120         | 10.5 (39.8)                | 56                | 118         | 9.9 (37.3)                 |
|                                                                                             | 19.0          | 58                 | 117         | 10.8 (41.0)                | 55            | 115         | 10.1 (38.1)                | 52                | 111         | 9.4 (35.7)                 |
|                                                                                             | 18.0          | 54                 | 111         | 10.3 (39.0)                | 51            | 108         | 9.6 (36.3)                 | 48                | 103         | 9.0 (34.1)                 |
| 2350                                                                                        | 21.3          | 65                 | 123         | 11.6 (43.8)                | 61            | 122         | 10.7 (40.6)                | 58                | 120         | 10.0 (37.9)                |
|                                                                                             | 20.0          | 60                 | 118         | 11.0 (41.8)                | 57            | 117         | 10.2 (38.7)                | 54                | 114         | 9.6 (36.3)                 |
|                                                                                             | 19.0          | 56                 | 114         | 10.5 (39.8)                | 53            | 111         | 9.8 (37.0)                 | 50                | 106         | 9.2 (34.7)                 |
|                                                                                             | 18.0          | 52                 | 108         | 10.0 (37.9)                | 49            | 104         | 9.3 (35.3)                 | 46                | 95          | 8.8 (33.2)                 |

| <b>Weight:</b> 1160 kg<br><b>Mixture:</b> BEST ECONOMY<br><b>Pressure Altitude:</b> 12000 ft |               |                    |             |                            |               |             |                            |                   |             |                            |
|----------------------------------------------------------------------------------------------|---------------|--------------------|-------------|----------------------------|---------------|-------------|----------------------------|-------------------|-------------|----------------------------|
| RPM                                                                                          | MAP<br>[inHg] | ISA – 30°C (-39°C) |             |                            | ISA (-9°C)    |             |                            | ISA + 30°C (21°C) |             |                            |
|                                                                                              |               | PWR<br>[%MCP]      | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP] | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) | PWR<br>[%MCP]     | TAS<br>[kn] | F.C.<br>[gal/h]<br>([l/h]) |
| 2700                                                                                         | 19.0          | 68                 | 129         | 11.6 (43.8)                | 64            | 128         | 10.7 (40.4)                | 60                | 126         | 10.0 (37.8)                |
|                                                                                              | 18.0          | 63                 | 124         | 11.0 (41.7)                | 59            | 122         | 10.2 (38.6)                | 56                | 119         | 9.5 (36.1)                 |
| 2450                                                                                         | 19.0          | 61                 | 122         | 10.8 (41.0)                | 57            | 120         | 10.0 (37.9)                | 54                | 116         | 9.4 (35.5)                 |
|                                                                                              | 18.0          | 57                 | 116         | 10.3 (39.0)                | 53            | 113         | 9.6 (36.2)                 | 50                | 107         | 9.0 (34.0)                 |
| 2350                                                                                         | 19.0          | 58                 | 119         | 10.5 (39.8)                | 55            | 116         | 9.8 (36.9)                 | 52                | 111         | 9.1 (34.6)                 |
|                                                                                              | 18.0          | 54                 | 113         | 10.0 (38.0)                | 51            | 109         | 9.3 (35.3)                 | 48                | 99          | 8.8 (33.1)                 |

**11. LANDING PERFORMANCES****NOTE**

To account for likely in service performance variations apply a factored to distances of 1.67

| <b>Weight = 1160 kg (2557 lb)</b>           |                     | <b>Corrections</b>                                   |               |               |               |                       |
|---------------------------------------------|---------------------|------------------------------------------------------|---------------|---------------|---------------|-----------------------|
| <b>Flaps: LAND</b>                          |                     | <b>Headwind: -4 m for each kn</b>                    |               |               |               |                       |
| <b>Short Final Approach Speed = 64 KIAS</b> |                     | <b>Tailwind: +13 m for each kn</b>                   |               |               |               |                       |
| <b>Throttle Lever: Idle</b>                 |                     | <b>Gross Runway: +10% to Ground Roll</b>             |               |               |               |                       |
| <b>Runway: Paved</b>                        |                     | <b>Runway slope: -3% to Ground Roll for each +1%</b> |               |               |               |                       |
| <b>Pressure<br/>Altitude<br/>[ft]</b>       |                     | <b>Distance [m]<br/>(Distance [ft])</b>              |               |               |               |                       |
|                                             |                     | <b>Temperature [°C]</b>                              |               |               |               | <b>ISA</b>            |
|                                             |                     | <b>-25</b>                                           | <b>0</b>      | <b>25</b>     | <b>50</b>     |                       |
| <b>S.L.</b>                                 | <b>Ground Roll</b>  | 204<br>(669)                                         | 225<br>(738)  | 245<br>(804)  | 266<br>(873)  | <b>237<br/>(778)</b>  |
|                                             | <b>At 50 ft AGL</b> | 488<br>(1601)                                        | 509<br>(1670) | 529<br>(1736) | 550<br>(1804) | <b>521<br/>(1709)</b> |
| <b>1000</b>                                 | <b>Ground Roll</b>  | 212<br>(696)                                         | 233<br>(764)  | 254<br>(833)  | 276<br>(906)  | <b>244<br/>(801)</b>  |
|                                             | <b>At 50 ft AGL</b> | 496<br>(1627)                                        | 517<br>(1696) | 538<br>(1765) | 560<br>(1837) | <b>528<br/>(1732)</b> |
| <b>2000</b>                                 | <b>Ground Roll</b>  | 220<br>(722)                                         | 242<br>(794)  | 264<br>(866)  | 286<br>(938)  | <b>251<br/>(823)</b>  |
|                                             | <b>At 50 ft AGL</b> | 504<br>(1654)                                        | 526<br>(1726) | 548<br>(1798) | 570<br>(1870) | <b>535<br/>(1755)</b> |
| <b>3000</b>                                 | <b>Ground Roll</b>  | 228<br>(748)                                         | 251<br>(823)  | 274<br>(899)  | 297<br>(974)  | <b>259<br/>(850)</b>  |
|                                             | <b>At 50 ft AGL</b> | 512<br>(1680)                                        | 535<br>(1755) | 558<br>(1831) | 581<br>(1906) | <b>543<br/>(1781)</b> |
| <b>4000</b>                                 | <b>Ground Roll</b>  | 236<br>(774)                                         | 260<br>(853)  | 284<br>(932)  | 308<br>(1010) | <b>267<br/>(876)</b>  |
|                                             | <b>At 50 ft AGL</b> | 520<br>(1706)                                        | 544<br>(1785) | 568<br>(1864) | 592<br>(1942) | <b>551<br/>(1808)</b> |
| <b>5000</b>                                 | <b>Ground Roll</b>  | 245<br>(804)                                         | 270<br>(886)  | 295<br>(968)  | 320<br>(1050) | <b>275<br/>(902)</b>  |
|                                             | <b>At 50 ft AGL</b> | 529<br>(1736)                                        | 554<br>(1818) | 579<br>(1900) | 604<br>(1982) | <b>559<br/>(1834)</b> |
| <b>6000</b>                                 | <b>Ground Roll</b>  | 255<br>(837)                                         | 280<br>(919)  | 306<br>(1004) | 332<br>(1089) | <b>284<br/>(932)</b>  |
|                                             | <b>At 50 ft AGL</b> | 539<br>(1768)                                        | 564<br>(1850) | 590<br>(1936) | 616<br>(2021) | <b>568<br/>(1864)</b> |

## 12. BALKED LANDING PERFORMANCE

**NOTE**

To account for likely in service performance variations apply a factored to rate of climb and to angle of climb of 0.90

| Throttle and Propeller Lever: Full Forward |                   |                              |      |      |      |             |
|--------------------------------------------|-------------------|------------------------------|------|------|------|-------------|
| Flaps: LAND                                |                   |                              |      |      |      |             |
| Speed: 65 KIAS                             |                   |                              |      |      |      |             |
| Weight                                     | Pressure Altitude | Steady Gradient of Climb [%] |      |      |      |             |
|                                            |                   | Temperature [°C]             |      |      |      | ISA         |
| [kg]<br>([lb])                             | [ft]              | -25                          | 0    | 25   | 50   |             |
| <b>1160<br/>(2557)</b>                     | S.L.              | 14.2                         | 11.3 | 8.7  | 6.3  | <b>9.7</b>  |
|                                            | 1000              | 13.1                         | 10.2 | 7.6  | 5.2  | <b>8.8</b>  |
|                                            | 2000              | 12                           | 9.1  | 6.5  | 4.2  | <b>7.9</b>  |
|                                            | 3000              | 10.9                         | 8    | 5.4  | 3.1  | <b>7</b>    |
|                                            | 4000              | 9.8                          | 6.9  | 4.4  | 2.1  | <b>6.2</b>  |
|                                            | 5000              | 8.6                          | 5.8  | 3.3  | 1    | <b>5.3</b>  |
|                                            | 6000              | 7.5                          | 4.7  | 2.2  | 0    | <b>4.4</b>  |
|                                            | 7000              | 6.4                          | 3.6  | 1.2  | -1.1 | <b>3.5</b>  |
| <b>1060<br/>(2337)</b>                     | S.L.              | 16.4                         | 13.2 | 10.4 | 7.9  | <b>11.5</b> |
|                                            | 1000              | 15.2                         | 12.1 | 9.3  | 6.8  | <b>10.6</b> |
|                                            | 2000              | 14                           | 10.9 | 8.1  | 5.6  | <b>9.6</b>  |
|                                            | 3000              | 12.8                         | 9.7  | 7    | 4.5  | <b>8.7</b>  |
|                                            | 4000              | 11.6                         | 8.6  | 5.8  | 3.4  | <b>7.8</b>  |
|                                            | 5000              | 10.4                         | 7.4  | 4.7  | 2.3  | <b>6.8</b>  |
|                                            | 6000              | 9.2                          | 6.2  | 3.6  | 1.2  | <b>5.9</b>  |
|                                            | 7000              | 8                            | 5.1  | 2.4  | 0.1  | <b>5</b>    |
| <b>960<br/>(2116)</b>                      | S.L.              | 18.9                         | 15.5 | 12.5 | 9.7  | <b>13.7</b> |
|                                            | 1000              | 17.6                         | 14.2 | 11.2 | 8.5  | <b>12.6</b> |
|                                            | 2000              | 16.3                         | 13   | 10   | 7.3  | <b>11.6</b> |
|                                            | 3000              | 15                           | 11.7 | 8.8  | 6.1  | <b>10.6</b> |
|                                            | 4000              | 13.8                         | 10.5 | 7.5  | 4.9  | <b>9.6</b>  |
|                                            | 5000              | 12.5                         | 9.2  | 6.3  | 3.7  | <b>8.6</b>  |
|                                            | 6000              | 11.2                         | 8    | 5.1  | 2.5  | <b>7.6</b>  |
|                                            | 7000              | 9.9                          | 6.7  | 3.9  | 1.3  | <b>6.6</b>  |

### **13. NOISE DATA**

Noise level, determined in accordance with ICAO/Annex 16 6<sup>th</sup> Ed., July 2011, Vol. I°, Chapter 10 and 14 CFR 36.1581(c), is **77.22 dB(A)**.

*NOTE: No determination has been made by the Federal Aviation Administration that the noise levels of this aircraft are or should be acceptable or unacceptable for operation at, into, or out of, any airport.*

INTENTIONALLY LEFT BLANK

Supplement D10: pages replacement instructions

## **SECTION 6 – WEIGHT AND BALANCE**

Refer to the basic AFM, Section 6 Weight and Balance

**Supplement D10: pages replacement instructions**

## **SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**

**Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems Description**

According A/C configuration apply following pages replacement:

| <b>Supplement D10<br/>AIRFRAME AND<br/>SYSTEMS<br/>page</b> |                 | <b>AFM<br/>Section 7<br/>page</b>         |
|-------------------------------------------------------------|-----------------|-------------------------------------------|
| E7-8 thru 11                                                | <b>REPLACE</b>  | Pages 7-8 thru 11 of basic AFM, Section 7 |
| E7-16                                                       | <b>REPLACES</b> | Page 7-16 of basic AFM, Section 7         |
| E7-21                                                       | <b>REPLACES</b> | Pages 7-21 of basic AFM, Section 7        |
| E7-27                                                       | <b>REPLACES</b> | Page 7-27 of basic AFM, Section 7         |
| E7-33                                                       | <b>REPLACES</b> | Page 7-33 of basic AFM, Section 7         |
| E7-35                                                       | <b>REPLACES</b> | Page 7-35 of basic AFM, Section 7         |
| E7-37                                                       | <b>REPLACES</b> | Page 7-37 of basic AFM, Section 7         |

### **3. FLIGHT CONTROLS**

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. A cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator, included in the Garmin G1000 NXi EIS (Engine Indication System), displays three markings related to 0°, takeoff (T/O) and landing (LND) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

The control of the stabilator trim is operated by means of a control wheel, located between the two front seats that acts directly on the control cables.

Stabilator trim position is reported in the Garmin G1000 NXi.

Rudder Trimming device for lateral control is provided by means of an electrical actuator controlled by a rocker switch located near the pitch trim wheel; the surface is connected to a potentiometer linked to a rudder trim indicator included in the Garmin G1000 NXi EIS.



## 4. INSTRUMENT PANEL

The instrument panel is divided in three areas:

- The left area holds Garmin G1000 NXi PFD;
- The Central area holds the standby unit for PFI parameters, MD 302 suite, and the ELT button.
- The right area holds Garmin G1000 NXi MFD and breaker panel;
- The lower-LH portion of the instrument panel holds:
  - Ignition key;
  - Master and Generator switches;
  - Emergency fuel pump;
  - Avionic Master switch;
- The lower-Central portion of the instrument panel holds:
 

|                                                                                                                                                                                                    |                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>➤ Trim disconnect;</li> <li>➤ Pitot Heat;</li> <li>➤ Strobe Light;</li> <li>➤ Navigation Light;</li> <li>➤ Taxi Light;</li> <li>➤ Landing Light;</li> </ul> | <ul style="list-style-type: none"> <li>➤ Instrument and Panel Dimmers;</li> <li>➤ Day/Night switch;</li> <li>➤ Emergency Light;</li> <li>➤ Fuel selector valve</li> <li>➤ Flap Control;</li> <li>➤ Engine Control Levers.</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
- The lower-RH portion of the instrument panel holds:
  - Pocket



Fig. 7-8. INSTRUMENT PANEL

#### 4.1. ENGINE CONTROL LEVER

Engine handling is via three levers: Throttle, RPM lever, Mixture control lever.

They're situated on the centre control; the use of "front/forward" and "rear/backward" is defined in relation to the direction of flight (longitudinal).

##### Mixture control lever

This lever (right hand lever with red handle) controls the fuel-air mixture, which is supplied to the engine.

With the lever full forward, extra fuel is being supplied to the engine which at higher performance setting contributes to engine cooling.

In cruise, the mixture should be made leaner in order to reach the appropriate fuel-air mixture. The leaning procedure is given in Chapter 4.

Lever forward (RICH) >> Mixture rich (in fuel)

Lever to rear (LEAN) >> Mixture lean (in fuel)

To shut off the engine the mixture control lever is pulled to the rear stop: air without fuel is drawn into the cylinders that shuts down.

##### Throttle

This lever (left hand with large knob) is used to control manifold pressure (MAP).

High manifold pressure means a large quantity of fuel-air mixture is being supplied to engine, while low manifold pressure means a lesser quantity of fuel-air mixture is being supplied.

##### Propeller lever

By means of this lever (central lever with blue handle) the propeller governor controls the propeller pitch, and consequently engine RPM. A selected RPM is held constant by the governor independent of the airspeed and the throttle setting.

Lever forward (HIGH RPM) = fine pitch

Lever rearward (LOW RPM) = coarse pitch

Following a defect in governor or oil system, the blades go to the finest possible pitch (maximum RPM), thus allowing continuation of the flight.



**CAUTION**

*Following failure of the governor or a serious drop in oil pressure, the RPM should be adjusted using the throttle. Every effort should be made not to exceed 2700 RPM.*



**CAUTION**

*The throttle and RPM lever should be moved slowly, in order to avoid over-speed and excessively rapid RPM changes.*

## 4.2. ALTERNATE AIR

Alternate Air knob is located on the central pedestal; when the knob is fully pulled outward from the instrument panel, injectors receive maximum hot air. During normal operation, the knob is set in OFF position.

### 4.3. DEFROST AND CABIN HEAT

Two knobs, located on the lower side of the central pedestal, allow Defrost and Cabin Heat function. The one marked as “Defrost and Cabin Heat” allows hot air to perform windshield defrost and partially cabin heat.

The cabin heat control knob, when fully outward, allows cabin to receive maximum hot air. When both cabin heat and defrost and cabin heat are pulled, air is partitioned.



Fig. 7-9. CENTRAL PEDESTAL

## 7. POWERPLANT

### 7.1. ENGINE

Manufacturer ..... Lycoming Textron  
 Model ..... IO-390-C3B6  
 Type Certificate ..... EASA TCDS no. IM.E.097  
 Engine type ..... Fuel injected (IO), direct drive, four cylinder  
 horizontally opposed, air cooled.  
 Maximum power ..... 160.3 kW (215hp) @ 2700 rpm

| Oil Consumption            |      |     |                               |                             |
|----------------------------|------|-----|-------------------------------|-----------------------------|
| Operation                  | RPM  | HP  | Max.<br>Oil Cons.<br>Qts./Hr. | *Max.<br>Cyl. Head<br>Temp. |
| Normal Rated               | 2700 | 215 | .80                           | 465°F (240°C)               |
| Performance Cruise (75%)   | 2450 | 161 | .45                           | 465°F (240°C)               |
| Economy Cruise (60R Rated) | 2350 | 140 | .39                           | 465°F (240°C)               |

### 7.2. PROPELLER

Manufacturer ..... MT Propeller  
 Model ..... MTV-12B/183-59  
 Type Certificate ..... EASA TCDS no. P.013  
 Blades/hub ..... wood/composite 3-blades – aluminium hub  
 Diameter ..... 1830 mm (72 in)  
 Type ..... Variable pitch

#### Governor

Manufacturer ..... MT Propeller  
 Model ..... P-860-23:  
 Type ..... Hydraulic

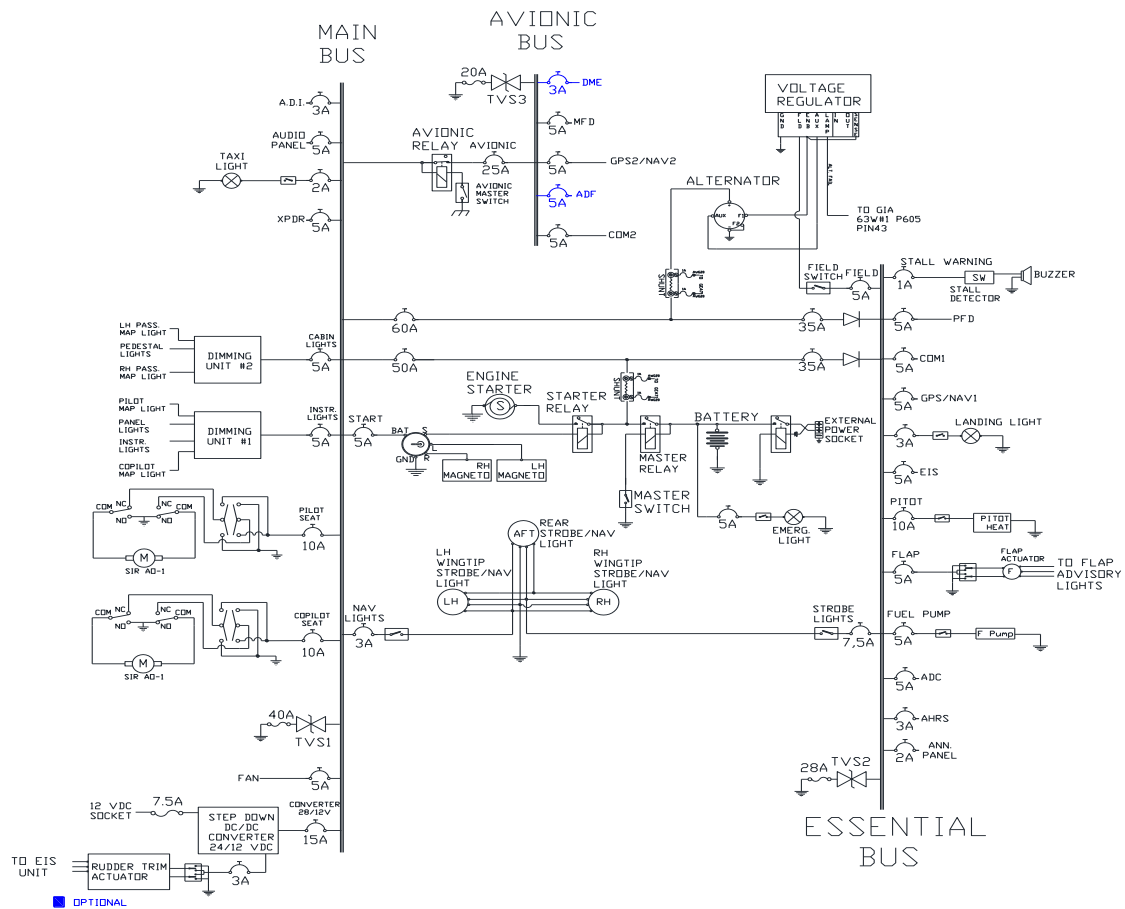


FIG.7-15. ELECTRICAL SYSTEM ARCHITECTURE

## 9.1. STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.

## 11.2 INTERNAL LIGHTS

On the cabin ceiling are located four map lights, two in the front area (pilot) and two in the rear area (passengers).

In the central area of the cabin ceiling is located a spot light used to illuminate the pedestal during night flight operations. All ceiling lights are dimmable by a dedicated dimmer.

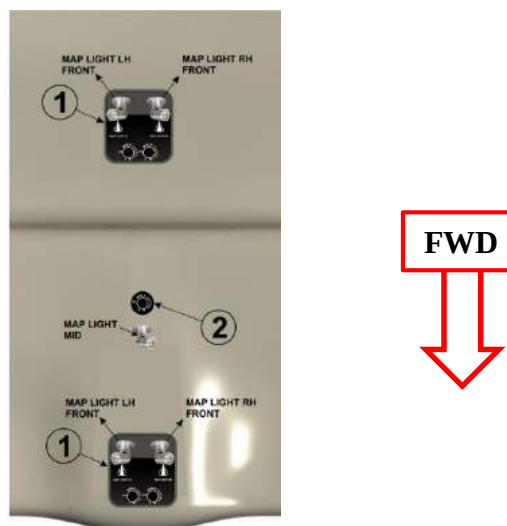



FIG.7-18. CABIN CEILING LIGHTS LAYOUT

The instrument panel can be illuminated by 8 light strips, all dimmable. For reference, see Par. “Instrument Panel”.

**ELT unit position placard:**




**Breaker Panel placards:**

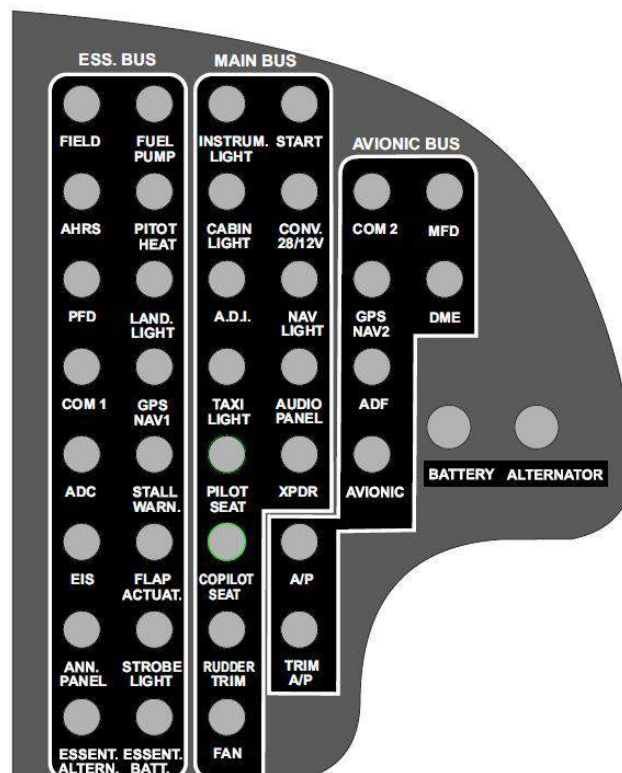



Oil check placards:

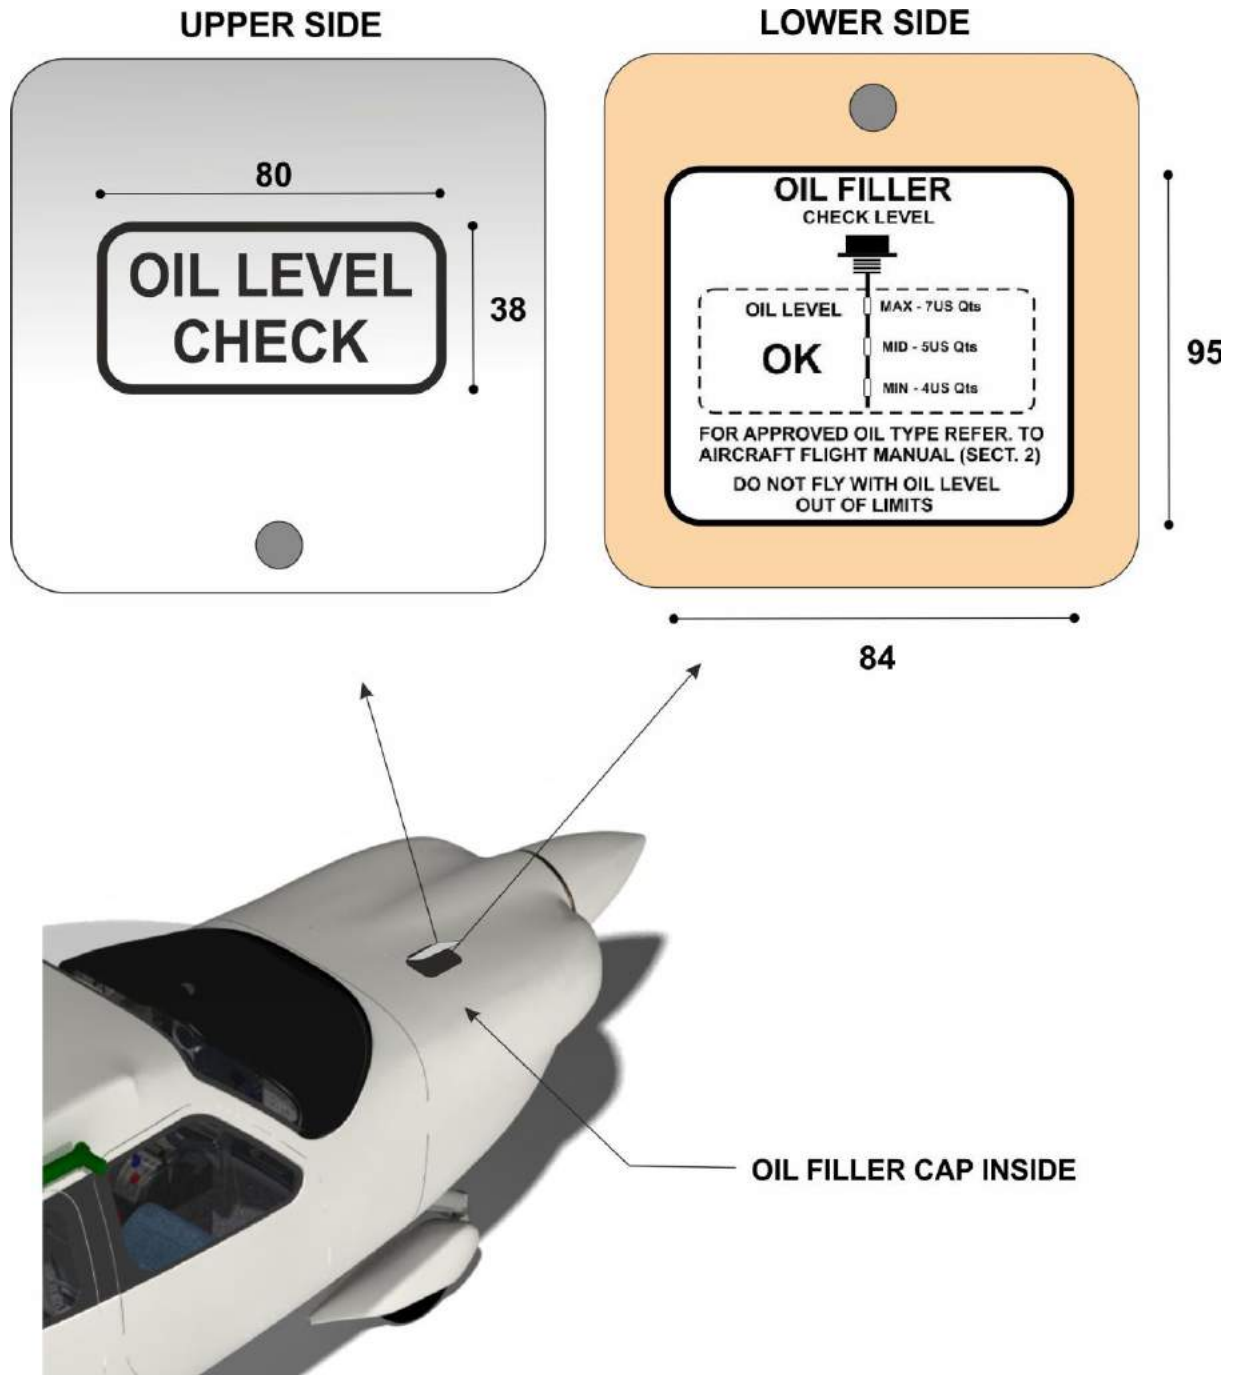



Fuel selector valve and Flap control knob:



Emergency exit placards



Baggage Door opening knob:



Supplement D10: pages replacement instructions

## **SECTION 8 – GROUND HANDLING & SERVICE**

**Make sure you first applied instructions reported on the basic AFM,  
Section 8 Ground Handling & Service**

Refer to the basic AFM, Section 8 – Ground Handling & Service

**SUPPLEMENT NO. D11****AFMS FOR BRAZILIAN AIRPLANES****Record of Revisions**

| Rev | Revised page | Description of Revision | Tecnam Approval |           |          | EASA Approval or Under DOA Privileges |
|-----|--------------|-------------------------|-----------------|-----------|----------|---------------------------------------|
|     |              |                         | DO              | OoA       | HDO      |                                       |
| 0   | All          | Editorial revision      | A. Sabino       | C. Caruso | M. Oliva | DOA Approval *                        |
|     |              |                         |                 |           |          |                                       |

(\*) This Supplement was originally issued under ANAC Approval.

**List of Effective Pages**

| Page  | Revision |
|-------|----------|
| D11-1 | Rev 0    |
| D11-2 | Rev 0    |
| D11-3 | Rev 0    |
| D11-4 | Rev 0    |

## **INTRODUCTION**

This supplement applies for Brazilian registered aircraft.

Information contained herein complements the basic information in the EASA Approved Aircraft Flight Manual when the aircraft is registered in Brazil.

For limitations, procedures, and performance information not contained in this Supplement, refer to the basic Aircraft Flight Manual.

## LIMITATIONS

**APPROVED FUEL:** AVGAS 100 LL (ASTM D910)

NOTE: Use of automotive gasoline (MOGAS) is not allowed for operation in Brazil.

### WAAS AND SBAS FUNCTIONALITIES:

Currently, SBAS (Satellite-Based Augmentation System) is not available in Brazil. While SBAS is not functional, operations that require it, such as GNSS vertical navigation modes, are not available and should not be performed in Brazilian airspace.

### PLACARDS IN PORTUGUESE

| Description                              | Placard                                                                                                            | Place               |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------|---------------------|
| External Power Receptacle Placard        | TOMADA DE ALIMENTAÇÃO EXTERNA<br>24 Volts - DC                                                                     | Tail Cone           |
| No Step Placard                          | <b>NÃO PISE</b>                                                                                                    | MLG Fairings        |
| Fuel Limitation Placard                  |                                | Wing                |
| Door Placard                             | <b>SAÍDA DE EMERGÊNCIA</b><br> | Fuselage            |
| Baggage door                             |                                | Fuselage            |
| Baggage Compartment Maximum Load Placard |                                | Baggage Compartment |
| No Smoking Placard                       | <b>NÃO FUME</b>                                                                                                    | Instrument Panel    |
| Internal door placards                   | <b>BLOQUEADO DESBLOQUEADO</b>                                                                                      | Doors internal side |

| Description                     | Placard                                                                             | Place                     |
|---------------------------------|-------------------------------------------------------------------------------------|---------------------------|
| Door Handle locking placard     |    | Doors internal side       |
| Emergency Exit Internal Placard |   | Doors internal Side       |
| Open Baggage Placard            |  | Baggage compartment Panel |

## Supplement no. D12

# AFMS FOR BATTERY RELOCATION

### Record of Revisions

| Rev | Revised page | Description of Revision | Tecnam Approval |          |          | EASA Approval or Under DOA Privileges                                      |
|-----|--------------|-------------------------|-----------------|----------|----------|----------------------------------------------------------------------------|
|     |              |                         | DO              | OoA      | HDO      |                                                                            |
| 0   | -            | First Issue             | F.Auricchio     | D. Ronca | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/112.170612) |

### List of Effective Pages

|                    | Page                          | Rev.   |
|--------------------|-------------------------------|--------|
| <b>Cover Pages</b> | D12-1 thru 4                  | Rev. 0 |
| <b>Section 1</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 2</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 3</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 4</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 5</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 6</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 7</b>   | B7-34                         | Rev. 0 |
| <b>Section 8</b>   | <i>No page to be replaced</i> | -      |

## **INTRODUCTION**

The information contained herein supplement or supersede the basic Aircraft Flight Manual. Detailed instructions are provided to allow the owner for replacing the AFM pages, containing information amended as per Battery Relocation in subject.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**



**Supplement D12: pages replacement instructions**

**SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**

**Make sure you first applied instructions reported on the basic AFM,  
Section 7 Airframe and Systems description**

According A/C configuration apply following pages replacement:

| <b>Supplement D12<br/>pages</b> |                 | <b>AFM<br/>pages</b> |
|---------------------------------|-----------------|----------------------|
| B7-34                           | <b>REPLACES</b> | 7-34                 |


Magnetic Compass placard:



|       |   |     |     |   |     |     |
|-------|---|-----|-----|---|-----|-----|
| For   | N | 30  | 60  | E | 120 | 150 |
| Steer |   |     |     |   |     |     |
| For   | S | 210 | 240 | W | 300 | 330 |
| Steer |   |     |     |   |     |     |

DATE RADIO ON AIRPATH

Battery Placard:

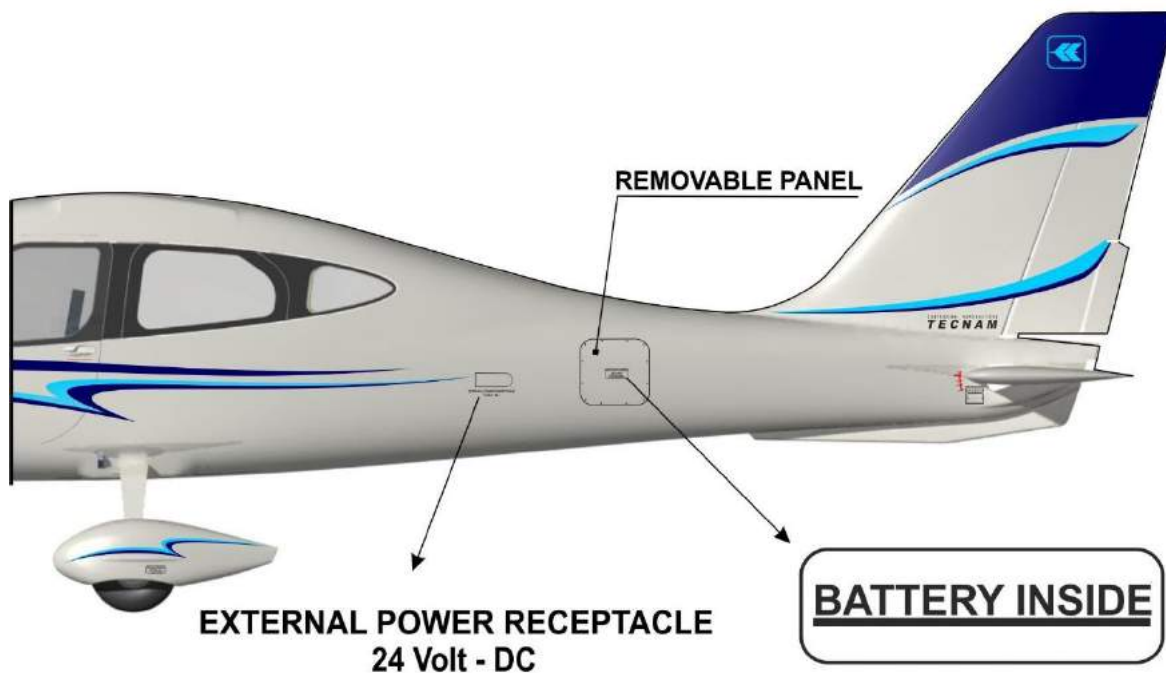

INTENTIONALLY LEFT BLANK

## Supplement no. D13

# AFMS FOR NEW ENGINE COWLING

### Record of Revisions

| Rev | Revised page | Description of Revision | Tecnam Approval |          |          | EASA Approval or Under DOA Privileges                                      |
|-----|--------------|-------------------------|-----------------|----------|----------|----------------------------------------------------------------------------|
|     |              |                         | DO              | OoA      | HDO      |                                                                            |
| 0   | -            | First Issue             | A. Sabino       | D. Ronca | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/122.180308) |

### List of Effective Pages

|                    | Page                          | Rev.   |
|--------------------|-------------------------------|--------|
| <b>Cover Pages</b> | D13-1 thru 4                  | Rev. 0 |
| <b>Section 1</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 2</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 3</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 4</b>   | B4-13                         | Rev. 0 |
| <b>Section 5</b>   | <i>No page to be replaced</i> | -      |
| <b>Section 7</b>   | B7-35                         | Rev. 0 |
|                    | B7-37                         | Rev. 0 |
| <b>Section 8</b>   | <i>No page to be replaced</i> | -      |

## **INTRODUCTION**

The information contained herein supplement or supersede the basic Aircraft Flight Manual. Detailed instructions are provided to allow the owner for replacing the AFM pages, containing information regarding the new engine cowling in subject.

**It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.**

**Supplement D13: pages replacement instructions**

## **SECTION 4 – NORMAL PROCEDURES**

**Make sure you first applied instructions reported on the basic AFM**

According A/C configuration apply following pages replacement:

| <b>Supplement D13<br/>pages</b> |                 | <b>AFM<br/>pages</b> |
|---------------------------------|-----------------|----------------------|
| B4-13                           | <b>REPLACES</b> | 4-13                 |

- S** Propeller and spinner condition *CHECK for nicks, cracks, dents and other defects, propeller should rotate freely. Check fixing and lack of play between blades and hub.*
- T** Check the engine cowling surface conditions and perform the following checks:
- a) *Nacelle inlets and exhausts openings must be free of obstructions. Visually inspect that ram air intake is unobstructed. If inlet and outlet plugs are installed, they must be removed.*
  - b) *Check radiator. There should be no indication of leakages and obstructions.*
  - c) *Check for foreign objects*
  - d) *Check exhaust general conditions.*
  - e) *At cold engine, Check engine oil level and replenish as required. Prior to long flights oil should be added so that the oil level reaches the "max" mark.*
  - f) *Drain off Gascolator for water and sediment (drain until no water comes off). Then make sure drain valve is closed.*
  - g) *Check drainage hoses free of obstructions.*
- U** Engine cowling fittings *CHECK all fixed or locked.*
- V** Landing/taxi light and LH static port *CHECK, Visual inspection for integrity. Right side tank vent: check for obstructions.*
- Z** Tow bar and chocks *REMOVE, stow on board pitot, static ports and stall warning protective plugs.*

**NOTE**

*Avoid blowing inside Pitot tube and inside airspeed indicator system's static ports as this may damage instruments.*

**Supplement D13: pages replacement instructions**

**SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION**


**Make sure you first applied instructions reported on the basic AFM**

According A/C configuration apply following pages replacement:

| <b>Supplement D13<br/>pageS</b> |                 | <b>AFM<br/>pages</b> |
|---------------------------------|-----------------|----------------------|
| B7-35                           | <b>REPLACES</b> | 7-35                 |
| B7-37                           | <b>REPLACES</b> | 7-37                 |



Oil check placards:

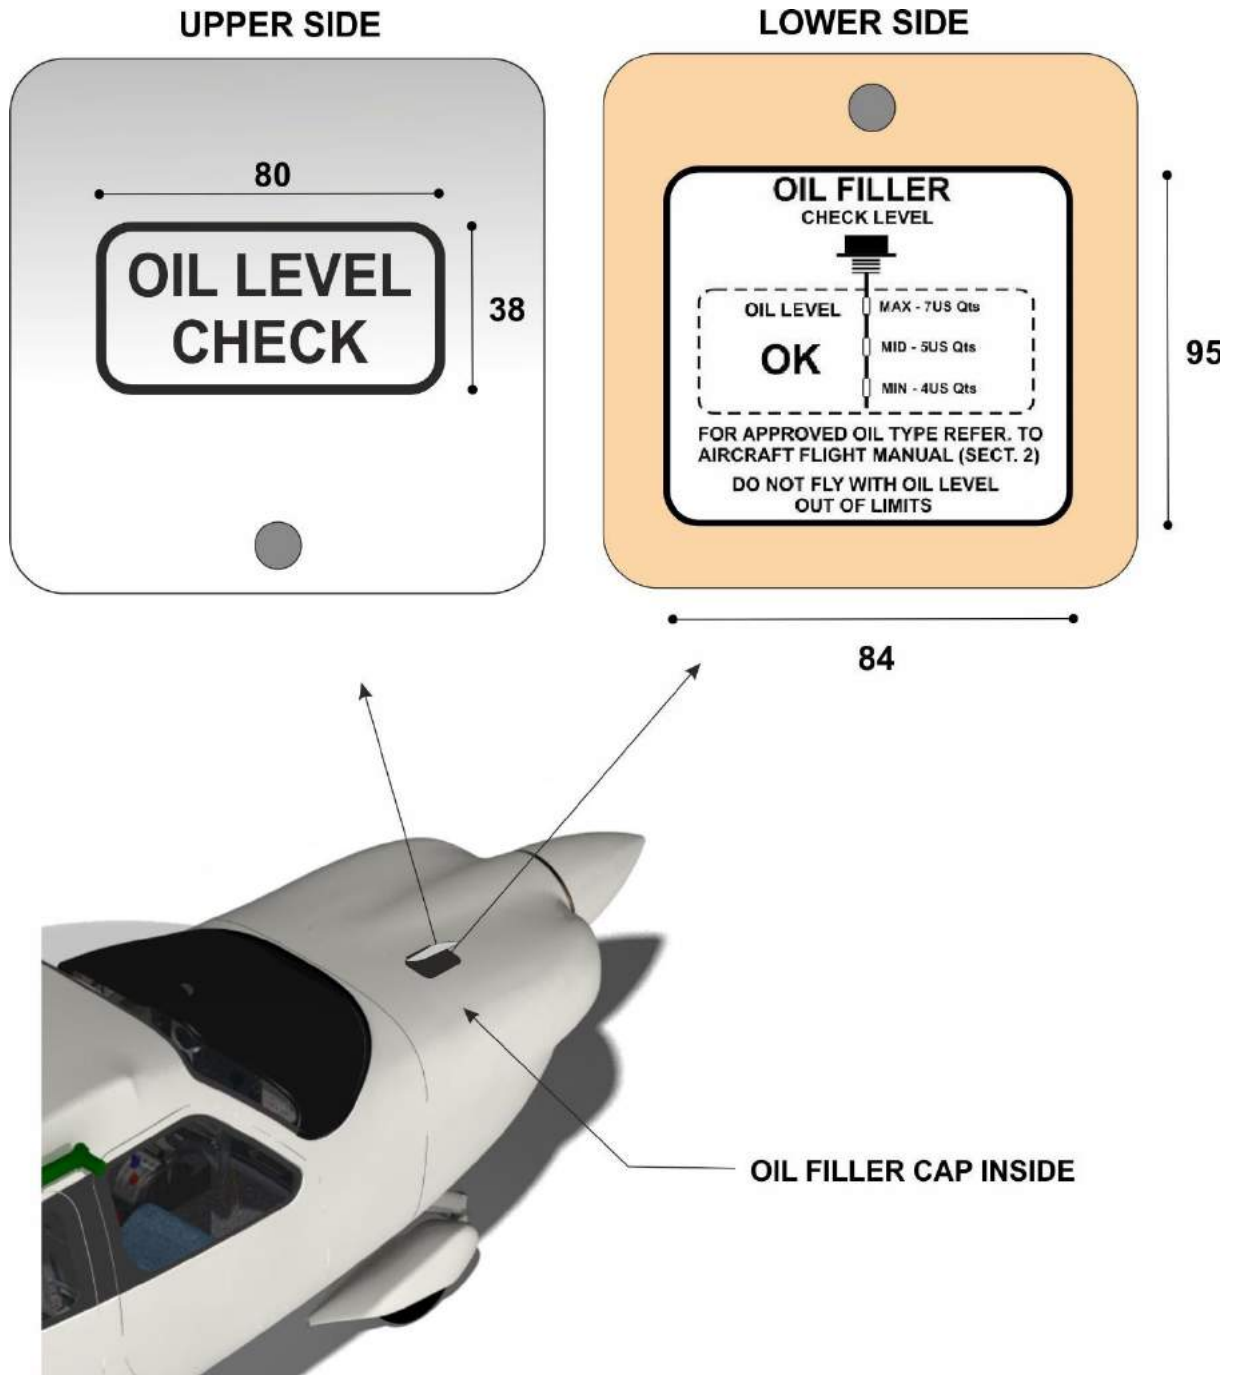

Fuel selector valve and Flap control knob:



Emergency exit placards



Baggage Door opening knob:



## **Supplement n° D14**

### **AFMS FOR Autopilot Provision for IO-390 Engine Equipped Airplanes**

#### **Record of Revisions**

| Rev | Revised page | Description of Revision | Tecnam Approval |          |          | EASA Approval or Under DOA Privileges                                      |
|-----|--------------|-------------------------|-----------------|----------|----------|----------------------------------------------------------------------------|
|     |              |                         | DO              | OoA      | HDO      |                                                                            |
| 0   | All          | First Issue             | A.Sabino        | D. Ronca | M. Oliva | Approved under the authority of DOA ref. EASA.21J.335 (MOD2010/132.180515) |
| -   | -            | -                       | -               | -        | -        | -                                                                          |

#### **List of Effective Pages**

| Page  | Revision |
|-------|----------|
| D14-1 | Rev. 0   |
| D14-2 | Rev. 0   |
| D14-3 | Rev. 0   |
| D14-4 | Rev. 0   |

## **INTRODUCTION**

---

This supplement provides information regarding the autopilot provision for aircraft equipped with Lycoming IO-390 engine. The installed autopilot system is inoperative. The following information are provided to let the pilot recognise the equipment and its controls.

The content of this document supplements or supersedes the basic Aircraft Flight Manual in the specified sections.

### **SECTION 1      GENERAL**

---

*Refer to the basic AFM.*

### **SECTION 2      LIMITATIONS**

---

*Refer to the basic AFM.*

### **SECTION 3      EMERGENCY PROCEDURES**

---

*Refer to the basic AFM.*

### **SECTION 4      NORMAL PROCEDURES**

---

*Refer to the basic AFM.*

### **SECTION 5      PERFORMANCE**

---

*Refer to the basic AFM.*

### **SECTION 6      WEIGHT AND BALANCE**

---

*Refer to the basic AFM.*

## SECTION 7 AIRFRAME AND SYSTEMS DESCRIPTION

### INSTRUMENT PANEL

The GDU 1050 MFD display is replaced by GDU 1054, which is a multifunction display located on the right side of the instrument panel that provides pilot with a set of additional keys dedicated to the control of the autopilot system (see red frame in Fig. 1).

Two dedicated breakers are located on the breaker panel, as shown in Fig. 2. They are related to autopilot/trim operation and are labelled as "A/P" and "TRIM A/P" respectively. In order to disable both breakers and prevent their unintentional operation, a fastener is inserted on both of them.



Fig. 1. Instrument Panel

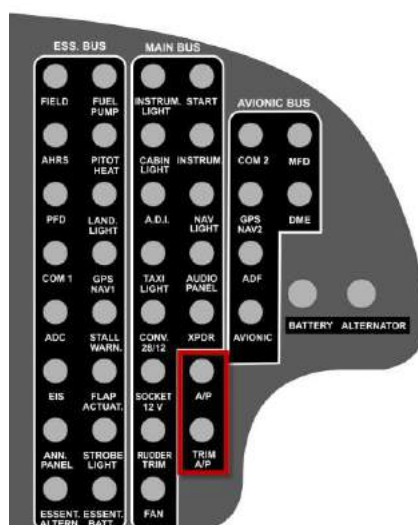


Fig. 2. BreakerPanel

## PLACARDS

A placard with white and red stripes and with the “INOPERATIVE” label has been applied around the autopilot controller in order to advise the pilot that operations on the controller are disabled and the autopilot is not operative, as shown in detail in Fig. 3.



Fig. 3. AP keyboard placard

## AVIONICS

The autopilot servos are electromechanical units that provide automatic control of single flight axes. These units are installed underneath the seats. They are not visible to the pilot and do not affect the handling qualities of the aircraft in any way.

## SECTION 8 GROUND HANDLING & SERVICE

*Refer to the basic AFM.*

**Supplement n° D15****AFMS FOR  
G1000 NXi Avionics Suite****Record of Revisions**

| Rev | Revised page | Description of Revision | Tecnam Approval |          |          | EASA Approval or Under DOA Privileges                                       |
|-----|--------------|-------------------------|-----------------|----------|----------|-----------------------------------------------------------------------------|
|     |              |                         | DO              | OoA      | HDO      |                                                                             |
| 0   | All          | First Issue             | A.Sabino        | D. Ronca | M. Oliva | A pproved under the authority of DOA ref. EASA.21J.335 (MOD2010/136.180522) |
| -   | -            | -                       | -               | -        | -        | -                                                                           |

**List of Effective Pages**

| Page  | Revision      |
|-------|---------------|
| D15-1 | <i>Rev. 0</i> |
| D15-2 | <i>Rev. 0</i> |
| D15-3 | <i>Rev. 0</i> |
| D15-4 | <i>Rev. 0</i> |
| D15-5 | <i>Rev. 0</i> |
| D15-6 | <i>Rev. 0</i> |

## **INTRODUCTION**

---

This supplement applies to aircraft equipped with Garmin G1000 NXi Avionics Suite.  
The information contained herein supplement or supersede the basic Aircraft Flight Manual.

### **SECTION 1      GENERAL**

---

*Refer to the basic AFM.*

### **SECTION 2      LIMITATIONS**

---

*Refer to the basic AFM.*

### **SECTION 3      EMERGENCY PROCEDURES**

---

*Refer to the basic AFM.*

### **SECTION 4      NORMAL PROCEDURES**

---

*Refer to the basic AFM.*

### **SECTION 5      PERFORMANCE**

---

*Refer to the basic AFM.*

### **SECTION 6      WEIGHT AND BALANCE**

---

*Refer to the basic AFM.*



## **SECTION 7      AIRFRAME AND SYSTEMS DESCRIPTION**

---

**NOTE**

*Make sure you first applied instructions reported on the basic AFM, Section 7 Airframe and Systems Description.*

### **FLIGHT CONTROLS**

#### **Flaps**

Flaps are extended via an electric servo actuator. A switch is placed in the lower part of the instrument panel in order to provide flaps deflection control. The switch has the following positions:

- UP
- TO
- LN

A flap position indicator is included in the Garmin G1000 NXi EIS. It displays three markings, which are related to the three possible flap positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

#### **Longitudinal Trim**

The stabilator trim is operated by means of a control wheel located between the two front seats. It acts directly on the control cables.

A stabilator trim position indicator is integrated in the Garmin G1000 NXi EIS.

#### **Rudder Trim**

Rudder trim control is moved by means of an electrical actuator. Control is provided by a rocker switch located near the pitch trim wheel.

A rudder trim position indicator is integrated in the Garmin G1000 NXi EIS.

### **INSTRUMENT PANEL**

The instrument panel is divided in three areas:

- The left area holds Garmin G1000 NXi PFD;
- The central area holds the standby unit for PFI parameters, MD 302 suite, and the ELT button.
- The right area holds Garmin G1000 NXi MFD and breaker panel;
- The lower-LH portion of the instrument panel holds:
  - Ignition key;
  - Master and Generator switches;
  - Emergency fuel pump;

- Avionic Master switch;
- The lower-Central portion of the instrument panel holds:
  - Trim disconnect;
  - Pitot Heat;
  - Strobe Light;
  - Navigation Light;
  - Taxi Light;
  - Landing Light;
  - Instrument and Panel Dimmers;
  - Day/Night switch;
  - Emergency Light;
  - Fuel selector valve
  - Flap Control;
  - Engine Control Levers.
- The lower-RH portion of the instrument panel holds:
  - Pocket



Fig. 1. INSTRUMENT PANEL

## AVIONICS

The Garmin NXi avionics system retains all the functions provided by the legacy system, adding new improvements and enhancements. When MOD2010/385 is embodied, P2010 avionics is composed by the following units.

| Unit Model | Description              | Unit Model | Description               |
|------------|--------------------------|------------|---------------------------|
| GDU 1050   | PFD                      | GRS 79     | AHRS                      |
| GDU 1050   | MFD                      | GMU 44     | Magnetometer              |
| GMA 1360   | Audio Panel              | GTX 345R   | Transponder               |
| GIA 64W    | Integrated Avionics Unit | GEA 71B    | Airframe/Engine interface |
| GDC 72     | Air Data Computer        | KN63       | DME Unit                  |
| GTP 59     | OAT Probe                | MD-302     | Stand-by Instrument, ADI  |

The system is arranged as follows.

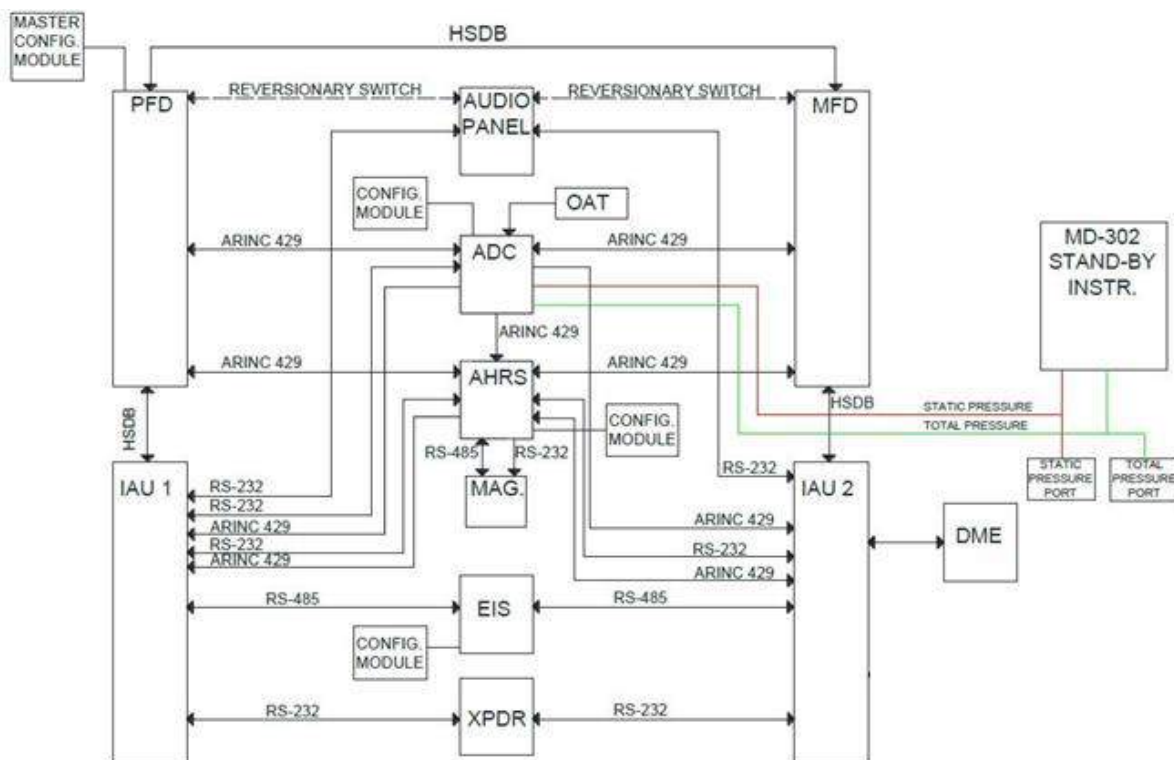


Fig. 2. AVIONICS BLOCK DIAGRAM

## SECTION 8 GROUND HANDLING & SERVICE

Refer to the basic AFM.

INTENTIONALLY LEFT BLANK